

**TOSHIBA**

**MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS /  
MULTIFUNCTIONAL DIGITAL SYSTEMS**

# **TopAccess Guide**

---

**e-STUDIO2010AC/2510AC**

**e-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC**

**e-STUDIO2018A/2518A/3018A/3518A/4518A/5018A**

**e-STUDIO5516AC/6516AC/7516AC**

**e-STUDIO5518A/6518A/7518A/8518A**



# Preface

---






Thank you for purchasing TOSHIBA Multifunctional Digital Systems or Multifunctional Digital Color Systems. This manual describes remote setup and remote management which operated from the web based management utility TopAccess. Read this manual before using the functions.

Operations on some items are restricted depending on the privileges assigned to the TopAccess user. Also, some items may not be displayed or may not function on some models.

## ■ How to read this manual

### □ Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding objects.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding objects, or loss of data.
-  **Note** Indicates information to which you should pay attention when operating the equipment.
-  **Tip** Describes handy information that is useful to know when operating the equipment.
-  Indicates pages describing items related to what you are currently doing. See these pages as required.

### □ Target audience for this manual

This is a manual that is aimed at general users and administrators.

### □ Model and series names in this manual

In this manual, each model name is replaced with a series name as shown below.

Model name	Series name
e-STUDIO2010AC/2510AC	e-STUDIO5015AC Series
e-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC	
e-STUDIO2018A/2518A/3018A/3518A/4518A/5018A	e-STUDIO5018A Series
e-STUDIO5516AC/6516AC/7516AC	e-STUDIO7516AC Series
e-STUDIO5518A/6518A/7518A/8518A	e-STUDIO8518A Series

### □ Optional equipment

For available options, refer to the **Quick Start Guide**.

### □ Screens in this manual

In this manual, Windows10 is taken for explanation purposes to describe the screens and operation procedures in Windows.

The details on the screens may differ depending on your model and how the equipment is used, such as the status of the installed options, the OS version and the applications.

---

## ❑ Abbreviations in this manual

In this manual, “Dual Scan Document Feeder” (DSDF) and “Reversing Automatic Document Feeder” (RADF) are collectively referred to as “Automatic Document Feeder” (ADF).

## ❑ About the defaults shown in this manual

- The defaults shown in this manual are the values in the standard operating environment. The values may have been changed from these defaults. The defaults for your model may differ from the defaults shown.
- The default for the list item is shown underlined.

## ❑ Trademarks

For trademarks, refer to the *Safety Information*.

## ❑ Security Precautions

- To prevent the configuration settings from being changed illegally or similar, change the initial administrator password at the time of shipping before you use this product. Also, the administrator password should be altered periodically.
- Be sure to log out when leaving your computer while changing TopAccess settings for security purposes.
- For security purposes, do not access any other site while you are logged in to TopAccess.

## ❑ Regarding the browser settings

In the Install Client Software in TopAccess, a printer driver may not be able to be installed since the dialog box for starting the installer does not appear even though the printer driver link is clicked. In this case, register the IP address [http://XXX.XXX.XXX.XXX] of the MFP in either “Local intranet” or “Trusted sites” of Internet Explorer.



# CONTENTS

---

<b>Preface</b> .....	<b>3</b>
How to read this manual .....	3

## **Chapter 1 Overview**

---

<b>TopAccess Overview</b> .....	<b>10</b>
<b>TopAccess Conditions</b> .....	<b>11</b>
<b>Accessing TopAccess</b> .....	<b>12</b>
Accessing TopAccess by entering URL.....	12
<b>TopAccess Screen Descriptions</b> .....	<b>14</b>
<b>Access Policy Mode</b> .....	<b>15</b>

## **Chapter 2 [Device] Tab Page**

---

<b>[Device] Item List</b> .....	<b>18</b>
<b>Displayed Icons</b> .....	<b>20</b>

## **Chapter 3 [Job Status] Tab Page**

---

<b>[Job Status] Tab Page Overview</b> .....	<b>24</b>
[Print Job] Item list .....	24
[Fax/InternetFax Job] Item list.....	27
[Scan Job] Item list .....	28
[Multi Station Print Job] Item list.....	29
<b>[Job Status] How to Set and How to Operate</b> .....	<b>30</b>
Displaying print jobs.....	30
Deleting jobs .....	30
Deleting all jobs.....	31
Releasing print jobs .....	31
Checking recovery information.....	32

## **Chapter 4 [Logs] Tab Page**

---

<b>[Logs] Tab Page Overview</b> .....	<b>34</b>
[View Logs] Item list .....	34
[Export Logs] Item list <access policy mode>.....	42
[Log Settings] Item list <access policy mode>.....	44
<b>[Logs] How to Set and How to Operate</b> .....	<b>45</b>
Displaying job logs.....	45
Exporting logs .....	46

## **Chapter 5 [Registration] Tab Page**

---

<b>[Registration] Tab Page Overview</b> .....	<b>48</b>
[Template] Item list .....	48
Template settings .....	56
[Address Book] Item list.....	83
[Inbound FAX routing] Item list .....	92
<b>[Registration] How to Set and How to Operate</b> .....	<b>98</b>
Managing templates .....	98
Managing address book.....	106

---

Managing mailboxes.....	115
-------------------------	-----

---

## Chapter 6 [Counter] Tab Page

---

<b>[Counter] Tab Page Overview .....</b>	<b>120</b>
[Counter] Item list.....	120
<b>[Counter] How to Set and How to Operate .....</b>	<b>132</b>
Viewing counters.....	132

---

## Chapter 7 [User Management] Tab Page

---

<b>[User Management] Tab Page Overview .....</b>	<b>136</b>
[User Accounts] Item list <access policy mode> .....	136
[Group Management] Item list <access policy mode> .....	145
[Role Management] Item list <access policy mode> .....	147
[Department Management] Item list <access policy mode> .....	153
[Project Management] Item list <access policy mode> .....	158
[Export/Import] Item list <access policy mode> .....	159
[Shared Settings] Item list <access policy mode>.....	161

---

## Chapter 8 [Administration] Tab Page

---

<b>[Setup] Item List .....</b>	<b>165</b>
General settings .....	165
Network settings.....	178
Copier settings .....	226
Fax settings .....	230
Save as file settings.....	236
Email settings.....	247
InternetFax settings.....	252
Printer/e-Filing settings.....	256
Printer settings.....	257
Print Service settings .....	264
ICC Profile settings.....	272
Print Data Converter settings.....	274
Embedded Web Browser settings.....	275
Off Device Customization Architecture settings.....	278
Version.....	279
<b>[Setup] How to Set and How to Operate .....</b>	<b>280</b>
Setting up General settings .....	280
Setting up Network settings.....	282
SNMP V3 settings .....	283
Setting up Copier settings .....	286
Setting up Fax settings .....	287
Setting up Save as file settings.....	288
Setting up E-mail settings .....	290
Setting up InternetFax settings.....	291
Setting up Printer/e-Filing settings.....	292
Setting up Printer settings.....	293
Setting up Print Service settings.....	295
Setting up ICC Profile settings.....	296
Setting up Print Data Converter settings.....	300
Configuring the EWB function .....	301
Setting up Off Device Customization Architecture settings .....	302
Displaying version information .....	303
<b>[Security] Item List.....</b>	<b>305</b>

Authentication settings .....	305
Certificate management settings.....	316
Password Policy settings.....	320
Security Stamp Setting.....	323
<b>[Security] How to Set and How to Operate.....</b>	<b>324</b>
Installing a device certificate .....	324
Creating/Exporting a client certificate.....	330
Installing CA certificate.....	331
<b>[Maintenance] Item List .....</b>	<b>333</b>
Upload Software settings .....	333
Remove Software settings.....	335
Create Clone File settings.....	336
Install Clone File settings.....	338
Import settings.....	340
Export settings .....	342
Delete Files settings .....	344
Notification settings .....	344
Languages settings .....	348
Data Backup .....	350
User Paper Type.....	352
System Updates settings.....	353
Reboot settings.....	354
Panel View .....	354
<b>[Maintenance] How to Set and How to Operate .....</b>	<b>356</b>
About the maintenance functions .....	356
Uploading the client software.....	357
Removing the client software .....	359
Deleting the data from local folder .....	360
Setting up notification.....	361
Importing and exporting .....	363
Rebooting the equipment .....	368
<b>[Registration] ([Administration] tab) Item List.....</b>	<b>369</b>
Public Home.....	369
Public Theme Settings.....	373
Public Home Settings .....	374
Default Home .....	375
Default Home Settings.....	375
Simple Screen Settings.....	376
Image/Icon Management .....	377
Home Data List.....	378
Fax Received Forward and InternetFAX Received Forward settings.....	379
Meta Scan .....	390
<b>[Registration] ([Administration] tab) How to Set and How to Operate.....</b>	<b>395</b>
Registering Fax and Internet Fax received forward .....	395
<b>[Application] Item List .....</b>	<b>402</b>
Application List .....	402
Settings.....	404
<b>[License] Item List .....</b>	<b>406</b>
License List.....	406
Activate.....	407

---

## Chapter 9 [My Account] Tab Page

<b>[My Account] Tab Page Overview .....</b>	<b>410</b>
[My Account] Item list .....	410

---

## Chapter 10 Functional Setups

---

<b>Setting up Meta Scan Function .....</b>	<b>418</b>
Procedure for using Meta Scan .....	418
Checking Meta Scan Enabler .....	419
Editing XML format file .....	419
Registering XML format file .....	423
Registering Extended Field Definition .....	423
Registering templates for Meta Scan .....	427
Meta Scan .....	430
Checking logs of Meta Scan .....	430
<b>Setting Multi Station Print .....</b>	<b>431</b>
Procedure for Multi Station Print .....	431
Procedure for Multi Station Print (Only in One Equipment Unit) .....	432
Checking the Multi Station Print Enabler .....	432
<b>Setting Home Data Synchronization .....</b>	<b>433</b>
Procedure for Home Data Synchronization .....	433
<b>Using the Attribute of the External Authentication as a Role of the MFP .....</b>	<b>434</b>
Exporting the role information setting file .....	434
Defining the role information setting file .....	434
Importing the role information setting file.....	435
Enabling the role base access setting.....	435
<b>Setting up Email.....</b>	<b>436</b>
Procedure for Email Setting .....	436

## Chapter 11 APPENDIX

---

<b>Installing Certificates for a Client PC .....</b>	<b>438</b>
Configuring the Microsoft Management Console.....	438
Importing certificates to a client PC .....	440
<b>INDEX .....</b>	<b>447</b>

## Overview

This section provides an overview of the TopAccess functions.

<b>TopAccess Overview .....</b>	<b>10</b>
<b>TopAccess Conditions .....</b>	<b>11</b>
<b>Accessing TopAccess .....</b>	<b>12</b>
Accessing TopAccess by entering URL .....	12
<b>TopAccess Screen Descriptions .....</b>	<b>14</b>
<b>Access Policy Mode .....</b>	<b>15</b>

## TopAccess Overview


---

TopAccess is a management utility that allows you to check device information of this equipment and job status, and to carry out device setting and maintenance through a web browser. TopAccess has an “end-user mode” and a “access policy mode”.

### **End-user mode**


End users can:

- Display general device information, including status, drawer/accessory configuration, and paper supply information.
- Display and manage the status of print jobs, fax/Internet Fax transmission jobs, and scan jobs submitted by the user. (The Fax Unit is required to display and manage the fax transmission jobs)
- Display the job logs for print, fax/Internet Fax transmission, fax/Internet Fax reception, and scan. (The Fax Unit is required to display the fax transmission and fax reception job logs.)
- Register and modify templates.
- Add or modify contacts and groups in the address book.
- Register and modify mailboxes. (The Fax Unit is required.)
- Display counter logs.
- Download client software.

 P.12 “Accessing TopAccess”

### **Access policy mode**

Operation privileges and displayed items vary depending on the user account you used to log in to TopAccess. Details of operations and displays vary depending on the management on roles and departments to where the user account is assigned.

 P.15 “Access Policy Mode”

Your equipment should be connected to the network and TCP/IP is correctly configured to operate TopAccess. When TCP/IP is correctly configured, you can access TopAccess via a web browser.

### Supported browsers

- Windows
  - Internet Explorer 9.0 or later
  - Microsoft Edge
  - Firefox 38 or later
  - Chrome 45 or later
- Mac OS
  - Safari 4.0 or later
- UNIX
  - Firefox 38 or later

#### Note

- Because TopAccess uses cookies to store information on the user's system, these must be enabled in the browser.
- If TopAccess does not display the correct information in any page, delete the cookies and try again.
- If a proxy server is used, set the IP address of the equipment in use in "Exceptions" of the proxy server.
- Make sure you disable your web browser's pop-up blocker or allow pop-ups from TopAccess.

#### Tip

- TopAccess supports special letters of European languages. A note is described in each article if there are any restrictions in which letters can be entered.
- This equipment uses TLS1.2 as a communication protocol.

## Accessing TopAccess


You can access TopAccess by entering its URL in the address box of the web browser.

 P.12 “Accessing TopAccess by entering URL”

### ■ Accessing TopAccess by entering URL

#### 1 Launch a web browser and enter the following URL in the address box.

http://<IP Address> or http://<Device Name>



For example

When the IP address of your equipment “10.10.70.120” (when IPv4 used):

http://10.10.70.120

When the IP address of your equipment is “3ffe:1:1:10:280:91ff:fe4c:4f54” (when IPv6 used):

3ffe-1-1-10-280-91ff-fe4c-4f54.ipv6-literal.net

or


http://[3ffe:1:1:10:280:91ff:fe4c:4f54]

When your device name is “mfp-04998820”:

http://mfp-04998820

#### Note

When SSL/TLS for the HTTP network service is enabled, an alert message may appear when you enter the URL in the address box. In that case, click [Continue to this website (not recommended).] to proceed.

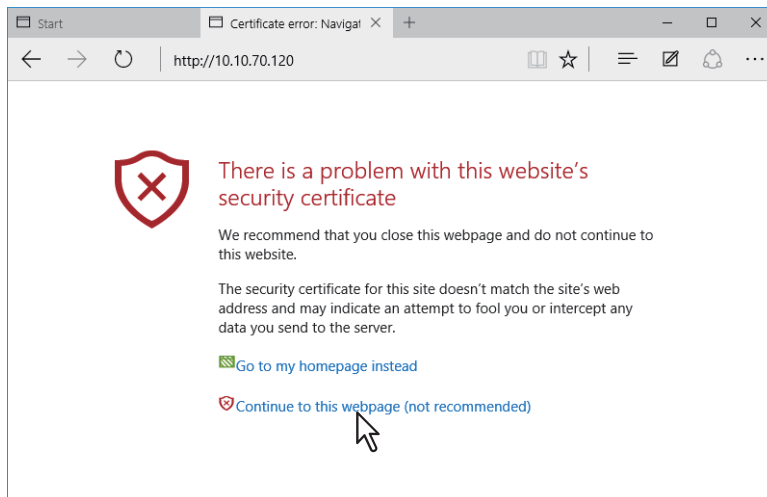




## 2 The TopAccess website appears.

The screenshot displays the TopAccess website interface for a specific device. At the top, there is a navigation menu with tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. The 'Device' tab is selected. The page title is 'Device'. On the left, there is an image of a copier. Below the image are sections for 'Options' and 'Toner'. The 'Options' section lists 'Inner Finisher', '2 Holes', and 'Installed'. The 'Toner' section shows levels for Yellow (100%), Magenta (100%), Cyan (99%), and Black (99%). The 'Device Information' table on the right provides details such as Status (Ready), Name, Location, Copier Model, Serial Number, MAC Address, Main Memory Size (4096 MB), Page Memory Size (452 MB), Save as File & e-Filing Space Available (120843 MB), Fax Space Available (974 MB), Contact Information, Phone Number, Message, and Alerts. The 'Paper' table at the bottom right lists four drawers with their respective sizes (A4, A3, A4R, B4), thicknesses (Plain), attributes (None), capacities (250, 550, 550, 550), and level indicators (represented by green bars).

**Tip**

You can also access TopAccess using the TopAccessDocMon link. For instructions on accessing TopAccess from TopAccessDocMon, refer to the **Help for TopAccessDocMon**.

# TopAccess Screen Descriptions

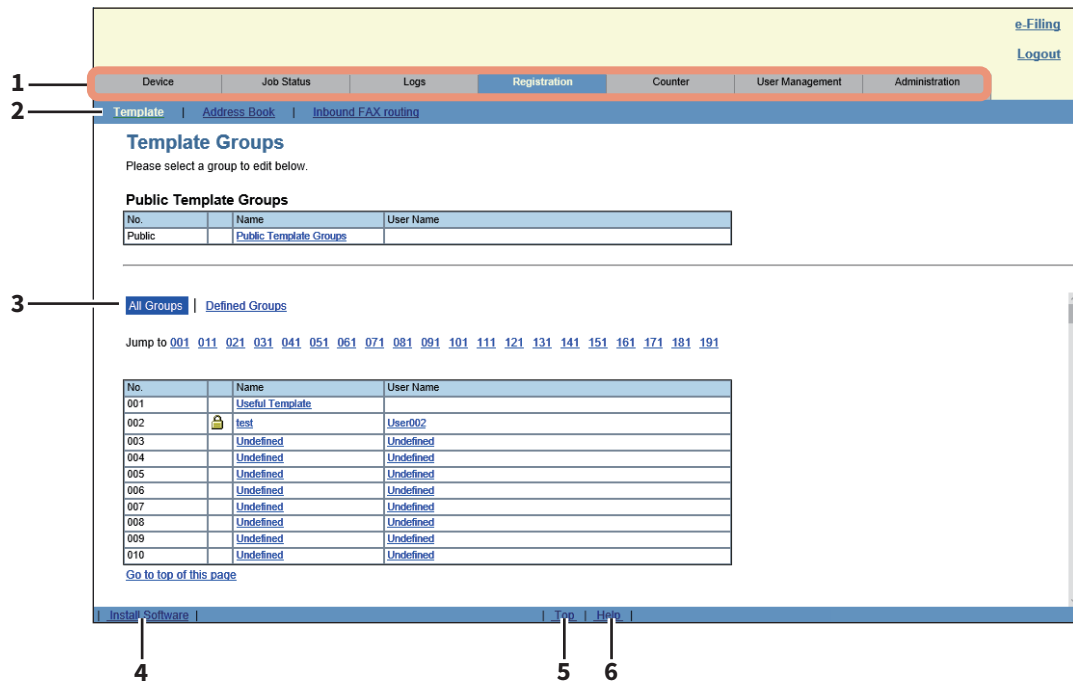


	Item name	Description
1	Function tab	Features are grouped under each tab. This provides access to the main pages of TopAccess for each function.
2	Menu bar	This provides access to each menu page under the selected function tab.
3	Submenu bar	This provides access to each submenu page under the selected menu and function tab.
4	Install Software link	Click this to open the Install Client Software page to download the client software from TopAccess.
5	Top link	Click this to display the top of the page currently displayed.
6	Help link	Click this to display Online Help.

The access policy mode enables different operation privileges and displayed items to be applied depending on the user account you used to log in to TopAccess. In the access policy mode, the details of operations and displays differ depending on the roles and department assigned to the given user account.

### 1 Access TopAccess.


P.12 “Accessing TopAccess by entering URL”

### 2 Click [Login].

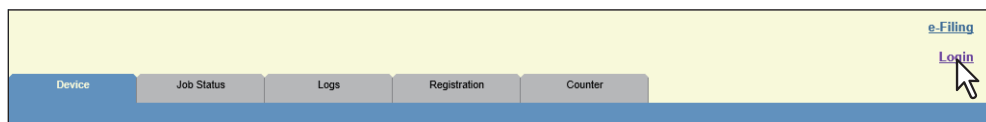

The Login page is displayed.

### 3 Enter the user name and password and click [Login].

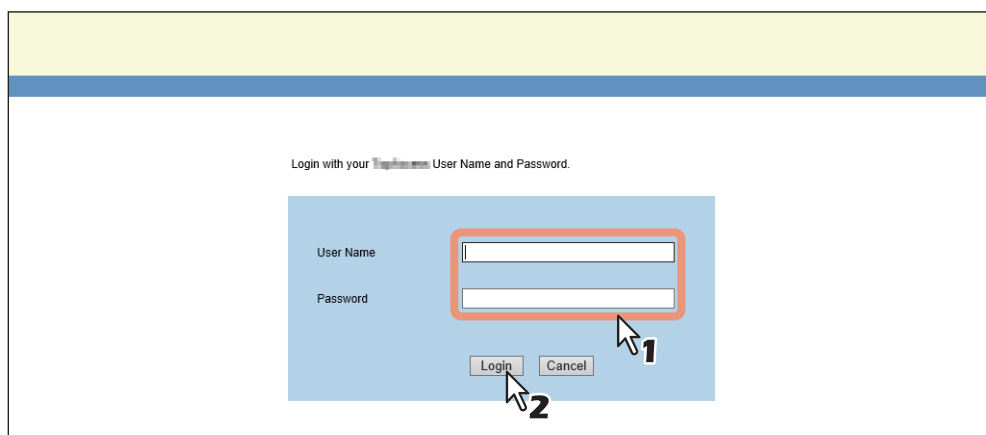

- Enter the user name and password that comply with TopAccess access policies.
- The Setup page is displayed.


#### Note

- Failing to enter the correct password for a number of times at login will be considered unauthorized access and you may not be able to log in for a certain period of time. Contact the administrator if you see a message to inform you that your account is locked, or your user name or password is incorrect, and you are unable to continue the login operation.
- The password input is displayed in the blank symbols.
- After login, you will be automatically logged out when the time specified in the [Session Timer] elapses.

#### Tip

- Enter “admin” in User Name and “123456” in Password to log in for the first time.
- Lockout setting for user accounts can be set with [Administration] - [Security] - [Password Policy].  
 P.320 “Password Policy settings”
- The [Session Timer] can be set with [Administration] - [Setup] - [General] - [WEB General Setting].

#### 4 Click the menu and submenu to display the desired page.

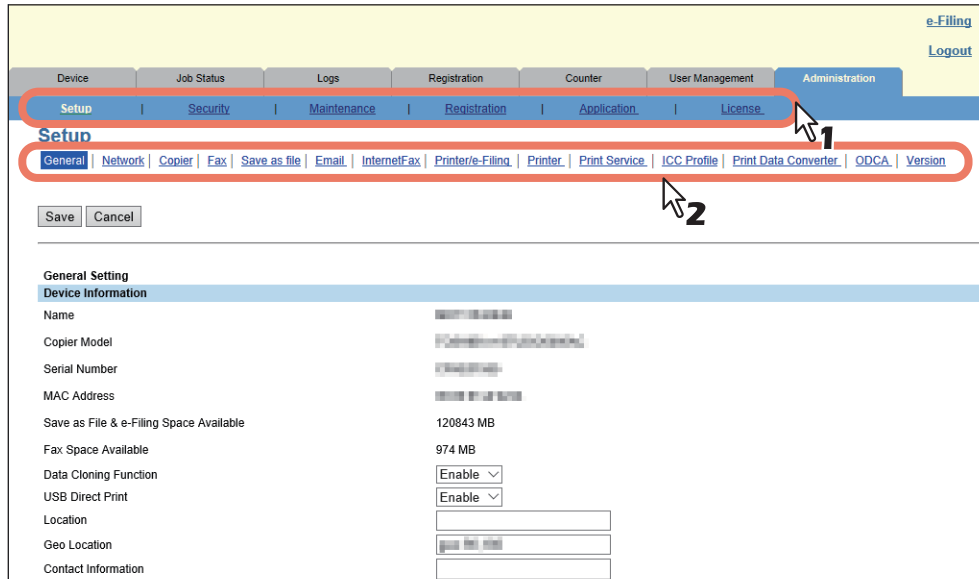

#### Tip

You can log out by clicking the [Logout] link at the top right of the page.

## [Device] Tab Page

This section describes the [Device] tab page in the TopAccess end-user mode.

<b>[Device] Item List .....</b>	<b>18</b>
<b>Displayed Icons .....</b>	<b>20</b>











	Item name	Description
2	Options	<p>The following information is displayed.</p> <ul style="list-style-type: none"> <li>• <b>Finisher (for some models only)</b>— Displays whether the Finisher is installed.</li> <li>• <b>Hole Punch Unit (for some models only)</b> — Displays whether the Hole Punch Unit is installed.</li> <li>• <b>Fax</b> — Displays whether the Fax Unit is installed.</li> <li>• <b>Optional Function kit (for some models only)</b> — Displays whether the optional function kit is installed.</li> </ul>
3	Paper	<p>The following information is displayed.</p> <ul style="list-style-type: none"> <li>• <b>Drawer</b> — Displays a list of the installed drawers.</li> <li>• <b>Size</b> — Displays the paper size set for each drawer.</li> <li>• <b>Thickness</b> — Displays the thickness of the paper set in each drawer.</li> <li>• <b>Attribute</b> — Displays the purpose of the paper set in each drawer.</li> <li>• <b>Capacity</b> — Displays the maximum paper capacity that can be set for each drawer.</li> <li>• <b>Level</b> — Displays the remaining amount of paper for each drawer.</li> </ul>
	<b>Note</b>	<p>The paper size for each drawer cannot be set from TopAccess. Set it from the touch panel of the equipment. For instructions on how to set the paper size for each drawer, refer to the <b>Paper Preparation Guide</b>.</p>
4	Toner	<p>Displays the amount of toner remaining in the toner cartridges in the equipment.</p>

**Tip**



Some features may not be displayed on some models.

## Displayed Icons

When the equipment requires maintenance or when an error occurs with the equipment, icons indicating the status information appear near the graphic image of the equipment on the TopAccess [Device] tab. The following are the icons displayed and their descriptions.

	Printer Error 1	This icon indicates that a non-recommended toner cartridge is being used, and that the equipment has stopped printing. For information on resolving the error, refer to “Replacing a Toner Cartridge” in the <b>Hardware Troubleshooting Guide</b> .
	Printer Error 2	This icon indicates one of the following: <ul style="list-style-type: none"> <li>• You need to remove paper from the receiving tray.</li> <li>• You need to remove paper from the Finisher tray.</li> <li>• You need to remove the staples jammed in the Finisher. For information on resolving the error, refer to “Staple Jam in the Finisher” in the <b>Hardware Troubleshooting Guide</b>.</li> <li>• You need to remove the staples jammed in the Saddle Stitch Unit. For information on resolving the error, refer to “Staple Jam in the Saddle Stitch Unit” in the <b>Hardware Troubleshooting Guide</b>.</li> <li>• You need to clear chads from the Hole Punch Unit. For information on resolving the error, refer to “Cleaning the Hole Punch Dust Bin” in the <b>Hardware Troubleshooting Guide</b>.</li> <li>• A non-recommended toner cartridge is being used. For information on resolving the error, refer to “Replacing a Toner Cartridge” in the <b>Hardware Troubleshooting Guide</b>.</li> <li>• You performed saddle stitch printing with the paper of the different sizes.</li> <li>• The equipment cannot load paper from the Large Capacity Feeder.</li> <li>• The equipment cannot eject the paper to the output tray.</li> <li>• Data in the internal storage device of this equipment is required to be backed up.</li> <li>• Replacing of the internal storage device of this equipment is required.</li> </ul>
	Cover Open	This icon indicates a cover such as the front cover or Automatic Duplexing Unit Cover is open.
	Drawer Open	This icon indicates the drawer is open.
	Toner Empty	This icon indicates no toner is left. For information on resolving the error, refer to “Replacing a Toner Cartridge” in the <b>Hardware Troubleshooting Guide</b> .
	Waste Toner Full	This icon indicates the waste toner box is full and requires replacing. For information on resolving the error, refer to “Replacing the Waste Toner Box” in the <b>Hardware Troubleshooting Guide</b> .
	Paper Empty	This icon indicates no paper is left in a drawer. For information on resolving the error, refer to the <b>Paper Preparation Guide</b> .
	Paper Misfeed	This icon indicates a paper misfeed occurred. It also indicates the location of the paper misfeed. For information on resolving the error, refer to “Clearing a Paper Misfeed” in the <b>Hardware Troubleshooting Guide</b> .



	Staples Empty	This icon indicates no staples are left in the Finisher. For information on resolving the error, refer to “Refilling the Staples” in the <b>Hardware Troubleshooting Guide</b> .
	Call for Service	Contact your service representative to have the equipment inspected.



## [Job Status] Tab Page

Using TopAccess, end users can display and delete print jobs, fax/internetfax jobs, and scan jobs released by end users.

<b>[Job Status] Tab Page Overview .....</b>	<b>24</b>
[Print Job] Item list .....	24
[Fax/InternetFax Job] Item list.....	27
[Scan Job] Item list .....	28
[Multi Station Print Job] Item list.....	29
<b>[Job Status] How to Set and How to Operate .....</b>	<b>30</b>
Displaying print jobs .....	30
Deleting jobs .....	30
Deleting all jobs.....	31
Releasing print jobs .....	31
Checking recovery information.....	32

## [Job Status] Tab Page Overview

You can display and delete print jobs, Fax/InternetFax jobs, and scan jobs. You can also print print jobs immediately.

P.24 “[Print Job] Item list”

P.27 “[Fax/InternetFax Job] Item list”

P.28 “[Scan Job] Item list”

P.29 “[Multi Station Print Job] Item list”

### Tip

When user authentication is enabled, you can operate on jobs associated with the user account you used to log in. However, a user account with administrator privileges can operate on all jobs.

## ■ [Print Job] Item list

The Print Job page is divided into Print Job, Private Print Job, and Hold Print Job.

You can select Private Print Job and Hold Print Job only when you are logged in with a user account with administrator privileges in the access policy mode.

### [Print Job] screen

The screenshot shows the [Print Job] screen. At the top, there are navigation tabs: Device, Job Status (selected), Logs, Registration, and Counter. Below these are sub-tabs: Print (selected), Fax/InternetFax, and Scan. A 'REFRESH' button is located in the center. Below the sub-tabs, there are buttons for 'Print Job', 'Private Print Job', and 'Hold Print Job'. A table displays the following data:

Document Name	Type	Paper	Sets	Pages	Date Time	Status	User Name	Domain Name/LDAP Server
sample.tif	Scheduled	A4	1	7	05/11/16 08:00:01	Scheduled		
sample.tif	Print	A3	1	1	05/11/16 07:50:59	Skipped		

Buttons for 'Delete', 'Delete All', 'Release', and 'Recovery Information' are visible. A 'REFRESH' button is also present. The page number '1' is shown at the bottom right.


### [Private Print Job] screen

The screenshot shows the [Private Print Job] screen. At the top, there are navigation tabs: Device, Job Status (selected), Logs, Registration, Counter, User Management, and Administration. Below these are sub-tabs: Print (selected), Fax/InternetFax, and Scan. A 'REFRESH' button is located in the center. Below the sub-tabs, there are buttons for 'Print Job', 'Private Print Job' (selected), and 'Hold Print Job'. A table displays the following data:

Document Name	Type	Paper	Sets	Pages	Date Time	Status	User Name	Domain Name/LDAP Server
sample.pdf	Scheduled	A4	1	7	05/11/16 08:00:01	Scheduled		
sample.pdf	Print	A3	1	1	05/11/16 07:50:59	Skipped		

Buttons for 'Delete', 'Delete All', 'Release', and 'Recovery Information' are visible. A 'REFRESH' button is also present. The page number '1' is shown at the bottom right.

## [Hold Print Job] screen

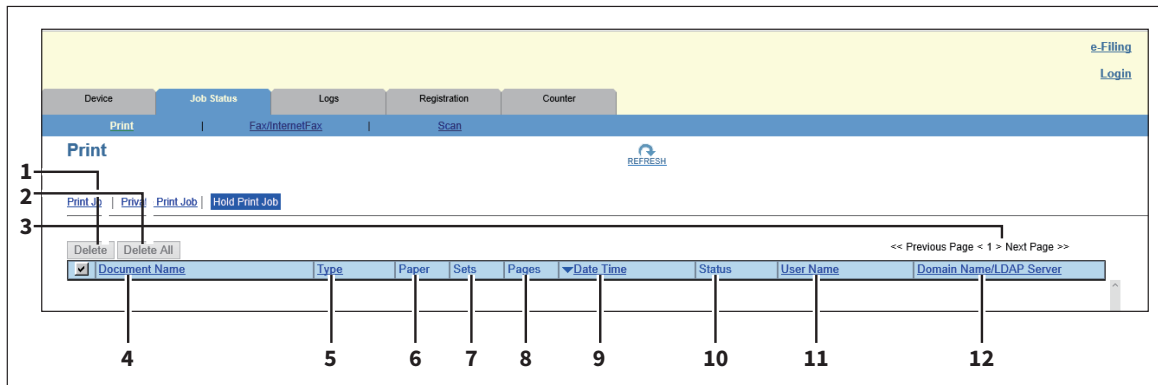


	Item name	Description
1	[Delete] button	The selected print job is deleted.
2	[Delete All] button	All print jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	Document Name	Displays the document name of the print job. Document names are displayed using 10 asterisks (*) when the Confidentiality Setting is enabled. P.169 “Setting up Confidentiality Setting”
5	Type	Displays the print job set in the printer driver. Possible values of print job are: [Normal], [Scheduled], [Private], [Proof], [Hold], and [MultiStation].
6	Paper	Displays the paper size of the print jobs.
7	Sets	Displays the number of copies set for the print jobs.
8	Pages	Displays the number of pages of the print job.
9	Date Time	Displays the date and time when the print job was released from the client computers. They are displayed using “year, month, day, hour, minute, and second”. For example: 2016/12/24 12:34:56
10	Status	Displays the status of the print job. Possible values of status are: [Paused], [Wait], [Suspend], [Skipped], [Process], [Printing], and [Scheduled].
11	User Name	Displays the user account name of the owner of the print job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the print job.
13	[Release] button	If the selected print job is in the print queue, the job is printed.
14	[Recovery Information] button	If the selected print job was skipped while the job skip feature was enabled, the recovery information screen is displayed. P.26 “[Recovery Information] screen” P.168 “Setting up Job Skip Control”

### Tip

- Print jobs that have finished being printed are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.

## ❑ [Recovery Information] screen


The Recovery Information screen displays the conditions for resuming printing.

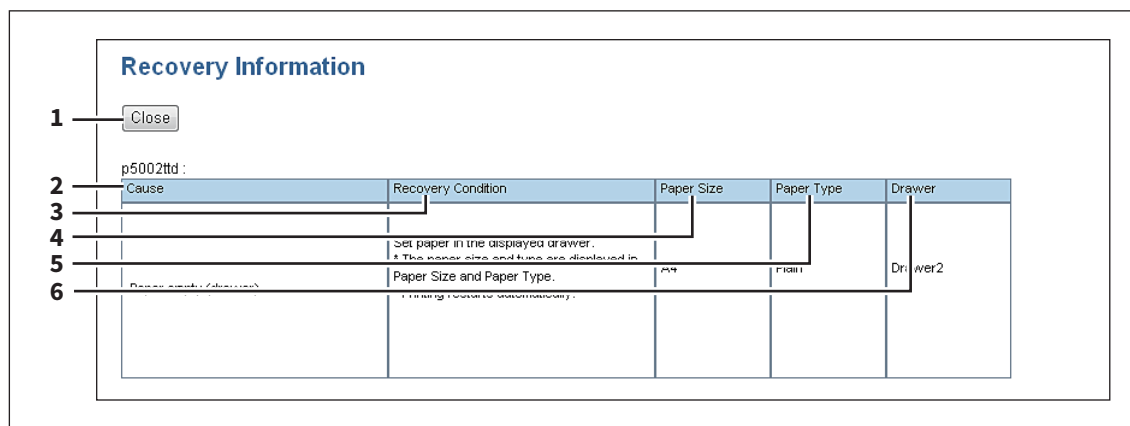

	Item name	Description
1	[Close] button	Closes the [Recovery Information] screen.
2	Cause	Displays the cause of the print interruption.
3	Recovery Condition	Displays the procedure for resuming printing.
4	Paper Size	Displays the paper size set for the interrupted print job.
5	Paper Type	Displays the paper type set for the interrupted print job.
6	Drawer	Displays the paper source set for the interrupted print job.

## ■ [Fax/InternetFax Job] Item list

The Fax/InternetFax Job page displays the following information for each fax transmission job.

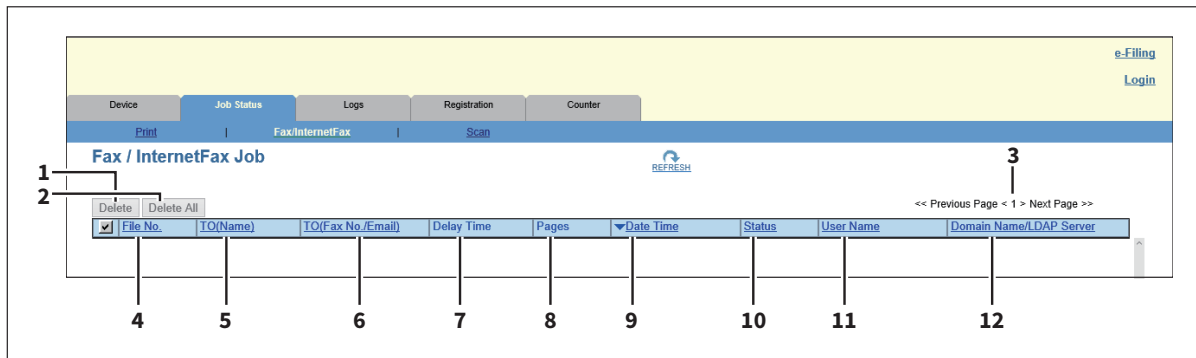


	Item name	Description
1	[Delete] button	The selected fax job is deleted.
2	[Delete All] button	All fax jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	File No.	Displays the file number (001 to 100) to identify the fax transmission job.
5	TO(Name)	Displays the destination name set for the fax transmission job.
6	TO(Fax No./Email)	Displays the fax number or E-mail address of the destination.
7	Delay Time	Displays the delayed time set for the fax transmission job.
8	Pages	Displays the number of pages of the fax transmission job.
9	Date Time	Displays the date and time when the fax transmission job is released from the touch panel or client computer using the N/W-Fax driver. They are displayed using “year, month, day, hour, minute, and second”. For example: 2016/12/24 12:34:56
10	Status	Displays the status of the fax transmission job. Possible values of status are: [Delayed], [Wait], [Line1], [Line2], and [Network].
11	User Name	Displays the user account name of the owner of the fax transmission job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the fax transmission job.

### Tip

- Transmission jobs that have finished their transmission are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.

## ■ [Scan Job] Item list

The Scan Job page displays the following information for each scan job.

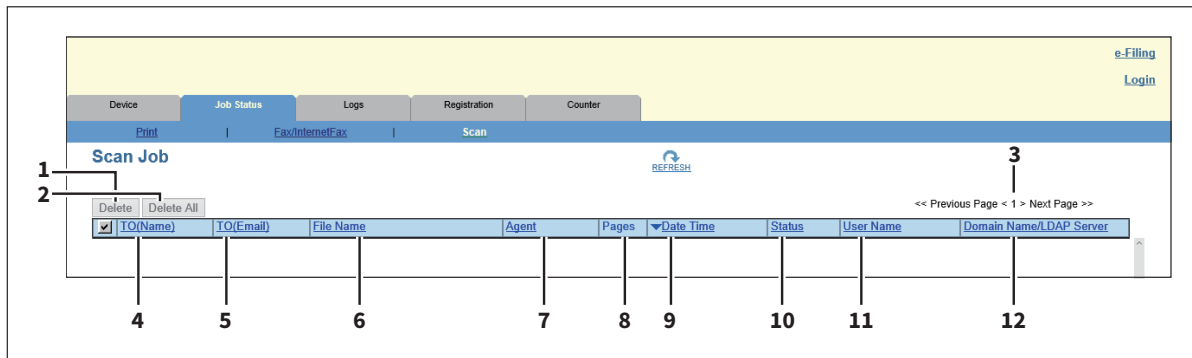

	Item name	Description
1	[Delete] button	The selected scan job is deleted.
2	[Delete All] button	All scan jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	TO(Name)	Displays the destination (name) to where the scanned document is sent via an E-mail.
5	TO(Email)	Displays the destination (E-mail address) to where the scanned document is sent via an E-mail.
6	File Name	When the job performs the Scan to File or USB or Scan to e-Filing, it displays the document name to be stored. File names are displayed using 10 asterisks (*) when the Confidentiality Setting is enabled. P.169 "Setting up Confidentiality Setting"
7	Agent	Displays the agent of the scan job. Possible values of agent are: [Email], [Save as file], [Store to e-Filing], and [Store to USB Media].
8	Pages	Displays the number of pages of the scan job.
9	Date Time	Displays the date and time when the scan job is released from the touch panel. They are displayed using "year, month, day, hour, minute, and second". For example: 2016/12/24 12:34:56
10	Status	Displays the status of the scan job. Possible values of status are: [Wait], [Suspended], [Processing], and [Scanning]
11	User Name	Displays the user account name who is the owner of the scan job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the scan job.

### Tip

- Scan jobs that have finished being scanned are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.




## ■ [Multi Station Print Job] Item list

The Multi Station Print Job page is divided into Jobs and Printed Jobs.

The Multi Station Print Job page displays jobs that are printed with the [Multi Station Print] function. You can select this page only when you are logged in with a user account with administrator privileges in the access policy mode.

### Note

You need the Multi Station Print Enabler option to use the [Multi Station Print] function. Contact your service technician for details.

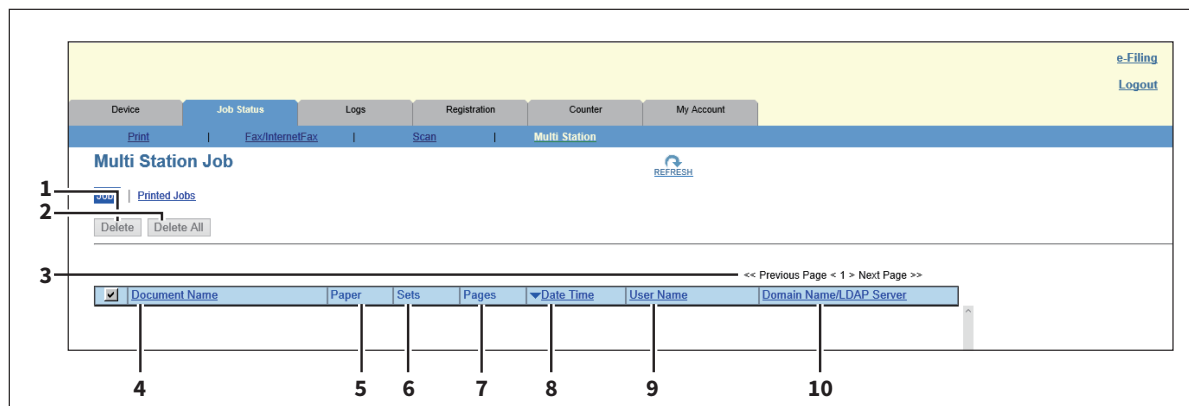


	Item name	Description
1	[Delete] button	The selected print job is deleted.
2	[Delete All] button	All print jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	Document Name	Displays the document name of the print job.
5	Paper	Displays the paper size specified on the print job.
6	Sets	Displays the number of copies specified on the print job.
7	Pages	Displays the total number of pages in the print job.
8	Date Time	Displays the date and time when the print job was received from the client computer. The date and time are displayed in “YYYY/MM/DD HH:MM:SS” format. Example: 2016/12/24 12:34:56
9	User Name	Displays the owner user account name of the print job.
10	Domain Name/LDAP Server	Displays the domain name or LDAP server of the owner user account of the print job.

## [Job Status] How to Set and How to Operate

- 📖 P.30 “Displaying print jobs”
- 📖 P.30 “Deleting jobs”
- 📖 P.31 “Deleting all jobs”
- 📖 P.31 “Releasing print jobs”
- 📖 P.32 “Checking recovery information”

### ■ Displaying print jobs

- 1** Click the [Job Status] tab and click the [Print Job], [Fax/InternetFax Job], [Scan Job], or [Multi Station Print] menu.  
The Job page is displayed.
- 2** If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.
- 3** If jobs are not displayed in the list, click the [REFRESH] icon at the upper right of the page.

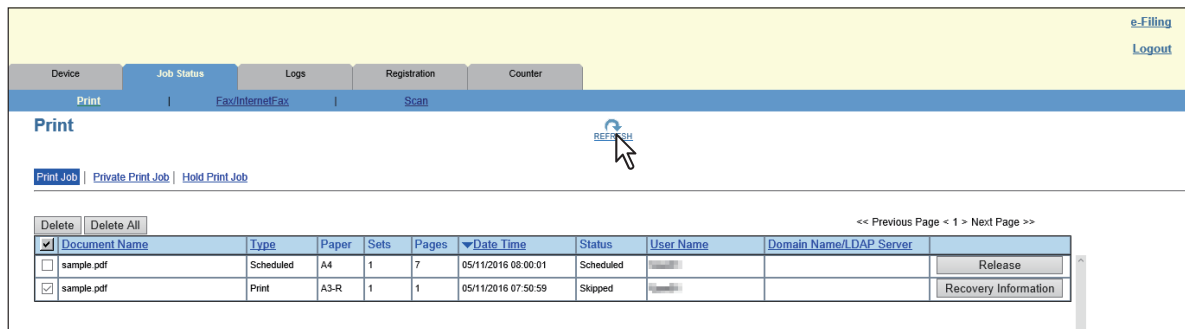

See the following for details on displayed items:


- 📖 P.24 “[Print Job] Item list”
- 📖 P.27 “[Fax/InternetFax Job] Item list”
- 📖 P.28 “[Scan Job] Item list”
- 📖 P.29 “[Multi Station Print Job] Item list”

#### Tip

Completed jobs are displayed in the [Logs] tab.

### ■ Deleting jobs

- 1** Click the [Job Status] tab and click the [Print], [Fax/InternetFax], [Scan], or [Multi Station Print] menu.  
The Job page is displayed.
- 2** If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.
- 3** Select the check box next to the job that you want to delete.

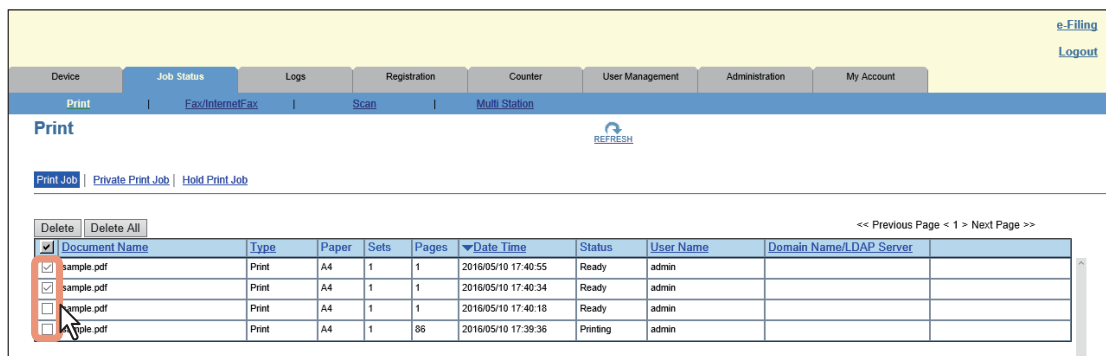

- 4** Click [Delete].  
The confirmation dialog box appears.

- 5 Click [OK].**  
The selected job is deleted.

**Note**


Click the [REFRESH] icon at the upper right of the page to confirm the deletion.

**Tip**

You cannot use the Print Job page to delete fax/Internet Fax jobs and E-mail reception print jobs.

**Deleting all jobs**

- 1 Click the [Job Status] tab and click the [Print], [Fax/InternetFax], [Scan], or [Multi Station Print] menu.**  
The Job page is displayed.
- 2 If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.**
- 3 Click [Delete All].**  
The confirmation dialog box appears.

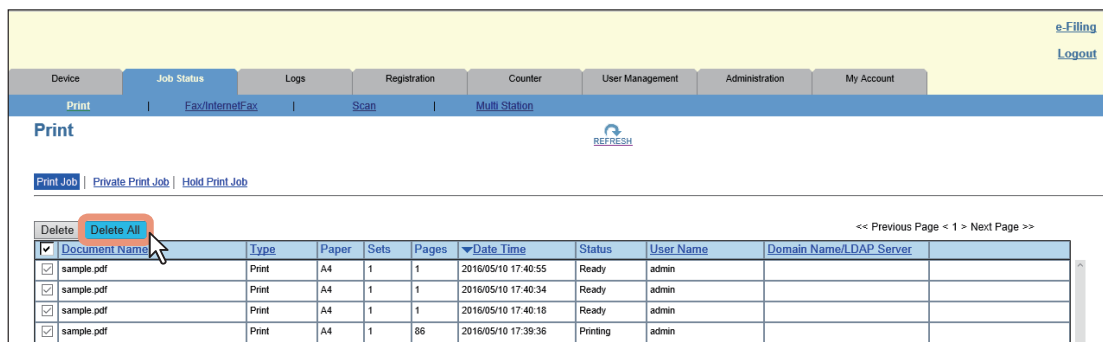

- 4 Click [OK].**  
Jobs are deleted.

**Note**

Click [REFRESH] at the top right of the page to check if jobs are deleted. It may take a while to delete all jobs.

**Releasing print jobs**


You can print jobs that are stored in the queue.

**Note**

Private print jobs and hold print jobs cannot be released from TopAccess.

- 1 Click the [Job Status] tab and click the [Print] menu or [Multi Station Print] menu.**  
The Job page is displayed.
- 2 Click [Print Job].**  
The Print Job page is displayed.

- 3 Click [Release] on the right of the print job(s) you want to print.  
The selected print job is immediately printed.

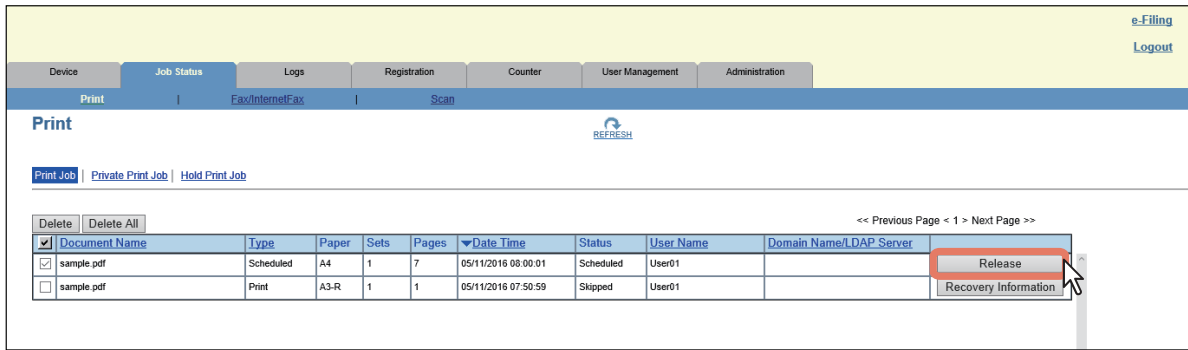

## ■ Checking recovery information


You can check the conditions to restart a print job which has been skipped while the job skip feature was enabled.

### Tip

For the job skip feature, see the following:

📖 P.168 “Setting up Job Skip Control”

- 1 Click the [Job Status] tab and click the [Print] menu or [Multi Station Print] menu.  
The Job page is displayed.
- 2 Click [Print Job].  
The Print Job page is displayed.
- 3 Click [Recovery Information] on the right of the print job whose job status is displayed as “Skipped”.  
The conditions to restart the print job are displayed.

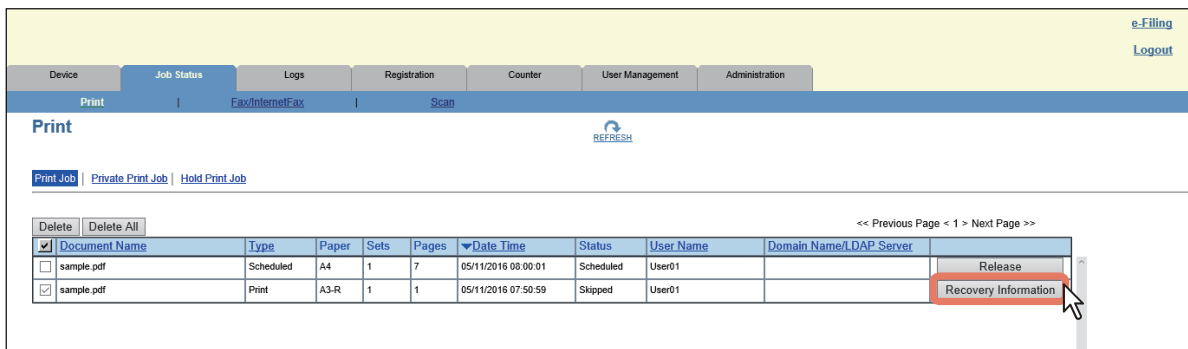

## [Logs] Tab Page

Using TopAccess, end users can display print job logs, transmission journals, reception journals, and scan job logs.

<b>[Logs] Tab Page Overview .....</b>	<b>34</b>
[View Logs] Item list .....	34
[Export Logs] Item list <access policy mode>.....	42
[Log Settings] Item list <access policy mode>.....	44
<b>[Logs] How to Set and How to Operate .....</b>	<b>45</b>
Displaying job logs .....	45
Exporting logs .....	46

## [Logs] Tab Page Overview

You can check the job history.

P.34 “[View Logs] Item list”

P.42 “[Export Logs] Item list <access policy mode>”

P.44 “[Log Settings] Item list <access policy mode>”

### Note

Check the logs periodically to ensure that there is no unauthorized access to the equipment as a result of spoofing.

### Tip

- Logs are recorded from the moment the equipment is turned on until it is shut down. Log recording continues also after entering the Super Sleep mode.
- Up to 100 logs are displayed in chronological order with the most recent first. You can check up to 5,000 logs in Print Job Log Export, Fax Transmission Journal Export, Fax Reception Journal Export, and Scan Log Export, and up to 10,000 logs in Messages Log Export by exporting them. The oldest logs are deleted when the number of logs exceeds the maximum limit.
- The default Administrator and Auditor roles can check all logs. For more information on default roles and privileges, see the following:  
 P.148 “Default roles and privileges”
- When user authentication is enabled, you can check the logs associated with the user account you used to log in. Furthermore, a user account to which the default Administrator or Auditor role have been assigned can check all logs.

## ■ [View Logs] Item list

P.34 “Print Log”

P.26 “[Recovery Information] screen”

P.36 “Reception Journal”

P.37 “Scan Log”

P.40 “Application Log”

P.41 “Message Log <access policy mode>”

## □ Print Log

The Print Log page displays the following information for each print job log.

Document Name	Type	Paper	Sets	Pages	Date Time	Status	User Name	Domain Name/LDAP Server	Project Code
	Pr	A4	1	1	2016/05/10 09:31	0	OK	--	

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	Document Name	Displays the document name of the print job.
3	Type	Displays the print job type.
4	Paper	Displays the paper size of the print jobs.
5	Sets	Displays the number of copies set for print jobs.
6	Pages	Displays the number of pages of the print job.

	Item name	Description
7	Date Time	Displays the date and time that the print job was released from the client computers.
8	Status	Displays the status of the print log.
9	User Name	Displays the user account name of the owner of the print job.
10	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the print job.
11	Project Code	Displays the Project Code of the print job.

**Tip**

Click a table heading item to refresh the page and reorder the print log list in the specified order.

## ❑ Transmission Journal

The Transmission Journal page displays the following information for each transmission journal.

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	No.	Displays the serial number of the journals.
3	File No.	Displays the file number to identify the received job.
4	Duration	Displays the time length taken for the transmissions. If it takes more than 1 hour, "59:59" is indicated.
5	TO (Name)	Displays the destination name set for the transmission job.
6	TO (Fax No./Email)	Displays the fax number or E-mail address of the destination for the transmission job.
7	Dept	Displays the department code if department management is enabled.
8	Line	Displays the line used.
9	Mode	Displays the transmission mode*.
10	Pages	Displays the number of pages of the transmission job.
11	Date Time	Displays the date and time the transmission job was performed.
12	Status	Displays the result of the transmission.
13	User Name	Displays the user account name of the owner of the transmission job.

	Item name	Description
14	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the transmission job.

\* The transmission mode is displayed by a combination of a 2-digit letter code, a 3-digit numeric code, and up to a 4-digit supplemental code. For example: EC 603

2-digit letter code (Communication Mode)	1st numeric code (bps)	2nd numeric code (Resolution)	3rd numeric code (Mode)	Up to 4 digit supplemental code
EC: ECM G3: G3 ML: E-mail	0: 2400 1: 4800 2: 7200 3: 9600 4: 12000 5: 14400 6: V.34	0: 8x3.85 1: 8x7.7 2: 8x15.4 4: 16x15.4 8: 300 dpi B: 600 dpi D: 150 dpi	0: MH 1: MR 2: MMR 3: JBIG	P: Polling SB: Mailbox SR/R: Relay mailbox SF/F: Forward mailbox ML: Internet Fax I: N/W-Fax O: Offramp Gateway

#### Tip

Click a table heading item to refresh the page and reorder the transmission journal list in the specified order.

## Reception Journal

The Reception Journal page displays the following information for each reception journal.

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	No.	Displays the serial number of the journals.
3	File No.	Displays the file number to identify the received job.
4	Duration	Displays the time taken for the receptions. If it takes more than 1 hour, "59:59" is indicated.
5	From (Name)	Displays the sender's name of the received job.
6	From (Fax No./Email)	Displays the fax number or E-mail address of the sender for the received job.
7	Dept	Displays the department code if the department management is enabled.
8	Line	Displays the line used.
9	Mode	Displays the reception mode*.
10	Pages	Displays the number of pages of the received job.
11	Date Time	Displays the date and time of receiving the job.



	Item name	Description
12	Status	Displays the result of the reception.
13	User Name	Displays the user account name of the owner of the received job.
14	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the received job.

\* The reception mode is displayed by a combination of a 2-digit letter code, a 3-digit numeric code, and up to a 4-digit supplemental code. For example: EC 603


2-digit letter code (Communication Mode)	1st numeric code (bps)	2nd numeric code (Resolution)	3rd numeric code (Mode)	Up to 4 digit supplemental code
EC: ECM G3: G3 ML: E-mail	0: 2400 1: 4800 2: 7200 3: 9600 4: 12000 5: 14400 6: V.34	0: 8x3.85 1: 8x7.7 2: 8x15.4 4: 16x15.4 8: 300 dpi B: 600 dpi D: 150 dpi	0: MH 1: MR 2: MMR 3: JBIG	P: Polling SB: Mailbox SR/R: Relay mailbox SF/F: Forward mailbox ML: Internet Fax I: N/W-Fax O: Onramp Gateway

**Tip**

Click a table heading item to refresh the page and reorder the reception journal list in the specified order.

**Scan Log**

The Scan Log page displays the following information for each scan job log.

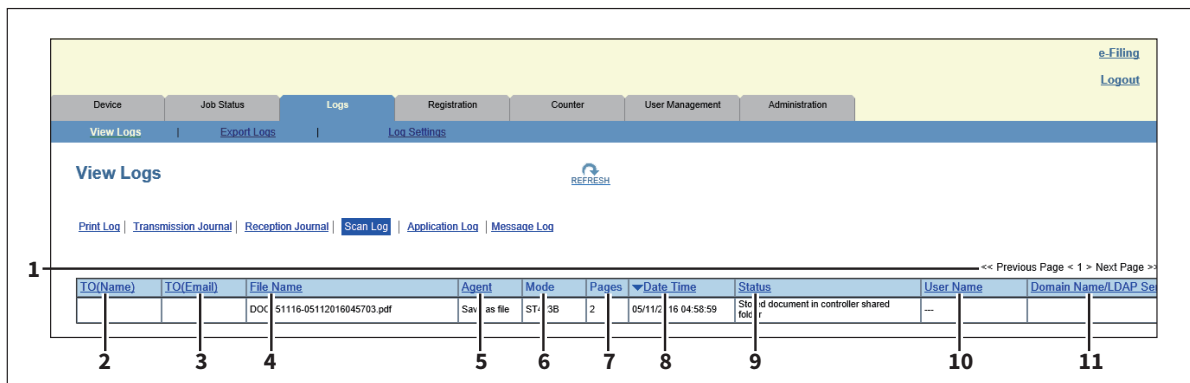

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	TO (Name)	Displays the destination (name) to where the scanned document was sent via an E-mail.
3	TO (Email)	Displays the destination (E-mail address) to where the scanned document was sent via an E-mail.
4	File Name	Displays the file name stored in a shared folder or e-Filing. This item may not be displayed depending on the access policies.
5	Agent	Displays the agent of the scan job.
6	Mode	Displays the transmission mode using 6-letter codes*.
7	Pages	Displays the number of pages of the scan job.

	Item name	Description
8	Date Time	Displays the date and time when the scan job was released from the touch panel.
9	Status	Displays the detailed result status of the scan job.
10	User Name	Displays the user account name of the owner of the scan job.
11	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the scan job.

\* Codes are displayed in the following format.

**Code format: AA B C D E**

<b>AA:</b> This describes the job type.	
CA	Copy and File Copy and Store to e-Filing
CT	Copy to e-Filing (without printing)
FS	Relay Mailbox Transmission
FF	Fax Received Forward
FE	Internet Fax Received Forward
ST	Scan to File or USB Scan to e-Filing Scan to Email
FA	Fax and Save as File
PA	Print and e-Filing
PT	Print to e-Filing
IA	N/W-Fax and Save as File
BE	e-Filing to Email
RS	Remote Scan or Web Services Scan
MS	Meta Scan
EN	E-mail notification

<b>B:</b> This describes the transmission type.	
0	e-Filing
1	Email (SMTP)
2	FTP
3	SMB
4	Save in a local folder
5	NetWare IPX/SPX
6	USB
7	NetWare TCP/IP
8	FTPS
9	Remote Scan or Web Services Scan

**C:** This describes the resolution.

0	100 dpi
1	150 dpi
2	200 dpi
3	300 dpi
4	400 dpi
5	600 dpi
A	8 x 3.85 (line/mm) (203 x 98)
B	8 x 7.7 (line/mm) (203 x 196)
C	8 x 15.4 (line/mm) (203 x 391)
D	16 x 15.4 (line/mm) (400 x 391)

**D:** This describes the file format.

0	e-Filing
1	TIFF (Multi)
2	TIFF (Single)
3	PDF (Multi) or Encrypted PDF (Multi)
4	JPEG
5	PDF (Single) or Encrypted PDF (Single)
6	Slim PDF (Multi)
7	Slim PDF (Single)
8	XPS (Multi)
9	XPS (Single)
A	DIB
B	PDF/A (Multi)
C	PDF/A (Single)
D	Searchable PDF(Multi) or Searchable Encrypted PDF (Multi)
E	Searchable PDF(Single) or Searchable Encrypted PDF (Single)
F	Searchable Slim PDF (Multi)
G	Searchable Slim PDF (Single)
H	Searchable PDF/A (Multi)
I	Searchable PDF/A (Single)
J	DOCX (Multi)
K	DOCX (Single)
L	XLSX (Multi)
M	XLSX (Single)
N	PPTX (Multi)
O	PPTX (Single)

**E:** This describes the file color mode.

B	Black
G	Gray Scale
C	Color
M	Mix

**Note**


The file format is recorded as DIB in the scan log if the data are scanned in BMP, JPEG, TIFF, or PNG format using the WIA (Windows Image Acquisition) driver.

**Tip**

Click a table heading item to refresh the page and reorder the scan log list in the specified order.

## Application Log

The Application Log page displays the following information for each application log item.

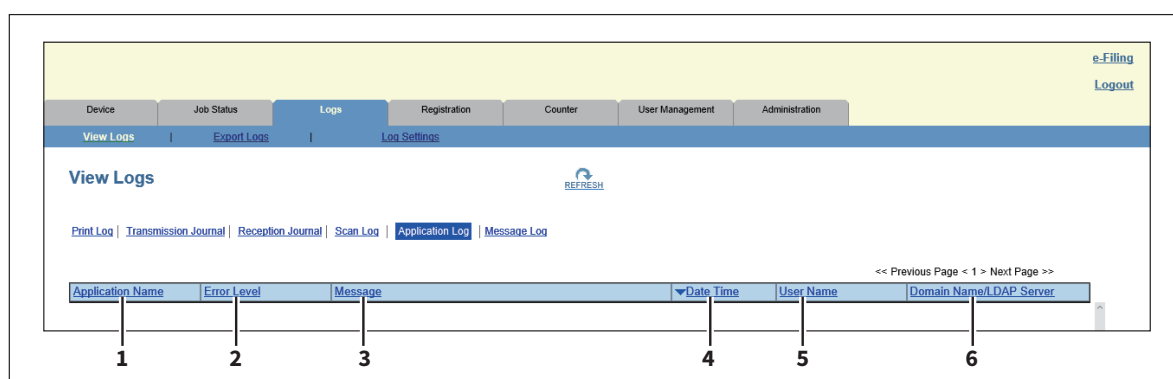


	Item name	Description
1	Application Name	Displays the application name where the error occurred.
2	Error Level	Displays the error level. <b>Error</b> — Errors that may not be cleared by some users. <b>Warning</b> — Errors that may be cleared by the administrator. <b>Information</b> — Errors that may be cleared by general users, or not errors.
3	Message	Displays the message if there is any.
4	Date Time	Displays the date and time of the error.
5	User Name	Displays the user account name that is related to the message.
6	Domain Name / LDAP Server	Displays the domain name or LDAP server of the user account that is related to the message.

## ❑ Message Log <access policy mode>

The Message Log page displays errors which have occurred on your model.

**Tip**

- Displays only when you are logged in with a user account which is granted administrator privileges or display privilege in the access policy mode.
- The default Administrator and Auditor roles can check all message logs. For more information on default roles and privileges, see the following:  
📖 P.148 “Default roles and privileges”

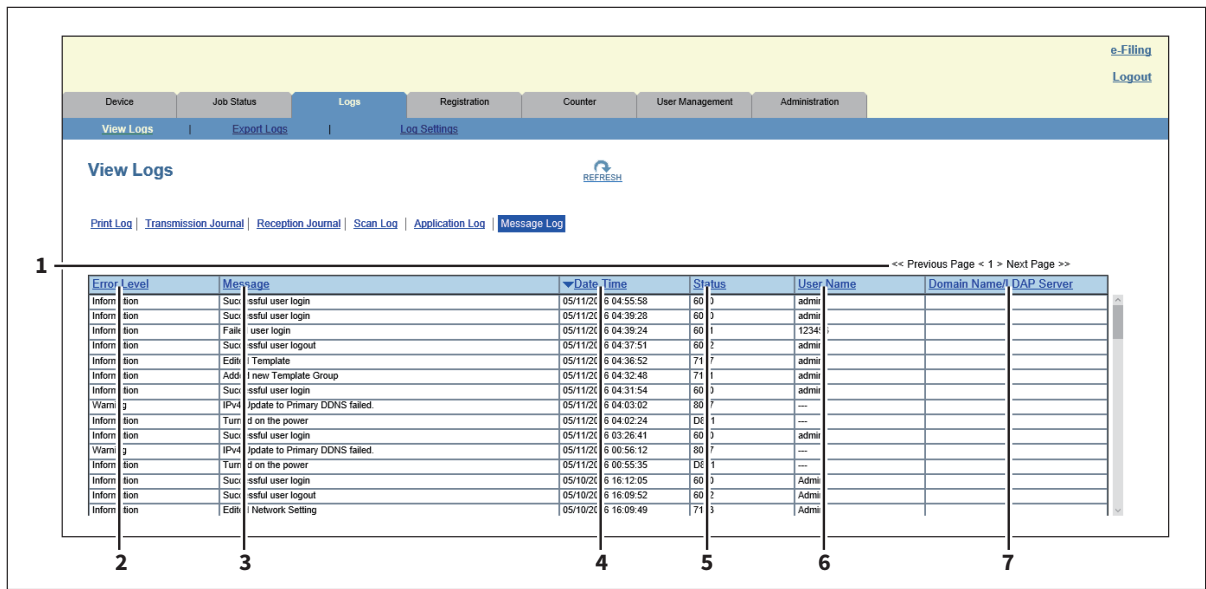

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	Error Level	Displays the error level. <b>Error</b> — Error that user and administrator may not be recoverable. <b>Warning</b> — Error that administrator is recoverable. <b>Information</b> — Error that end user is recoverable or that event is not error.
3	Message	Displays the message if available.
4	Date Time	Displays the date and time of the error.
5	Status	Displays the error code.
6	User Name	Displays the user account name related to the message.
7	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account related to the message.

**Tip**


For details on error codes and error messages, refer to “Checking the Equipment Status with TopAccess” in the **Software Troubleshooting Guide**.

## ■ [Export Logs] Item list <access policy mode>

You can erase logs or export them in a file.

### Tip

- Displays only when you are logged in with a user account which is granted administrator or display privileges in the access policy mode.
- The exported data file can be either CSV format or XML format. [CSV] is set as the default.
- You can export up to 5,000 logs in Print Job Log Export, Fax Transmission Journal Export, Fax Reception Journal Export, and Scan Log Export, and up to 10,000 logs in Messages Log Export. The oldest logs are deleted when the number of logs exceeds the maximum limit.

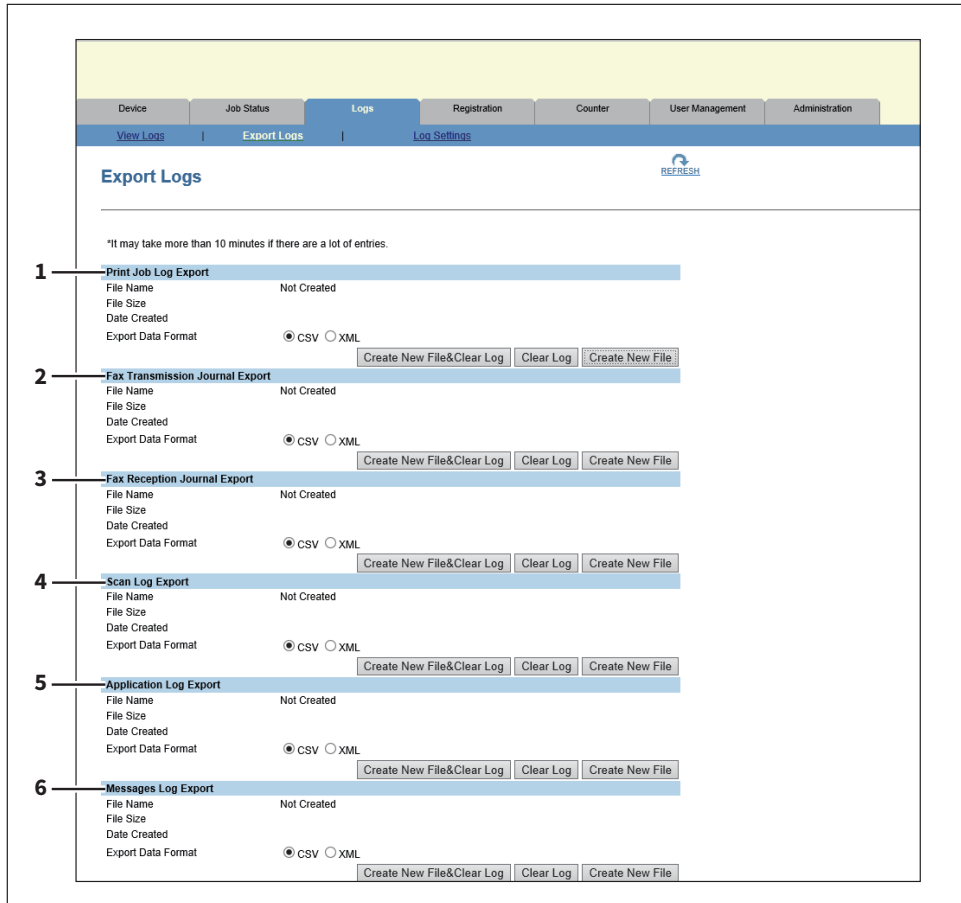

	Item name	Description
1	Print Job Log Export	<p>You can erase print logs or export (download) them in a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>
2	Fax Transmission Journal Export	<p>You can erase the transmission journal or export (download) it to a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>

	Item name	Description
3	Fax Reception Journal Export	<p>You can erase the reception journal or export (download) it to a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>
4	Scan Log Export	<p>You can erase scan logs or export (download) them in a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>
5	Application Log Export	<p>You can erase application logs or export (download) them in a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>
6	Messages Log Export	<p>You can erase message logs or export (download) them in a file.</p> <p><b>Create New File &amp; Clear Log</b> — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file.</p> <p><b>Clear Log</b> — Erases logs.</p> <p><b>Create New File</b> — Creates a file according to the file format of the export data.</p> <p>You can display or download by clicking the created file.</p>

## ■ [Log Settings] Item list <access policy mode>

📖 P.44 “Log Authentication”


📖 P.44 “Log size”

### Tip

Displays only when you are logged in with a user account which is granted administrator or display privileges in the access policy mode.

## □ Log Authentication


You can specify whether or not to use log authentication.

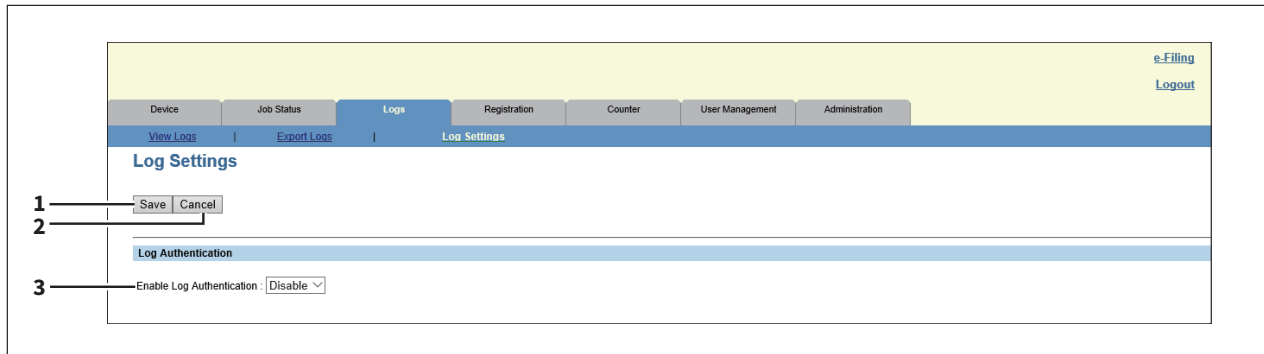

	Item name	Description
1	[Save] button	Saves log authentication settings.
2	[Cancel] button	Cancels the settings.
3	Enable Log Authentication	<p>Enables log authentication. When log authentication is enabled, the log display for users will be restricted according to access policies.</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables log authentication. Display will be restricted according to access policies.</li> <li>• <b>Disable</b> — Disables log authentication. Logs for all users will be displayed.</li> </ul>

## □ Log size

Log size displays the log size.

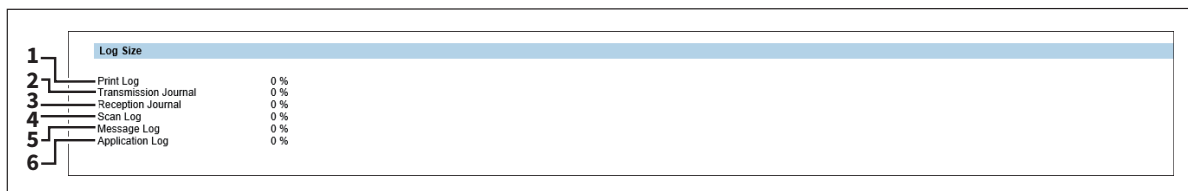

	Item name	Description
1	Print Log	Displays the log size of print jobs.
2	Transmission Journal	Displays the log size of transmission journals.
3	Reception Journal	Displays the log size of reception journals.
4	Scan Log	Displays the log size of scan jobs.
5	Message Log	Displays the log size of message logs.
6	Application Log	Displays the log size of Application Logs.



# [Logs] How to Set and How to Operate

📖 P.45 “Displaying job logs”


📖 P.46 “Exporting logs”

## ■ Displaying job logs

### Tip

You can display logs for jobs which are performed on this equipment. Up to 100 logs are displayed in chronological order with the most recent first. When the number of logs exceeds 101, select the page you want to view.

- 1 Click the **[Logs]** tab and click the **[View Logs]** menu.
- 2 Click **[Print Log]**, **[Transmission Journal]**, **[Reception Journal]**, **[Scan Log]**, **[Application Log]**, or **[Message Log]**.  
The log page is displayed.
- 3 Click the **[REFRESH]** icon at the upper right of the page to update the information.

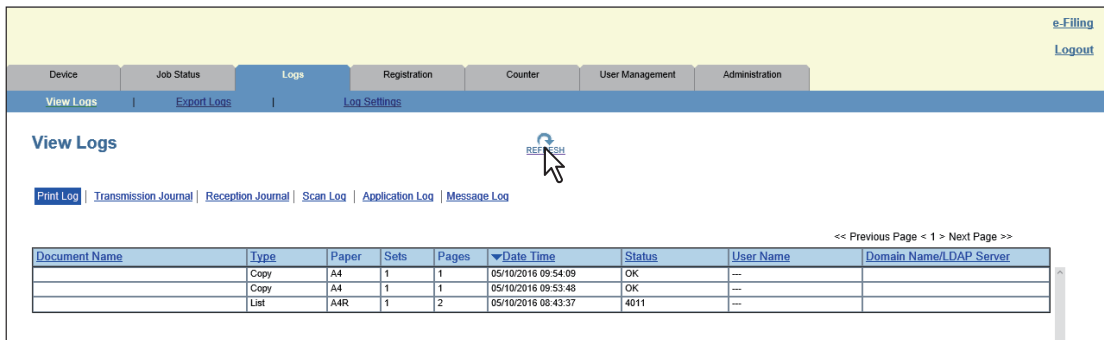

### Tip

Click a table heading item to refresh the page and reorder the list in the specified order.

## ■ Exporting logs

You must be logged in to the access policy mode to export logs.  
For information on logs that can be exported, see the following:  
[P.42 “\[Export Logs\] Item list <access policy mode>”](#)

- 1 Log in to TopAccess in access policy mode.**  
[P.15 “Access Policy Mode”](#)
- 2 Click the [Logs] tab and then click the [Export Logs] menu.**

The screenshot shows the 'Export Logs' page in the TopAccess web interface. The top navigation bar includes tabs for Device, Job Status, Logs, Registration, Counter, User Management, and Administration. The 'Logs' tab is selected, and the 'Export Logs' sub-tab is active. The page displays several export options, each with a 'File Name' field set to 'Not Created', a 'File Size' field, a 'Date Created' field, and a radio button for the 'Export Data Format' (CSV or XML). Each option also has 'Create New File&Clear Log', 'Clear Log', and 'Create New File' buttons. The options include Print Job Log Export, Fax Transmission Journal Export, Fax Reception Journal Export, Scan Log Export, Application Log Export, and Messages Log Export. A 'REFRESH' button is visible in the top right of the content area.

### Tip

File sizes are displayed in bytes.

- 3 Select the file format (CSV/XML) for the log you want to export.**
- 4 Create the file by clicking the [Create New File] button for the log you want to export.**
- 5 Click the file name.**
- 6 Save the log file.**  
Your browser will display a confirmation dialog box. Select the process for saving the log as a file and follow the displayed instructions.

## [Registration] Tab Page

This section contains instructions on how to register templates, the address book, and mailboxes.

<b>[Registration] Tab Page Overview</b> .....	<b>48</b>
[Template] Item list .....	48
Template settings .....	56
[Address Book] Item list.....	83
[Inbound FAX routing] Item list .....	92
<b>[Registration] How to Set and How to Operate</b> .....	<b>98</b>
Managing templates .....	98
Managing address book.....	106
Managing mailboxes.....	115

## [Registration] Tab Page Overview

---

You can register templates, the address book, and inbound fax routing.

- 📖 P.48 “[Template] Item list”
- 📖 P.56 “Template settings”
- 📖 P.83 “[Address Book] Item list”
- 📖 P.92 “[Inbound FAX routing] Item list”

### ■ [Template] Item list

- 📖 P.48 “[Template Groups] screen”
- 📖 P.51 “[Group Properties] screen”
- 📖 P.52 “[Private Templates] screen”
- 📖 P.53 “[Public Templates] screen”
- 📖 P.55 “[Change Group Password] screen”
- 📖 P.55 “[Template Properties] screen”

### □ [Template Groups] screen

You can check the template registration status.

You can save agent settings for copy, fax/Internet Fax, and scan operated from the touch panel on your equipment into a template. Users can select the template when they copy, fax/Internet Fax, or scan from the touch panel, for easy operation.

Templates are managed in groups and up to 60 templates can be saved in a group. There can be one public template group, and up to 200 private template groups.

Group type	Description	Max. number of groups	Max. templates saved
Public Template Groups	The public template group can be created and maintained only by users who are granted administrator privileges in the access policy mode. Registered templates are available for all users.	1	60
Private Template Groups	Users can create templates in private template groups. Users can also set passwords on groups and registered templates to restrict the use of them. Groups and templates without a password are available to all users.	200	60

## Public Template Groups

Device | Job Status | Logs | **Registration** | Counter

Template | Address Book | Inbound FAX routing

### Template Groups

Please select a group to edit below.

#### Public Template Groups

No.	Name	User Name
Public	Public Template Groups	

1 2 3

All Groups | Defined Groups

Jump to 001 011 021 031 041 051 061 071 081 091 101 111 121 131 141 151 161 171 181 191

No.	Name	User Name
001	Useful Template	
002	Template002	User002
003	Template003	User003
004	Undefined	Undefined
005	Undefined	Undefined
006	Undefined	Undefined
007	Undefined	Undefined
008	Undefined	Undefined
009	Undefined	Undefined
010	Undefined	Undefined

[Go to top of this page](#)

	Item name	Description
1	No.	Displays “Public” for the public template group.
2	Name	Displays “Public Template Groups” for the public template group. You can click to check and edit the registered templates. P.105 “Displaying public templates”
3	User Name	–

### Tip

Templates in the public template group are created and managed by users who are granted administrator privileges in the access policy mode. See the following description for registering public template:  
 P.100 “Registering or editing templates”

## Private Template Groups

All Groups | Defined Groups

Jump to [001](#) [011](#) [021](#) [031](#) [041](#) [051](#) [061](#) [071](#) [081](#) [091](#) [101](#) [111](#) [121](#) [131](#) [141](#) [151](#) [161](#) [171](#) [181](#) [191](#)

No.	Name	User Name
001	Us...	User 02
002	plate002	User 03
003	Template003	ned
005	Undefined	Undefined
006	Undefined	Undefined
007	Undefined	Undefined
008	Undefined	Undefined
009	Undefined	Undefined
010	Undefined	Undefined

[Go to top of this page](#)

No.	Name	User Name
011	Undefined	Undefined
012	Undefined	Undefined
013	Undefined	Undefined
014	Undefined	Undefined
015	Undefined	Undefined
016	Undefined	Undefined
017	Undefined	Undefined
018	Undefined	Undefined
019	Undefined	Undefined

	Item name	Description
1	No.	Displays the group number.
2	Name	Displays the group name. Click the name of a registered template to check and edit the registered templates. P.98 “Registering and editing private template groups” Click [Undefined] to register templates. P.51 “[Group Properties] screen”
3	User Name	Displays the group owner name. Click the name of a registered user name to check and edit the registered templates. P.98 “Registering and editing private template groups” Click [Undefined] to register templates. P.51 “[Group Properties] screen”

### Tip

- Click [All Groups] or [Defined Groups] to change how private template groups are displayed.
- See the following descriptions for how to register private template groups and how to create templates:
  - P.98 “Registering and editing private template groups”
  - P.100 “Registering or editing templates”


## ❑ [Group Properties] screen

You can register a new private template group.

	Item name	Description
1	[Save] button	Creates a private template group with the entered data. The [Private Templates] screen is displayed and you can edit the template you are registering. 📖 P.52 “[Private Templates] screen”
2	[Cancel] button	Cancels the settings.
3	Number	Displays the private group number.
4	Name	Enter the name of the private group.
5	User Name	Enter the owner name of the private group.
6	Notification	Enter the E-mail address to be displayed as the default recipient when notification is enabled in any template. You can select whether notification will be sent or not for each template.
7	Password	Enter the password if setting a password to the private group. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*).
8	Retype Password	Enter the same password again for a confirmation.

## ❑ [Private Templates] screen

You can edit the template you are registering.

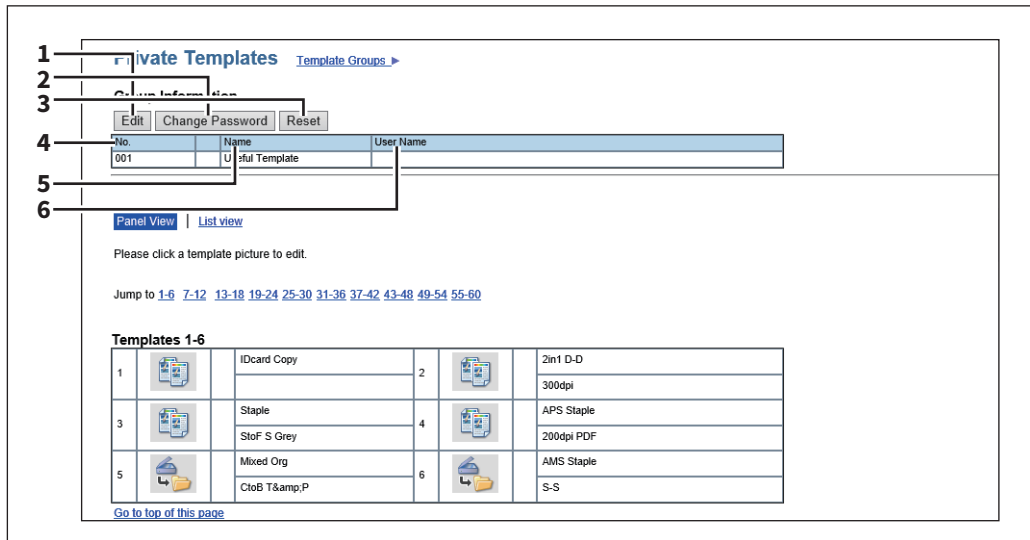


### Group Information

	Item name	Description
1	[Edit] button	Allows you to edit the private template group information. 📖 P.51 “[Group Properties] screen”
2	[Change Password] button	Allows you to change the password for the private template group. 📖 P.55 “[Change Group Password] screen”
3	[Reset] button	Resets registration of the private template group.
4	No.	Displays the number of the private template group.
5	Name	Displays the name of the private group.
6	User Name	Displays the owner of the private template group.

### Template list

You can display the template list. You can change the view by clicking [Panel View] or [List View].

#### Panel View

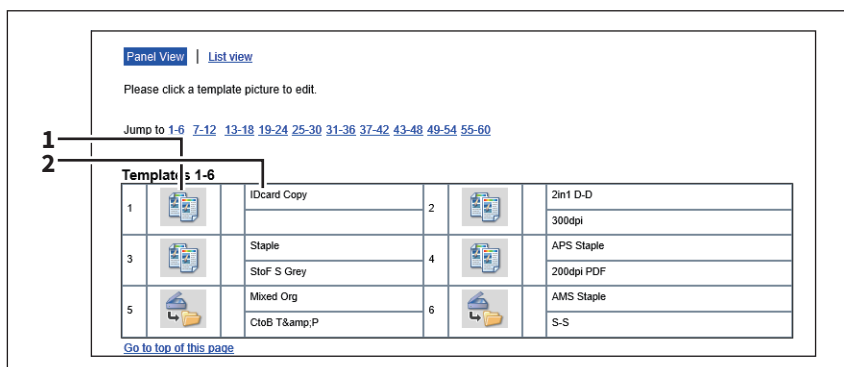


	Item name	Description
1	Image	Displays icons of the templates. Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”



	Item name	Description
2	Name 1/Name 2	Displays the names registered on the touch panel. 📖 P.56 “Panel Setting”


**List View**

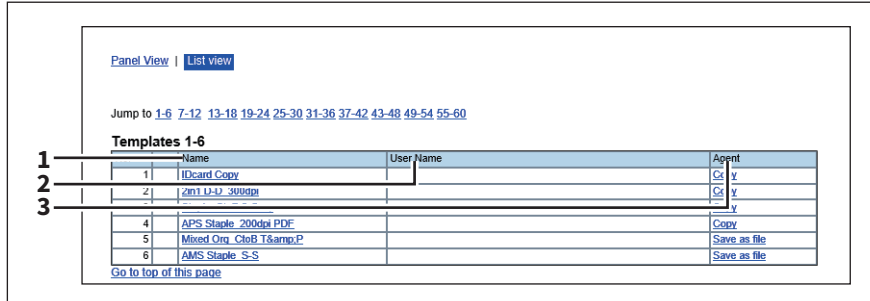

	Item name	Description
1	Name	Displays the names registered on the touch panel. 📖 P.56 “Panel Setting” Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”
2	User Name	Displays the user name registered on the panel setting. Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”
3	Agent	Displays the agent registered to the template. Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”

**❑ [Public Templates] screen**

Templates you are registering can be edited by users who are granted administrator privileges in the access policy mode.

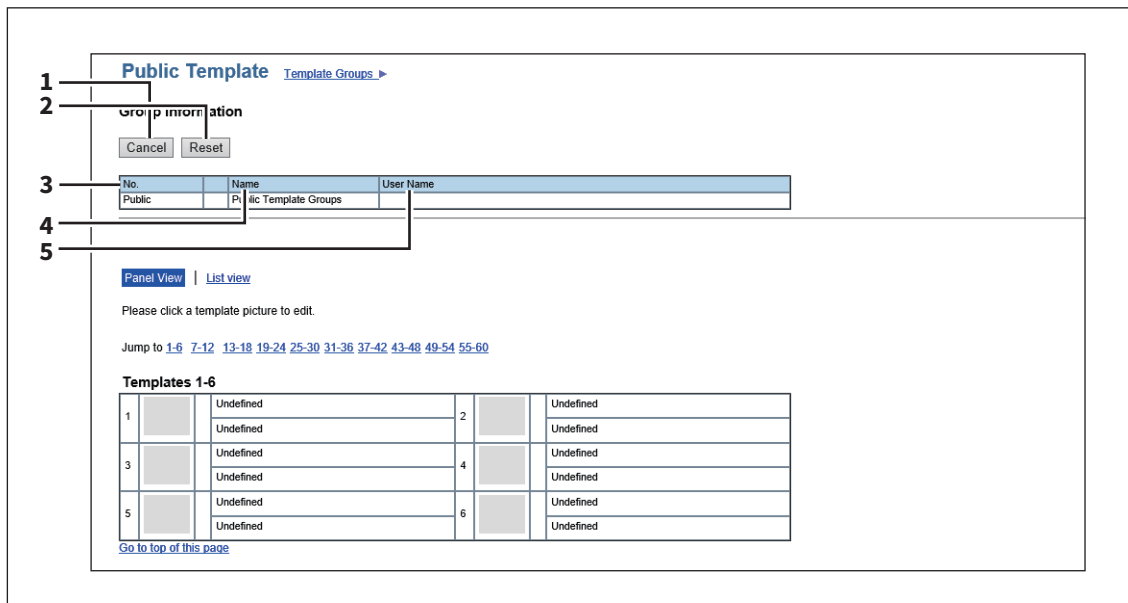


## Group Information

	Item name	Description
1	[Cancel] button	Returns to the [Template Groups] screen without updating public template group information.
2	[Reset] button	Resets registration of the public template group.
3	No.	Displays the number of the public template group.
4	Name	Displays the name of the public group.
5	User Name	Displays the owner of the public template group.

## Template list


You can display the template list. You can change the view by clicking [Panel View] or [List View].

### Panel View

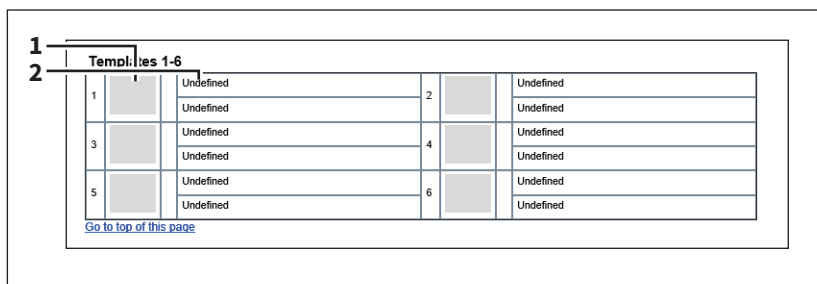

	Item name	Description
1	Image	Displays icons of the templates. Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”
2	Name 1/Name 2	Displays the names registered on the touch panel. 📖 P.56 “Panel Setting”

### List View

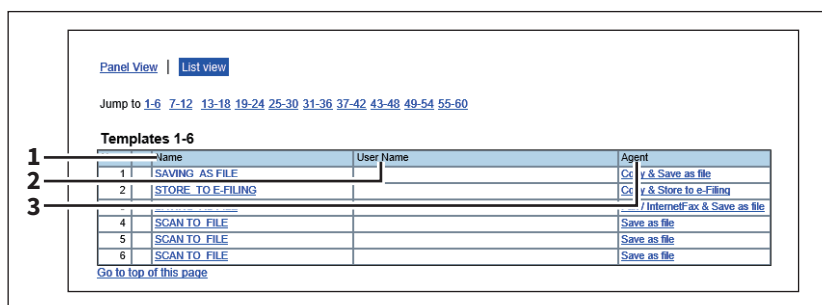

	Item name	Description
1	Name	Displays the names registered on the touch panel. 📖 P.56 “Panel Setting” Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”
2	User Name	Displays the user name registered on the panel setting. Click [Undefined] to register a new template. 📖 P.51 “[Group Properties] screen”

	Item name	Description
3	Agent	Displays the agent registered to the template. Click [Undefined] to register a new template. P.51 “[Group Properties] screen”

## ❑ [Change Group Password] screen

You can change the password of a private template group.

	Item name	Description
1	[Save] button	Saves the new password.
2	[Cancel] button	Cancels the password change.
3	Old Password	Enter the current password.
4	New Password	Enter the new password.
5	Retype Password	Enter the same password again for a confirmation.

## ❑ [Template Properties] screen

You can set the template you are registering.

When you select a function, the setting status of each function and the button to open the edit screen appear at the bottom of the screen.

	Item name	Description
1	[Select Agent] button	Allows you to set the selected agent. You can set the template details when creating a new agent. P.56 “Template settings”
2	Copy	You can create a template which copies the document. Select this agent if you want to print a copy when you are sending a document to another destination. You can also specify the [Save as file] agent or [Store to e-Filing] agent at the same time.
3	Fax / InternetFax	You can create a template for fax or Internet Fax transmission. You can also specify the [Save as file] agent at the same time.

	Item name	Description
4	Scan	You can create a template for a scan. You need to select either the [Email] agent, [Save as file] agent, [Store to e-Filing] agent, or [Save to USB Media] agent at the same time. You can specify up to two agents for a scan template.
5	Meta Scan	This agent is enabled when the meta scan option is installed. You can create a template for the meta scan option. Refer to the document provided by the vendor of the application which supports meta scan option for details.
6	Email	You can transmit the document as an E-mail attachment.
7	Save as file	You can save the document in a shared folder.
8	Store to e-Filing	You can store the document in the e-Filing.
9	Save to USB Media	You can save the document in USB media.
10	[Save] button	Saves the template contents.
11	[Cancel] button	Cancels the operation.

## ■ Template settings

You can specify details to register in private templates and public template.  
Use these buttons that are displayed as you select a function to create a template.

- 📖 P.56 “Panel Setting”
- 📖 P.58 “Destination Setting”
- 📖 P.63 “InternetFax Setting”
- 📖 P.64 “Fax Setting”
- 📖 P.66 “Email Setting”
- 📖 P.70 “Save as file Setting”
- 📖 P.75 “Box Setting”
- 📖 P.75 “Store to USB Device Setting”
- 📖 P.78 “Scan Setting”
- 📖 P.82 “Extended Field settings”
- 📖 P.82 “Extended Field Properties”
- 📖 P.82 “Password Setting”


## □ Panel Setting

In the Panel Setting page, specify how the icon for the template is displayed in the touch panel, and the notification settings for the template.

The screenshot shows a 'Panel Setting' dialog box with the following fields and options:

- 1** Picture: A field containing a blue icon of a document with a magnifying glass.
- 2** Caption1: A text input field containing 'SAVING'.
- 3** Caption2: A text input field containing 'AS FILE'.
- 4** User Name: An empty text input field.
- 5** Automatic Start: A dropdown menu set to 'Disable'.
- 6** Send Email when an error occurs: An unchecked checkbox.
- 7** Send Email when job is completed: An unchecked checkbox.
- 8** Notification: A section with 'Email to' followed by a radio button selected for 'Email address for notification is not specified. Email is not sent until Email address is specified.' and an empty text input field.

	Item name	Description
1	Picture	This indicates the icon that will be displayed in the touch panel. The icon is automatically designated according to the agent that you select.

	<b>Item name</b>	<b>Description</b>
<b>2</b>	Caption1	Enter the text that will be displayed next to the icon in the touch panel. You can enter up to 11 alphanumerical characters.
<b>3</b>	Caption2	Enter the text that will be displayed next to the icon in the touch panel. You can enter up to 11 alphanumerical characters.
<b>4</b>	User Name	Enter the owner name of the template. You can enter up to 30 alphanumerical characters.
<b>5</b>	Automatic Start	Select whether the automatic start function is enabled or disabled. When this is enabled, the operation will be automatically started when you press the template button from the TEMPLATE menu on the touch panel without pressing the [START] button or [Scan].
	<p><b>Note</b></p> <p>If the user names or passwords of the User Authentication for Scan to E-mail and the User Management Setting are different, or only the User Authentication for Scan to E-mail is enabled, you need to enter the user name and password of the User Authentication for Scan to E-mail also when recalling the template with the automatic start function enabled.</p>	
<b>6</b>	Notification — Send Email when an error occurs	Select this to send a notification message to the specified E-mail address when an error occurs.
<b>7</b>	Notification — Send Email when job is completed	Select this to send a notification message to the specified E-mail address when a job is completed.
<b>8</b>	Notification — Email to	Enter a recipient E-mail address for the notification message. You can either select an option to send it to the E-mail address set in a private group or specify an E-mail address.
	<p><b>Note</b></p> <p>When you enable the Notification setting, make sure to set up the E-mail settings in the [Email] submenu of the [Setup] menu in the TopAccess access policy mode. For instructions on how to set up the E-mail settings, see the following section:</p> <p> P.290 “Setting the E-mail settings”</p>	

 
## ❑ Destination Setting

In the Recipient List page, you can specify the destinations to which the Fax, Internet Fax, or Scan to E-mail document will be sent.


When you are setting up the destinations for the Scan to Email agent, you can only specify the E-mail addresses for the destinations.

When you are setting up the destinations for the Fax/InternetFax agent, you can specify both fax numbers and E-mail addresses for the destinations.

### When Creating a Fax/Internet Fax agent:



### When Creating an Email agent:

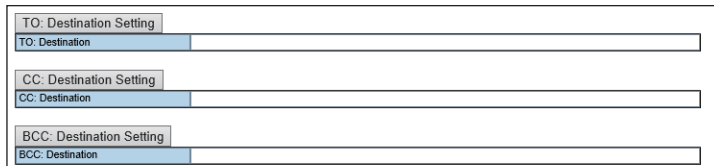

#### Note

The Fax Unit must be installed in this equipment to specify the fax numbers of the destinations.

You can specify the destinations by entering their E-mail addresses or fax numbers manually, selecting destinations from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP server.

- 📖 P.58 “Entering the destinations manually”
- 📖 P.59 “Selecting the destinations from the address book”
- 📖 P.60 “Selecting the groups from the address book”
- 📖 P.61 “Searching for destinations in the LDAP server”
- 📖 P.62 “Removing the contacts from the Recipient List”

### Entering the destinations manually

You can add a destination manually to the Recipient List.


#### Note

You cannot enter destinations if [Restriction of Destination Selection Method]-[Prohibit Direct Entry] is enabled.

- 📖 P.169 “Restriction of Destination Selection Method”

**1** Click **[Destination Setting]** (when creating a Fax/Internet Fax agent) or **[TO: Destination Setting]** / **[CC: Destination Setting]** / **[BCC: Destination Setting]** (when creating an Email agent) to open the Recipient List page.

**2** Click **[New]**.

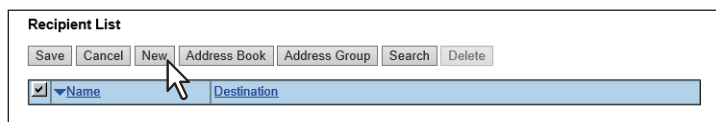

The Contact Property page is displayed.

**3** Enter the E-mail address or fax number of the destination, in the **[Destination]** box.



**Note**

You can specify the fax number for the destination only when the Fax Unit is installed.

**Tip**

When the fax number is entered, select [G3 Fax] in the [Fax Type] box. When the E-mail address is entered, select [InternetFax] in the [Fax Type] box.

**4 Click [OK].**

The destination is added to the Recipient List page.

**5 Repeat steps 2 to 4 to add all additional destinations that you require.**

**Tip**

You can remove the destinations you added to the Recipient List before saving the destination settings.

P.62 “Removing the contacts from the Recipient List”

**6 Click [Save].**



The contacts are added as destinations.

**Selecting the destinations from the address book**

You can select destinations from the address book in this equipment.


**Note**

You cannot select destinations from the address book if [Restriction of Destination Selection Method]-[Prohibit Use Of Local Address Book] is enabled.

P.169 “Restriction of Destination Selection Method”


**1 Click [Destination Setting] to open the Recipient List page.**

**2 Click [Address Book].**

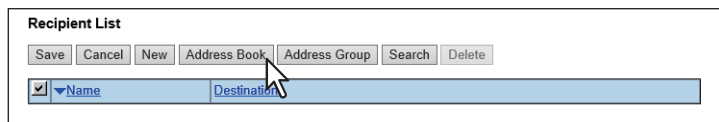

The Address Book page is displayed.

**3 Select the [Email] check boxes of users you want to add as the E-mail recipients or Internet Fax recipients, and select the [Fax] check boxes of users you want to add as the Fax recipients.**

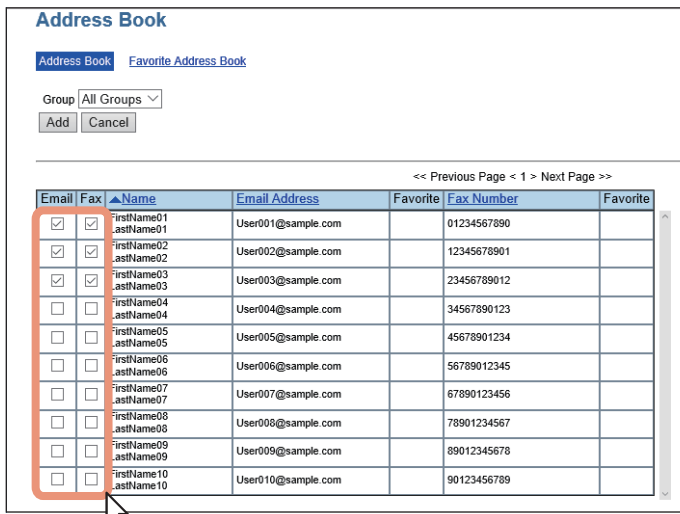

**Note**

- When you are creating a Scan to E-mail template, only the [Email] check boxes are displayed in the Address Book page.
- You can specify the fax number for the destination only when the Fax Unit is installed.

**Tip**

If you want to sort the Recipient List by a specific group, select the desired group name in the [Group] box.

**4 Click [Add].**


The selected destinations are added to the Recipient List page.

**Tip**

You can remove the destinations you added to the Recipient List before saving the destination settings.

P.62 “Removing the contacts from the Recipient List”

**5 Click [Save].**

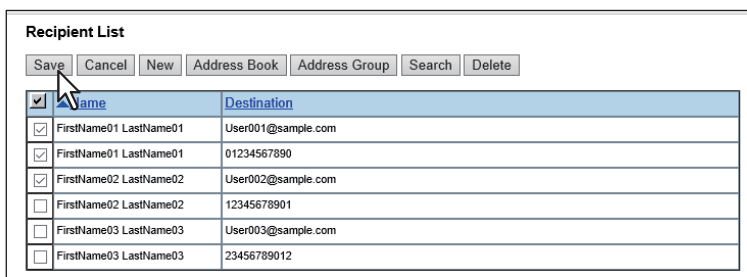

The contacts are added as destinations.

**Selecting the groups from the address book**

You can select groups from the address book.

**Note**

You cannot select destinations from the address group if [Restriction of Destination Selection Method]-[Prohibit Use Of Local Address Book] is enabled.

P.169 “Restriction of Destination Selection Method”

**1 Click [Destination Setting] to open the Recipient List page.**




**2 Click [Address Group].**



The Address Group page is displayed.

**3 Select the [Group] check boxes that contain the desired destinations.**

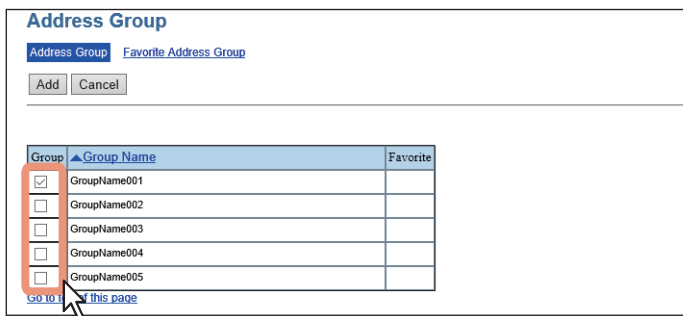

**4 Click [Add].**


All recipients in the selected groups are added to the Recipient List page.

**Tip**

You can remove the destinations you added to the Recipient List before saving the destination settings.

P.62 “Removing the contacts from the Recipient List”

**5 Click [Save].**

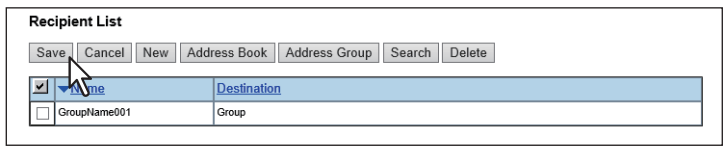

The contacts are added as destinations.

**Searching for destinations in the LDAP server**

You can search for destinations in the registered LDAP server and in the address book.


**Note**

The LDAP server used for the search must be registered by a user who is granted administrator privileges in access policy mode.

P.209 “LDAP Client settings”

**1 Click [Destination Setting] to open the Recipient List page.**

**2 Click [Search].**

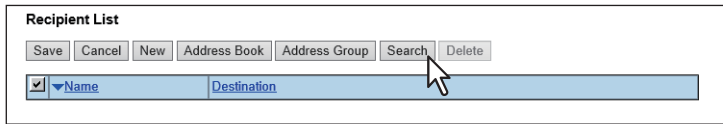

The Search Contact page is displayed.

**3 Select the directory service name that you want to search for in the [Directory Service Name] box, and enter the search terms in the boxes that you want to search.**

**Tip**

- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations who match the entries.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

**4 Click [Search].**

TopAccess will start searching for destinations in the LDAP server and the Search Address List page will display the results.

**5 Select the [Email] check boxes of users you want to add as the E-mail recipients or Internet Fax recipients, and select the [Fax] check boxes of users you want to add as Fax recipients.**

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.

**Note**

- You can specify the fax number for the destination only when the Fax Unit is installed.
- The value of [company] and [department] will depend on the settings made by the user who is granted administrator privileges in the access policy mode.

**6 Click [Add].**

The selected destinations are added to the Recipient List page.

**Tip**

You can remove the destinations you added to the Recipient List before saving the destination settings.

P.62 “Removing the contacts from the Recipient List”


**7 Click [Save].**

The contacts are added as destinations.

**Removing the contacts from the Recipient List**

**1 Click [Destination Setting] to open the Recipient List page.**


**2 Select the check boxes of the destinations that you want to remove from the Recipient List, and click [Delete].**

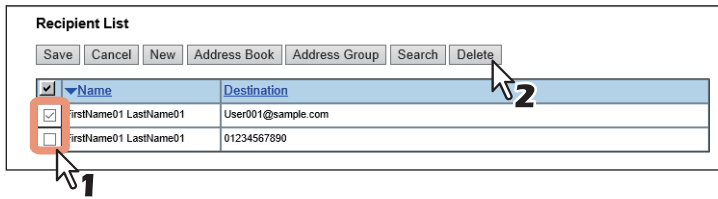

The selected destinations are removed from the Recipient List.

**InternetFax Setting**

In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent.

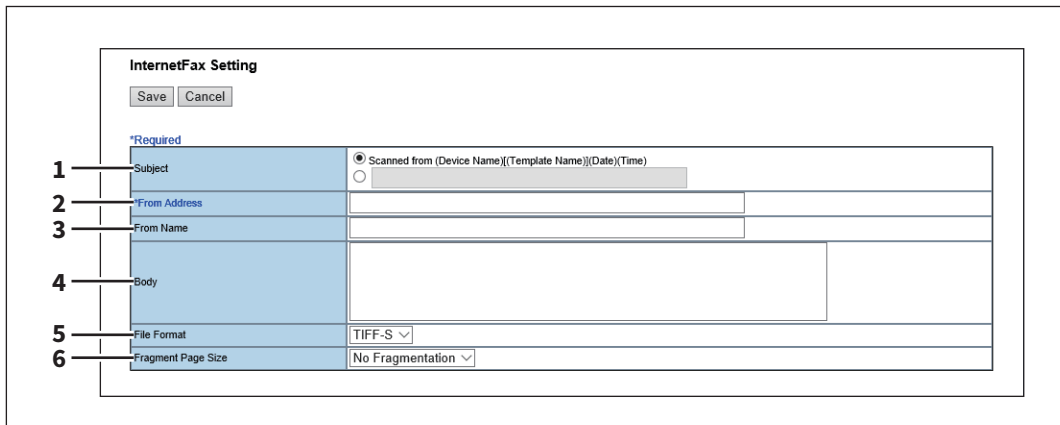

	Item name	Description
1	Subject	This sets the subject of the Internet Faxes. Select [Scanned from (Device Name) [(Template Name)] (Date) (Time)] to automatically apply the subject, or enter the desired subject in the box. If you enter manually, the subject will be [(Subject) (Date) (Time)].
2	From Address	Enter the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address. You can enter up to 140 alphanumerical characters.
3	From Name	Enter the sender name of the Internet Fax. You can enter up to 64 characters.
4	Body	Enter the body message of the Internet Fax. You can enter up to 1000 characters (including spaces).
5	File Format	Select the file format of the scanned image. Only [TIFF-S] (TIFF-FX (Profile S)) format can be selected.
6	Fragment Page Size	Select the size of the message fragmentation. [No Fragmentation] is set as the default.

## ❑ Fax Setting

In the Fax Setting page, you can specify how the fax will be sent.

	Item name	Description
1	Preview	Select whether or not to preview before sending a fax. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to preview.</li> <li>• <b>OFF</b> — Select this not to preview.</li> </ul>
2	Resolution	Select the resolution for sending faxes. <ul style="list-style-type: none"> <li>• <b>Standard</b> — Select the Standard mode as the normal resolution. This mode is suitable when you are frequently transmitting text documents with normal size characters.</li> <li>• <b>Fine</b> — Select the Fine mode as the normal resolution. This mode is suitable when you are transmitting documents with small size characters or fine drawings.</li> <li>• <b>Ultra Fine</b> — Select the Ultra Fine mode as the normal resolution. This mode is suitable when you are transmitting documents with very small size characters or detailed drawings.</li> </ul>
3	Original Mode	Select the image quality mode for sending faxes. <ul style="list-style-type: none"> <li>• <b>Text</b> — Select the Text mode as the normal image quality mode. This mode is suitable when you are transmitting text documents.</li> <li>• <b>Text/Photo</b> — Select the Text/Photo mode as the normal image quality mode. This mode is suitable when you are transmitting documents which contain both texts and photos.</li> <li>• <b>Photo</b> — Select the Photo mode as the normal image quality mode. This mode is suitable when you are transmitting photo documents.</li> </ul>
4	Exposure	Select the exposure for sending faxes. Select [Auto] to automatically apply the ideal contrast, or adjust the contrast manually in 11 stages.

	Item name	Description
5	Transmission Type	<p>Select the send mode.</p> <ul style="list-style-type: none"> <li>• <b>Memory Transmit</b> — Select the Memory TX mode to automatically send the document after it has been temporarily stored to memory. This mode is useful if you want to return original files immediately. You can also send the same originals to two or more remote faxes.</li> <li>• <b>Direct Transmit</b> — Select the Direct TX mode to send the original as it is being scanned. This mode is useful if you want confirmation from the remote party. Originals are not stored to memory, and you can specify only one remote fax at a time.</li> </ul>
	Tip	You can select [Direct Transmit] when you have created a template for Fax/InternetFax (not for Saved as file). When Fax/InternetFax and [Save as file setting] are combined, this item will be unselectable and will not be displayed.
6	ECM	Enable or disable the ECM (Error Correction Mode) to automatically resend any portion of the document affected by phone line noise or distortion.
7	Line Select *1	<p>Select whether specifying the line to be used.</p> <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select not to specify the line to be used.</li> <li>• <b>Line1</b> — Select to use Line 1 for this Fax agent.</li> <li>• <b>Line2</b> — Select to use Line 2 for this Fax agent if installed.</li> </ul>
8	Quality Transmit	Select this to send a document in the Quality TX mode. This feature sends a document at a slower speed than normal so the transmission will be less affected by line conditions.
9	SUB/SEP	Enter the SUB number or SEP number if you want to set the mailbox transmission.
10	SID/PWD	Enter the password for SUB or SEP if required.
11	Polling	<p>Select this to set Polling communications.</p> <ul style="list-style-type: none"> <li>• <b>(Blank)</b> — Select the blank box when you do not want to perform polling.</li> <li>• <b>Transmission</b> — Select this to perform Polling Reservation that allows users to store the document in the memory.</li> <li>• <b>Received</b> — Select this to perform Turnaround Polling that allows users to poll another fax after transmitting documents to the remote fax on the same phone call.</li> </ul>
	Note	You can select [Transmission] when you have created a template for Fax/InternetFax (not to be Saved as file). When Fax/InternetFax and [Save as file setting] are combined, this item will be unselectable and will not be displayed.
12	Password	Enter the 4-digit security code for the document to be stored or received.
13	Fax Number(Security)	<p>When you select [Transmission] at the [Polling] box, enter the security fax number that allows polling of stored document.</p> <p>When you select [Received] at the [Polling] box, enter the security fax number to poll the documents from remote faxes.</p>
14	Delayed Transmit	If you enable the delayed communications for this agent, enter the day and time to send a document. Delayed transmission is disabled when the date is set to "0".
15	Priority Transmit	Select whether the document will be sent prior to other jobs.

	Item name	Description
16	Line Monitor	Select this to check the connection with the remote fax by confirming Line Monitor.

\*1 This function is not available for some models.

## ❑ Email Setting

In the Email Setting page, you can specify the content of the Scan to Email document to be sent.

The screenshot shows the 'Email Setting' dialog box with the following fields and options:

- 1 Subject:** Includes radio buttons for 'Use Email Setting in Administration Setting' (selected), 'Send data from (Device name) [(Template Name)]', and a checked checkbox for 'Add the date and time to the subject'.
- 2 From Address:** Includes a radio button for 'Use From Address Setting set by Administrator' (selected) and a text input field.
- 3 From Name:** Includes a radio button for 'Use From Name Setting set by Administrator' (selected) and a text input field.
- 4 Body:** A large text area for entering the email body.
- 5 File Format:** A dropdown menu set to 'PDF(Multi)' and a checkbox for 'Enable OCR'.
- 6 Encryption:** Includes a checked checkbox for 'Encryption', fields for 'User Password' and 'Master Password' (each with a 'Retype Password' field), a dropdown for 'Encryption Level' set to '128-bit AES', and a section for 'Authority' with checkboxes for 'Printing', 'Change of Documents', 'Content Copying or Extraction', and 'Content Extraction for accessibility'.
- 7 File Name:** Includes a radio button for 'DOCYYMMDD(YYMMDD is a date)' (selected), a text input field, and a checkbox for 'Add the date and time to a file name'.
- 8 Fragment Message Size:** A dropdown menu set to 'No Fragmentation'.

	Item name	Description
1	Subject	<p>This sets the subject of the E-mail.</p> <p><b>Use Email Setting in Administration Setting</b> — Select this to set the subject specified in [Administration] - [Setup] - [Email] as subject.</p> <p><b>Send data from (Device Name)[(Template Name)]</b> — Select this to set the [(Template Name)] data sent from (Device Name) as subject.</p> <p><b>&lt;Entry box&gt;</b> — Enter the text to set as subject.</p> <p><b>Add the date and time to the Subject</b> — Select this to append date and time to the subject selected above.</p>
	Tip	<p>When [Meta Scan] is selected, you can use a variable as the subject. For more information on variables, see the following: 📖 P.419 “Variables of XML format files”</p>

	Item name	Description
2	From Address	<p>This sets the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address.</p> <p><b>Use From Address Setting set by Administrator</b> — Select this to use the E-mail address specified in [Administration] - [Setup] - [Email]. When User Authentication or Email Authentication is enabled, select this to use the E-mail address specified in [Administration] - [Security] - [Authentication] - [Email Address Setting].</p> <p><b>&lt;Entry box&gt;</b> — Specify the sender address using up to 140 alphanumeric characters.</p>
3	From Name	<p>This sets the sender name of the E-mail document.</p> <p><b>Use From Name Setting set by Administrator</b> — Select this to use the sender name specified in [Administration] - [Setup] - [Email]. When User Authentication or Email Authentication is enabled, select this to use the sender name specified in [Administration] - [Security] - [Authentication] - [Email Address Setting].</p> <p><b>&lt;Entry box&gt;</b> — Specify the sender name using up to 64 characters.</p>
4	Body	<p>Enter the body message of the Scan to Email documents. You can enter up to 1000 characters (including spaces).</p>

	Item name	Description
5	File Format	<p>Select the file format of the scanned image.</p> <ul style="list-style-type: none"> <li>• <b>TIFF(Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF(Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF(Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF(Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>Slim PDF(Multi)</b> — Select this to save scanned images as Multi-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>Slim PDF(Single)</b> — Select this to save scanned images separately as Single-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>XPS(Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS(Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> <li>• <b>JPEG</b> — Select this to save scanned images as JPEG files.</li> <li>• <b>PDF/A(Multi)</b> — Select this to save scanned images as a Multi-page PDF/A file.</li> <li>• <b>PDF/A(Single)</b> — Select this to save scanned images separately as Single-page PDF/A files.</li> <li>• <b>DOCX(Multi)</b> — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.</li> <li>• <b>DOCX(Single)</b> — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.</li> <li>• <b>XLSX(Multi)</b> — Select this to save scanned images as a Multi-page Excel file (XLSX) after OCR processing.</li> <li>• <b>XLSX(Single)</b> — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.</li> <li>• <b>PPTX(Multi)</b> — Select this to save scanned images as a Multi-page PowerPoint file (PPTX) after OCR processing.</li> <li>• <b>PPTX(Single)</b> — Select this to save scanned images as a Single-page PowerPoint file (PPTX) after OCR processing.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>
	<div style="background-color: #e0e0e0; padding: 2px; display: inline-block;">Tip</div>	<ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.</li> <li>• OCR processing is available only when the OCR Enabler is installed.</li> </ul>



	Item name	Description
6	Encryption	<p>Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.</p> <p><b>Encryption</b> — Select this if you want to encrypt PDF files.</p> <p><b>User Password</b> — Enter a password for opening encrypted PDF files.</p> <p><b>Master Password</b> — Enter a password for changing PDF encryption settings.</p> <p><b>Encryption Level</b> — Select an encryption level.</p> <ul style="list-style-type: none"> <li>• <b>40-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1.</li> <li>• <b>128-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 5.0, PDF V1.4.</li> <li>• <b>128-bit AES</b> — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.</li> </ul> <p><b>Authority</b> — Select the desired authority items on encrypted PDF files.</p> <ul style="list-style-type: none"> <li>• <b>Printing</b> — Select this to authorize users to print documents.</li> <li>• <b>Change of Documents</b> — Select this to authorize users to change documents.</li> <li>• <b>Content Copying or Extraction</b> — Select this to authorize users to copy and extract the contents of documents.</li> <li>• <b>Content Extraction for accessibility</b> — Select this to enable the accessibility feature.</li> </ul>
	<p>Tip</p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• The user password and the master password are not set at the factory shipment.</li> <li>• Passwords must be from 1 to 32 one-byte alphanumeric characters.</li> <li>• The user password must differ from the master password.</li> </ul> <p>Note</p> <p>These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the <b>MFP Management Guide</b>. Ask the administrator for resetting these passwords.</p>	
7	File Name	<p>Select how the scanned file will be named. Select [DocYMMDD] to name it as described, or enter the desired file name in the box.</p> <p>When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.</p>
	<p>Tip</p> <p>When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.</p>	
8	Fragment Message Size	<p>Select the size of the message fragmentation. [No Fragmentation] is set as the default.</p>

## ❑ Save as file Setting

In the Save as file Setting page, you can specify how and where a scanned file will be stored.

The screenshot shows the 'Save as file Setting' dialog box with the following components and callouts:

- 1** File Format: PDF(Multi) (dropdown menu),  Enable OCR
- 2** Encryption:  Encryption, User Password (text field), Retype Password (text field), Master Password (text field), Retype Password (text field), Encryption Level: 128-bit AES (dropdown menu), Authority:  Printing,  Change of Documents,  Content Copying or Extraction,  Content Extraction for accessibility
- 3** Select following 2 items:  Use local folder, Storage Path: \\MFP11532948\FILE\_SHARE
- 4** Remote 1:  Remote 1,  Use Administrator Setting, Protocol: SMB, Network Path: (text field),  Use User Setting, Protocol:  SMB  FTP  FTPS  NetWare IPX/SPX  NetWare TCP/IP, Server Name (text field), Port Number(Command) (text field), Network Path (text field), Login User Name (text field), Password (text field), Retype Password (text field), Connection Test (Execute)
- 5** Remote 2:  Remote 2,  Use Administrator Setting, Protocol: SMB, Network Path: (text field),  Use User Setting, Protocol:  SMB  FTP  FTPS  NetWare IPX/SPX  NetWare TCP/IP, Server Name (text field), Port Number(Command) (text field), Network Path (text field), Login User Name (text field), Password (text field), Retype Password (text field), Connection Test (Execute)
- 6** File Name:  DOCMMDDYY(MMDDYY is a date),  (text field),  Add the date and time to a file name.

	Item name	Description
1	File Format	<p>Select the file format for the scanned file to be stored.</p> <ul style="list-style-type: none"> <li>• <b>TIFF(Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF(Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF(Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF(Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>Slim PDF(Multi)</b> — Select this to save scanned images as Multi-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>Slim PDF(Single)</b> — Select this to save scanned images separately as Single-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>XPS(Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS(Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> <li>• <b>JPEG</b> — Select this to save scanned images as JPEG files.</li> <li>• <b>PDF/A(Multi)</b> — Select this to save scanned images as a Multi-page PDF/A file.</li> <li>• <b>PDF/A(Single)</b> — Select this to save scanned images separately as Single-page PDF/A files.</li> <li>• <b>DOCX(Multi)</b> — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.</li> <li>• <b>DOCX(Single)</b> — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.</li> <li>• <b>XLSX(Multi)</b> — Select this to save scanned images as a Multi-page Excel file (XLSX) after OCR processing.</li> <li>• <b>XLSX(Single)</b> — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.</li> <li>• <b>PPTX(Multi)</b> — Select this to save scanned images as a Multi-page PowerPoint file (PPTX) after OCR processing.</li> <li>• <b>PPTX(Single)</b> — Select this to save scanned images as a Single-page PowerPoint file (PPTX) after OCR processing.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>
	<p>Tip</p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.</li> <li>• OCR processing is available only when the OCR Enabler is installed.</li> </ul>	

	Item name	Description
2	Encryption	<p>Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.</p> <p><b>Encryption</b> — Select this if you want to encrypt PDF files.</p> <p><b>User Password</b> — Enter a password for opening encrypted PDF files.</p> <p><b>Master Password</b> — Enter a password for changing PDF encryption settings.</p> <p><b>Encryption Level</b> — Select an encryption level.</p> <ul style="list-style-type: none"> <li>• <b>40-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1.</li> <li>• <b>128-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 5.0, PDF V1.4.</li> <li>• <b>128-bit AES</b> — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.</li> </ul> <p><b>Authority</b> — Select the desired authority items on encrypted PDF files.</p> <ul style="list-style-type: none"> <li>• <b>Printing</b> — Select this to authorize users to print documents.</li> <li>• <b>Change of Documents</b> — Select this to authorize users to change documents.</li> <li>• <b>Content Copying or Extraction</b> — Select this to authorize users to copy and extract the contents of documents.</li> <li>• <b>Content Extraction for accessibility</b> — Select this to enable the accessibility feature.</li> </ul>
	Tip	<ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• The user password and the master password are not set at the factory shipment.</li> <li>• Passwords must be from 1 to 32 one-byte alphanumeric characters.</li> <li>• The user password must differ from the master password.</li> </ul>
	Note	<p>These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the <b>MFP Management Guide</b>. Ask the administrator for resetting these passwords.</p>
3	Destination — Use local folder	Select this to save a scanned file to the “FILE_SHARE” folder.
	Tip	When [Meta Scan] is selected, you can only specify one destination.

	Item name	Description
4	Destination — Remote 1	<p>Select this check box to save the scanned file to a network folder. How you can set this item depends on how the user with administrator privileges configured Remote 1 in the [Save as file] submenu under the [Setup] menu. When you select [Allow the following network folder to be used as a destination], you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item.</p> <p>When you select [Allow user to select network folder to be used as a destination], you can select [Use User Setting] and enter the following items to specify where to save the file.</p> <p>If you are allowed to specify a network folder, select [Use User Setting] and enter the following items to specify where to save the file.</p> <p><b>Protocol</b></p> <p>Select the protocol to be used for uploading a scanned file to the network folder.</p> <ul style="list-style-type: none"> <li>• <b>SMB</b> — Select this to send a scanned file to the network folder using the SMB protocol.</li> <li>• <b>FTP</b> — Select this to send a scanned file to the FTP server.</li> <li>• <b>FTPS</b> — Select this to send a scanned file to the FTP server using FTP over SSL/TLS.</li> <li>• <b>NetWare IPX/SPX</b> — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.</li> <li>• <b>NetWare TCP/IP</b> — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.</li> </ul> <p><b>Server Name</b></p> <p>When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “192.168.1.1” in this box.</p> <p>When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available).</p> <p>When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumeric characters and symbols.</p> <p><b>Port Number(Command)</b></p> <p>Enter the port number to be used for controls if you select [FTP] as the protocol. Generally “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and hyphens (-). Hyphen (-) is set as the default.</p> <p><b>Network Path</b></p> <p>When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the “users\scanned” folder in the computer named “Client01”, enter “\\Client01\users\scanned\”.</p> <p>When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “user/scanned”.</p> <p>When you select “NetWare IPX/SPX” or “NetWare TCP/IP” as the protocol, enter the folder path in the NetWare file server. For example, to specify the “sys\scan” folder in the NetWare file server, enter “\sys\scan”.</p> <p>You can enter up to 128 alphanumeric characters and symbols.</p>

	Item name	Description
4	Destination — Remote 1	<p><b>Login User Name</b> Enter the login user name to access an SMB server, FTP server, or NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log in is assumed if you leave this box blank. You can enter up to 32 alphanumeric characters and symbols other than &lt;, &gt;, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.</p> <p><b>Password</b> Enter the password to access an SMB server, FTP server, or NetWare file server, if required. You can enter up to 32 alphanumeric characters, symbols, and spaces. A single space only can also be entered.</p> <p><b>Retype Password</b> Enter the same password again for a confirmation.</p> <p><b>[Execute] button</b> Tests the connection using the specified network settings to check if the communications can be established.</p>
	<p>Tip</p> <p>When [Meta Scan] is selected, you can only specify one destination.</p>	
5	Destination — Remote 2	<p>Select this check box to save the scanned file to a network folder. How you can set this item depends on how the user with administrator privileges configured Remote 2 in the [Save as file] submenu under the [Setup] menu. If the user with administrator privileges specified Remote 2 to use only the specified network folder, you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. If the Remote 2 allows you to specify a network folder, you can specify the network folder settings. See the description of the Remote 1 option for each item.</p>
	<p>Tip</p> <p>When [Meta Scan] is selected, you can only specify one destination.</p>	
6	File Name	<p>Select how the scanned file will be named. Select [DocYMMDD] to name it as described, or enter the desired file name in the box. When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.</p>
	<p>Tip</p> <p>When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.</p>	

## ❑ Box Setting

In the Box Setting page, you can specify how scanned images will be stored in the Box.

	Item name	Description
1	Destination	Specify the destination box number for e-Filing. <b>Box Number</b> — Select the box number to store the scanned image. <b>Password</b> — Enter the password if the specified box is set with a password. <b>Retype Password</b> — Enter the same password again for a confirmation.
2	Folder Name	Enter the name of the folder where scanned images will be stored. If the specified named folder does not exist, the folder will be created automatically. You can enter up to 64 characters.
3	Document Name	Select how the scanned file will be named. Select [DocYMMDD] to name it as described, or enter the desired file name in the box.

## ❑ Store to USB Device Setting

On the Store to USB Setting page, you can set the method for saving templates in USB media.

	Item name	Description
1	File Format	<p>Select the file format of the scanned image.</p> <ul style="list-style-type: none"> <li>• <b>TIFF(Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF(Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF(Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF(Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>Slim PDF(Multi)</b> — Select this to save scanned images as Multi-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>Slim PDF(Single)</b> — Select this to save scanned images separately as Single-page slim PDF files. Select this when you give priority to minimizing the file size over the quality of the image.</li> <li>• <b>XPS(Multi)</b>— Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS(Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> <li>• <b>JPEG</b> — Select this to save scanned images as JPEG files.</li> <li>• <b>PDF/A(Multi)</b> — Select this to save scanned images as a Multi-page PDF/A file.</li> <li>• <b>PDF/A(Single)</b> — Select this to save scanned images separately as Single-page PDF/A files.</li> <li>• <b>DOCX(Multi)</b> — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.</li> <li>• <b>DOCX(Single)</b> — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.</li> <li>• <b>XLSX(Multi)</b> — Select this to save scanned images as a Multi-page Excel file (XLSX) after OCR processing.</li> <li>• <b>XLSX(Single)</b> — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.</li> <li>• <b>PPTX(Multi)</b> — Select this to save scanned images as a Multi-page PowerPoint file (PPTX) after OCR processing.</li> <li>• <b>PPTX(Single)</b> — Select this to save scanned images as a Single-page PowerPoint file (PPTX) after OCR processing.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>
	<p>Tip</p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.</li> <li>• OCR processing is available only when the OCR Enabler is installed.</li> </ul>	



	Item name	Description
2	Encryption	<p>Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.</p> <p><b>Encryption</b> — Select this if you want to encrypt PDF files.</p> <p><b>User Password</b> — Enter a password for opening encrypted PDF files.</p> <p><b>Master Password</b> — Enter a password for changing PDF encryption settings.</p> <p><b>Encryption Level</b> — Select an encryption level.</p> <ul style="list-style-type: none"> <li>• <b>40-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1.</li> <li>• <b>128-bit RC4</b> — Select this to set an encryption level to the one compatible with Acrobat 5.0, PDF V1.4.</li> <li>• <b>128-bit AES</b> — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.</li> </ul> <p><b>Authority</b> — Select the desired authority items on encrypted PDF files.</p> <ul style="list-style-type: none"> <li>• <b>Printing</b> — Select this to authorize users to print documents.</li> <li>• <b>Change of Documents</b> — Select this to authorize users to change documents.</li> <li>• <b>Content Copying or Extraction</b> — Select this to authorize users to copy and extract the contents of documents.</li> <li>• <b>Content Extraction for accessibility</b> — Select this to enable the accessibility feature.</li> </ul>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the <i>MFP Management Guide</i>.</li> <li>• The user password and the master password are not set at the factory shipment.</li> <li>• Passwords must be from 1 to 32 one-byte alphanumerical characters.</li> <li>• The user password must differ from the master password.</li> </ul> <p><b>Note</b></p> <p>These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the <i>MFP Management Guide</i>. Ask the administrator for resetting these passwords.</p>	
3	File Name	<p>Select how the scanned file will be named. Select [DocYMMDD] to name it as described, or enter the desired file name in the box.</p> <p>When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.</p>
	<p><b>Tip</b></p> <p>When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.</p>	

## ❑ Scan Setting

In the Scan Setting page, you can specify how originals are scanned for the Scan to File, Scan to Email, and Scan to e-Filing agent.

The screenshot shows the 'Scan Setting' dialog box with the following settings and callouts:

- 1: Preview (OFF)
- 2: Single/2-Sided Scan (Single)
- 3: Rotation (A → A)
- 4: Color Mode (Black)
- 5: Resolution (200dpi)
- 6: Compression (Middle)
- 7: Original Mode (Text)
- 8: Exposure (Auto)
- 9: Original Size (Custom)
- 10: Custom Size (Auto Cut of Print Area, Expand Size 2 mm)
- 11: Background (Grey)
- 12: Contrast (High)
- 13: Sharpness (High)
- 14: Saturation (High)
- 15: RGB Adjustment (Red, Green, Blue)
- 16: Omit Blank Page (OFF)
- 17: Outside Erase (OFF)
- 18: ADF Scan Noise Reduction (None)
- 19: OCR (Language: 1st Japanese, 2nd English; Auto Rotation: Enable)
- 20: Drop Out Color (OFF)

	Item name	Description
1	Preview	Select whether to display the scanned image on the touch panel after the scanning an original. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this not to display the scanned image.</li> <li>• <b>ON</b> — Select this to display the scanned image.</li> </ul>
2	Single/2-Sided Scan	Select whether to scan one side or both sides of an original. Available only when the Reversing Automatic Document Feeder is installed. <ul style="list-style-type: none"> <li>• <b>Single</b> — Select this to scan one side of an original.</li> <li>• <b>Duplex Book</b> — Select this to scan both sides of originals when the pages are printed vertically in the same direction and bound along the vertical side of the paper.</li> <li>• <b>Duplex Tablet</b> — Select this to scan both sides of originals with a vertical reversal to be bound along the horizontal side of the paper.</li> </ul>
3	Rotation	Select how the scanned images will be rotated.

	Item name	Description
4	Color Mode	Select the color mode for scanning. <ul style="list-style-type: none"> <li>• <b>Black</b> — Select this to scan in the black mode.</li> <li>• <b>Gray</b> — Select this to scan in the gray scale mode.</li> <li>• <b>Full Color</b> — Select this to scan in the full color mode.</li> <li>• <b>Auto Color</b> — Select this to scan in the auto color mode.</li> </ul>
	<b>Note</b>	<ul style="list-style-type: none"> <li>• The [Color Mode] option cannot be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File Format] option in the Save as File Settings and that in the Email Setting.</li> <li>• When [Auto Color] is selected, you cannot select JPEG or TIFF (Multi) for the file format. Also when [Black] is selected, JPEG is not allowed.</li> </ul>
5	Resolution	Select the resolution for scanning.
	<b>Note</b>	The [Resolution] option cannot be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File Format] option in the Save as File Settings and that in the Email Setting.
6	Compression	Select the compression for scanning.
	<b>Note</b>	<ul style="list-style-type: none"> <li>• This cannot be set when [Black] is selected at the [Color Mode] box.</li> <li>• The [Compression] option cannot be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File Format] option in the Save as File Settings and that in the Email Setting.</li> </ul>
7	Original Mode	Select the document type of the originals. <ul style="list-style-type: none"> <li>• <b>Text</b> — Select this to set the Text mode as the default original mode.</li> <li>• <b>Text/Photo</b> — Select this to set the Text/Photo mode as the default original mode. Depending on the model, this can be selected only when [Black] is selected in the [Color Mode] box.<sup>*1</sup></li> <li>• <b>Photo</b> — Select this to set the Photo mode as the default original mode.</li> </ul>
	<b>Note</b>	This cannot be set when [Gray] is selected in the [Color Mode] box.
8	Exposure	Select the exposure for scanning. Select [Auto] to automatically apply the best contrast for the document. You can also manually adjust the exposure in 11 stages. The farther to the right that you set the value, the darker the density of the scanned image will become.
	<b>Note</b>	[Auto] is not available when [Gray], [Full Color], or [Auto Color] is selected at the [Color Mode] box. In that case, set the exposure manually.
9	Original Size	Select the original size. If this is set to [Auto], the size is automatically detected. Select [Mixed Original Sizes] to scan a document with mixed sizes. You can also specify the original size. If this is set to [Custom], you can specify the custom original size for scanning.

	Item name	Description
10	Custom Size	<p>Select the custom original size for scanning. You can set [Skew Correction] for the following settings.</p> <ul style="list-style-type: none"> <li>• <b>Registered Size</b> — Select this to select the custom original size that has been registered on the control panel.</li> <li>• <b>Auto Cut of Print Area</b> — Select this to set the custom size by cutting the print area of the original. You can enter a value in [Expand Size] to expand the area.</li> <li>• <b>Auto Detected</b> — Select this to set the custom size by detecting the original size automatically. This function is available only when the Dual Scan Document Feeder (DSDF) has been installed.</li> </ul>
11	Background	Select the density level of the background of the scanned image. Density can be adjusted in 9 levels. The farther to the right that you set the value, the darker the density of the background will become.
12	Contrast	Select the contrast level of the scanned image. Contrast can be adjusted in 9 levels. The farther to the right that you set the value, the higher the contrast level will become.
	<p><b>Note</b> This is not available when [Black] or [Gray] is selected at the [Color Mode] box.</p>	
13	Sharpness	Select the sharpness level of the scanned image. Sharpness can be adjusted in 9 levels. The farther to the right that you set the value, the sharper the scanned image will become.
14	Saturation	Select the saturation level of the scanned image. Saturation can be adjusted in 7 levels. The farther to the right you set the value, the more vivid the scanned image will become.
	<p><b>Note</b> This is not available when [Black] or [Gray] is selected at the [Color Mode] box.</p>	
15	RGB Adjustment	Select the RGB density level of the scanned image. RGB density can be adjusted in 9 levels for each color. The farther to the right you set the value, the darker the density of the selected color will become.
	<p><b>Note</b> This is not available when [Black] or [Gray] is selected at the [Color Mode] box.</p>	
16	Omit Blank Page	<p>Select whether to automatically omit a blank page in the scanned image if it is included in originals.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — The blank page is not omitted.</li> <li>• <b>ON</b> — The blank page is omitted.</li> </ul>
17	Outside Erase	<p>Select whether to erase a shade that appears outside of the scanned image when an original is placed on the original glass while the Original Cover is left open. The erased shade will be whitened.</p> <p>If you want to erase it, you can select the criteria in 7 levels for judging if it is an area to be erased. The farther to the right you select, the larger the area that will be erased. [OFF] is selected by default.</p>

	Item name	Description
18	ADF Scan Noise Reduction	Use this setting if streaks are conspicuous on images when originals are scanned with the Reversing Automatic Document Feeder. <ul style="list-style-type: none"> <li>• <b>None</b> — Select this not to perform noise reduction.</li> <li>• <b>Low/Middle/High</b> — Select this to specify the noise reduction level. [High] is the most effective.</li> </ul>
	<b>Note</b>	Colored characters become faint if the noise reduction level is set to [High].
19	OCR	You can specify the prioritized language and auto rotation for OCR processing. This item is available only when the OCR Enabler is installed. <ul style="list-style-type: none"> <li>• Language: Select the primary and secondary languages.</li> <li>• Auto Rotation: Specify whether or not to automatically rotate.</li> </ul>
20	Drop Out Color	Select the drop out level of colors eliminated from the scanned original. Drop out can be adjusted in 7 levels. Select [OFF] to disable this function.

\*1 Available only for models that support color printing.

## Extended Field settings

You can set extended fields for meta data.

Set the field you have registered in [Administration] - [Registration] - [Extended Field Definition].

	Item name	Description
1	Extended Field Definition No.	Allows you to select a registered extended field definition.

## Extended Field Properties

[Extended Field Properties] set under the selected extended field definition are displayed.

Values set in this screen are used as the default values for [Extended Field Properties] displayed on the touch panel when using Meta Scan.

Items with an asterisk (\*) attached at the beginning of the [Extended Field Properties] name are mandatory entry fields.

## Password Setting

In the Password Setting page, you can set a password for the private template.

	Item name	Description
1	Password	Enter a password.
2	Retype Password	Enter the same password again for a confirmation.

## ■ [Address Book] Item list

- 📖 P.83 “[Address Book] screen”
- 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
- 📖 P.89 “[Fax Setting] screen”
- 📖 P.90 “[Search Contact] screen”
- 📖 P.90 “[Search Address List] screen”
- 📖 P.91 “[Create Group information]/[Edit Group information] screen”


## □ [Address Book] screen

You can manage a contact list to be used in E-mail, Internet Fax, and fax transmissions.

### Tip

- Click [Contacts], [Favorite Contact], [Groups], or [Favorite Groups] to switch the display between the list of addresses and the list of groups where contacts are assigned.
- Address Book can be also managed using the touch panel. Refer to the *MFP Management Guide*.


## Contacts

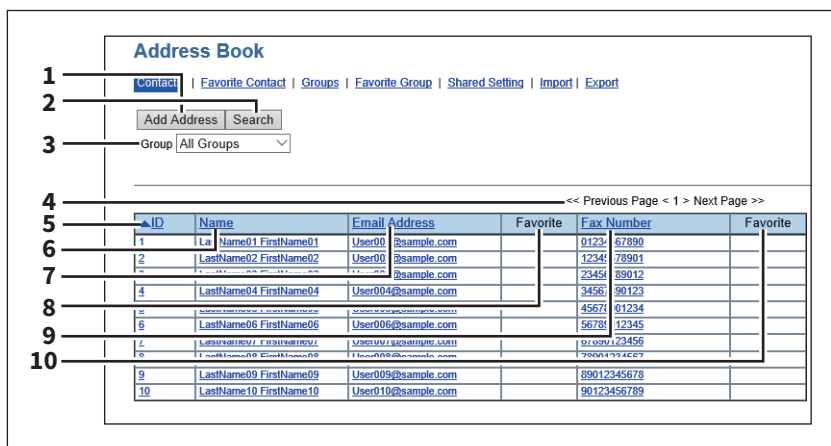

	Item name	Description
1	[Add Address] button	Allows you to add a new contact in the address book. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
2	[Search] button	Allows you to search a contact from the address book. 📖 P.90 “[Search Contact] screen”
3	Group	Select a group to display in the address list. <ul style="list-style-type: none"> <li>• <b>All Groups</b> — Displays all the groups.</li> <li>• <b>Local</b> — Displays the local address book.</li> <li>• <b>Shared</b> — Displays the shared address book.</li> </ul>
	<b>Note</b>	This is only available when [Shared Setting] - [Shared Address Book] is set to [Enable (Primary)] or [Enable (Secondary)].
4	Select Page	Allows you to select a page when there are 101 items or more.
5	ID	Displays the registered ID of the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
6	Name	Displays the name registered to the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”

	Item name	Description
7	Email Address	Displays the E-mail address registered to the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
8	Favorite	This check box is selected when Email Address is set as Favorite.
9	Fax Number	Displays the fax number registered to the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
10	Favorite	This check box is selected when Fax Number is set as Favorite.


### Favorite Contact

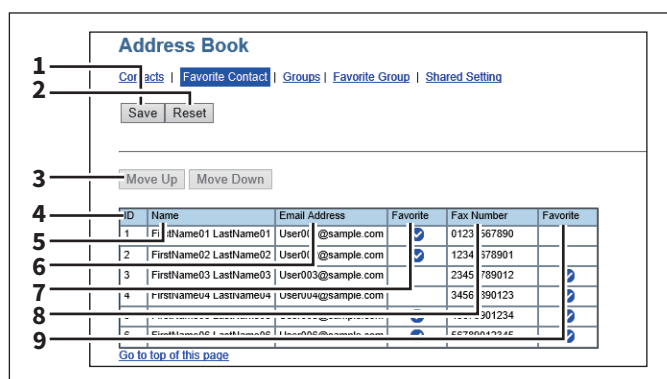

	Item name	Description
1	[Save] button	Saves the specified information.
2	[Reset] button	Erases the specified information.
3	[Move Up]/[Move Down] button	Changes the priority order in the list.
4	ID	Displays the registered ID of the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
5	Name	Displays the name registered to the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
6	Email Address	Displays the E-mail address registered to the contact. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
7	Favorite	This check box is selected when Email Address is set as Favorite.
8	Fax Number	Displays the fax number registered to the contact.
9	Favorite	This check box is selected when Fax Number is set as Favorite.




## Group

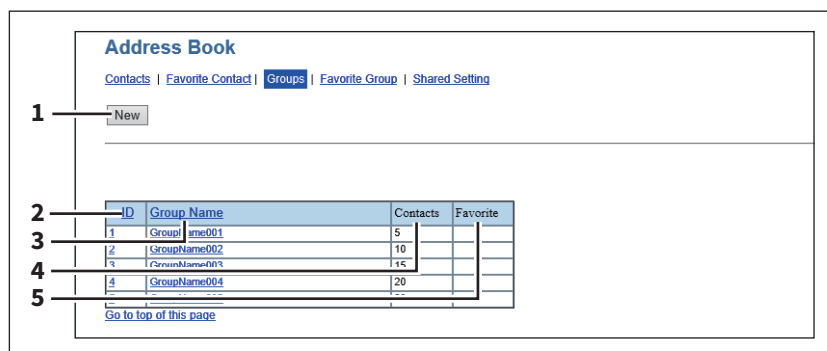


	Item name	Description
1	[New] button	Allows you to add a new group. P.91 “[Create Group information]/[Edit Group information] screen”
2	ID	Displays the registered ID of the group. P.91 “[Create Group information]/[Edit Group information] screen”
3	Group Name	Displays the registered name of the group. P.91 “[Create Group information]/[Edit Group information] screen”
4	Contacts	Displays how many address books are registered in the group.
5	Favorite	This check box is selected when Group is set as Favorite.

## Favorite Groups

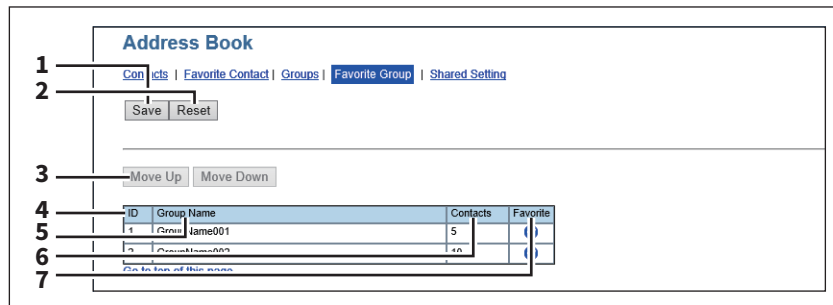

	Item name	Description
1	[Save] button	Saves the specified information.
2	[Reset] button	Erases the specified information.
3	[Move Up]/[Move Down] button	Changes the priority order in the list.
4	ID	Displays the registered ID of the group. P.91 “[Create Group information]/[Edit Group information] screen”
5	Group Name	Displays the registered name of the group. P.91 “[Create Group information]/[Edit Group information] screen”
6	Contacts	Displays how many address books are registered in the group.
7	Favorite	This check box is selected when Group is set as Favorite.

## Shared Setting

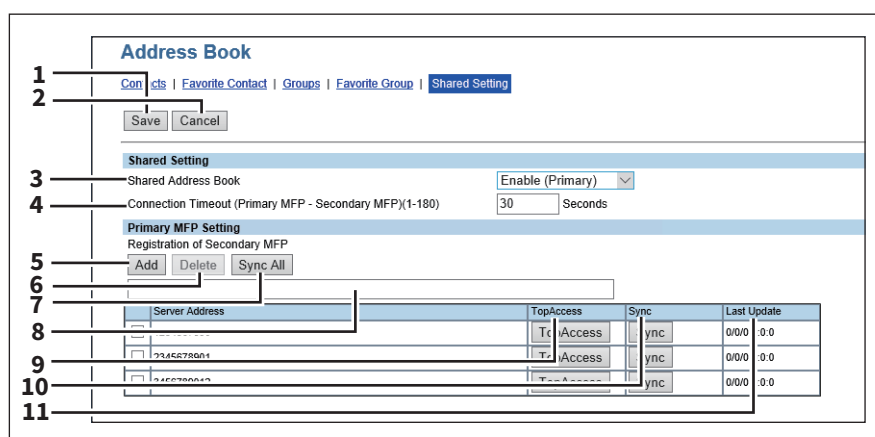

	Item name	Description
1	[Save] button	Saves the specified information.
2	[Cancel] button	Cancels settings.
3	Shared Address Book	When managing other MFPs and Shared Address Books to the distribution destination, set this printer to Primary or Secondary. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Does not synchronize.</li> <li>• <b>Enable (Primary)</b> — Synchronizes as a primary.</li> <li>• <b>Enable (Secondary)</b> — Synchronizes as a secondary.</li> </ul>
	<b>Note</b>	MFPs, which are registered as secondary in a Primary MFP (in which [Enable (Primary)] is set), can synchronize its Shared Address Book only when [Enable (Secondary)] is set in [Shared Address Book] in them respectively.
4	Connection Timeout	Enter the timeout time to stop communicating if you cannot connect to the primary or secondary MFP. You can set 1 to 180 seconds.
5	[Add] button	Adds a new secondary MFP. Enter the IP address or host name for the secondary MFP for the distribution destination in the input box below, and then click the [Add] button to register. You can register up to 10 MFPs.
6	[Delete] button	Deletes the selected MFP from the list of secondary MFPs.
7	[Sync All] button	Synchronizes the Shared Address Book for all secondary MFPs with the information on the printer.
8	Input box	Enter the IP address or host name when registering a secondary MFP.
9	[TopAccess] button	Starts TopAccess.
10	[Sync] button	Synchronizes the Shared Address Book for the relevant secondary MFPs with the information on the printer.
11	Last Update	Displays the previous update time.

## Import

	Item name	Description
1	Import Method	Specify the import method of the address book. <b>Addition</b> — Select this to append the imported information to the existing data. <b>Overwrite</b> — Select this to replace the existing data with the imported information.
2	Address Book Type	Specify “Local” or “Shared” as the import target when using the Shared Address Book function.
3	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
4	File Name	Select the address book file to be imported. <b>[Browse]</b> button — Allows you to select the address book file. <b>[Import]</b> button — Imports the selected address book file.

## Export

	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	Export Data Format	Select the file format of the export file. <ul style="list-style-type: none"> <li>• <b>CSV</b> — Select this to create the file in the CSV format.</li> <li>• <b>XML</b> — Select this to create the file in the XML format.</li> </ul>
5	Address Book Type	Specify “Local” or “Shared” as the export source when using the Shared Address Book function.
6	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
7	[Create New File] button	Creates the export file.

## ❑ [Create Destination information]/[Edit Destination information] screen

The screenshot shows the 'Create Destination information' screen. It features a title bar with the text 'Create Destination information'. Below the title bar, there are four buttons: 'Save', 'Cancel', 'Reset', and 'Delete'. A 'Fax Setting' button is located below these. A 'Destination' dropdown menu is set to 'Local'. The main form contains several input fields: 'First Name' (with a red asterisk), 'Last Name', 'Index', 'Email Address' (with a green asterisk), 'Fax Number' (with a green asterisk), '2nd Fax Number', 'Company', 'Department', and 'Keyword'. Each input field has a 'Favorite' checkbox to its right. The callouts 1-15 point to the following elements: 1. Save button, 2. Cancel button, 3. Reset button, 4. Delete button, 5. Fax Setting button, 6. Destination dropdown, 7. First Name field, 8. Last Name field, 9. Index field, 10. Email Address field, 11. Fax Number field, 12. 2nd Fax Number field, 13. Company field, 14. Department field, 15. Keyword field.

	Item name	Description
1	[Save] button	Saves the entered information.
2	[Cancel] button	Cancels adding or editing a contract.
3	[Reset] button	Erases information entered in the given box.
4	[Delete] button	Deletes the displayed contact.
5	[Fax Setting] button	Registers the contact for fax transmission. 📖 P.89 “[Fax Setting] screen”
6	Destination	Select Local Address Book or Shared Address Book as the registration target for contact information.
	<b>Note</b>	This is only available when [Shared Setting] - [Shared Address Book] is set to [Enable (Primary)] or [Enable (Secondary)].
7	First Name	Enter the first name of the contact. You can enter up to 32 characters. Invalid characters are replaced with “!”.
8	Last Name	Enter the last name of the contact. You can enter up to 32 characters. Invalid characters are replaced with “!”.
9	Index	Enter the characters to be used as the index. You can enter up to 64 characters.
10	Email Address	Enter the E-mail address of the contact. You can enter up to 192 characters. Select [Favorite] to specify the contact as Favorite.
11	Fax Number	Enter the fax number of the contact. You can enter up to 128 characters. Select [Favorite] to specify the contact as Favorite.
12	2nd Fax Number	Enter the second fax number of the contact. You can enter up to 128 characters.
13	Company	Enter the company name of the contact. You can enter up to 64 characters. Invalid characters are replaced with “!”.
14	Department	Enter the department name of the contact. You can enter up to 64 characters. Invalid characters are replaced with “!”.
15	Keyword	Enter the comments on the contact. You can enter up to 256 characters. Invalid characters are replaced with “!”.

**Note**

- You must specify either the [First Name] or [Last Name] box and either the [Email Address] or [Fax Number] box to register the contact.
- If you enter “-” in the [Fax Number] and [2nd Fax Number], a three-second pause is added for dialing the fax number.
- To perform fax transmission, the Fax Unit is required. If the Fax Unit is not installed, you cannot perform the fax transmission even if you specify the fax number.

**□ [Fax Setting] screen**

	Item name	Description
1	[Save] button	Saves the entered information.
2	[Cancel] button	Cancels the fax settings.
3	[Reset] button	Restores fax settings set for the contact to the default status.
4	SUB	Enter the mailbox number if you want to send a fax to the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
5	SID	Enter the password to send a fax to the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
6	SEP	Enter the mailbox number if you want to retrieve a document from the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
7	PWD	Enter the password to retrieve a document from the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
8	ECM	Select whether to enable or disable ECM (Error Correction Mode). If [ON] is selected, it facilitates error free communications by automatically resending any portion of the document affected by phone line noise or distortion.
9	Line Select	Select whether specifying the line to be used. If this is set to [Auto], this equipment automatically selects the line to be used. However, [Line 2] can be applicable only when the 2nd Line for Fax Unit is installed.
10	Quality Transmit	Select whether to send a document in the Quality TX mode. If [ON] is selected, this equipment sends documents at a slower speed than normal so that the transmission will be less affected by line condition.
11	Transmission Type	Select whether the document will be sent in [Memory Transmit] mode or [Direct Transmit] mode.

## ❑ [Search Contact] screen

You can search for contacts in the LDAP server and add them to the address book.

### Tip

In order to use the LDAP search, the directory service must be set up by a user who has been granted administrator privileges in the access policy mode. Before operating the LDAP search, ask your administrator if the Directory Service has been configured.

The screenshot shows the 'Search Contact' dialog box. It includes a title bar, a 'Search' button (1) and a 'Cancel' button (2). Below the buttons is a text input field (2) with the placeholder text 'Enter a partial name or Email address to search for a contact.' Underneath is a dropdown menu for 'Directory Service Name' (3) currently set to 'MFP LOCAL'. Below that are seven text input fields for 'First Name' (4), 'Last Name' (5), 'Email Address' (6), 'Fax Number' (7), 'Company' (8), and 'Department' (9).

	Item name	Description
1	[Search] button	Searches contacts with the entered conditions. P.90 “[Search Address List] screen”
2	[Cancel] button	Cancels the contact search.
3	Directory Service Name	Select the LDAP server for the search.
4	First Name	Enter the search condition.
5	Last Name	
6	Email Address	
7	Fax Number	
8	Company	
9	Department	

### Tip

- If you select [MFP LOCAL] at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations that contain the text entered in each item.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

## ❑ [Search Address List] screen


Select from the search address list and add to the address book.

The screenshot shows the 'Search Address List' dialog box. It has a title bar and buttons for 'Add' (1), 'Cancel' (2), and 'Research' (3). Below the buttons is a text input field (2) for search criteria. Underneath is a table showing search results. The table has columns for 'Name', 'Email Address', and 'Fax Number'. The first row shows a search result for 'User001@ mple.com' with fax number '0123 567890'. A 'Number of Search Result: 1' label is above the table. A 'this page' link is visible below the table.

	Item name	Description
1	[Add] button	Adds the contact selected in the search address list into the address book.
2	[Cancel] button	Cancels the search address list display.
3	[Research] button	Returns to the [Search Contact] screen to change the search criteria and execute the search again.
4	Number of Search Result	Displays the number of found contacts.
5	Check box	Select contacts to be registered to the address book.
6	Name	Displays the search result.
7	Email Address	
8	Fax Number	

### ❑ [Create Group information]/[Edit Group information] screen

You can create groups that contain multiple recipients. This enables you to specify a group as the destination when sending an E-mail, Internet Fax, or fax to multiple recipients.

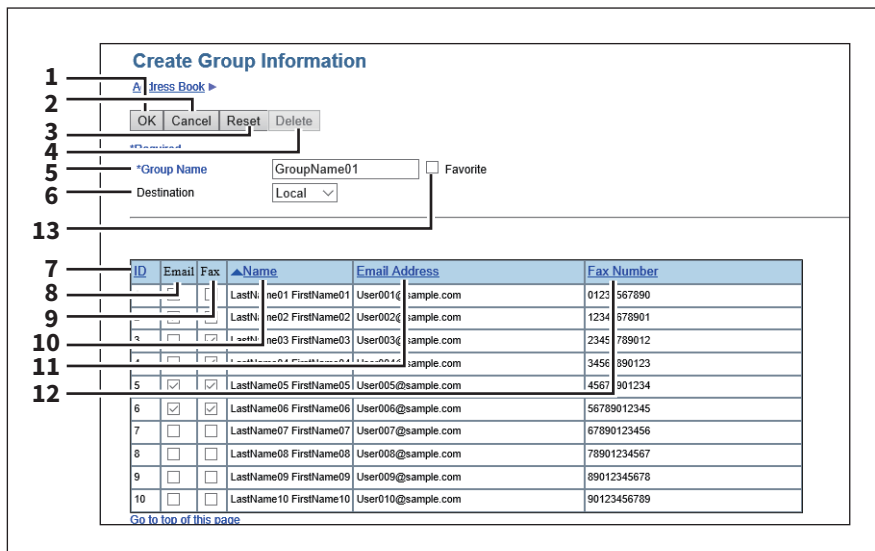

	Item name	Description
1	[OK] button	Registers the selected contacts as a group.
2	[Cancel] button	Cancels the group registration.
3	[Reset] button	Resets the contents.
4	[Delete] button	Deletes the displayed group.
5	Group Name	Enter the group name. You can enter up to 20 characters.
6	Destination	Select Local Address Book or Shared Address Book as the registration target for Group information.
	<b>Note</b>	This is only available when [Shared Setting] - [Shared Address Book] is set to [Enable (Primary)] or [Enable (Secondary)].
7	ID	Displays the registered ID of the contact.
8	Email	Select the check box to register E-mail address into the group when the contact has E-mail information.

	Item name	Description
9	Fax	Select the check box to register fax number into the group when the contact has fax number information.
10	Name	Displays the last name and first name registered to the contact.
11	Email Address	Displays the E-mail address registered to the contact.
12	Fax Number	Displays the fax number registered to the contact.
13	Favorite	Select to set the group as your favorite.

## ■ [Inbound FAX routing] Item list

ITU-T communications function between fax devices with ITU-T support and enable fax transmission to and retrieval from mailboxes.

The type of mailboxes for ITU-T communications must be set in advance to either confidential, bulletin board, or forward. You can specify a password on any mailbox to secure confidentiality.

- 📖 P.92 “[Inbound FAX routing] screen”
- 📖 P.93 “[MailBoxes Properties] screen”
- 📖 P.94 “MailBox Setting (Mailbox)”
- 📖 P.95 “Destination Setting (Mailbox)”
- 📖 P.95 “InternetFax Setting (Mailbox)”
- 📖 P.96 “Relay End Terminal Report (Mailbox)”
- 📖 P.96 “Save as file Setting (Mailbox)”
- 📖 P.97 “Email Setting (Mailbox)”
- 📖 P.97 “Box Setting (Mailbox)”

### Note


- Mailboxes can be managed only when the Fax Unit is installed.
- The Internet/Fax (Relay) agent cannot be used to forward an inbound fax routed via Inbound FAX Routing.

### Tip

Mailboxes can be managed using the touch panel.

## 📄 [Inbound FAX routing] screen

You can manage mailboxes used for ITU-T communications.

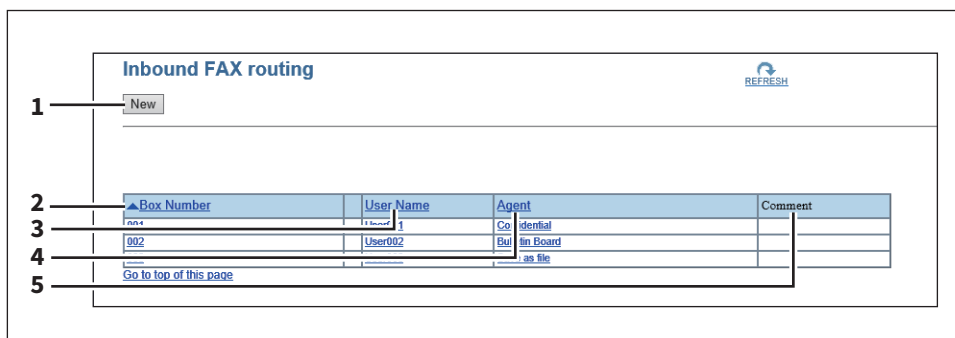


	Item name	Description
1	[New] button	Creates a mailbox for F-code communications. 📖 P.93 “[MailBoxes Properties] screen”
2	Box Number	Displays the registered mailbox number.
3	User Name	Displays the user name of the registered mailbox.
4	Agent	Displays the agent assigned to the mailbox.



	Item name	Description
5	Comment	Displays the registered comment.

## ❑ [MailBoxes Properties] screen

You can set a mailbox.

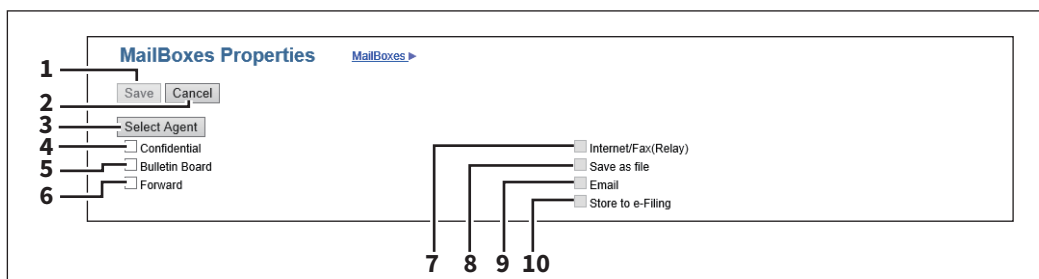

	Item name	Description
1	[Save] button	Saves the mailbox.
2	[Cancel] button	Cancels the mailbox settings.
3	[Select Agent] button	Set the agent to apply to the forward mailbox.
4	Confidential	Creates a confident mailbox. The Confidential Box allows a one-time document retrieval from the mailbox. Once a document is retrieved, it is cleared. If a new document is sent to the same box number where another document is stored, it is added to the existing box. 📖 P.94 “MailBox Setting (Mailbox)”
5	Bulletin Board	Creates a bulletin board mailbox. The Bulletin Board Box allows multiple document retrievals from the same mailbox. Once a document is retrieved, it is not cleared. If a new document is sent to the same Box, it replaces the existing one. 📖 P.94 “MailBox Setting (Mailbox)”
6	Forward	Creates a multiple transmission relay mailbox. When you select this, select the agent from [Internet/Fax(Relay)], [Save as file], [Email], or [Store to e-Filing]. Use the forward mailbox when you want to forward a fax document to specified destinations automatically.
7	Internet/Fax(Relay)	Creates a multiple transmission relay mailbox for the Internet Fax or fax. This agent can be combined with the Save as file agent or Store to e-Filing agent. 📖 P.94 “MailBox Setting (Mailbox)” 📖 P.95 “Destination Setting (Mailbox)” 📖 P.95 “InternetFax Setting (Mailbox)” 📖 P.96 “Relay End Terminal Report (Mailbox)”
	<b>Note</b>	The Internet/Fax (Relay) agent cannot be used to forward an inbound fax routed via Inbound FAX Routing.
8	Save as file	Creates a shared folder forwarding mailbox. This agent can be combined with the Internet/Fax(Relay), Email, or Store to e-Filing agent. 📖 P.94 “MailBox Setting (Mailbox)” 📖 P.96 “Save as file Setting (Mailbox)”
9	Email	Creates an E-mail forwarding mailbox. This agent can be combined with the Save as file agent or Store to e-Filing agent. 📖 P.94 “MailBox Setting (Mailbox)” 📖 P.97 “Email Setting (Mailbox)”

	Item name	Description
10	Store to e-Filing	Creates an e-Filing forwarding mailbox. This agent can be combined with the Internet/Fax(Relay) agent, Save as file agent, or Email agent. P.94 "MailBox Setting (Mailbox)" P.97 "Box Setting (Mailbox)"

## □ MailBox Setting (Mailbox)

In the MailBox Setting page, specify the general information of the mailbox such as the box number, password, owner, comment, and notification.


### Note

- The [Notification] and [Document Print] options are not available when creating the Confidential mailbox or Bulletin Board mailbox.
- Mailbox communication is disabled if the settings on this equipment and information registered for the destination do not match. Check how the box number and the fax number of the destination are registered on the journal before entering the box number.

The screenshot shows the 'MailBox Setting' form with the following fields and callouts:

- 1: Box Number (text input: 001)
- 2: Password (password input: masked with dots)
- 3: User Name (text input: User001)
- 4: Comment (text input)
- 5: Notification (checkboxes:  Send Email when an error occurs,  Send Email when job is completed; Email Address text input)
- 6: Document Print (dropdown menu: Always)

	Item name	Description
1	Box Number	Enter the box number of the mailbox. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*). You can also specify the sender's fax number to enable the Inbound Fax routing when registering a Forward mailbox. If you specify the sender's fax number here, the faxes that are received from the specified fax number will be routed according to the mailbox settings.
	<b>Note</b>	<ul style="list-style-type: none"> <li>• The Inbound Fax routing is available only for a Forward mailbox. If you select [Confidential] or [Bulletin Board] as an agent, you cannot specify the fax number.</li> <li>• When a fax is sent from the specified fax number with a box number (or sub address), the Inbound Fax routing will not apply to the transmission and it is processed according to the specified box number (or sub address) settings.</li> </ul>
	<b>Tip</b>	If you create a forward mailbox whose number is the fax number of the sender, you can use the TSI function. Using this function, this equipment forwards the original sent from the sender whose fax number is set to the mailbox number, based on the pre-set agent (Save as File / Email / Store to e-Filing).
2	Password	Enter the box password if you want to protect the mailbox by the password. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*).
3	User Name	Enter the user name of this mailbox. You can enter up to 30 characters.
4	Comment	Enter the comment. You can enter up to 30 characters.

	Item name	Description
5	Notification	<p>This specifies how the notification message will be sent if an error occurs.</p> <p><b>Send Email when an error occurs</b> — Transmits a notification message to the specified E-mail address when an error occurs.</p> <p><b>Send Email when job is completed</b> — Transmits a notification message to the specified E-mail address when a job is completed.</p> <p><b>Email Address</b> — Enter the E-mail address for the notification messages. You can enter up to 192 alphanumeric characters.</p>
	<p><b>Note</b></p> <p>When you enable the Notification setting, make sure to set up the E-mail settings in the [Email] submenu of the [Setup] menu in the TopAccess access policy mode. For instructions on how to set up the E-mail settings, see the following section:</p> <p> P.290 “Setting up E-mail settings”</p>	
6	Document Print	<p>Select whether to print a document sent to this mailbox.</p> <ul style="list-style-type: none"> <li>• <b>Always</b> — Always prints documents sent to this mailbox.</li> <li>• <b>ON ERROR</b> — Prints the document if all specified forwarding has failed.</li> </ul>

### Destination Setting (Mailbox)

In the Recipient List page, you can specify the destinations of the Internet/Fax (Relay), or Email agent. When you are setting up the destinations for the Email agent, you can only specify the E-mail addresses for the destinations.


When you are setting up the destinations for the Internet/Fax (Relay) agent, you can specify both fax numbers and E-mail addresses for the destinations.

You can specify the destinations by entering their E-mail addresses or fax numbers manually, selecting recipients from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP server.

**Note**

The methods of entering the destinations manually and searching for the destinations in the LDAP server are not available if you are setting the destination for the Internet/Fax (Relay) agent.


Operations are the same as the following procedure.

 P.58 “Destination Setting”

### InternetFax Setting (Mailbox)

In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent.

Operations are the same as the following procedure.

 P.63 “InternetFax Setting”

## ❑ Relay End Terminal Report (Mailbox)

On the Relay End Terminal Report page, you can specify a destination to which the transmission result list will be sent.

The screenshot shows the 'Relay End Terminal Report' configuration interface. It includes a title bar, a breadcrumb trail, and three action buttons: 'Add', 'Cancel', and 'Reset'. Below these are two input fields: 'Destination' and 'Fax Type' (currently set to 'G3 Fax'). At the bottom is a table of registered destinations with the following columns: Email, Fax, ID, Name, Email Address, Favorite, Fax Number, and Favorite. The table lists 10 entries with sample data.

Email	Fax	ID	Name	Email Address	Favorite	Fax Number	Favorite
<input checked="" type="radio"/>	<input type="radio"/>	0001	FirstName01 LastName01	User001@sample.com		01234567890	
<input type="radio"/>	<input type="radio"/>	0002	FirstName02 LastName02	User002@sample.com		12345678901	
<input type="radio"/>	<input type="radio"/>	0003	FirstName03 LastName03	User003@sample.com		23456789012	
<input type="radio"/>	<input type="radio"/>	0004	FirstName04 LastName04	User004@sample.com		34567890123	
<input type="radio"/>	<input type="radio"/>	0005	FirstName05 LastName05	User005@sample.com		45678901234	
<input type="radio"/>	<input type="radio"/>	0006	FirstName06 LastName06	User006@sample.com		56789012345	
<input type="radio"/>	<input type="radio"/>	0007	FirstName07 LastName07	User007@sample.com		67890123456	
<input type="radio"/>	<input type="radio"/>	0008	FirstName08 LastName08	User008@sample.com		78901234567	
<input type="radio"/>	<input type="radio"/>	0009	FirstName09 LastName09	User009@sample.com		89012345678	
<input type="radio"/>	<input type="radio"/>	0010	FirstName10 LastName10	User010@sample.com		90123456789	

	Item name	Description
1	[Add] button	Adds settings to transmit the relay end terminal report.
2	[Cancel] button	Cancels the settings.
3	[Reset] button	Resets the settings.
4	Destination	Enter the E-mail address or fax number of the recipient.
5	Fax Type	When the fax number is entered, select [G3 Fax] in the [Fax Type] box. When the E-mail address is entered, select [InternetFax] in the [Fax Type] box.
6	Recipient list	Displays the registered destinations. Select the E-mail address or fax number of the destination.

### Note

You cannot specify more than 1 destination for the destination of the Relay End Terminal Report.

## ❑ Save as file Setting (Mailbox)

In the Save as file Setting page, you can specify how and where a received fax will be stored.

Instructions on how to do the Save as file setting for the mailbox are the same as for the Save as file setting for a private template.

Operations are the same as the following procedure.

📖 P.70 “Save as file Setting”

### Note

You cannot specify USB media as the storage in the Save as file Setting Page.

---

## ❑ Email Setting (Mailbox)

In the Email Settings page, you can specify the content of E-mail document to be sent. Instructions on how to do the E-mail setting for the mailbox are the same as for the E-mail setting for a private template.

Operations are the same as the following procedure.

📖 P.66 “Email Setting”

## ❑ Box Setting (Mailbox)

In the Box Setting page, you can specify how a received fax will be stored in the Box.

Operations are the same as the following procedure.

📖 P.75 “Box Setting”

# [Registration] How to Set and How to Operate

- 📖 P.98 “Managing templates”
- 📖 P.106 “Managing address book”
- 📖 P.115 “Managing mailboxes”

## ■ Managing templates

- 📖 P.98 “Registering and editing private template groups”
- 📖 P.100 “Registering or editing templates”
- 📖 P.105 “Displaying public templates”

### ❑ Registering and editing private template groups

Before registering private templates, you have to register the private template group. You can classify the private templates according to every department, every user, and use by registering the private template groups. Also each private template group can be protected by a password.

#### Tip

- You can define up to 200 private template groups. To define the private template groups, you can specify the group name, owner, and E-mail notification setting.
- The required template may have already been created by a user who is granted administrator privileges in access policy mode, or other user. Check the existing templates to see if they can be used before creating a new template or group.

#### 1 Click the [Registration] tab and the [Template] menu.

The Template Groups page is displayed.

#### 2 Click the [Undefined] group link to create a new private group. Click the defined group name link to edit the group information.

No.	Name	User Name
001	Useful Template	
002	test	User002
003	TemplateName003	User003
004	TemplateName004	User004
005	TemplateName005	User005
006	User006	User006
007	User007	User007
008	Undefined	Undefined
009	Undefined	Undefined
010	Undefined	Undefined

- If you select the private template group that has not been defined, the Group Properties page is displayed. Skip to step 5.
- If you select the defined private template group that is not protected by a password, the Private Templates page is displayed. Skip to step 4.
- If you select the defined private template group that is protected by a password, the Input Group Password page is displayed. Go to the next step.

Tip

- The page displays all 200 private template groups in default page view. You can display only defined private template groups by clicking on the [Defined Groups] link.
- If you know which private template group you want to define or edit, click the number of the private template group in the [Jump to] links.

**3** When the Input Group Password page is displayed, enter the password for the selected private template group and click [OK].

No.	Name	User Name
006	User006	User006

OK Cancel

Passw. 2

1

The Group Properties page is displayed.

**4** Click [Edit], [Change Password], or [Reset].

No.	Name	User Name
006	User006	User006

Edit Change Password Reset

If you select [Reset], you can reset the unnecessary private group and restore it to an undefined private group. Skip to step 7.

Note

If you reset the group information, all private templates registered in the group will be deleted.

## 5 Enter the items below as required.

The screenshot shows the 'Group Properties' screen. At the top right, there are links for 'e-Filing' and 'Login'. Below that is a navigation bar with tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Underneath is another navigation bar with 'Template', 'Address Book', and 'Inbound FAX routing'. The main content area is titled 'Group Properties' and contains a 'Group Information' table with the following data:

No.	Name	User Name
006	User006	User006

Below the table are 'Save' and 'Cancel' buttons. A red box highlights the 'Required' section, which includes the following fields:

- \*Required Number: 006
- \*Name: User006
- User Name: User006
- Notification: This Email address is used as default recipient each for template. Email to User006@sample.com

P.51 “[Group Properties] screen”

The screenshot shows the 'Change Group Password' screen. At the top right, there are links for 'e-Filing' and 'Login'. Below that is a navigation bar with tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Underneath is another navigation bar with 'Template', 'Address Book', and 'Inbound FAX routing'. The main content area is titled 'Change Group Password' and contains a 'Group Information' table with the following data:

No.	Name	User Name
006	User006	User006

Below the table are 'Save' and 'Cancel' buttons. A red box highlights the password fields:

- Old Password: [masked]
- New Password: [masked]
- Retype Password: [masked]

P.55 “[Change Group Password] screen”

## 6 Click [Save] to apply changes.

## 7 Click [OK].

This step is not required if you have selected [Edit] in step 4.

## Registering or editing templates

You can create up to 60 templates for each private group or shared group. To define the template, specify the panel settings that will be displayed in the touch panel and agent settings. Each template can also be protected by a password.

Private templates can be created by users; however, public templates can only be created and edited in access policy mode by users with administrator privileges.

### Tip

Each template can be created in combination of the following agents:


- Copy template can be combined with the Save as file or Store to e-Filing agent.
- Fax/Internet Fax template can be combined with the Save as file agent.
- Scan template can be created with up to two agents in a combination of the Save as file, Email, and Store to e-Filing agents.

## 1 Click the [Registration] tab and the [Template] menu.

The Template Groups page is displayed.



## 2 Click the group name link where you want to register or edit the template.

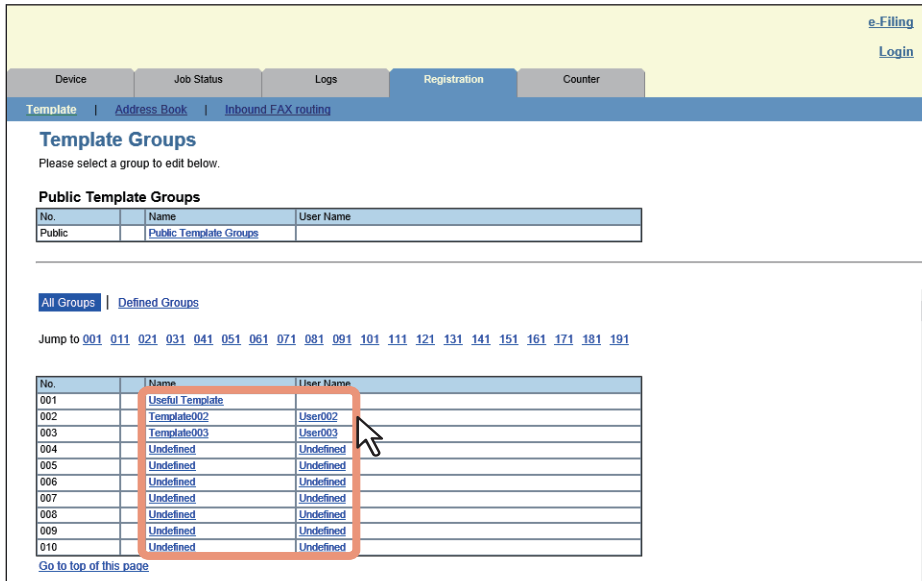


- If you select the defined private template group that is not protected by a password, the Templates page is displayed. Skip to step 4.
- If you select the defined private template group that is protected by a password, the Input Group Password page is displayed. Go to the next step.

### Tip


- The page displays all 200 private template groups in default page view. You can display only defined private template groups by clicking on the [Defined Groups] link.
- If you know which private template group you want to define or edit, click the number of the private template group in the [Jump to] links.

## 3 When the Input Group Password page is displayed, enter the password for the selected template group and click [OK].

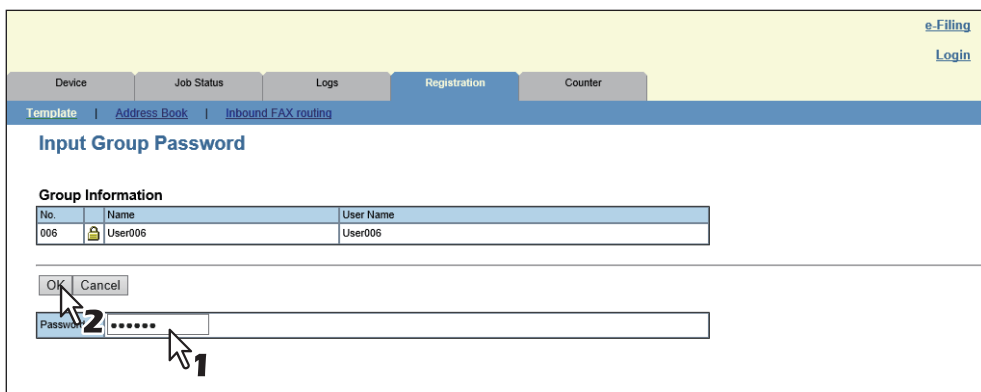

The Templates page is displayed.

**4 From the templates list, click the [Undefined] icon to register a new template, or click defined icon to edit the template.**

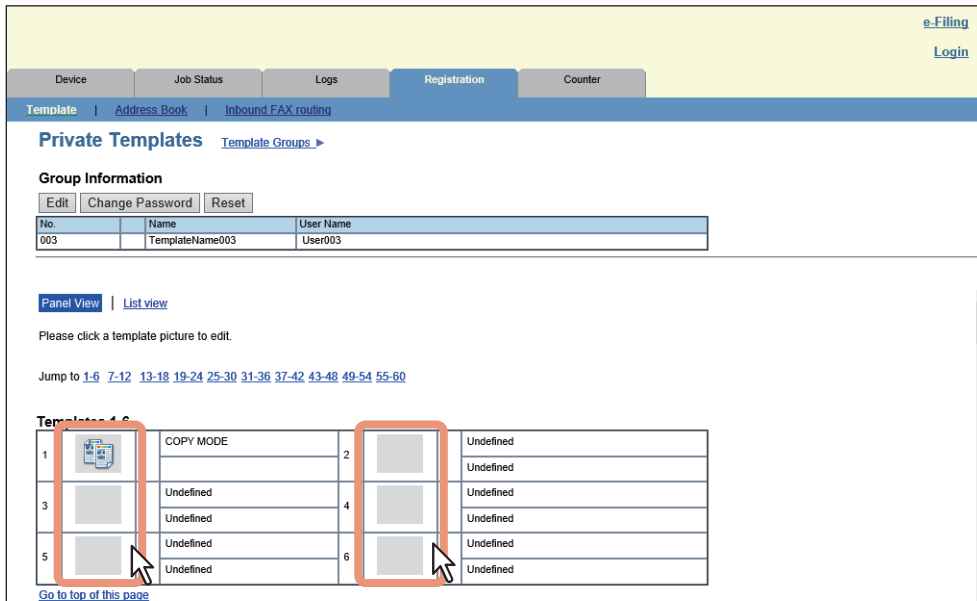


- If the templates list is displayed in the List view, click the [Undefined] template name to register new template, or click the defined template name to edit the template.
- If you select the private template that has not been defined, the Template Properties page to select agents is displayed. Skip to step 7.
- If you select the defined private template that is not protected by a password, the Template Properties page is displayed. Skip to step 6.
- If you select the defined private template that is protected by a password, the Input Template Password page is displayed. Go to the next step.

**Tip**


- You can change the template list view by clicking on either [Panel View] or [List View].
- If you know which private template you want to define or edit, click the number of the template in the [Jump to] links.

**5 When the Input Template Password page is displayed, enter the password for the selected template and click [OK].**

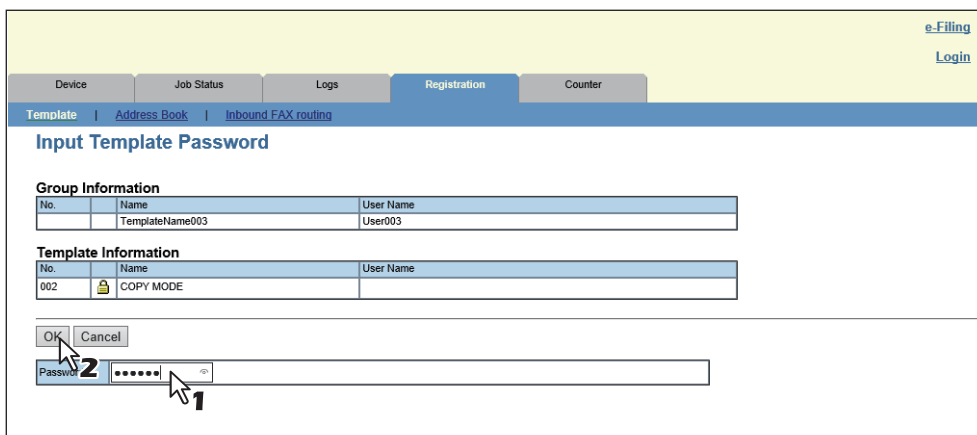

The Template Information page is displayed.


**6** On the [Template Information] page, click either [Edit], [Change Password], or [Reset Template].

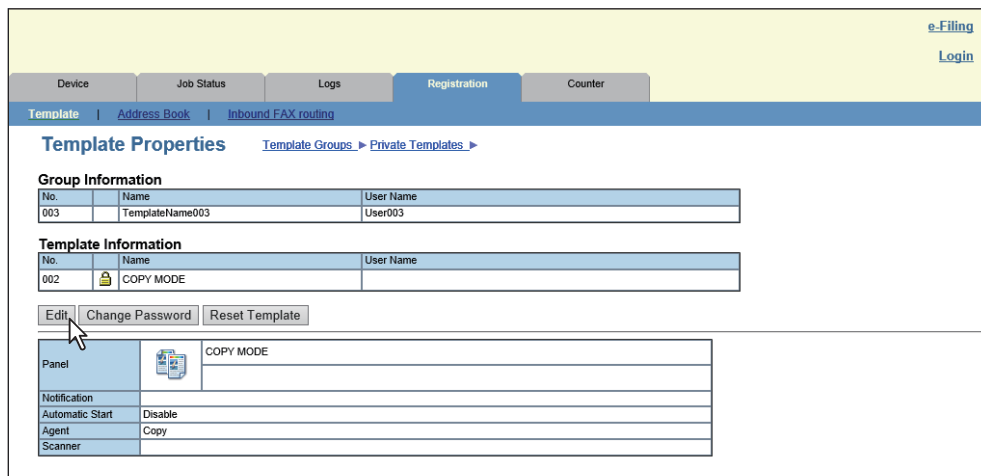

If you select [Reset Template], you can reset an unnecessary template and restore it to an undefined template. Skip to step 10.


**7** Enter the items below as required.

- If you have selected [Edit] in step 6, select the agent and click [Select Agent].

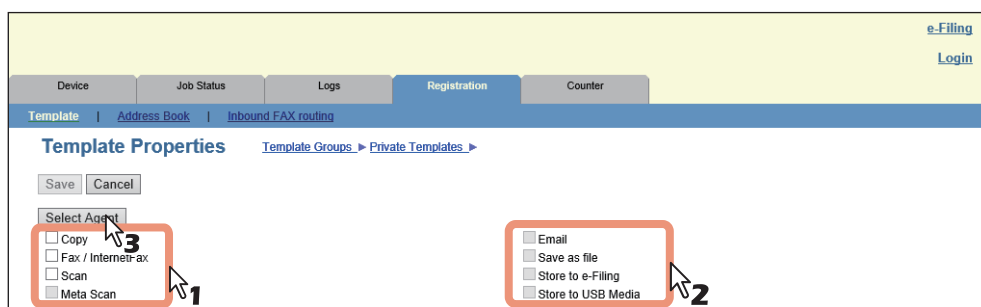

P.55 “[Template Properties] screen”

- If you have selected [Change Password] in step 6, enter the following items and skip to step 9.

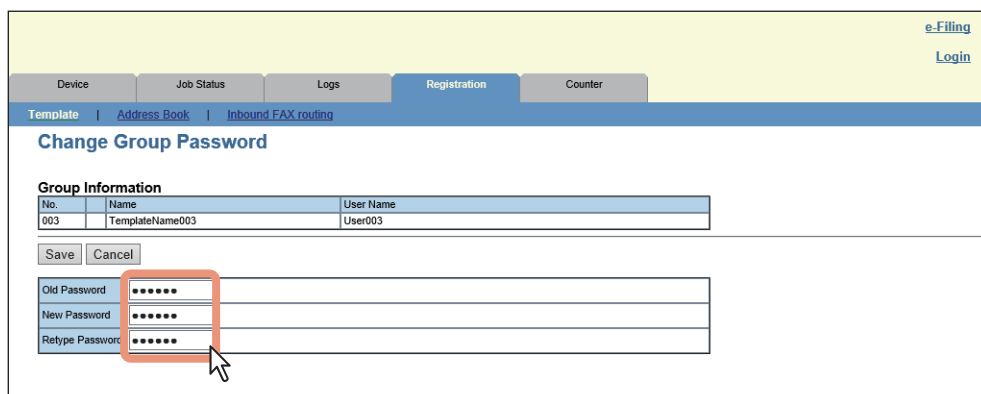

P.55 “[Change Group Password] screen”

**8 Click each button displayed in the page to specify or edit the associated template properties.**

<b>[Panel Setting]</b>	Specify icon settings of the template. 📖 P.56 "Panel Setting"
<b>[Destination Setting]</b>	Specify the destination to be sent. This can be set only when creating the Fax/Internet Fax agent or Scan to Email agent. 📖 P.58 "Destination Setting"
<b>[InternetFax Setting]</b>	Specify how the Internet Fax is transmitted. This can be set only when creating a Fax/Internet Fax agent. 📖 P.63 "InternetFax Setting"
<b>[Fax Setting]</b>	Specify how the documents are faxed. This can be set only when creating a Fax/Internet Fax agent. 📖 P.64 "Fax Setting"
<b>[Email Setting]</b>	Specify how the documents are transmitted as E-mail messages. This can be set only when creating a Scan to Email agent. 📖 P.66 "Email Setting"
<b>[Save as file Setting]</b>	Specify how the documents are saved in a shared folder on this equipment, USB media, or a network folder. This can be set only when creating a Save as file agent. 📖 P.70 "Save as file Setting"
<b>[Box Setting]</b>	Specify how the documents are saved in e-Filing. This can be set only when creating a Scan to e-Filing agent. 📖 P.75 "Box Setting"
<b>[Store to USB Setting]</b>	Specify how the document is saved in USB media. 📖 P.75 "Store to USB Device Setting"
<b>[Scan Setting]</b>	Specify how the documents are scanned. This can be set only when creating the Save as file agent, Scan to Email agent, and Scan to e-Filing agent. 📖 P.78 "Scan Setting"
<b>[Extended Field settings]</b>	Set extended field definition information and extended field settings. 📖 P.82 "Extended Field settings"
<b>[Password Setting]</b>	Set a password for the private template. 📖 P.82 "Password Setting"

**9 Click [Save].**


**10 Click [OK].**  
This step is not required if you have selected [Edit] in step 6.

## ❑ Displaying public templates


End users can also display the templates list in the public group so that users can see what templates are available.

### Displaying templates in the public group

- 1 Click the [Registration] tab and the [Template] menu.  
The Template Groups page is displayed.
- 2 Click the group name link for the Public Template Groups list.

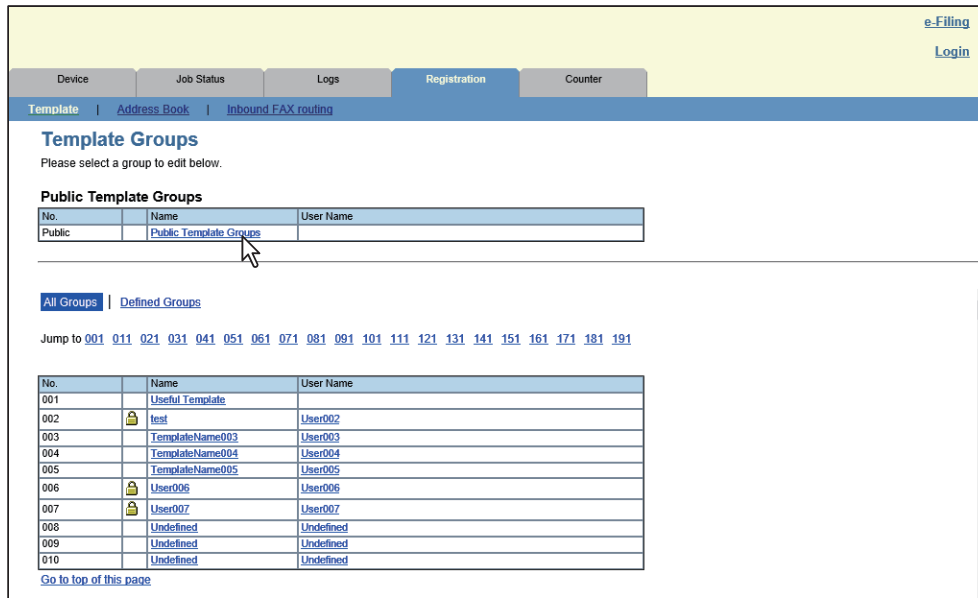

- 3 The templates list in the public group is displayed.

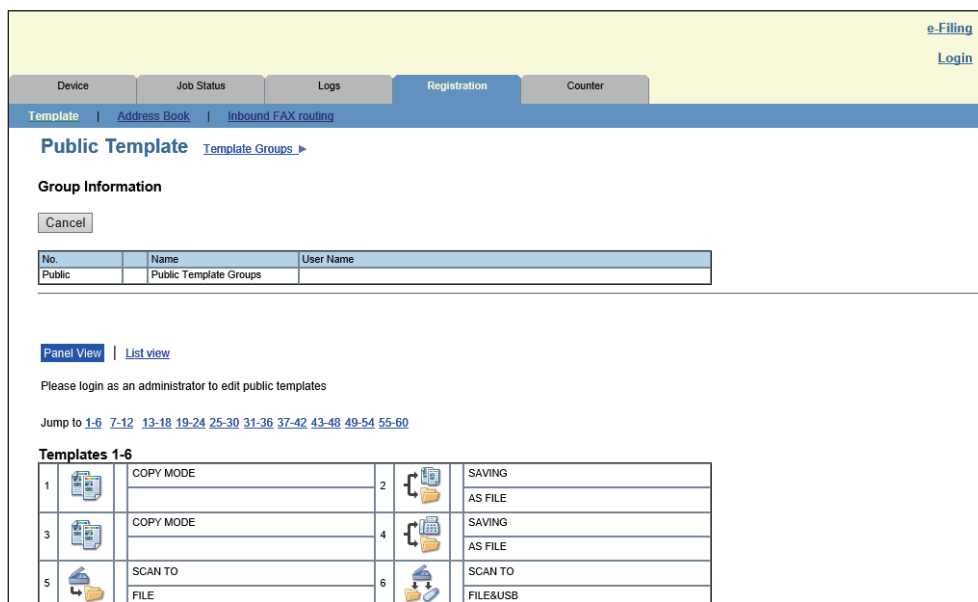

**Tip**

- You can change the template list view by clicking on either [Panel View] or [List View].
- If you know which public template you want to view, click the number of the public template in the [Jump to] links.

## ■ Managing address book

- 📖 P.106 “Managing contacts in the Address Book”
- 📖 P.109 “Managing groups in the Address Book”
- 📖 P.111 “Importing the address book data”
- 📖 P.113 “Exporting the address book data”

### □ Managing contacts in the Address Book

There are two ways to manage contacts in the Address Book:

- Adding, editing, and deleting contacts manually
  - 📖 P.106 “Adding, editing, and deleting contacts manually”
- Add new contact searching for a recipient from the LDAP server.
  - 📖 P.108 “Adding new contacts from the LDAP server”

### Adding, editing, and deleting contacts manually

You can add or edit a contact by entering recipient information manually. You can also delete the contact from the Address Book.

- 1 Click the [Registration] tab and the [Address Book] menu.**  
The Address Book page is displayed.
- 2 Click [Add Address] and add a new contact. Or click the corresponding link to the contact which you want to edit or delete in the contact list.**

The screenshot shows the 'Address Book' page in a web application. The page has a navigation bar with tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. The 'Registration' tab is active. Below the navigation bar, there are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The 'Address Book' link is selected. The page title is 'Address Book'. Below the title, there are links for 'Contacts', 'Favorite Contact', 'Groups', and 'Favorite Group'. There are buttons for 'Add Address' and 'Search', and a dropdown menu for 'Group' set to 'All Groups'. A table of contacts is displayed with the following columns: ID, Name, Email Address, Favorite, Fax Number, and Favorite. The table contains 10 rows of sample data. A red box highlights the table, and a mouse cursor points to the bottom right corner of the table.

ID	Name	Email Address	Favorite	Fax Number	Favorite
1	FirstName01 LastName01	User001@sample.com		01234567890	
2	FirstName02 LastName02	User002@sample.com		12345678901	
3	FirstName03 LastName03	User003@sample.com		23456789012	
4	FirstName04 LastName04	User004@sample.com		34567890123	
5	FirstName05 LastName05	User005@sample.com		45678901234	
6	FirstName06 LastName06	User006@sample.com		56789012345	
7	FirstName07 LastName07	User007@sample.com		67890123456	
8	FirstName08 LastName08	User008@sample.com		78901234567	
9	FirstName09 LastName09	User009@sample.com		89012345678	
10	FirstName10 LastName10	User010@sample.com		90123456789	

The [Create Destination information]/[Edit Destination information] page is displayed.

### 3 Enter the following items to specify the contact property. Click [Delete] to delete the contact from the address book.

Select “Local” or “Shared” when using the Shared Address Book function.

The screenshot shows the 'Create Destination information' screen. At the top, there are tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the tabs, there are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The main heading is 'Create Destination information' with a sub-link 'Address Book >'. Below the heading are buttons for 'Save', 'Cancel', 'Reset', and 'Delete', and a 'Fax Setting' button. The form contains the following fields:

*Either		
**Either		
* First Name	Firstname01	
* Last Name	LastName01	
Index	Firstname01	
** Email Address	User001@sample.com	<input type="checkbox"/> Favorite
** Fax Number	01234567890	<input type="checkbox"/> Favorite
2nd Fax Number		
Company		
Department	Department01	
Keyword		

You can configure the following settings in this page:

P.88 “[Create Destination information]/[Edit Destination information] screen”

### 4 When registering a fax contact, click [Fax Setting]. Otherwise, skip to Step 6. The Fax Settings page is displayed.

### 5 Enter the following items according to the capabilities of destination facsimile, and click [Save].

The screenshot shows the 'Fax Setting' screen. At the top, there are tabs for 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the tabs, there are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The main heading is 'Fax Setting' with sub-links 'Address Book >' and 'Create Destination information >'. Below the heading are buttons for 'Save', 'Cancel', and 'Reset'. The form contains the following fields:

SUB	
SID	
SEP	
PWD	
ECM	<input type="checkbox"/>
Line Select	<input type="checkbox"/>
Quality Transmit	<input type="checkbox"/>
Transmission Type	

You can configure the following settings in this page:

P.89 “[Fax Setting] screen”

**6** In the [Create Destination information]/[Edit Destination information] page, click [Save] to add a new contact.

**Adding new contacts from the LDAP server**

You can search for contacts in the LDAP server and add them to the Address Book. In order to use the LDAP search, the directory service must be set up by a user who is granted administrator privileges in the access policy mode. Before operating the LDAP search, ask your administrator if the Directory Service has been configured.

- 1** Click the [Registration] tab and the [Address Book] menu.  
The Address Book page is displayed.
- 2** Click [Search].

ID	Name	Email Address	Favorite	Fax Number	Favorite
1	LastName01 FirstName01	User001@sample.com		01234567890	
2	LastName02 FirstName02	User002@sample.com		12345678901	
3	LastName03 FirstName03	User003@sample.com		23456789012	
4	LastName04 FirstName04	User004@sample.com		34567890123	
5	LastName05 FirstName05	User005@sample.com		45678901234	
6	LastName06 FirstName06	User006@sample.com		56789012345	
7	LastName07 FirstName07	User007@sample.com		67890123456	
8	LastName08 FirstName08	User008@sample.com		78901234567	
9	LastName09 FirstName09	User009@sample.com		89012345678	
10	LastName10 FirstName10	User010@sample.com		90123456789	

The Search Contact page is displayed.



### 3 Select the directory service name that you want to search for in the [Directory Service Name] box, and enter the search terms in the boxes that you want to search.

#### Tip

- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations that contain the text entered in each item.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

### 4 Click [Search].

TopAccess will start searching for recipients in the LDAP server and the Search Address List page will display the results.

### 5 Select the check boxes of contacts that you want to add to the Address Book.

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.

<input checked="" type="checkbox"/>	Name	Email Address	Fax Number
<input type="checkbox"/>	FirstName01 LastName01	User001@sample.com	01234567890

You can select all users in the list by clicking on the  button.

#### Note

The value of [company] and [department] will depend on the settings made by the user who is granted administrator privileges in access policy mode.

### 6 Click [Add].

Selected contacts are added to the Address Book.

## ❑ Managing groups in the Address Book

You can create groups that contain the multiple recipients. This enables you to specify the groups for the destinations instead of specifying each recipient separately when operating Scan to Email, or Fax or Internet Fax transmission. You can also delete groups.


### 1 Click the [Registration] tab and the [Address Book] menu.

The Address Book page is displayed.

### 2 Click the [Groups] submenu.


The groups list is displayed.

- Click [New] to add a new group. Or, click the corresponding link to the group which you want to edit or delete in the group list.

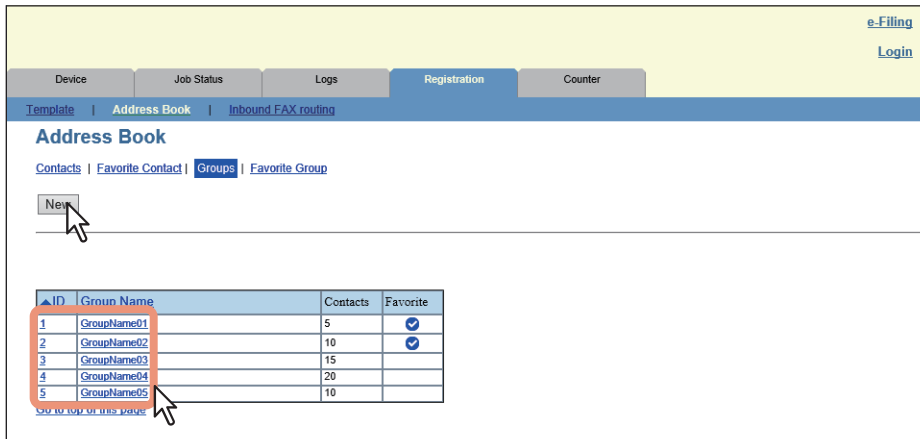

The [Create Group information]/[Edit Group information] page is displayed.

- Enter the group name in the [Group Name] column. Click [Delete] to delete the selected group. Select "Local" or "Shared" when using the Shared Address Book function.

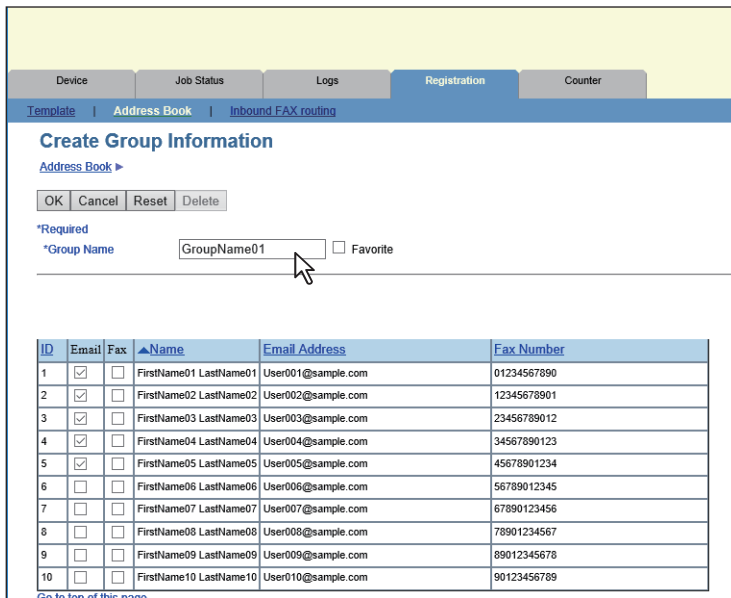

#### Tip

- You can clear the entered values in each field by clicking [Reset].
- You can cancel adding or editing a group by clicking [Cancel].

- Select the [Email] check boxes of users to add Internet Fax recipients, and select the [Fax] check boxes of users to add Fax recipients.

#### Note

To perform fax transmission, the Fax Unit is required. If the Fax Unit is not installed, you cannot perform the fax transmission even if you specify the fax number.

- Click [OK].  
The group is created.

## ❑ Importing the address book data

You can import address information exported from an address book on another equipment or a different address book program in the CSV or XML format.

The importing method of address book data is either adding imported data to the address book already registered in this equipment or deleting all the address book data already registered and replacing them with the imported data. It is recommended that you export an address book in the CSV or XML format and edit it when creating address book data.

### Note

You cannot import an address book when it exceeds the number of characters specified on each item. Invalid characters are replaced with “!”.


- Last Name: 32 characters
- First Name: 32 characters
- Index: 64 characters
- Email Address: 192 alphanumerical characters
- Phone Number: 128 numbers
- Tel Number 2: 128 numbers
- Company: 128 characters
- Department: 128 characters
- Keyword: 256 characters
- SUB: 20 characters
- SID: 20 characters
- SEP: 20 characters
- PWD: 20 characters

### Tip

The group data are not included in the imported address book data.


**1** Click the **[Registration]** tab and the **[Address Book]** menu.  
The Address Book page is displayed.

**2** Click the **[Import]** submenu.

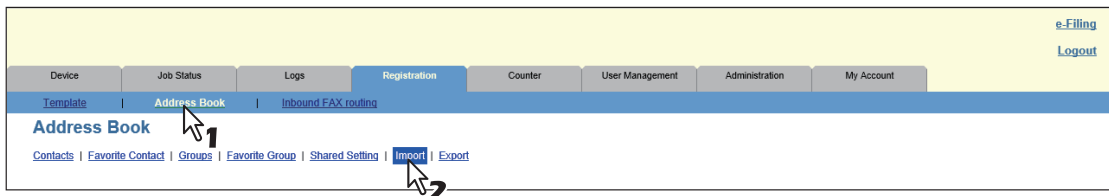

The Import submenu page is displayed.

**3** Select the import method in the Address Book area.

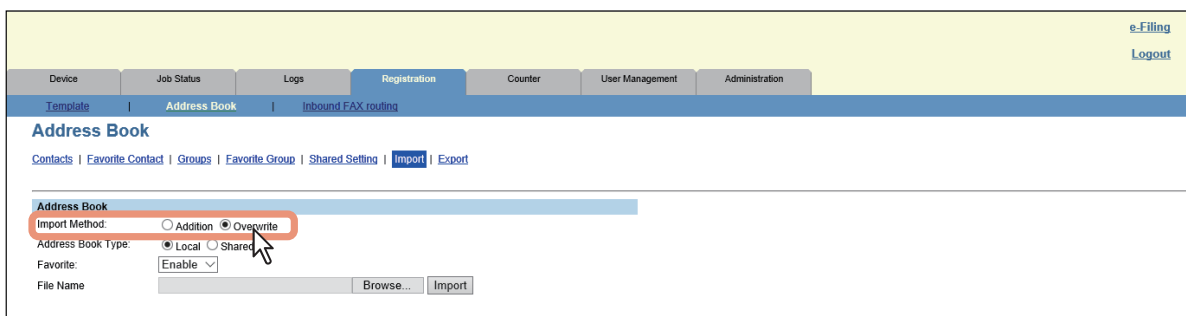


**Addition** — Select this to add the imported address book data into the address book already registered in this equipment.


**Overwrite** — Select this to delete all the address book data registered in this equipment and replace them with the imported address book data.

The Import Method page is closed.


**4 Specify “Local” or “Shared” for [Address Book Type] as the import target when using the Shared Address Book function.**

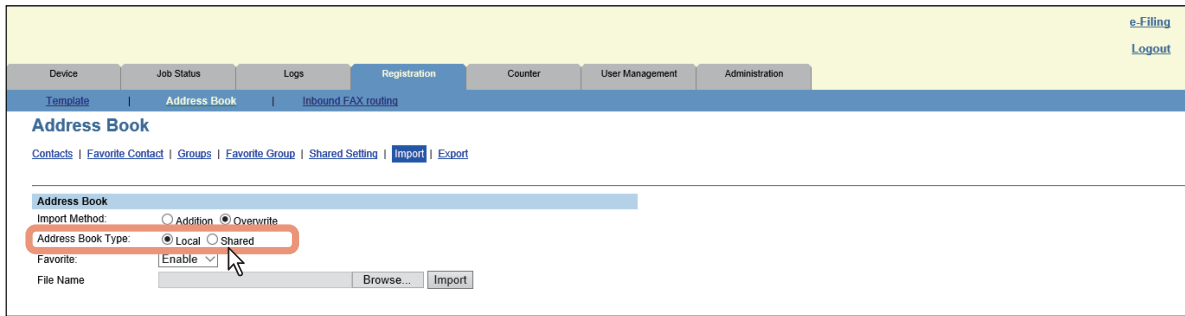


**5 Specify whether or not to enable Favorite information of the Address Book.**

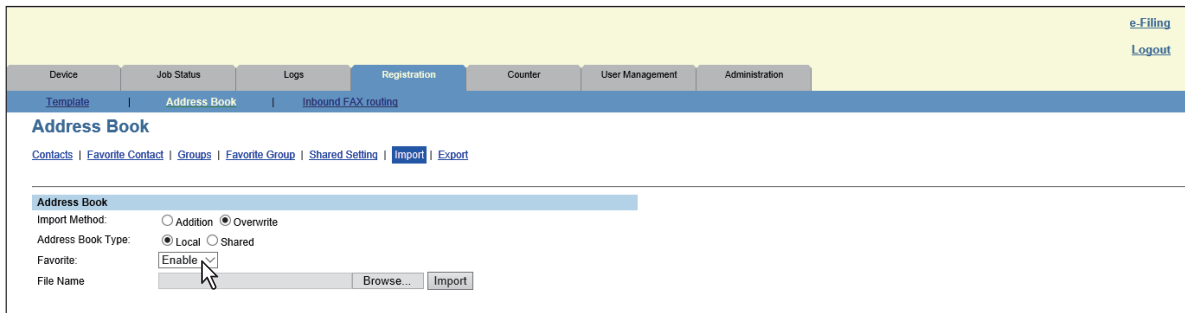


**6 Click [Browse] in the Address Book area.**

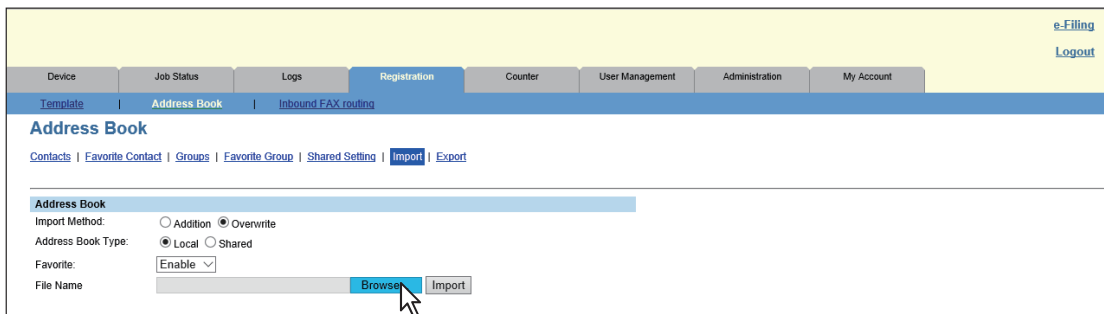

**7 Select the CSV/XML file that contains address book data and click [Open].**

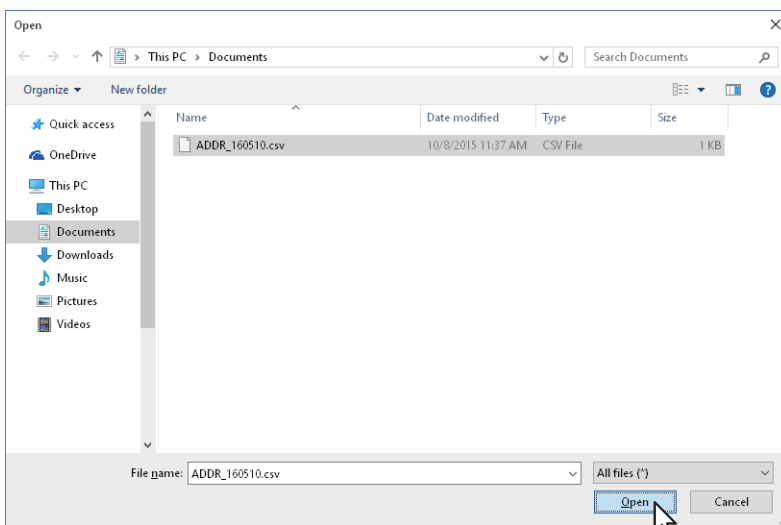

## 8 Click [Import].

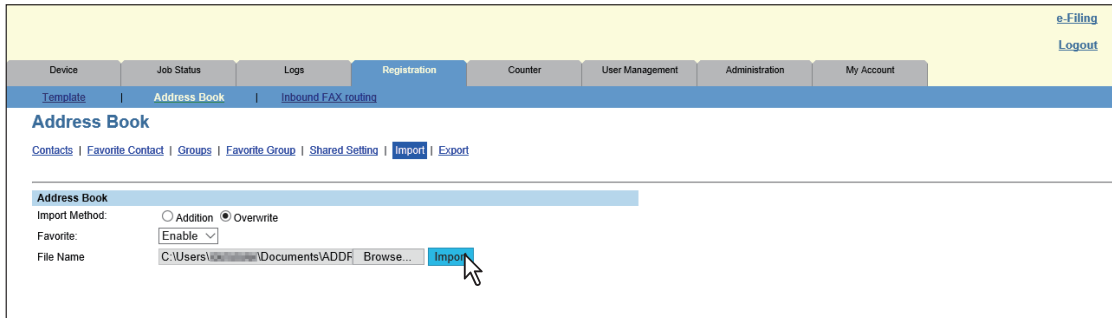

The data are imported to the address book.

## ❑ Exporting the address book data

You can export address information for use in another TopAccess address book or another address book program.


### Tip

The group data are not included in the exported address book data.

### 1 Click the [Registration] tab and the [Address Book] menu.


The Address Book page is displayed.

### 2 Click the [Export] submenu.

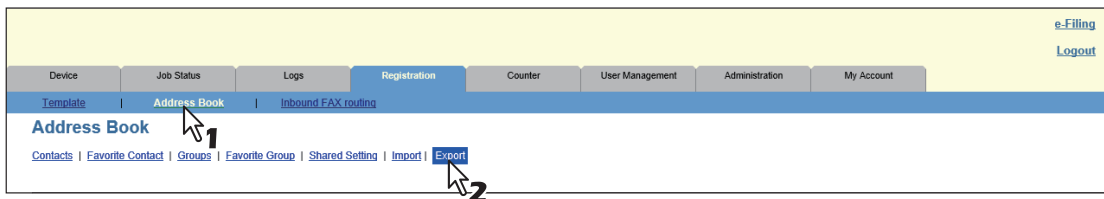

The Export submenu page is displayed.

### 3 Select the file format of the address book.

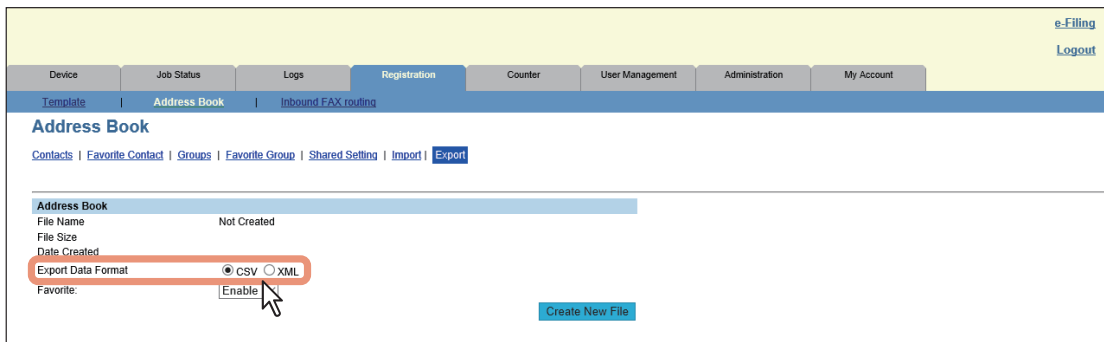

**CSV** — Select this to create the file in the CSV format.

**XML** — Select this to create the file in the XML format.

#### 4 Specify “Local” or “Shared” for [Address Book Type] as the export source when using the Shared Address Book function.

The screenshot shows the 'Address Book' export settings page. The 'Address Book Type' is set to 'Local' and the 'Favorite' checkbox is checked. A red box highlights the 'Local' radio button and the 'Favorite' checkbox.

#### 5 Specify whether or not to enable Favorite information of the Address Book.

The screenshot shows the 'Address Book' export settings page. The 'Favorite' checkbox is unchecked. A red box highlights the 'Favorite' checkbox.

#### 6 Click [Create New File] in the Address Book area.


The screenshot shows the 'Address Book' export settings page. The 'Create New File' button is highlighted with a red box.

The exported file information is displayed.

#### Tip

If you previously exported address book data, the exported file link and information are displayed in the Address Book area. You can click the link to save the previously exported file.

## 7 Click the [File Name] link.

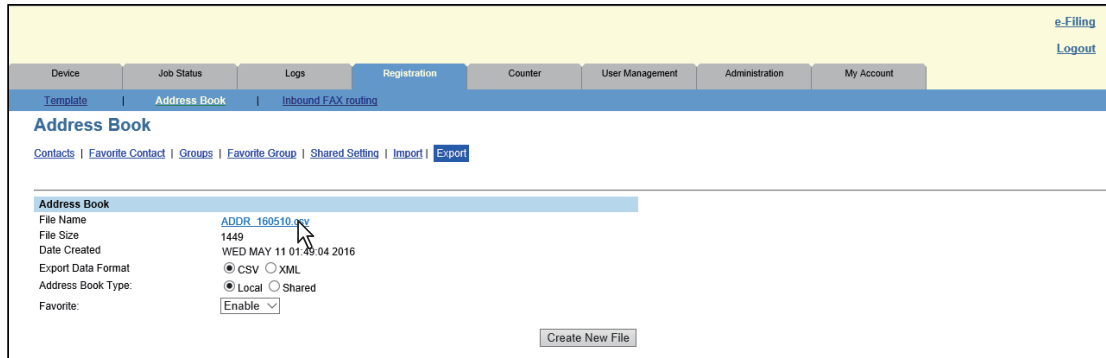

The file is downloaded.

## Managing mailboxes

### Note

Mailboxes can be managed only when the Fax Unit is installed.

### Tip

Mailboxes can be managed using the touch panel. Refer to the **Fax Guide**.

This equipment supports ITU-T communications and allows documents to be transmitted and retrieved from mailboxes created by the mailbox hub in advance.

## Setting up mailboxes.

To carry out ITU-T communications, you must first set up an Open Mailbox in the mailbox hub. You can set up a maximum of 300 mailboxes.

You can also delete mailboxes.


### Note

If you want to delete an Open Mailbox, the document must first be retrieved, printed, or canceled from the Open Mailbox.

## 1 Click the [Registration] tab and the [Inbound FAX routing] menu.

The Inbound FAX routing page is displayed.

## 2 Click [New] to set up a new mailbox. Or, click the box number link which you want to edit or delete in the mailbox list.

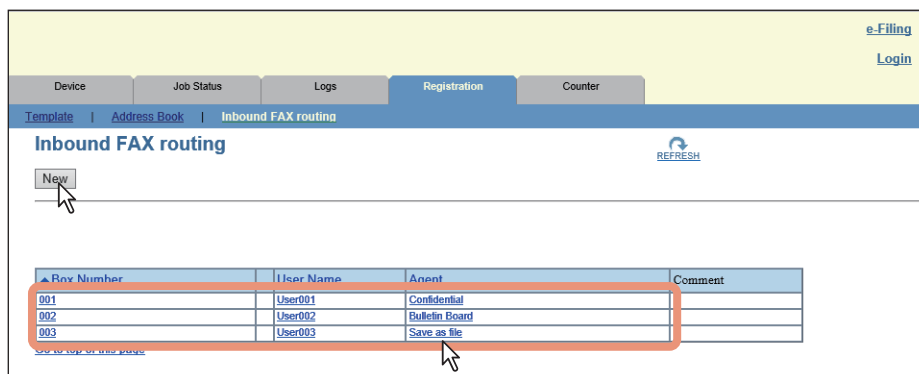

- If you click [New], skip to step 5.
- If you click the box number link that is not protected by a password, skip to step 4.
- If you click the box number link that is protected by a password, go to the next step.

### 3 Enter the password for the mailbox and click [OK].

The screenshot shows a web interface with a navigation bar containing 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the navigation bar are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The main content area is titled 'Input MailBox Password' and contains 'OK' and 'Cancel' buttons. A 'Password' field is shown with a masked password '\*\*\*\*\*'. A mouse cursor is pointing at the 'OK' button, labeled with a '2'. Another mouse cursor is pointing at the password field, labeled with a '1'.

### 4 Click [Edit] or [Delete].

The screenshot shows a web interface with a navigation bar containing 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the navigation bar are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The main content area is titled 'MailBoxes Properties' and contains 'Edit' and 'Delete' buttons. Below the buttons is a table with the following data:

Box Number	001
Notification	
Agent	Confidential

A mouse cursor is pointing at the 'Edit' button.

If you have clicked [Delete], the delete confirmation dialog box is displayed. Click [OK].

### 5 Select agents.

The screenshot shows a web interface with a navigation bar containing 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the navigation bar are links for 'Template', 'Address Book', and 'Inbound FAX routing'. The main content area is titled 'MailBoxes Properties' and contains 'Save' and 'Cancel' buttons. Below the buttons is a 'Select Agent' section with checkboxes for 'Confidential', 'Bulletin Board', and 'Forward'. To the right is a section with checkboxes for 'Internet/Fax(Relay)', 'Save as file', 'Email', and 'Store to e-Filing'. A mouse cursor is pointing at the 'Confidential' checkbox, labeled with a '3'. Another mouse cursor is pointing at the 'Internet/Fax(Relay)' checkbox, labeled with a '2'. A third mouse cursor is pointing at the 'Forward' checkbox, labeled with a '1'.

You can configure the following settings in this page:

P.93 “[MailBoxes Properties] screen”



**6 Click each button displayed in the page to set the template properties.**

<b>MailBox Setting</b>	Specify mailbox settings. 📖 P.94 “MailBox Setting (Mailbox)”
<b>[Destination Setting]</b>	Specify the destination to be sent. This can be set only when creating an Internet/Fax(Relay) agent or Email agent. 📖 P.95 “Destination Setting (Mailbox)”
<b>[InternetFax Setting]</b>	Specify how the document is transmitted as an Internet Fax. This can be set only when creating an Internet/Fax(Relay) agent. 📖 P.95 “InternetFax Setting (Mailbox)”  <b>Note</b> The Internet/Fax (Relay) agent cannot be used to forward an inbound fax routed via Inbound FAX Routing.
<b>[Relay End Terminal Report]</b>	Specify the destination for the relay end terminal report when forwarding has been performed. This can be set only when creating an Internet/Fax(Relay) agent. 📖 P.96 “Relay End Terminal Report (Mailbox)”
<b>[Email Setting]</b>	Specify how the document is transmitted as an E-mail message. This can be set only when creating an Email agent. 📖 P.97 “Email Setting (Mailbox)”
<b>[Save as file Setting]</b>	Specify how the document is saved on your computer storage device or a network folder. This can be set only when creating a Save as file agent. 📖 P.96 “Save as file Setting (Mailbox)”
<b>[Box Setting]</b>	Specify how the document is saved in a mailbox. This can be set only when creating a Store to e-Filing agent. 📖 P.97 “Box Setting (Mailbox)”

**7 After configuring the desired mailbox properties, click [Save].**

The mailbox properties are registered.



## [Counter] Tab Page

This section explains the [Counter] tab page in TopAccess.

<b>[Counter] Tab Page Overview .....</b>	<b>120</b>
[Counter] Item list.....	120
<b>[Counter] How to Set and How to Operate .....</b>	<b>132</b>
Viewing counters.....	132

## [Counter] Tab Page Overview

You can check the number of pages printed, copied, and scanned in the [Counter] tab page.

📖 P.120 “[Counter] Item list”

### ■ [Counter] Item list

📖 P.120 “[Total Counter] screen”

📖 P.122 “[Department Management] screen”

📖 P.123 “[Department Counter] screen <access policy mode>”

📖 P.124 “[Department Information] screen”

📖 P.127 “[User Counter] screen <access policy mode>”

📖 P.128 “[User Information] screen <access policy mode>”

📖 P.130 “[Quota Setting] screen <access policy mode>”

### □ [Total Counter] screen

You can display total counters of the print counter and scan counter, and total counters for small size and large size paper.

#### Note

- Because of paper jam and job cancellation, the total counter value might not be equal to the total number of pages in the print log.
- The total counter value might not be equal to the total values of other counters, depending on the counter settings.

#### Color models

The screenshot displays the 'Total Counter' screen with four main sections, each with a numbered callout (1-6) on the left:

- 1 Print Counter:** A table showing counts for Copy, Fax, Printer, List, and Total across Full Color, Twin/Mono Color, and Black categories.
- 2 Detail:** A right-pointing arrow indicating a detail view for the Print Counter.
- 3 Scan Counter:** A table showing counts for Copy, Fax, Network, and Total across Full Color, Twin/Mono Color, and Black categories.
- 4 Detail:** A right-pointing arrow indicating a detail view for the Scan Counter.
- 5 Sheet Counter:** A table showing counts for Copy, Fax, Printer, List, and Total across Small and Large paper sizes.
- 6 OCR Counter:** A small table showing a Total count of 21.

Total Counter				
<b>1 Print Counter</b>				
Total Counter				
	Full Color	Twin/ Mono Color	Black	Total
Copy	252	0	17	269
Fax	0	0	11	11
Printer	38	0	155	193
List	0	0	59	59
Total	290	0	242	532
<b>2 Detail</b>				
<b>3 Scan Counter</b>				
Total Counter				
	Full Color	Twin/ Mono Color	Black	Total
Copy	287	0	18	305
Fax	0	0	69	69
Network	18	0	224	242
Total	305	0	311	616
<b>4 Detail</b>				
<b>5 Sheet Counter</b>				
	Small	Large	Total	
Copy	184	31	215	
Fax	11	0	11	
Printer	165	0	165	
List	55	2	57	
Total	415	33	448	
<b>6 OCR Counter</b>				
Total	21			

## Monochromatic models

**Total Counter**

1 Print Counter

Total Counter		
	Black	Total
Copy	142	142
Fax	5	5
Printer	25	25
List	46	46
<b>Total</b>	<b>218</b>	<b>218</b>

2 Detail

3 Scan Counter

Total Counter			
	Full Color	Black	Total
Copy	0	126	126
Fax	0	39	39
Network	56	61	117
<b>Total</b>	<b>56</b>	<b>226</b>	<b>282</b>

4 Detail

5 Sheet Counter

Total Counter			
	Small	Large	Total
Copy	140	3	143
Fax	5	0	5
Printer	25	0	25
List	46	0	46
<b>Total</b>	<b>216</b>	<b>3</b>	<b>219</b>

6 OCR Counter

Total Counter	
	Total
	21

	Counter type	Description
1	Print Counter	Displays the total output count value.
2	Detail	Displays details of the total output count value when you click [▶].
3	Scan Counter	Displays the total scanned count value.
4	Detail	Displays details of the total count value of scanned documents when you click [▶].
5	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.
6	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip	This OCR Counter appears only when an OCR Enabler is installed.

## Print Counter/Print Counter (Detail)

1 Detail

Copy Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	190	0	17	207
Large	62	0	0	62
<b>Total</b>	<b>252</b>	<b>0</b>	<b>17</b>	<b>269</b>

2 Fax Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	11	11
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>11</b>	<b>11</b>

3 Printer Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	38	0	155	193
Large	0	0	0	0
<b>Total</b>	<b>38</b>	<b>0</b>	<b>155</b>	<b>193</b>

4 List Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	55	55
Large	0	0	4	4
<b>Total</b>	<b>0</b>	<b>0</b>	<b>59</b>	<b>59</b>

	Counter	Description
1	Copy Counter	Displays the number of pages printed by copy operations for paper sizes set on your equipment.
2	Fax Counter	Displays the number of pages printed by fax reception for paper sizes set on your equipment.
3	Printer Counter	Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment.
4	List Counter	Displays the number of pages printed by system page print operations for paper sizes set on your equipment.

### Scan Counter/Scan Counter (Detail)

1 Detail

Copy Counter				
	Full Color	Twin/ Mono Color	Black	Total
Small	249	0	18	267
Large	38	0	0	38
Total	287	0	18	305

2 Fax Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	65	65
Large	0	0	4	4
Total	0	0	69	69

3 Network Counter

	Full Color	Twin/ Mono Color	Black	Total
Small	17	0	205	222
Large	1	0	19	20
Total	18	0	224	242

	Counter	Description
1	Copy Counter	Displays the number of pages printed by copy operations for paper sizes set on your equipment.
2	Fax Counter	Displays the number of pages printed by fax reception for paper sizes set on your equipment.
3	Network Counter	Displays the number of pages scanned by scan operations for paper sizes set on your equipment.

### ❑ [Department Management] screen

Displays 20 items of total counter information for each department per page.

1 Department Management

Enter a department code to access department counters

Department Code  Enter

Number	Department Name	Dept Code	Total Printing	Total Scanning	Fax Transmission	Fax Reception
1	departmentName001	456	0	0	0	0

2 3 4 5 6 7 8

	Item name	Description
1	Department Code	Enter the department code which you want to check and click the [Enter] button.



# ☐ [Department Information] screen

## Color models

### Department Information

**1** —

**2** — Department Number

**3** — Department Name

**4** — Department Code

**5** — Color Quota Setting

**5** — Black Quota Setting

**6** — Print Counter

**8** — Scan Counter

**9** —

**10** — Fax Communication Counter

**11** — Sheet Counter

**12** — OCR Counter

1	<input type="button" value="Close"/>	
2	Department Number	1
3	Department Name	DepartmentName001
4	Department Code	123456
5	Color Quota Setting	OFF
	Color Quota	
	Default Color Quota	
5	Black Quota Setting	OFF
	Black Quota	
	Default Black Quota	

<b>6</b> — Print Counter				
Total Counter				
	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Printer	0	0	0	0
List	0	0	0	0
Total	0	0	0	0

<b>7</b> — <input type="button" value="Detail"/>				
--	--	--	--	--

<b>8</b> — Scan Counter				
Total Counter				
	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Network	0	0	0	0
Total	0	0	0	0

<b>9</b> — <input type="button" value="Detail"/>			
--	--	--	--

<b>10</b> — Fax Communication Counter			
	Small	Large	Total
Transmit	0	0	0
Received	0	0	0
Total	0	0	0

<b>11</b> — Sheet Counter			
	Small	Large	Total
Copy	0	0	0
Fax	0	0	0
Printer	0	0	0
List	0	0	0
Total	0	0	0

<b>12</b> — OCR Counter	
Total	0



## Monochromatic models

**Department Information**

1 [Close]

2 Department Number 1

3 Department Name DepartmentName001

4 Department Code 123456

5 Quota Setting OFF

Quota

Default Quota

6 Print Counter

Total Counter

	Black	Total
Copy	0	0
Fax	0	0
Printer	0	0
List	0	0
Total	0	0

7 [Detail]

8 Scan Counter

Total Counter

	Full Color	Black	Total
Copy	0	0	0
Fax	0	0	0
Network	0	0	0
Total	0	0	0

9 [Detail]

10 Fax Communication Counter

	Small	Large	Total
Transmit	0	0	0
Received	0	0	0
Total	0	0	0

11 Sheet Counter

	Small	Large	Total
Copy	0	0	0
Fax	0	0	0
Printer	0	0	0
List	0	0	0
Total	0	0	0

12 OCR Counter

Total	0
-------	---

	Item name	Description
1	[Close] button	Closes the [Department Information] screen.
2	Department Number	Displays the registered department number.
3	Department Name	Displays the department name.
4	Department Code	Displays the department code.
5	Quota Setting	<ul style="list-style-type: none"> <li>• <b>OFF</b> — No output restriction.</li> <li>• <b>ON</b> — Restricts output.</li> </ul>
	Quota	Displays the remaining number for output.
	Default Quota	Displays the default number assigned for the user.
6	Print Counter	Displays the output total count value.
7	Detail	<p>Displays details of the total output count value when you click [▶].</p> <p><b>Copy Counter:</b> Displays the number of pages printed by copy operations for paper sizes set on your equipment.</p> <p><b>Fax Counter:</b> Displays the number of pages printed by fax reception for paper sizes set on your equipment.</p> <p><b>Printer Counter:</b> Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment.</p> <p><b>List Counter:</b> Displays the number of pages printed by system page print operations for paper sizes set on your equipment.</p>

	Item name	Description
8	Scan Counter	Displays the total count value of scanned documents.
9	Detail	<p>Displays details of the total count value of scanned documents when you click [▶].</p> <p><b>Copy Counter:</b> Displays the number of pages scanned by copy operations for paper sizes set on your equipment.</p> <p><b>Fax Counter:</b> Displays the number of pages scanned by fax reception for paper sizes set on your equipment.</p> <p><b>Network Counter:</b> Displays the number of pages scanned by scan operations for paper sizes set on your equipment.</p>
10	Fax Communication Counter	Displays the communication record.
11	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.
12	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip	This OCR Counter appears only when an OCR Enabler is installed.

## ❑ [User Counter] screen <access policy mode>

This screen displays total counter information for each user who is logged in to TopAccess.

### Tip

Total counters for all users are displayed when you are logged in as the Administrator.

Number	User Name	Domain Name/LDAP Server	Total Printing	Total Scanning	Fax Transmission	Fax Reception
1000	Undefined		0	0	0	0
1000	Admin		0	0	0	0
1000	Service		0	0	0	0
1000	Auditor		0	0	0	0
1000	Faxope		0	0	0	0
1000	Guest		0	0	0	0
1000	Printop		0	0	0	0
1000	Remot	access-service	0	0	0	0

	Item name	Description
1	Select Page	Allows you to select a page when there are 20 items or more.
2	Number	Displays the registered user number.
3	User Name	Displays the user name. Click a user name to check the information. 📖 P.128 “[User Information] screen <access policy mode>”
4	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account.
5	Total Printing	Displays the total output count value.
6	Total Scanning	Displays the total scanned count value.
7	Fax Transmission	Displays the number of pages transmitted via fax.
8	Fax Reception	Displays the number of pages received via fax.



## Monochromatic models

12	Print Counter Total Counter	<table border="1"> <thead> <tr> <th></th> <th>Black</th> <th>Total</th> </tr> </thead> <tbody> <tr> <td>Copy</td> <td>0</td> <td>0</td> </tr> <tr> <td>Fax</td> <td>0</td> <td>0</td> </tr> <tr> <td>Printer</td> <td>0</td> <td>0</td> </tr> <tr> <td>List</td> <td>0</td> <td>0</td> </tr> <tr> <td>Total</td> <td>0</td> <td>0</td> </tr> </tbody> </table>		Black	Total	Copy	0	0	Fax	0	0	Printer	0	0	List	0	0	Total	0	0						
	Black	Total																								
Copy	0	0																								
Fax	0	0																								
Printer	0	0																								
List	0	0																								
Total	0	0																								
13	▶ Detail																									
14	Scan Counter Total Counter	<table border="1"> <thead> <tr> <th></th> <th>Full Color</th> <th>Black</th> <th>Total</th> </tr> </thead> <tbody> <tr> <td>Copy</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Fax</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Network</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Total</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>		Full Color	Black	Total	Copy	0	0	0	Fax	0	0	0	Network	0	0	0	Total	0	0	0				
	Full Color	Black	Total																							
Copy	0	0	0																							
Fax	0	0	0																							
Network	0	0	0																							
Total	0	0	0																							
15	▶ Detail																									
16	Fax Communication Counter	<table border="1"> <thead> <tr> <th></th> <th>Small</th> <th>Large</th> <th>Total</th> </tr> </thead> <tbody> <tr> <td>Transmit</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Received</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Total</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>		Small	Large	Total	Transmit	0	0	0	Received	0	0	0	Total	0	0	0								
	Small	Large	Total																							
Transmit	0	0	0																							
Received	0	0	0																							
Total	0	0	0																							
17	Sheet Counter	<table border="1"> <thead> <tr> <th></th> <th>Small</th> <th>Large</th> <th>Total</th> </tr> </thead> <tbody> <tr> <td>Copy</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Fax</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Printer</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>List</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Total</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>		Small	Large	Total	Copy	0	0	0	Fax	0	0	0	Printer	0	0	0	List	0	0	0	Total	0	0	0
	Small	Large	Total																							
Copy	0	0	0																							
Fax	0	0	0																							
Printer	0	0	0																							
List	0	0	0																							
Total	0	0	0																							
18	OCR Counter	<table border="1"> <tbody> <tr> <td>Total</td> <td>0</td> </tr> </tbody> </table>	Total	0																						
Total	0																									

	Item name	Description
1	[Close] button	Closes the [User Information] screen.
2	User Name	Displays the user name.
3	Domain Name/LDAP Server	Displays the registered domain name or LDAP server.
4	Authentication Method	Displays the user authentication method.
5	Password	You cannot display the password. Reset the password in the [User Accounts] item when changing the password. 📖 P.140 “[Enter Password] screen”
6	Role Assignment	Displays the registered roles.
7	Group Assignment	Displays the registered groups.
8	Department Number	Displays the registered departments.
9	PanelUI Language	Displays the registered display languages of the touch panel.
10	PanelUI Keyboard Layout	Displays the registered keyboard patterns for the touch panel.
11	Quota Setting	<ul style="list-style-type: none"> <li>• <b>OFF</b> — No output restriction.</li> <li>• <b>ON</b> — Restricts output.</li> </ul>
	Quota	Displays the remaining number for output.
	Default Quota	Displays the default number assigned for the user.
12	Print Counter	Displays the output total count value.

	Item name	Description
13	Detail	Displays details of the total output count value when you click [▶]. <b>Copy Counter:</b> Displays the number of pages printed by copy operations for paper sizes set on your equipment. <b>Fax Counter:</b> Displays the number of pages printed by fax reception for paper sizes set on your equipment. <b>Printer Counter:</b> Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. <b>List Counter:</b> Displays the number of pages printed by system page print operations for paper sizes set on your equipment.
14	Scan Counter	Displays the total count value of scanned documents.
15	Detail	Displays details of the total count value of scanned documents when you click [▶]. <b>Copy Counter:</b> Displays the number of pages scanned by copy operations for paper sizes set on your equipment. <b>Fax Counter:</b> Displays the number of pages scanned by fax reception for paper sizes set on your equipment. <b>Network Counter:</b> Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
16	Fax Communication Counter	Displays the communication record.
17	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.
18	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip	This OCR Counter appears only when an OCR Enabler is installed.

## ❑ [Quota Setting] screen <access policy mode>

You can make the quota management settings based on either a print count or a job. In job-based quota management, different weights can be assigned to each job when the number of outputs is counted.

Print	Weight	Range
Small Full Color	1.00	(0.00-99.99)
Large Full Color	1.00	(0.00-99.99)
Small Twin/ Mono Color	1.00	(0.00-99.99)
Large Twin/ Mono Color	1.00	(0.00-99.99)
Small Black	1.00	(0.00-99.99)
Large Black	1.00	(0.00-99.99)

	Item name	Description
1	[Save] button	Saves the quota settings.
2	[Cancel] button	Cancels the settings.

	Item name	Description
3	Black/Color Quota	Performs quota management based on the number of black and color outputs.
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• [Black Quota] is displayed in monochrome models, which performs quota management with the number of black outputs.</li> </ul>	
4	Job Quota	<p>Assigns weights to each job and calculates the sum total quotas of the print jobs and scan jobs for quota management. Different weights can be assigned to each of the jobs listed below.</p> <ul style="list-style-type: none"> <li>• Print <ul style="list-style-type: none"> <li>- Small Full Color</li> <li>- Large Full Color</li> <li>- Small Twin/Mono Color</li> <li>- Large Twin/Mono Color</li> <li>- Small Black</li> <li>- Large Black</li> </ul> </li> <li>• Scan <ul style="list-style-type: none"> <li>- Color</li> <li>- Black</li> </ul> </li> </ul>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• In monochrome models, only the weight assigned to Small Black or Large Black can be changed.</li> <li>• When assigning the weight to a job, you can enter a value in the range from 0.00 to 99.99. The default value of the print is “1.00” and that of the scan is “0.00”. For example, assuming that the weight assigned to Small Black in print is 0.50, if the user makes 2 outputs in Small Black, the quota value assigned to the user is decremented by 1.00.</li> </ul>	

# [Counter] How to Set and How to Operate

P.132 “Viewing counters”

## ■ Viewing counters

This equipment maintains a set of counters that keep track of the number of pages printed, copied and scanned. These statistics can be displayed in totals or broken down by department. This section explains how to display the statistics and manage the department counters.

P.132 “Displaying the total counter”

P.133 “Displaying the department counter”

### Note

Neither an end user nor an administrator can reset counters from TopAccess. However, users who are granted administrator privileges in the access policy mode can reset the counter from the touch panel. Refer to the **MFP Management Guide**.

## □ Displaying the total counter

Total counter information is displayed in the [Total] menu in addition to the print counter and scan counter. You can check small and large size counters of operations such as copy and fax in each [Detail].

### 1 Click the [Counter] tab and the [Total] menu.

The Total Count page is displayed.

### 2 You can check the total counter in this page.

You can display details of each count value by clicking of [Detail].

The screenshot shows the 'Total Counter' page in the TopAccess interface. The page is divided into several sections, each representing a different counter category. Each section includes a 'Total Counter' table and a 'Detail' section with sub-tables for Copy, Fax, Printer, List, Copy, Fax, and Network counters. The Sheet Counter table shows counts for Small and Large sizes. The OCR Counter table shows a total count of 21.

Category	Sub-Category	Full Color	Twini/ Mono Color	Black	Total
Print Counter	Copy	0	0	0	0
	Fax	0	0	0	0
	Printer	0	0	0	0
	List	0	0	0	0
	Total	0	0	0	0
Scan Counter	Copy	0	0	0	0
	Fax	0	0	0	0
	Network	0	0	0	0
	Total	0	0	0	0
	Sheet Counter	Small	184	31	
Large		11	0		11
Printer		165	0		165
List		55	2		57
Total		415	33		448
OCR Counter	Total				21




## ❑ Displaying the department counter

In the [Department] menu, you can display the counter information of a specific department. If you want to display the department counter, you must enter the department code.

### 1 Click the [Counter] tab and the [Department] menu.

The Department management page is displayed.


### 2 Enter the code for the department you want to check in [Department Code] and click [Enter].

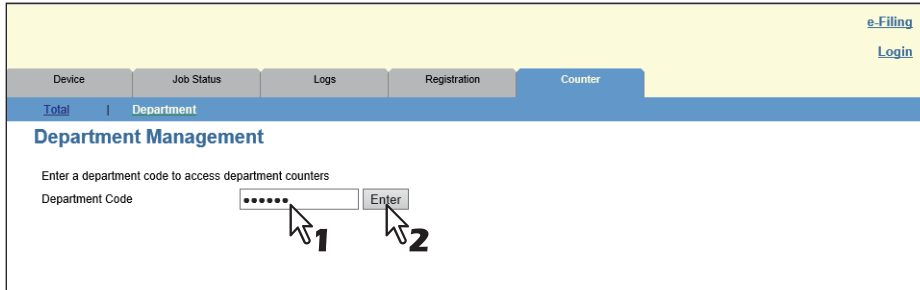

The screenshot shows the 'Department Management' page with a navigation bar at the top containing 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the navigation bar, there is a 'Department Management' section with the heading 'Department Management'. Underneath, it says 'Enter a department code to access department counters'. There is a text input field labeled 'Department Code' containing six dots, and an 'Enter' button to its right. A mouse cursor is pointing to the input field, labeled with a large '1', and another mouse cursor is pointing to the 'Enter' button, labeled with a large '2'.

The department counter for the specified department is displayed.

### 3 Click the department name link to display the detailed counters for the department.

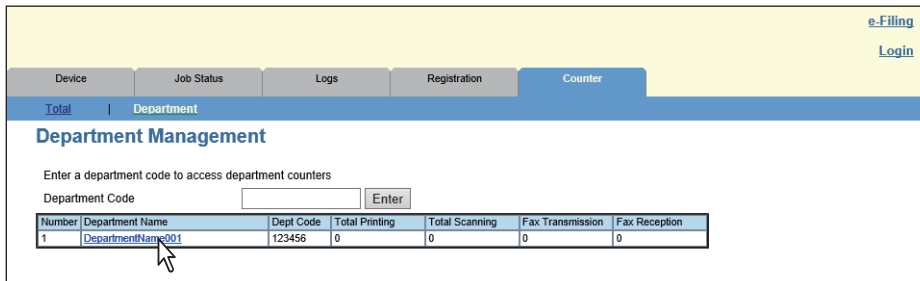

The screenshot shows the 'Department Management' page with a navigation bar at the top containing 'Device', 'Job Status', 'Logs', 'Registration', and 'Counter'. Below the navigation bar, there is a 'Department Management' section with the heading 'Department Management'. Underneath, it says 'Enter a department code to access department counters'. There is a text input field labeled 'Department Code' and an 'Enter' button to its right. Below the input field, there is a table with the following data:

Number	Department Name	Dept Code	Total Printing	Total Scanning	Fax Transmission	Fax Reception
1	<a href="#">DepartmentName001</a>	123456	0	0	0	0

A mouse cursor is pointing to the 'Department Name' link in the first row of the table.

## 4 The Department Information page opens.

You can display details of each count value by clicking [▶] of [Detail].

### Department Information

Close

Department Number 1  
 Department Name DepartmentName001  
 Department Code 123456  
 Color Quota Setting OFF  
     Color Quota  
     Default Color Quota  
 Black Quota Setting OFF  
     Black Quota  
     Default Black Quota

**Print Counter**

**Total Counter**

	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Printer	0	0	0	0
List	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

▼ **Detail**

**Copy Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Fax Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Printer Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**List Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Scan Counter**

**Total Counter**

	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Network	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

▼ **Detail**

**Copy Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Fax Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Network Counter**

	Full Color	Twin/ Mono Color	Black	Total
Small	0	0	0	0
Large	0	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Fax Communication Counter**

	Small	Large	Total
Transmit	0	0	0
Received	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>

**Sheet Counter**

	Small	Large	Total
Copy	0	0	0
Fax	0	0	0
Printer	0	0	0
List	0	0	0
<b>Total</b>	<b>0</b>	<b>0</b>	<b>0</b>

**OCR Counter**

<b>Total</b>
0

## [User Management] Tab Page

This section describes how to manage users in TopAccess. This section is intended for persons who are in charge of this equipment. There is no need for general users to read.

<b>[User Management] Tab Page Overview .....</b>	<b>136</b>
[User Accounts] Item list <access policy mode> .....	136
[Group Management] Item list <access policy mode> .....	145
[Role Management] Item list <access policy mode> .....	147
[Department Management] Item list <access policy mode> .....	153
[Project Management] Item list <access policy mode> .....	158
[Export/Import] Item list <access policy mode> .....	159
[Shared Settings] Item list <access policy mode> .....	161

## [User Management] Tab Page Overview

- 📖 P.136 “[User Accounts] Item list <access policy mode>”
- 📖 P.145 “[Group Management] Item list <access policy mode>”
- 📖 P.147 “[Role Management] Item list <access policy mode>”
- 📖 P.153 “[Department Management] Item list <access policy mode>”
- 📖 P.158 “[Project Management] Item list <access policy mode>”
- 📖 P.159 “[Export/Import] Item list <access policy mode>”
- 📖 P.161 “[Shared Settings] Item list <access policy mode>”

### ■ [User Accounts] Item list <access policy mode>

You can search and set user accounts if you are logged in to the access policy mode.

- 📖 P.137 “[Search User Account] screen”
- 📖 P.138 “[Create User Information] screen”
- 📖 P.140 “[Enter Password] screen”
- 📖 P.141 “[Edit User Information] screen”
- 📖 P.144 “[Role Assignment] screen”
- 📖 P.145 “[Group Assignment] screen”

The screenshot shows the 'User Accounts' management page. The interface includes a top navigation bar with 'User Management' selected, and a sub-menu with options like 'New', 'Delete', 'Delete All', 'Delete All Cache', 'Unlock', 'Reset Password', 'Set Registered Quota', 'Set Registered All Quotas', 'Reset Counters', and 'Reset All Counters'. Below this is a table with columns for Number, User Name, Domain Name/LDAP Server, Department Number, and Status. The table contains 9 rows of user data. Callouts 1-17 point to specific UI elements: 1 (Search), 2 (New), 3 (Delete), 4 (Delete All), 5 (Delete All Cache), 6 (Unlock), 7 (Reset Password), 8 (Set Registered Quota), 9 (Table header), 10 (Table body), 11 (Table footer), 12 (Number column), 13 (User Name column), 14 (Domain Name/LDAP Server column), 15 (Department Number column), 16 (Status column), and 17 (Table right edge).

Number	User Name	Domain Name/LDAP Server	Department Number	Status
1	User			Available
10 11	Unde			Available
10 12	Adm			Available
10 13	Sen			Available
10 14	Audif			Available
10 15	Faxo			Available
10 16	Gues			Not available
10 17	Print			Available
10 18	Rem			Available

	Item name	Description
1	[Search] button	Searches registered users. 📖 P.137 “[Search User Account] screen”
2	[New] button	Registers new users. 📖 P.138 “[Create User Information] screen”
3	[Delete] button	Deletes the user selected in the user account list. However, you cannot delete the default users.
4	[Delete All] button	Deletes all registered users. (Except default users)
5	[Delete All Cache] button	Select this to delete all the authentication information to be used when an authentication server failure occurs.
6	[Unlock] button	Unlocks a locked user selected in the user account list.
7	[Reset Password] button	Resets the password of the user selected in the user account list. 📖 P.140 “[Enter Password] screen”
8	[Set Registered Quota] button	Initializes the registered quota for the user selected in the user account list.

	Item name	Description
9	[Set Registered All Quotas] button	Initializes quotas for all users.
10	[Reset Counters] button	Resets counters for the user selected in the user account list.
11	[Reset All Counters] button	Resets counters for all departments.
12	Number	Displays the registration number of the user. 10001 to 10008 are assigned to default users.
13	User Name	Displays the user name. Undefined, Admin, Service, Auditor, Faxope, Guest, and Printope, Remote-access-service are default users. You can check the user information by clicking the user name. P.141 “[Edit User Information] screen”
14	Domain Name/LDAP Server	Displays the domain name or LDAP server registered in the user information.
15	Department Number	Displays the department number registered in the user information.
16	Status	Displays the user status.
17	Select Page	Allows you to select a page when there are 101 items or more.

### [Search User Account] screen

You can search registered users.  
Select items to be searched and enter or select the search conditions.

	Item name	Description
1	Number	Enter the user number you want to search. The search condition should be in the range from 1 to 10000.
2	Department Number	Select the department number you want to search.
3	User Name	Enter the user name you want to search. A prefix search is performed with the entered character string.
4	Domain Name/LDAP Server	Enter the domain name or LDAP server you want to search.
5	[Search] button	Searches contacts with the entered and selected conditions.





## ❑ [Create User Information] screen


You can register new user information.

The screenshot shows the 'Create User Information' screen with the following elements and callouts:

- 1**: Save button
- 2**: Cancel button
- 3**: \*Required label above the User Name field
- 3**: User Name text input field
- 4**: Local User which is available in Windows Domain Authentication/LDAP Authentication checkbox
- 5**: Domain Name/LDAP Server dropdown menu
- 6**: Authentication Method dropdown menu (set to MFP Local Authentication)
- 7**: Password text input field
- 8**: PIN Code text input field
- 9**: Card Information text input field
- 10**: Role Assignment text area with an Edit button
- 11**: Group Assignment text area with an Edit button
- 12**: Email Address text input field with an Address Book button
- 13**: Home Directory text input field
- 14**: Department Number dropdown menu
- 15**: PanelUI Language dropdown menu (set to English(US))
- 16**: PanelUI Keyboard Display dropdown menu (set to ON)
- 17**: PanelUI Keyboard Layout dropdown menu (set to QWERTY)
- 17**: Color Quota Setting dropdown menu (set to OFF)
- 18**: Color Quota text input field
- 18**: Default Color Quota text input field
- 18**: Black Quota Setting dropdown menu (set to OFF)
- 18**: Black Quota text input field
- 18**: Default Black Quota text input field


	Item name	Description
1	[Save] button	Saves the entered user information.
2	[Cancel] button	Cancels creating user information.
3	User Name	Enter the user name. You can enter up to 128 alphanumerical characters and symbols (except the following: " * + , / ; < = > ? [ \ ]   space).
4	Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register as a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.
	Tip	The above setting is available only when the [Local User which is available in Windows Domain Authentication/LDAP Authentication] checkbox is selected. <a href="#">P.310 “Windows Domain Authentication”</a> <a href="#">P.312 “LDAP Authentication”</a>
5	Domain Name/LDAP Server	Select the domain name or LDAP server.
6	Authentication Method	Select the user authentication method. <ul style="list-style-type: none"> <li>• <b>MFP Local Authentication</b> — Use MFP local authentication on your equipment.</li> <li>• <b>Windows Domain Authentication</b> — Use network authentication managed by the Windows domain.</li> <li>• <b>LDAP Authentication</b> — Use network authentication managed by LDAP.</li> </ul>

	Item name	Description
7	Password	Enter the password. You can enter up to 64 alphanumerical characters and symbols (! # ( ) * + , - . / : ; = ? @ \$ ^ _ ` {   } ~ \ space).
8	PIN Code	Enter the PIN code for the user authentication.
	<b>Note</b>	<ul style="list-style-type: none"> <li>The PIN code is up to 32 figures (0 - 9) long. The minimum length is specified on [User Authentication Setting].   P.307 “Setting up User Authentication Setting”</li> <li>If you change any settings, the changes will be reflected from the next time you log in.</li> <li>When you use the PIN code for the Windows domain authentication or LDAP authentication, the unique PIN code should be assigned for all users.</li> </ul>
9	Card Information	Enter the information necessary for card authentication.
10	Role Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Select from the registered roles. Click the [Edit] button and select roles from the displayed screen.  P.144 “[Role Assignment] screen”
11	Group Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Select from the registered groups. Click the [Edit] button and select groups from the displayed screen.  P.145 “[Group Assignment] screen”
12	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
13	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 half-width alphanumerical characters and symbols. For example, enter “\192.168.1.1\users\name” to specify the folder called “users\name” on the computer whose server address is “192.168.1.1”.
14	Department Number	Select from the registered departments.  P.153 “[Department Management] Item list <access policy mode>”
15	PanelUI Language	Select the display language for the touch panel.
16	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
17	PanelUI Keyboard Layout	Select the keyboard pattern displayed on the touch panel.

	Item name	Description
18	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Not performed</li> <li>• <b>ON</b> — Performed</li> </ul>  P.130 “[Quota Setting] screen <access policy mode>”
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.

### [Enter Password] screen

You can display the [Enter Password] screen by selecting the check box of the user whose password you want to change in the [User Accounts] item list and clicking the [Reset Password] button.

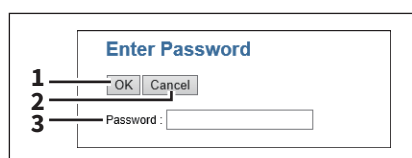

	Item name	Description
1	[OK] button	Saves the entered password.
2	[Cancel] button	Cancels the password change.
3	Password	Enter the new password.



## ❑ [Edit User Information] screen

You can update registered user information.

**1** Edit User Information

**2** [Save] button

**3** [Cancel] button

**4** [Reset Counters] button

**5** \*Required \*User Name User001

**6**  Local User which is available in Windows Domain Authentication/LDAP Authentication

**7** Domain Name/LDAP Server

**8** Authentication Method MFP Local Authentication

**9** Password

**10** PIN Code

**11** Card Information

**12** Role Assignment User [Edit]

**13** Group Assignment [Edit]

**14** Email Address [Address Book]

**15** Home Directory

**16** Department Number

**17** PanelUI Language English(US)

**18** PanelUI Keyboard Display ON

**19** PanelUI Keyboard Layout QWERTY

**20** Color Quota Setting OFF

**20** Black Quota Setting OFF

**21** Print Counter

Total Counter	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Printer	0	0	0	0
List	0	0	0	0
Total	0	0	0	0

**22** ▶ Detail

**23** Scan Counter

Total Counter	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Network	0	0	0	0
Total	0	0	0	0

**24** ▶ Detail

**25** Fax Communication Counter

	Small	Large	Total
Transmit	0	0	0
Received	0	0	0
Total	0	0	0

**26** Sheet Counter





	Small	Large	Total
Copy	0	0	0
Fax	0	0	0
Printer	0	0	0
List	0	0	0
Total	0	0	0

**27** ▶ Detail

**28** OCR Counter

Total	0
-------	---

	Item name	Description
<b>1</b>	[Save] button	Saves the entered user information.
<b>2</b>	[Cancel] button	Cancels changing user information.
<b>3</b>	[Reset Counters] button	Resets counters.


	Item name	Description
4	[Delete] button	Deletes the displayed user from the user account.
5	User Name	Displays the user name.
	<p><b>Note</b></p> <p>If you change any settings, the changes will be reflected from the next time you log in.</p>	
6	Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register as a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.
	<p><b>Note</b></p> <p>The above setting is available only when the [Local User which is available in Windows Domain Authentication/LDAP Authentication] checkbox is selected.</p> <p> P.310 “Windows Domain Authentication”</p> <p> P.312 “LDAP Authentication”</p>	
7	Domain Name/LDAP Server	Displays the registered domain name or LDAP server. Select this item if you want to change. You can select this item only when the authentication method is [Windows Domain Authentication] or [LDAP Authentication].
8	Authentication Method	Displays the user authentication method. <ul style="list-style-type: none"> <li>• <b>MFP Local Authentication</b> — Use MFP local authentication on your equipment.</li> <li>• <b>Windows Domain Authentication</b> — Use network authentication managed by the Windows domain.</li> <li>• <b>LDAP Authentication</b> — Use network authentication managed by LDAP.</li> </ul>
9	Password	You can change the password only when the authentication method is [MFP Local Authentication].
	<p><b>Note</b></p> <p>If you change any settings, the changes will be reflected from the next time you log in.</p>	
10	PIN Code	Displays the PIN code for the user authentication. You can set this item only when the authentication method is [MFP Local Authentication].
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The PIN code is up to 32 figures (0 - 9) long. The minimum length is specified on [User Authentication Setting].</li> <li>•  P.307 “Setting up User Authentication Setting”</li> <li>• If you change any settings, the changes will be reflected from the next time you log in.</li> <li>• When you use the PIN code for the Windows domain authentication or LDAP authentication, the unique PIN code should be assigned for all users.</li> </ul>	
11	Card Information	Enter the information necessary for card authentication.
12	Role Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Displays the registered roles. Click the [Edit] button and select roles from the displayed screen.  P.144 “[Role Assignment] screen”
	<p><b>Note</b></p> <p>If you change any settings, the changes will be reflected from the next time you log in.</p>	

	Item name	Description
13	Group Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Displays the registered groups. Click the [Edit] button and select groups from the displayed screen. P.145 “[Group Assignment] screen”
	<b>Note</b>	If you change any settings, the changes will be reflected from the next time you log in.
14	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
15	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 half-width alphanumerical characters and symbols. For example, enter “\192.168.1.1\users\name” to specify the folder called “users\name” on the computer whose server address is “192.168.1.1”.
16	Department Number	Displays the registered departments. Select this item if you want to change. P.153 “[Department Management] Item list <access policy mode>”
17	PanelUI Language	Displays the registered display languages of the touch panel. Select this item if you want to change.
18	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
19	PanelUI Keyboard Layout	Displays the registered keyboard patterns for the touch panel. Select this item if you want to change.
20	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Not performed</li> <li>• <b>ON</b> — Performed</li> </ul> P.130 “[Quota Setting] screen <access policy mode>”
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.
21	Print Counter	Displays the output total count value.
22	Detail	Displays details of the total output count value when you click . <b>Copy Counter:</b> Displays the number of pages printed by copy operations for paper sizes set on your equipment. <b>Fax Counter:</b> Displays the number of pages printed by fax reception for paper sizes set on your equipment. <b>Printer Counter:</b> Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. <b>List Counter:</b> Displays the number of pages printed by system page print operations for paper sizes set on your equipment.

	Item name	Description
23	Scan Counter	Displays the total count value of scanned documents.
24	Detail	Displays details of the total count value of scanned documents when you click [▶]. <b>Copy Counter:</b> Displays the number of pages scanned by copy operations for paper sizes set on your equipment. <b>Fax Counter:</b> Displays the number of pages scanned by fax reception for paper sizes set on your equipment. <b>Network Counter:</b> Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
25	Fax Communication Counter	Displays the communication record.
26	Sheet Counter	Displays the number of printed sheets according to the function being used. Values for the small size and large size are displayed according to the paper size specified on your equipment. This counter increments by 1 for either single or dual-sided copying.
27	Detail	Displays details of the number of printed sheets when you click [▶]. <b>Copy Counter:</b> Displays the number of sheets printed by copy operations for paper sizes set on your equipment. <b>Fax Counter:</b> Displays the number of sheets printed by fax reception for paper sizes set on your equipment. <b>Printer Counter:</b> Displays the number of sheets printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. <b>List Counter:</b> Displays the number of sheets printed by system page print operations for paper sizes set on your equipment.
	<b>Note</b>	This item is available only for some models.
28	OCR Counter	Displays the number of images to which an OCR process has been performed.
	<b>Tip</b>	This OCR Counter appears only when an OCR Enabler is installed.

## ❑ [Role Assignment] screen

You can select roles to be assigned.

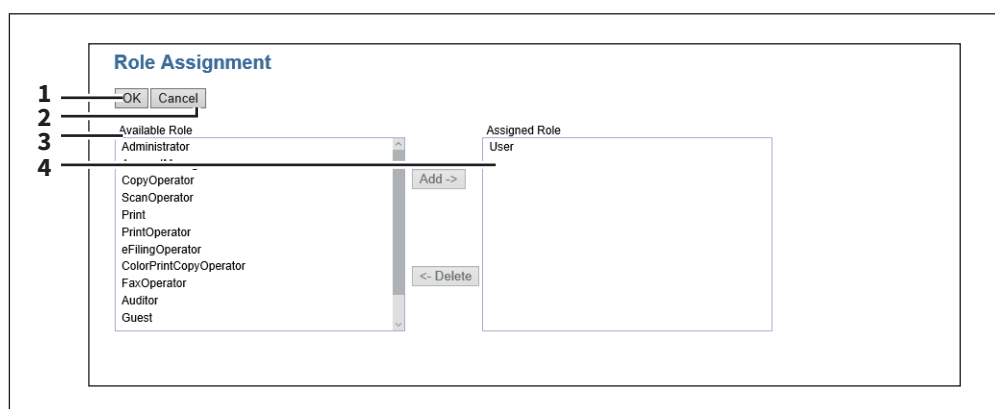


	Item name	Description
1	[OK] button	Saves the assigned roles.
2	[Cancel] button	Cancels assigning roles.

	Item name	Description
3	Available Role	Displays a list of registered roles. Select the role to be assigned and click the [Add] button.
4	Assigned Role	Displays a list of the assigned roles. Select the role to be removed from the assignment and click the [Delete] button.

### ❑ [Group Assignment] screen

You can select groups to be assigned.

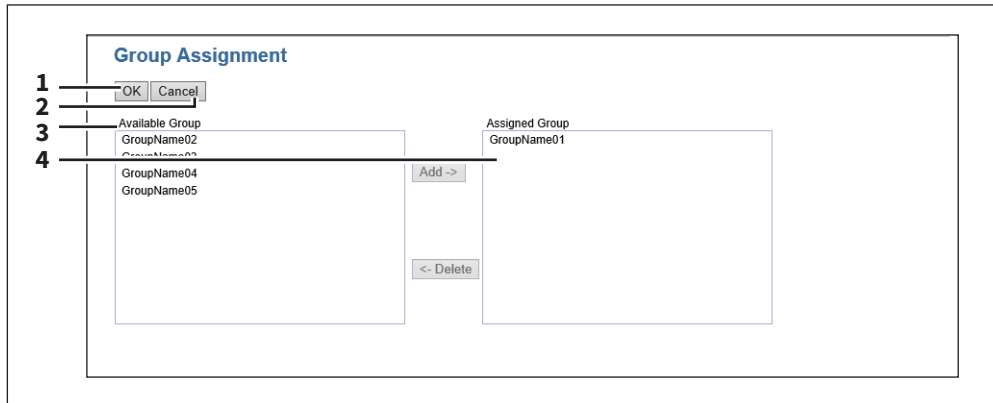


	Item name	Description
1	[OK] button	Saves the assigned groups.
2	[Cancel] button	Cancels assigning groups.
3	Available Group	Displays a list of registered groups. Select the group to be assigned and click the [Add] button.
4	Assigned Group	Displays a list of the assigned groups. Select the group to be removed from the assignment and click the [Delete] button.

### ■ [Group Management] Item list <access policy mode>

You can manage the registered roles as groups if you are logged in to the access policy mode.

📖 P.146 “[Create Group Information] screen”

📖 P.146 “[Edit Group Information] screen”

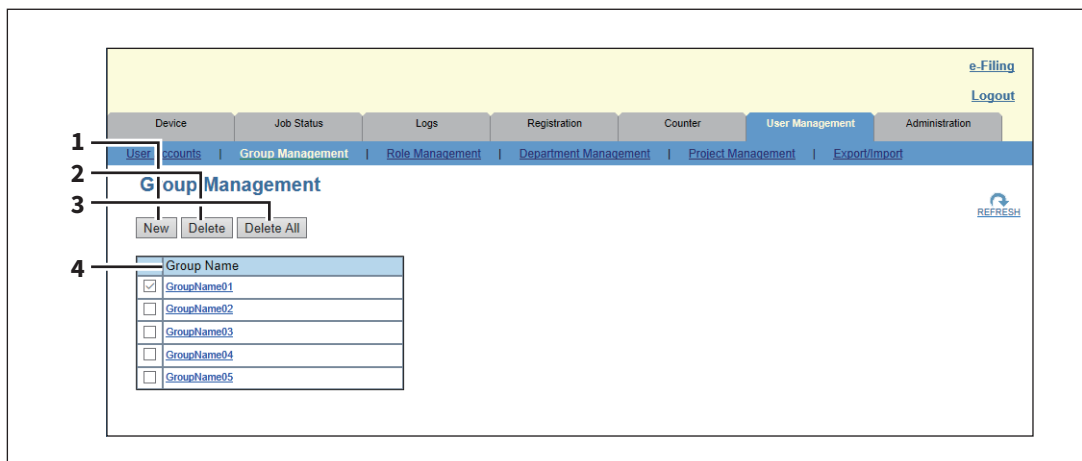

	Item name	Description
1	[New] button	Allows you to add a new group. 📖 P.146 “[Create Group Information] screen”
2	[Delete] button	Deletes the group selected in the group list.
3	[Delete All] button	Deletes all groups.
4	Group Name	Displays the group name. You check group information by clicking the group name. 📖 P.146 “[Edit Group Information] screen”

## ❑ [Create Group Information] screen

You can register new groups.

	Item name	Description
1	[Save] button	Saves the entered group information.
2	[Cancel] button	Cancels creating group information.
3	Group Name	Enter the group name. You can enter up to 128 alphanumeric characters and symbols other than “, ‘ (back quote), (, ), *, +, /, :, ; (semicolon), <, =, >, ?, [, \, ], ’ (apostrophe), {,  , }, ~, and , (comma).
4	Role Assignment	You can select roles to be assigned to the group. Click the [Edit] button and select roles from the displayed screen. 📖 P.144 “[Role Assignment] screen”

## ❑ [Edit Group Information] screen

You can check roles registered to the group.

	Item name	Description
1	[Save] button	Saves the entered group information.
2	[Cancel] button	Cancels changing group information.
3	Group Name	Displays the group name.
4	Role Assignment	Displays the roles assigned to the group. Click the [Edit] button and select roles from the displayed screen. P.144 “[Role Assignment] screen”


## ■ [Role Management] Item list <access policy mode>

You can manage and register roles if you are logged in to the access policy mode.

P.148 “Default roles and privileges”

P.150 “[Create New Role] screen”

P.152 “[Edit Role] screen”

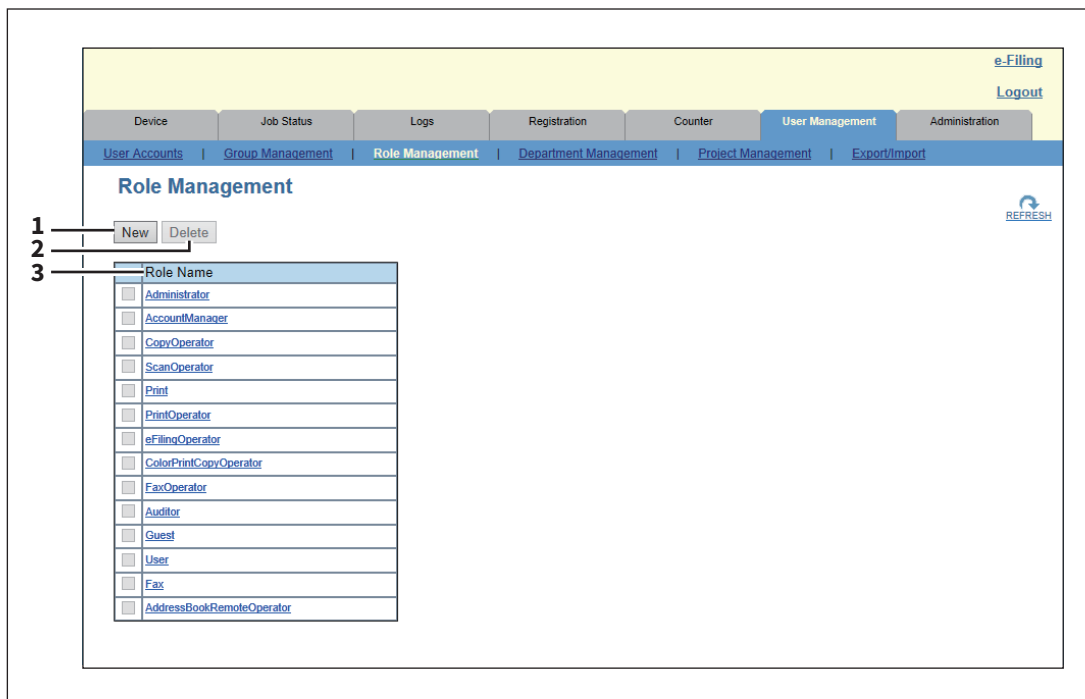

	Item name	Description
1	[New] button	Allows you to add a new role. P.150 “[Create New Role] screen”
2	[Delete] button	Deletes the role selected in the role list. However, you cannot delete the default roles.
3	Role Name	Displays the role name. For more information on default roles, see the following: P.148 “Default roles and privileges” You can check role information by clicking the role name. P.152 “[Edit Role] screen”

## ❑ Default roles and privileges

The following table describes privileges granted to default roles.

The functions listed in “Privileges” and “Permitted operations (functions)” below are displayed in “6 Function list” on the [Create Role Information] screen.

📖 P.150 “[Create New Role] screen”

Default role names	Privileges	Permitted operations (functions)
Administrator	EWB Function	EWB Access
	Scan Function <sup>*1</sup>	Store to e-Filing
	Output Setting <sup>*2</sup>	Color Print
	e-Filing	e-Filing Access e-Filing Deletion
	Device Setting	Device Setting
	User/Department Management	Create, read, edit, or delete information for user/department management
	Log Management	Read Export
	Job Management	Job Operation
	Addressbook Management	Export/Import Address Book Create a clone file/install an address book
AccountManager	EWB Function	EWB Access
	User/Department Management	Create, read, edit, or delete information for user/department management
CopyOperator	Copy Function	Copy Job
	EWB Function	EWB Access
ScanOperator	EWB Function	EWB Access
	Scan Function	Store to Local File Share Store to Remote Server Send Email RemoteScan/WSScan(Pull)
	Local File Share	Store to Local Storage Store to USB Device
	Remote	Send Email Store to Remote Server WS Scan(Push)
Print	Print Function <sup>*1</sup>	Print Job
	EWB Function	EWB Access
PrintOperator	Print Function <sup>*1</sup>	Print Management
	EWB Function	EWB Access
	Output Setting <sup>*2</sup>	Color Print
eFilingOperator	EWB Function	EWB Access
	Scan Function <sup>*1</sup>	Store to e-Filing
	e-Filing	e-Filing Access



Default role names	Privileges	Permitted operations (functions)
ColorPrintCopyOperator	Copy Function	Copy Job Color Copy
	Print Function <sup>*1</sup>	Print Job Color Print
	EWB Function	EWB Access
	Output Setting	Color Print
FaxOperator	EWB Function	EWB Access
	Fax/iFax Function	Internet Fax Transmission Fax Transmission Fax Received Print <sup>*3</sup>
Auditor	EWB Function	EWB Access
	Log Management <sup>*1</sup>	Read
Guest	(No privilege settings)	(No settings)
User	Copy Function	Copy Job Color Copy <sup>*2</sup> Store to Local File Share Store to Remote Server Store to e-Filing
	Print Function <sup>*1</sup>	Print Job Color Print <sup>*2</sup> Store to e-Filing
	EWB Function	EWB Access
	Scan Function	Store to Local File Share Store to Remote Server Send Email Store to e-Filing RemoteScan/WSScan(Pull)
	Fax/iFax Function <sup>*1</sup>	Internet Fax Transmission Fax Transmission Store to Local File Share Store to Remote Server
	Output Setting <sup>*2</sup>	Color Print
	Local File Share	Store to Local Storage Store to USB Device
	Remote	Send Email Store to Remote Server WS Scan(Push)
Fax	EWB Function	EWB Access
	Fax/iFax Function <sup>*1</sup>	Internet Fax Transmission Fax Transmission
AddressBookRemoteOperator	Addressbook Management	Export/Import Address Book Create a clone file/install an address book

<sup>\*1</sup> Part of operations (functions) is permitted.

<sup>\*2</sup> Available only for models that support color printing.

<sup>\*3</sup> For the details of the fax received print function, contact your service technician.

## ❑ [Create New Role] screen

You can register a new role.

The screenshot shows the 'Create New Role' interface. At the top, there are 'Save' and 'Cancel' buttons. Below them is a text input field for the role name, marked as required. A dropdown menu for 'Base Role' is also present. The main area is divided into two panes. The left pane, titled 'MFP Function', contains a list of checkboxes for various functions: Copy Function (Copy Job), Print Function (Print Job, USB Direct Print, Print Management), EWB Function (EWB Access), Scan Function (RemoteScan/WSScan(Pull)), Fax/Fax Function (Internet Fax Transmission, Fax Transmission, Fax Received Print), Output Setting (Color Print), and Local File Share (Store to Local Storage, Store to USB Device). The right pane, titled 'Copy Function', 'Print Function', 'EWB Function', and 'Scan Function', each contains a table with 'Function' and 'Status' columns. The 'Copy Function' table lists: Copy Job (Disable), Color Copy (Disable), Store to Local File Share (Disable), Store to Remote Server (Disable), and Store to e-Filing (Disable). The 'Print Function' table lists: Print Job (Disable), USB Direct Print (Disable), Color Print (Disable), Store to e-Filing (Disable), and Print Management (Disable). The 'EWB Function' table lists: EWB Access (Disable). The 'Scan Function' table lists: Store to Local File Share (Disable), Store to Remote Server (Disable), Send Email (Disable), and Store to e-Filing (Disable).

	Item name	Description
1	[Save] button	Saves the entered role information.
2	[Cancel] button	Cancels creating the role.
3	Role Name	Enter the role name. You can enter up to 128 characters.
4	Base Role	Select a role which is used as a base of the new role. You can select any registered roles or default roles (CopyOperator, ScanOperator, Print, PrintOperator, eFilingOperator, ColorPrintCopyOperator, FaxOperator, Guest, User, Fax) as the base role.

	Item name	Description
5	MFP Function	Allows you to select the privileges to be assigned to the role.
	Copy Function	Assigns all copy functions.
	Copy Job	Assigns the copy job function.
	Print Function	Assigns all print functions.
	Print Job	Assigns the print job function.
	USB Direct Print	Assigns the USB direct print function.
	Print Management	Assigns the print management function.
	EWB Function *1	Assigns all EWB functions.
	EWB Access	Assigns the EWB access function.
	Scan Function	Assigns all scan functions.
	Remote Scan/ WSScan(Pull)	Assigns the Remote Scan or Web Services Scan function.
	FAX/iFAX Function	Assigns all fax/ifax functions.
	Internet Fax Transmission	Assigns all Internet Fax transmission functions.
	Fax Transmission	Assigns the fax transmission function.
	Fax Received Print	Assigns the fax/Internet Fax received print function.
	Output Setting *2	Assigns all output setting functions.
	Color Print	Assigns the color print function.
	Local File Share	Assigns all local file share functions.
	Store to Local Storage	Assigns all local file storage functions.
	Store to USB Device	Assigns all storage to USB device functions.
	Remote	Assigns all remote functions.
	Send Email	Assigns scan to function.
	Store to Remote Server	Assigns all storage to remote server functions.
WS Scan(Push)	Assigns the WS scan (push) function.	
e-Filing	Assigns all e-Filing functions.	
e-Filing Access	Assigns the e-Filing access functions.	
6	Function list	Displays operations (functions) enabled/disabled by privileges assigned to the role selected from "MFP Function". Even if one item is selected from "MFP Function", more than one function may be enabled. Example: If you select the [Send Email] check box in [Remote] from "MFP Function", [Send Email] in [Remote] and that in [Scan Function] on the "Function list" will be enabled.

\*1 The External Interface Enabler is required to use the EWB (Embedded Web Browser) function. This setting is available only for some models.  
 \*2 Available only for models that support color printing.

## ❑ [Edit Role] screen

You can confirm and edit roles.

However, you cannot edit the default roles.

The screenshot shows the 'Edit Role' interface. At the top, there are 'Save' and 'Cancel' buttons. Below them is a 'Role Name' field with the value 'Role001'. The main area is divided into two sections: 'MFP Function' and 'Device Management'. The 'MFP Function' section has several sub-sections with checkboxes: Copy Function, Print Function, EWB Function, Scan Function, and Fax/Fax Function. The 'Device Management' section has checkboxes for Device Setting, User/Department Management, Log Management, Job Management, and Addressbook Management. On the right side, there are three tables showing the status of various functions for the role. The first table is for 'Copy Function', the second for 'Print Function', and the third for 'Scan Function'. Each table has two columns: 'Function' and 'Status'. The 'Copy Function' table shows 'Copy Job', 'Color Copy', 'Store to Local File Share', 'Store to Remote Server', and 'Store to e-Filing', all with a status of 'Disable'. The 'Print Function' table shows 'Print Job', 'USB Direct Print', 'Color Print', and 'Print Management', all with a status of 'Disable'. The 'Scan Function' table shows 'Store to Local File Share', 'Store to Remote Server', and 'Send Email', all with a status of 'Disable'. The 'EWB Function' table shows 'EWB Access' with a status of 'Disable'.

	Item name	Description
1	[Save] button	Saves the edited role information.
2	[Cancel] button	Cancels editing the role.
3	Role Name	Enter if changing the role name. You can enter up to 128 alphanumeric characters and symbols other than “, ‘ (backquote), (, ), *, +, /, :, ; (semicolon), <, =, >, ?, [, \, ], ' (apostrophe), {,  , }, ~, and , (comma).
4	MFP Function	Allows you to select the MFP function to be assigned to the group. Select from the following functions. See the following for details: P.150 “[Create New Role] screen”
5	Device Management	Displays device management privileges assigned to default roles. (Default roles only) P.148 “Default roles and privileges”
6	Function list	Displays functions assigned to the role. See the following for details: P.150 “[Create New Role] screen”

## ■ [Department Management] Item list <access policy mode>

You can manage departments if you are logged in to the access policy mode.

📖 P.154 “[Department Information] screen”

📖 P.155 “[Edit Department Information] screen”

	Item name	Description
1	[New] button	Allows you to add a new department. 📖 P.154 “[Department Information] screen”
2	[Reset All Department Counters] button	Resets counters for all departments.
3	[Allocate All Department Quotas] button	Initializes quotas for all departments.
4	[Delete All] button	Deletes the registered department.
5	Select Page	Allows you to select a page when there are 101 items or more.
6	Number	Displays the registration number of the department.
7	Department Name	Displays the department name. Click a department name link to check the department management information. 📖 P.155 “[Edit Department Information] screen”
8	Dept Code	Displays the department code.
9	Total Printing	Displays the total number of printed pages of the department.
10	Total Scanning	Displays the total number of scanned pages of the department.
11	Fax Transmission	Displays the total number of transmitted fax pages of the department.
12	Fax Reception	Displays the total number of received fax pages of the department.

## ❑ [Department Information] screen

You can register a new department.

The screenshot shows the 'Department Information' screen. It features a title bar with 'Save' and 'Cancel' buttons (callout 1). Below the title bar are two input fields: 'Department Name' (callout 3) and 'Department Code' (callout 4). Underneath these are two sections for quota settings. The first section, 'Color Quota', includes a dropdown menu set to 'OFF' (callout 5), a 'Default Color Quota' input field, and a 'Color Quota' input field. The second section, 'Black Quota', includes a dropdown menu set to 'OFF' (callout 5), a 'Default Black Quota' input field, and a 'Black Quota' input field.





	Item name	Description
1	[Save] button	Saves the entered department information.
2	[Cancel] button	Cancels creating the department information.
3	Department Name	Enter the department name. You can enter up to 20 characters.
4	Department Code	Enter the department code. You can enter up to 63 characters (except the following: ! " # \$ % & ' ( ) * + , / : ; < = > ? @ [ \ ] ^ ` {   } ~ space).
5	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Not performed</li> <li>• <b>ON</b> — Performed</li> </ul> P.130 “[Quota Setting] screen <access policy mode>”
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.

## ❑ [Edit Department Information] screen

You can confirm and edit department information.

The screenshot shows the 'Edit Department Information' screen. It includes a header with a title and a navigation bar with buttons: Save, Cancel, Reset Counters, and Delete. Below the header, there are input fields for Department Number (1), Department Name (6) with value 'Dept01', and Department Code (7) with masked characters '\*\*\*\*'. There are also dropdown menus for Color Quota Setting (8) and Black Quota Setting (8), both set to 'ON'. Below these are input fields for Color Quota (99999999), Default Color Quota (99999999), Black Quota (99999999), and Default Black Quota (99999999). The screen features three tables for counters: Print Counter (9), Scan Counter (11), and Sheet Counter (14). Each table has a 'Total Counter' section and a 'Detail' link. The Print Counter table has columns for Full Color, Twin/ Mono Color, Black, and Total. The Scan Counter table has columns for Full Color, Twin/ Mono Color, Black, and Total. The Sheet Counter table has columns for Small, Large, and Total. The OCR Counter (16) has a 'Total' field with the value 0.

	Item name	Description
1	[Save] button	Saves the entered department information.
2	[Cancel] button	Cancels changing the department information.
3	[Reset Counters] button	Resets counters.
4	[Delete] button	Deletes the displayed department.
5	Department Number	Displays the registration number of the department.
6	Department Name	Enter if changing the department name. You can enter up to 20 characters.
7	Department Code	Enter if changing the department code. You can enter up to 63 characters (except the following: ! " # \$ % & ' ( ) * + , / : ; < = > ? @ [ \ ] ^ _ {   } ~ space).

	Item name	Description
8	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Not performed</li> <li>• <b>ON</b> — Performed</li> </ul>  P.130 “[Quota Setting] screen <access policy mode>”
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.
9	Print Counter	Displays the output total count value.
10	Detail	Displays details of the total output count value when you click  . <p><b>Copy Counter:</b> Displays the number of pages printed by copy operations for paper sizes set on your equipment.</p> <p><b>Fax Counter:</b> Displays the number of pages printed by fax reception for paper sizes set on your equipment.</p> <p><b>Printer Counter:</b> Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment.</p> <p><b>List Counter:</b> Displays the number of pages printed by system page print operations for paper sizes set on your equipment.</p>
11	Scan Counter	Displays the total count value of scanned documents.
12	Detail	Displays details of the total count value of scanned documents when you click  . <p><b>Copy Counter:</b> Displays the number of pages scanned by copy operations for paper sizes set on your equipment.</p> <p><b>Fax Counter:</b> Displays the number of pages scanned by fax reception for paper sizes set on your equipment.</p> <p><b>Network Counter:</b> Displays the number of pages scanned by scan operations for paper sizes set on your equipment.</p>
13	Fax Communication Counter	Displays the communication record.
14	Sheet Counter	Displays the number of printed sheets according to the function being used. Values for the small size and large size are displayed according to the paper size specified on your equipment. This counter increments by 1 for either single or dual-sided copying.
15	Detail	Displays details of the number of printed sheets when you click  . <p><b>Copy Counter:</b> Displays the number of sheets printed by copy operations for paper sizes set on your equipment.</p> <p><b>Fax Counter:</b> Displays the number of sheets printed by fax reception for paper sizes set on your equipment.</p> <p><b>Printer Counter:</b> Displays the number of sheets printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment.</p> <p><b>List Counter:</b> Displays the number of sheets printed by system page print operations for paper sizes set on your equipment.</p>
	Note	This item is available only for some models.



---

	Item name	Description
16	OCR Counter	Displays the number of images to which an OCR process has been performed.
	<b>Tip</b> This OCR Counter appears only when an OCR Enabler is installed.	


## ■ [Project Management] Item list <access policy mode>

You can register project codes that can be assigned to jobs when you are logged in access policy mode.

📖 P.158 “[Project Management] screen”


📖 P.158 “[Create Project Information]/[Edit Project Information] screen”

### □ [Project Management] screen

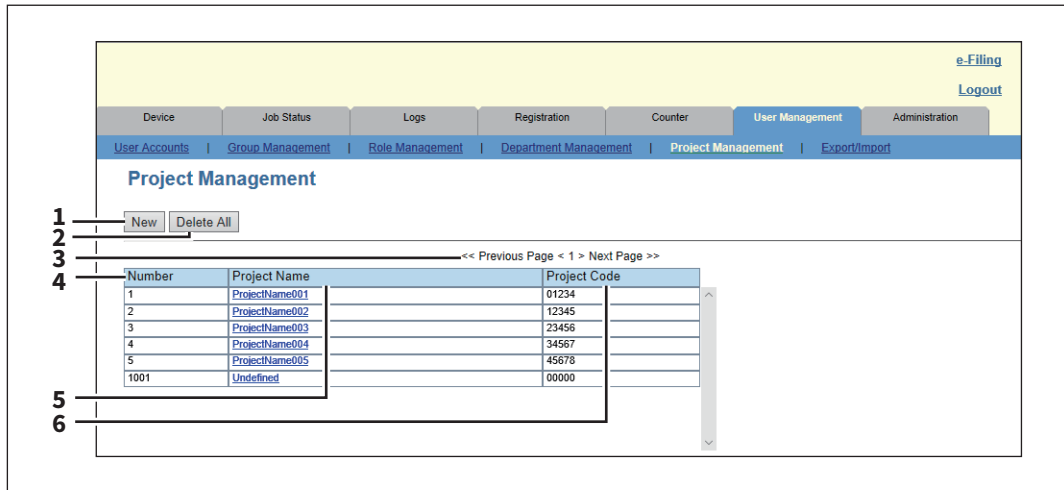

	Item name	Description
1	[New] button	Allows you to register a new project code. 📖 P.158 “[Create Project Information]/[Edit Project Information] screen”
2	[Delete All] button	Deletes all of the registered project codes.
3	Select Page	Allows you to select a page when there are 20 items or more.
4	Number	Displays the project code number.
5	Project Name	Displays the project name.
6	Project Code	Displays the project code.

### □ [Create Project Information]/[Edit Project Information] screen

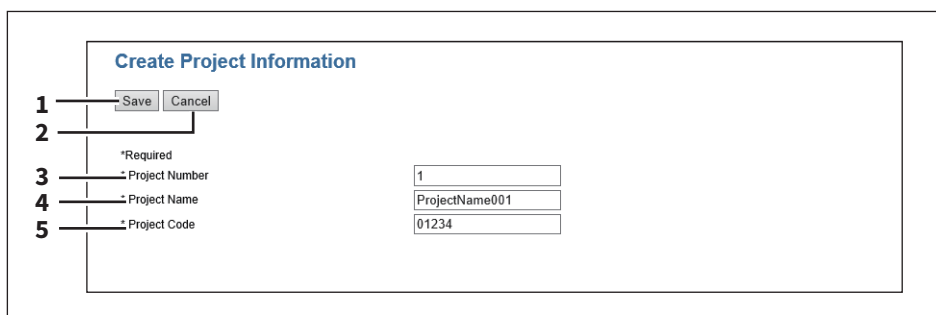

	Item name	Description
1	[Save] button	Registers the information of the new project code.
2	[Cancel] button	Cancels project code creation.
3	Project Number	Enter the project code number.
4	Project Name	Enter the project name.

	Item name	Description
5	Project Code	Enter the project code.

## ■ [Export/Import] Item list <access policy mode>

You can export and import your device settings if you are logged in to the access policy mode.

📖 P.159 “Export”

📖 P.160 “Import”

### 📄 Export


#### Note

The exported user information must be controlled appropriately to prevent illegal access or tampering.

The screenshot displays the 'Export/Import' section of a web application. At the top, there is a navigation menu with tabs for 'Device', 'Job Status', 'Logs', 'Registration', 'Counter', 'User Management', and 'Administration'. Below this, a sub-menu shows 'User Accounts', 'Group Management', 'Role Management', 'Department Management', 'Project Management', and 'Export/Import'. The 'Export/Import' section has two sub-tabs: 'Export' and 'Import'. A note states: '\*It may take more than 10 minutes if there are a lot of entries.' Below this, there are several exportable items, each with a 'Create New File' button. The items are: 'User Information (Small/Large Counter)', 'User Information', 'User Information(All Counter)', 'Combined(User Information + Role + Group)', 'Combined(User Information(All Counter) + Role + Group)', 'LDAP Role', 'Department Information(Small/Large Counter)', 'Department Information', 'Department Information(All Counters)', and 'Project Code'. Each item lists 'File Name', 'File Size', and 'Date Created' as 'Not Created'.

	Item name	Description
1	Select Export Information Type	Select the information type to be exported from the following. <ul style="list-style-type: none"> <li>• User Information (Small/Large Counter)</li> <li>• User Information</li> <li>• User Information(All Counter)</li> <li>• Combined(User Information + Role + Group)</li> <li>• Combined(User Information(All Counter) + Role + Group)</li> <li>• LDAP Role</li> <li>• Department Information(Small/Large Counter)</li> <li>• Department Information</li> <li>• Department Information(All Counters)</li> <li>• Project Code</li> </ul>
2	[Create New File] button	Creates the export file of the selected information type.

## ❑ Import

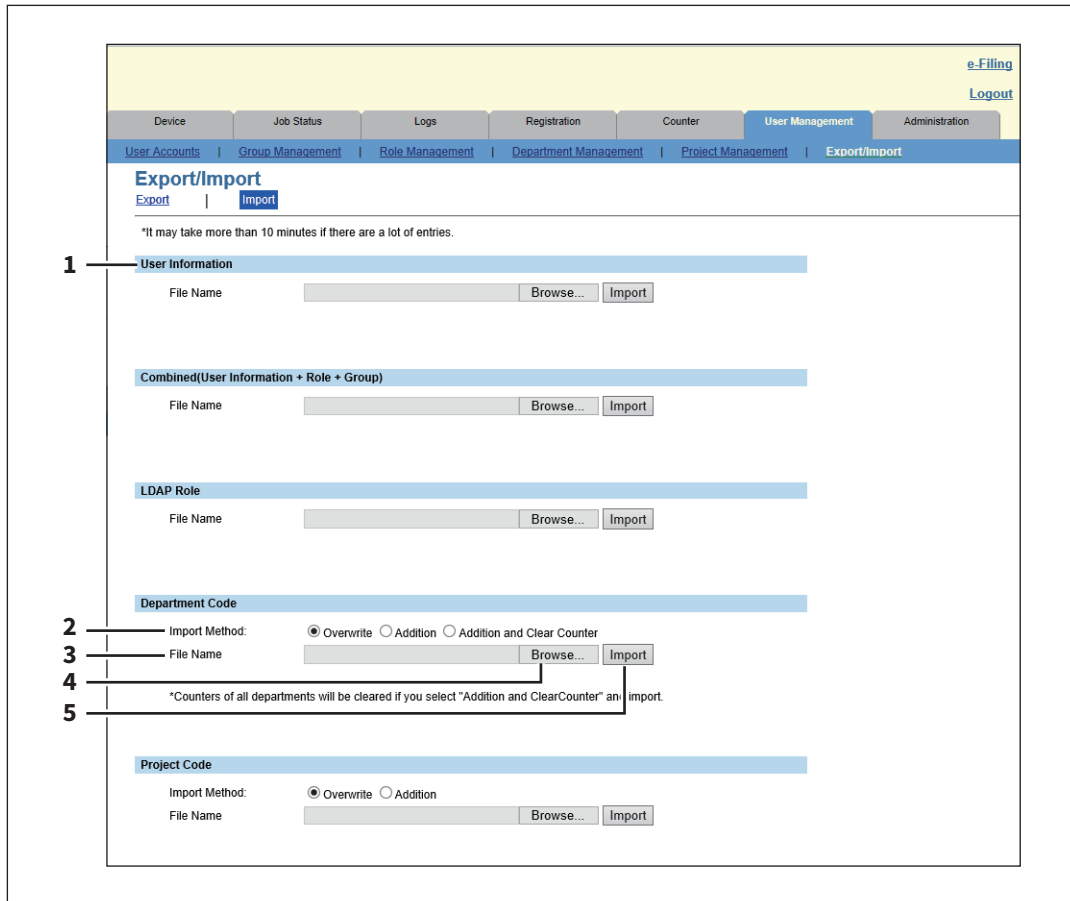


	Item name	Description
1	Select Import Information Type	Select the information type to be imported from the following. <ul style="list-style-type: none"> <li>• User Information</li> <li>• Combined(User Information + Role + Group)</li> <li>• LDAP Role</li> <li>• Department Code</li> <li>• Project Code</li> </ul>

	Item name	Description
2	Import method	Specify this item when you have selected Department Code or Project Code.
3	File name	Displays the name of the import file.
4	[Browse] button	Allows you to find and select the import file.
5	[Import] button	Imports the displayed file.

### ■ [Shared Settings] Item list <access policy mode>

When this printer is set as the primary MFP in [Shared Setting] from [Setting up User Authentication Setting], you can synchronize the user information on the printer with other secondary MFPs.

P.307 “Setting up User Authentication Setting”

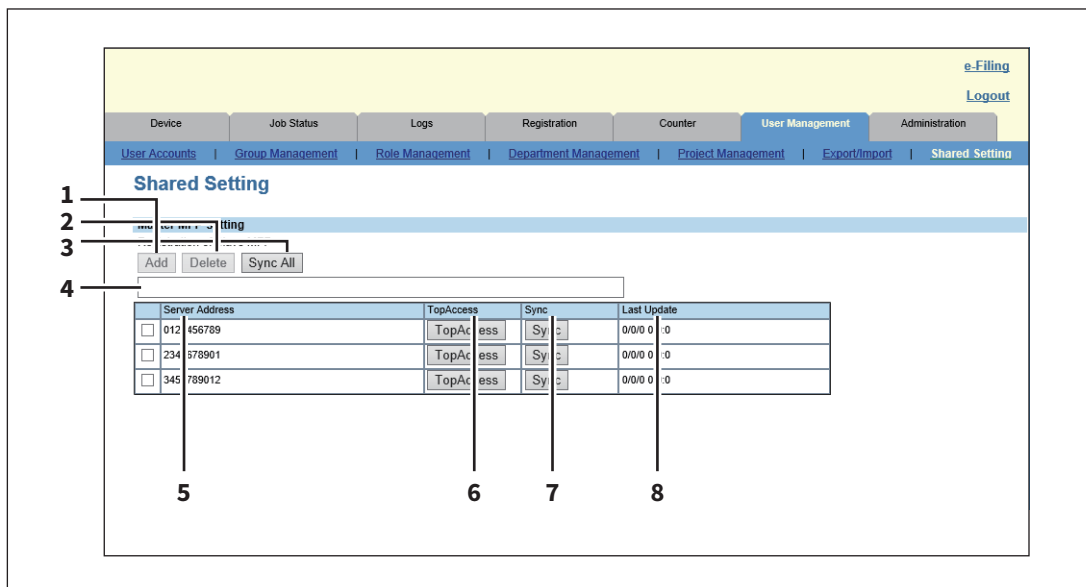

	Item name	Description
1	[Add] button	Adds a new secondary MFP. Enter the IP address or host name for the secondary MFP for the distribution destination in the input box below, and then click the [Add] button to register. You can register up to 10 MFPs.
2	[Delete] button	Deletes the selected MFP from the list of secondary MFPs.
3	[Sync All] button	Synchronizes the information on this printer with the user information for all registered secondary MFPs.
<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The synchronized information is the user information (User Name, Password, PIN Code, Card Information, Role Assignment, Group Assignment, PanelUI Language, PanelUI Keyboard Layout, Email Address, Home Directory, PanelUI Keyboard Display). Settings for Department Management and Project Management are not synchronized.</li> <li>• Only user information updated since the last sync is synchronized. When a user has been deleted, the user of the secondary MFP is also deleted during the synchronization.</li> <li>• During the initial synchronization, if there is user information in a secondary MFP that is not registered to the printer when the printer is a primary MFP, the user information for the secondary MFP is deleted.</li> <li>• The Port Number does not synchronize with the primary MFP or different secondary MFPs.</li> </ul> <p> P.278 “Off Device Customization Architecture settings”</p>		
4	Input box	Enter the IP address or host name when registering a secondary MFP.
5	Server Address	Displays a list of registered secondary MFPs.

---

	<b>Item name</b>	<b>Description</b>
<b>6</b>	[TopAccess] button	Starts TopAccess.
<b>7</b>	[Sync] button	Synchronizes the user information for relevant secondary MFPs with the information on the printer.
<b>8</b>	Last Update	Displays the previous update time.

## [Administration] Tab Page

This section describes administrative functions which allow you to configure devices and network, and manage users and groups from TopAccess access policy mode. This section is intended for persons who are in charge of this equipment. There is no need for general users to read.

<b>[Setup] Item List .....</b>	<b>165</b>
General settings .....	165
Network settings .....	178
Copier settings .....	226
Fax settings .....	230
Save as file settings .....	236
Email settings .....	247
InternetFax settings .....	252
Printer/e-Filing settings .....	256
Printer settings .....	257
Print Service settings .....	264
ICC Profile settings .....	272
Print Data Converter settings .....	274
Embedded Web Browser settings .....	275
Off Device Customization Architecture settings .....	278
Version .....	279
<b>[Setup] How to Set and How to Operate .....</b>	<b>280</b>
Setting up General settings .....	280
Setting up Network settings .....	282
SNMP V3 settings .....	283
Setting up Copier settings .....	286
Setting up Fax settings .....	287
Setting up Save as file settings .....	288
Setting up E-mail settings .....	290
Setting up InternetFax settings .....	291
Setting up Printer/e-Filing settings .....	292
Setting up Printer settings .....	293
Setting up Print Service settings .....	295
Setting up ICC Profile settings .....	296
Setting up Print Data Converter settings .....	300
Configuring the EWB function .....	301
Setting up Off Device Customization Architecture settings .....	302
Displaying version information .....	303
<b>[Security] Item List .....</b>	<b>305</b>
Authentication settings .....	305
Certificate management settings .....	316
Password Policy settings .....	320
Security Stamp Setting .....	323

<b>[Security] How to Set and How to Operate.....</b>	<b>324</b>
Installing a device certificate .....	324
Creating/Exporting a client certificate.....	330
Installing CA certificate.....	331
<b>[Maintenance] Item List .....</b>	<b>333</b>
Upload Software settings .....	333
Remove Software settings.....	335
Create Clone File settings .....	336
Install Clone File settings.....	338
Import settings.....	340
Export settings .....	342
Delete Files settings .....	344
Notification settings .....	344
Languages settings .....	348
User Paper Type.....	352
Data Backup .....	350
System Updates settings.....	353
Reboot settings .....	354
Panel View .....	354
<b>[Maintenance] How to Set and How to Operate .....</b>	<b>356</b>
About the maintenance functions .....	356
Uploading the client software.....	357
Removing the client software .....	359
Deleting the data from local folder .....	360
Setting up notification.....	361
Importing and exporting .....	363
Rebooting the equipment .....	368
<b>[Registration] ([Administration] tab) Item List.....</b>	<b>369</b>
Public Home.....	369
Public Theme Settings.....	373
Public Home Settings .....	374
Default Home .....	375
Default Home Settings.....	375
Simple Screen Settings.....	376
Image/Icon Management .....	377
Home Data List.....	378
Fax Received Forward and InternetFAX Received Forward settings.....	379
Meta Scan .....	390
<b>[Registration] ([Administration] tab) How to Set and How to Operate.....</b>	<b>395</b>
Registering Fax and Internet Fax received forward .....	395
<b>[Application] Item List .....</b>	<b>402</b>
Application List .....	402
Settings.....	404
<b>[License] Item List .....</b>	<b>406</b>
License List.....	406
Activate.....	407



## [Setup] Item List

---

- 📖 P.165 “General settings”
- 📖 P.178 “Network settings”
- 📖 P.226 “Copier settings”
- 📖 P.230 “Fax settings”
- 📖 P.236 “Save as file settings”
- 📖 P.247 “Email settings”
- 📖 P.252 “InternetFax settings”
- 📖 P.256 “Printer/e-Filing settings”
- 📖 P.257 “Printer settings”
- 📖 P.264 “Print Service settings”
- 📖 P.272 “ICC Profile settings”
- 📖 P.274 “Print Data Converter settings”
- 📖 P.275 “Embedded Web Browser settings”
- 📖 P.278 “Off Device Customization Architecture settings”
- 📖 P.279 “Version”

### Tip

Users who are granted administrator privileges in access policy mode can access the [Setup] menu from the [Administration] tab.

See the following pages for how to access it:

- 📖 P.15 “Access Policy Mode”

## ■ General settings

You can configure the general settings such as device information, energy save, date and time, and web general setting.

- 📖 P.166 “Setting up Device Information”
- 📖 P.167 “Setting up Functions”
- 📖 P.168 “Long File Name Setting”
- 📖 P.168 “Setting up e-Filing Notification Events”
- 📖 P.168 “Setting up Job Skip Control”
- 📖 P.169 “Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator”
- 📖 P.169 “Restriction of Destination Selection Method”
- 📖 P.169 “Setting up Confidentiality Setting”
- 📖 P.170 “Setting up Energy Save”
- 📖 P.172 “Shutdown Setting”
- 📖 P.173 “Setting up Date & Time”
- 📖 P.173 “Setting up SNTP Service”
- 📖 P.174 “Setting up Daylight Savings Time Setting”
- 📖 P.174 “Setting up WEB General Setting”
- 📖 P.175 “Home Setting”
- 📖 P.176 “Assignment for Programmable Button”
- 📖 P.176 “Panel Setting”
- 📖 P.177 “OCR Setting”
- 📖 P.177 “PDF/A Fileformat Setting”

### Tip

The [General] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

## ❑ Setting up Device Information

You can set the device information displayed in the [Device] tab page.


	Item name	Description
1	Name	Displays the device name of your equipment.
2	Copier Model	Displays the model name of your equipment.
3	Serial Number	Displays the serial number of your equipment.
4	MAC Address	Displays the MAC address of your equipment.
5	Save as File & e-Filing Space Available	Displays the available space for save as file and e-Filing on your equipment.
6	Fax Space Available	Displays the available space for fax transmission and reception for your equipment.
7	Data Cloning Function	Enable this item when migrating settings on your equipment to another device.
8	User Information Cloning	Enable this item when migrating the user information to another device. This item is available only when [Data Cloning Function] is enabled.
9	Administrator's Password Cloning	Enable this item when migrating the password of the default administrator to another device. This item is available only when [Data Cloning Function] is enabled.
10	USB Direct Print	Select whether the USB Direct Print function is enabled or disabled. USB Direct Print is available only for some models.
11	Location	Enter the installed location of your equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.
12	Geo Location	Enter the latitude and longitude in that order with a comma between them. Enter the precise values if required. Up to 64 characters can be entered including ! \$ % & ' ( ) * : + ; [ , - = ] . ~. (e.g. geo:00.00,90.00)
13	Contact Information	Enter the name of the person who is responsible for this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.
14	Service Phone Number	Enter the telephone number of the person who is responsible for servicing this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.

	Item name	Description
15	Administrative Message	Enter the message to the users about this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.

## □ Setting up Functions

### Tip


Some items may not be changeable depending on the installed options and their settings. For details, contact your service technician.

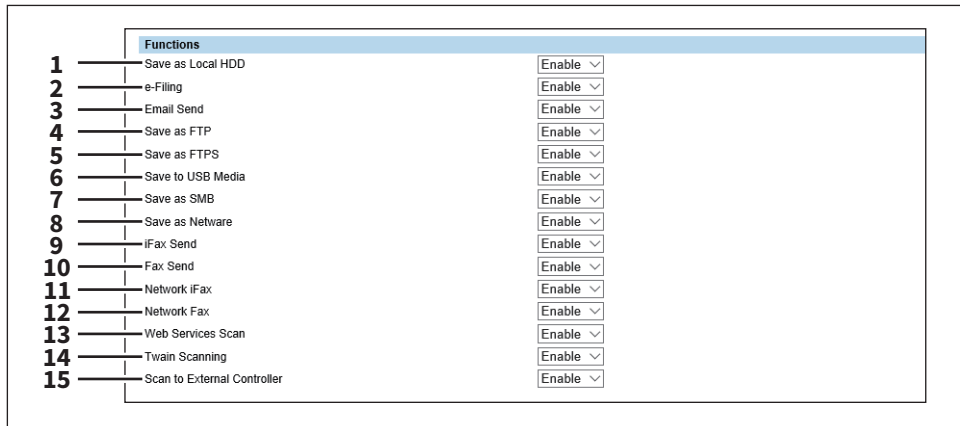

	Item name	Description
1	Save as Local HDD	Select whether to enable or disable the function to save on the internal storage device.
2	e-Filing	Select whether to enable or disable the e-Filing function.
3	Email Send	Select whether to enable or disable the function to transmit E-mails.
4	Save as FTP	Select whether to enable or disable the function to save using FTP.
5	Save as FTPS	Select whether to enable or disable the function to save using FTPS.
6	Save to USB Media	Select whether to enable or disable the use of USB media.
7	Save as SMB	Select whether to enable or disable the function to save using SMB.
8	Save as Netware	Select whether to enable or disable the function to save using NetWare.
9	iFax Send	Select whether to enable or disable the function to send Internet Faxes.
10	Fax Send	Select whether to enable or disable the function to send faxes.
11	Network iFax	Select whether to enable or disable the network iFax function.
12	Network Fax	Select whether to enable or disable the network fax function.
13	Web Services Scan	Select whether to enable or disable the web scanning service function.
14	Twain Scanning	Select whether to enable or disable the TWAIN scanning function.
15	Scan to External Controller	Select whether to enable or disable the function to scan to an external controller.

## ❑ Long File Name Setting


The touch panel of this equipment may not be able to fully display a file name when the name is long, for example, in private print jobs due to its restriction. You can specify how to display file names in Long File Name Setting.

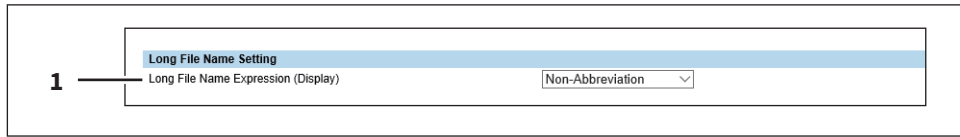

	Item name	Description
1	Long File Name Expression (Display)	<p>Select how to display file names.</p> <ul style="list-style-type: none"> <li>• <b>First Portion</b> — The file name is displayed from the beginning and “...” is used to indicate that part of the name is not displayed.</li> <li>• <b>Last Portion</b> — The file name is displayed in the way where the end of the name can be seen.</li> <li>• <b>First and Last Portions</b> — The file name is displayed in the way where the beginning and the end of the file name can be seen.</li> <li>• <b>Non-Abbreviation</b> — The file name is displayed from the beginning up to the number of displayable characters.</li> </ul>


## ❑ Setting up e-Filing Notification Events

You can set E-mail conditions for notifying you that the expiration date of data in e-Filing boxes is approaching.

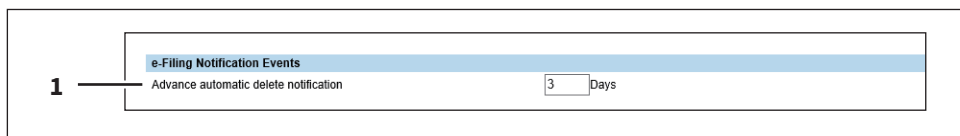

	Item name	Description
1	Advance automatic delete notification	Select when an E-mail notifying you of the approaching of the expiration date of data in e-Filing boxes is to be sent. You can select how many days before the expiration date from 0 (not notified) to 99 days.

## ❑ Setting up Job Skip Control

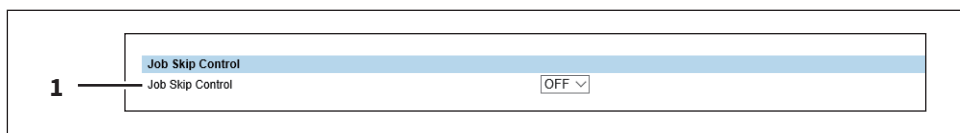

	Item name	Description
1	Job Skip Control	You can select whether to enable or disable the function to skip jobs which do not match the printing conditions.

## ❑ Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator

1 —  No Restriction  
2 —  Can be operated by Administrator / AddressbookRemoteOperator only

	Item name	Description
1	No Restriction	Allows all users to perform operations on the Address Book.
2	Can be operated by Administrator / AddressbookRemoteOperator only	Only users with Administrator access or an AddressbookRemoteOperator can perform operations on the Address Book.

## ❑ Restriction of Destination Selection Method

1 —  Prohibit Direct Entry  
2 —  Prohibit Use Of Local Address Book

	Item name	Description
1	Prohibit Direct Entry	Prohibits direct entry of the destination.
2	Prohibit Use Of Local Address Book	Prohibits selection of the destination from the address book.

## ❑ Setting up Confidentiality Setting

You can specify whether or not to hide the document name, user name, and destination with asterisks (\*) that are displayed on jobs.

1 — Target of Restriction: None  
2 — Document Name: Disable  
3 — User Name: Disable  
4 — TO: Disable  
5 — FROM: Disable  
6 — Agent: Disable



	Item name	Description
1	Target of Restriction	Specify whether or not to apply the confidentiality setting on the job. <ul style="list-style-type: none"> <li>• <b>None</b> — Does not apply the confidentiality setting.</li> <li>• <b>Only JobStatus</b> — Applies the confidentiality setting only to the job status.</li> <li>• <b>Only Log</b> — Applies the confidentiality setting only to the job log.</li> <li>• <b>JobStatus and Log</b> — Applies the confidentiality setting to both the job status and job log.</li> </ul>
2	Document Name	<ul style="list-style-type: none"> <li>• <b>Enable</b> — Displays 10 asterisks (*) instead of the document name.</li> <li>• <b>Disable</b> — Displays the document name.</li> </ul>

	Item name	Description
3	User Name	<ul style="list-style-type: none"> <li>• <b>Enable</b> — Displays 10 asterisks (*) instead of the user name.</li> <li>• <b>Disable</b> — Displays the user name.</li> </ul>
4	TO	<ul style="list-style-type: none"> <li>• <b>Enable</b> — Displays 10 asterisks (*) instead of the destination.</li> <li>• <b>Disable</b> — Displays the destination.</li> </ul>
5	FROM	<ul style="list-style-type: none"> <li>• <b>Enable</b> — Displays 10 asterisks (*) instead of the sender.</li> <li>• <b>Disable</b> — Displays the sender.</li> </ul>
6	Agent	<ul style="list-style-type: none"> <li>• <b>Enable</b> — Displays 10 asterisks (*) instead of the agent.</li> <li>• <b>Disable</b> — Displays the agent.</li> </ul>

## ❑ Setting up Energy Save

You can set Energy Save mode for your equipment.

For information on types of Energy Save mode and how to enter the mode, see the **Quick Start Guide**.

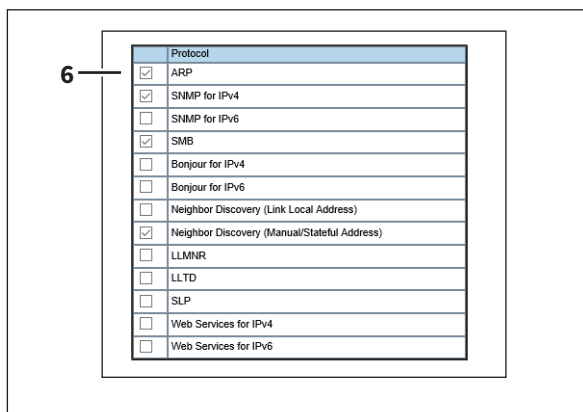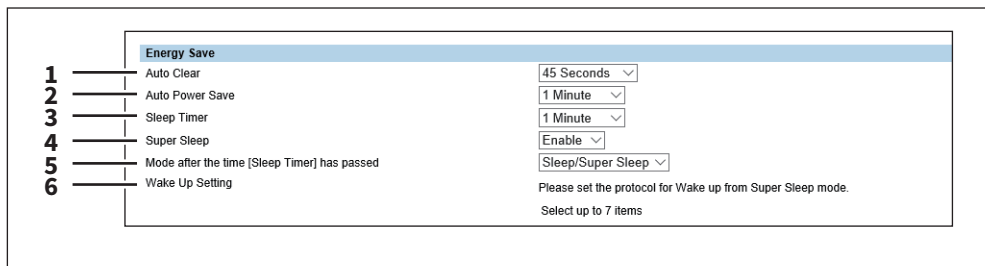





	Item name	Description
1	Auto Clear	Select how long your equipment can remain inactive before the touch panel automatically returns to the default display.
	<div style="background-color: #cccccc; padding: 2px;">Tip</div> <p>The changed value is applied to Auto Clear if its setting is altered. The history of Auto Clear is registered in the log.</p>	
2	Auto Power Save	Select how long your equipment can remain inactive before entering Automatic Energy Save mode.
3	Sleep Timer	Select how long your equipment can remain inactive before being entering Sleep mode.

	Item name	Description
4	Super Sleep * <sup>1</sup>	Select whether this equipment enters the Super Sleep mode when the specified period has elapsed in the Automatic Energy Save mode or when the [ENERGY SAVER] button on the control panel is pressed.
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• When the Wireless LAN/Bluetooth Module is installed in this equipment, or when the IPsec feature is enabled, you cannot change the Super Sleep Mode from [Disable].</li> <li>• If this equipment cannot be found on the network or cannot be connected via network while in Super Sleep, try searching again.</li> <li>• The equipment may not enter this mode at the set timing depending on its operational status.</li> </ul>	
5	Mode after the time [Sleep Timer] has passed * <sup>2</sup>	Select the mode to be entered after the time set in [Sleep Timer] has passed.
6	Wake Up Setting	Select the protocol to wake up your equipment from the Super Sleep mode (or the Sleep mode for the models with no Super Sleep mode function) by a network search. The number of available protocols varies depending on the model.
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The [Wake Up Setting] setting is enabled when sending an unspecified number of MFP data through “broadcasting” and sending multiple data with MFP specified through “multicasting”. The [Wake Up Setting] setting is disabled when using “unicast” which specifies an address and sends.</li> <li>• The wake up setting is enabled when the super sleep mode is enabled in the energy save setting.</li> <li>• The protocol selecting list of the Wake Up setting is made to select the desired protocols regardless of whether the selected protocol is enabled or disabled on each protocol setting. If the selected protocol is disabled in its protocol setting, however, the Wake Up setting is disabled too and therefore this equipment will not be recovered from the Super Sleep mode or the Sleep mode (for models in which no Super Sleep mode is installed).</li> <li>• When no response is returned from this equipment after you access the network even if a protocol selected on this setting is used, retry the access.</li> </ul> <p><b>Tip</b></p> <p>For “unicast” communication which carries out transmission by specifying a certain address in the following protocols, the equipment can return from the Super Sleep mode (or the Sleep mode for the models with no Super Sleep mode function) even if the Wake Up setting is not applied. IPP, FTP, HTTP, SMB, SMTP, SNMP, RAW9100, LPD, WebService</p>	

\*<sup>1</sup> This function is not available for some models.

\*<sup>2</sup> This function is available only for some monochromatic models.

The following network settings are required for this equipment to enter the Super Sleep mode.


- Select other than [Use Stateless Address] in the IPv6 setting.  
 P.182 “IPv6”
- Select [Disable] for [Enable IPX/SPX] in the IPX/SPX setting.  
 P.223 “Setting up IPX/SPX”
- Select [Disable] for [Enable Apple Talk] in the AppleTalk setting.  
 P.224 “Setting up AppleTalk”
- Specify one of the following in [POP3 Network Service].
  - [Disable] for [Enable POP3 Client].
  - No entry for [POP3 Server Address].
  - No entry for [Account Name].
  - 0 for [Scan Rate]. P.215 “Setting up POP3 Client”
- Disable IEEE 802.1X authentication.  
 For the IEEE 802.1X authentication method under the wired LAN environment, refer to the following chapter in the **MFP Management Guide**.

See the following for the network access setting in super sleep mode for your equipment.

- **ARP**  
Select this to enable address resolution when this equipment is used under IPv4 environment.
- **SNMP for IPv4**  
Select this to search this equipment over the network with SNMP protocol when Client Utilities is used under IPv4 environment.
- **SNMP for IPv6**  
Select this to search this equipment over the network with SNMP protocol when Client Utilities is used under IPv6 environment.
- **SMB**  
Select this to enable domain name resolution when NetBIOS name is used under IPv4 environment.
- **Bonjour for IPv4**  
Select this to search this equipment over the network with the Bonjour protocol when it is used under IPv4 environment.
- **Bonjour for IPv6**  
Select this to search this equipment over the network with the Bonjour protocol when it is used under IPv6 environment.
- **Neighbor Discovery (Link Local Address)**  
Select this to enable address resolution when this equipment is used under IPv6 environment.
- **Neighbor Discovery (Manual/Stateful Address)**  
Select this to enable address resolution when this equipment is used under IPv6 environment.
- **LLMNR**  
Select this to enable domain name resolution when NetBIOS name is used.
- **LLTD**  
Select this to search this equipment over the network with Nmap display when Network Mapper is used.
- **SLP**  
Select this to enable service discovery when SLP is used.
- **Web Services for IPv4**  
Select this to search this equipment over the network with WSDiscovery under IPv4 environment.
- **Web Services for IPv6**  
Select this to search this equipment over the network with WSDiscovery under IPv6 environment.

### ❑ Shutdown Setting

Specify whether to display a confirmation screen when shutting down the equipment.

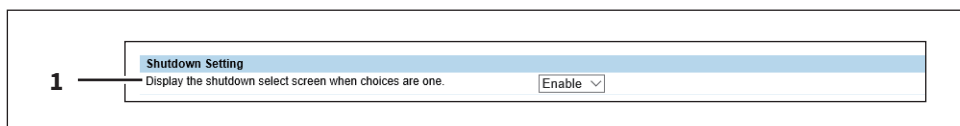

	Item name	Description
1	Display the shutdown select screen when choices are one.	Specify whether or not to display the confirmation screen.



## ❑ Setting up Date & Time

You can set the date, time, time zone, and date format.

Tip

[Date & Time] settings are not available if the SNTP function is enabled.

	Item name	Description
1	Year/Month/Date/Time	Select the year and month in designated boxes. Also, enter the date and time in designated boxes.
2	Time Zone	Select the time zone where this equipment is located.
3	Date Format	Select the date format.

## ❑ Setting up SNTP Service

In SNTP Service, you can specify the SNTP server to refresh the time settings of this equipment using SNTP service.

	Item name	Description
1	Enable SNTP	Select whether to enable or disable SNTP (Simple Network Time Protocol). When this is enabled, the time settings of this equipment can be adjusted using the SNTP service.
	Tip	[Date & Time] settings are not available if enabled.
2	Primary SNTP Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the Primary SNTP Server Address when [Enable SNTP] is enabled.
3	Secondary SNTP Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the Secondary SNTP Server Address when [Enable SNTP] is enabled as required.
	Tip	When the [Obtain a SNTP Server Address automatically] option is enabled in the TCP/IP settings, the SNTP server address can be obtained using the DHCP server. P.179 “Basic Setting”
4	Scan Rate	Enter how often this equipment should access the SNTP server to check the time.
5	Port Number	Enter the port number for the SNTP service. Generally “123” is used.
6	NTP Authentication	Select whether to enable or disable NTP authentication.

## ❑ Setting up Daylight Savings Time Setting

Make the required settings for daylight savings time.

	Item name	Description
1	Daylight Savings Time	Select [Enable] to shift the clock to the daylight savings time. [Disable] is set as the default.
2	Offset	Select the desired offset (time difference) from the local standard time. You can select from between -2 and +2 hours, excluding 0 hour, in 30-minute increments. [+1:00] is set as the default.
3	Dates	Select the applicable period for the daylight savings time. <ul style="list-style-type: none"> <li>• <b>Start</b> — Select or enter the start date and time of daylight savings time.</li> <li>• <b>End</b> — Select or enter the end date and time of daylight savings time.</li> </ul>

### Tip

- If you change the settings during the daylight saving time period, the changes will be reflected to the equipment's clock. If you select [Disable] during the applicable period, be sure to confirm that the correct time is displayed since the equipment's clock will shift to the current time. When the SNTP Service setting is enabled and if the SNTP server is synchronized, the correct time will be displayed.  
[P.173 "Setting up Date & Time"](#)
- If the equipment is turned off at the start or end date and time, the equipment will shift the clock the next time it is turned on.
- After the clock shifts, the daylight saving time will also apply to the weekly timers.

### Note

Select the Start and the End dates and times based on the time set for the equipment.

[P.173 "Setting up Date & Time"](#)

## ❑ Setting up WEB General Setting

You can set the session timer for TopAccess.

	Item name	Description
1	Session Timer	Enter how long you want this equipment to preserve the session data of TopAccess. You can enter any integer between 5 to 999. This setting also applies to the session data of the e-Filing web utility. "10" is set as the default.

### Tip

- When logged in the access policy mode, you will be automatically logged out if the session timer elapses without any operation being performed.
- Once a logging-in user operates TopAccess, the changed value is applied to Session Timer if its setting is altered.

## ❑ Home Setting

You can set the default screen displayed by pressing the [Home] button on the control panel when user authentication is enabled. The settings vary, depending on the [Sync Setting] setting.

**Tip**

For the procedure for home data synchronization, refer to the following page.

📖 P.433 “Setting Home Data Synchronization”

### When [Disable] is selected from [Sync Setting]

The screenshot shows the 'Home Setting' configuration page. On the left, three numbered callouts point to: 1. Public Home, 2. Default Home Screen Setting, and 3. Sync Setting. On the right, the Sync Setting dropdown is set to 'Disable'. The Default Home Screen Setting dropdown is set to 'User'.

### When [Use Network Server for Sync] is selected from [Sync Setting]

The screenshot shows the 'Home Setting' configuration page with 'Use Network Server for Sync' selected in the Sync Setting dropdown. On the left, callouts 1-8 point to: 1. Public Home, 2. Default Home Screen Setting, 3. Sync Setting, 4. Use Network Server for Sync, 5. Server Name, 6. Port Number, 7. User Name, and 8. Password. Callout 13 points to the 'Delete All Shared Data' button. On the right, the Sync Setting dropdown is set to 'Use Network Server for Sync'. The Port Number field contains '21'. The 'Enable SSL/TLS' dropdown is set to 'Disable'.

### When [Use MFP for Sync] is selected from [Sync Setting]


The screenshot shows the 'Home Setting' configuration page with 'Use MFP for Sync' selected in the Sync Setting dropdown. On the left, callouts 1-13 point to: 1. Public Home, 2. Default Home Screen Setting, 3. Sync Setting, 9. Use MFP for Sync, 10. Assume this MFP is the Primary Server, 11. Server Name, 12. Port Number, 13. Enable SSL/TLS, and 13. Delete All Shared Data. On the right, the Sync Setting dropdown is set to 'Use MFP for Sync'. The Port Number field contains '21'. The 'Enable SSL/TLS' dropdown is set to 'Disable'.

	Item name	Description
1	Public Home	Select whether to enable or disable Public Home.
2	Default Home Screen Setting	Select the Home to be displayed as the default screen when you press the [Home] button. <b>User:</b> Select this to the User Home screen. <b>Public:</b> Select this to display the Public Home screen.
3	Sync Setting	Specify whether or not to synchronize the HOME screen with the network server or other MFPs. <ul style="list-style-type: none"> <li>• <b>Disable:</b> Disable the Home sync function.</li> <li>• <b>Use Network Server for Sync:</b> Select this to use the network server for synchronization.</li> <li>• <b>Use MFP for Sync:</b> Select this to use MFP for synchronization.</li> </ul>

	Item name	Description
4	Server Name	Enter the name of the network server.
5	Port Number	Enter the port number of the network server.
6	User Name	Enter the name of the user who accesses the network server.
7	Password	Enter the password of the user who accesses the network server.
8	Enable SSL/TLS	Select whether SSL/TLS is enabled or disabled.
9	Assume this MFP is the Primary Server	Select this check box to synchronize this MFP as the primary server. When you clear this check box, another MFP can synchronize as the primary server.
	<b>Note</b>	If the FTP server is disabled, you cannot set this MFP as the primary server. P.208 "Setting up FTP Server"
10	Server Name	Enter the name of the primary server when you set another MFP other than this MFP as the primary server.
11	Port Number	Enter the port number of the primary server when you set another MFP other than this MFP as the primary server.
12	Enable SSL/TLS	Select whether SSL/TLS is enabled or disabled when you set another MFP other than this MFP as the primary server.
13	Delete All Shared Data	Delete all the shared data stored in the FTP server.

## Assignment for Programmable Button


You can assign functions to Programmable Button 1 and Programmable Button 2.

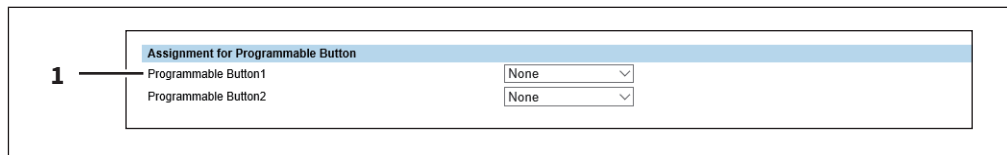

	Item name	Description
1	Programmable Button 1/ Programmable Button 2	Select the function to assign.

## Panel Setting

You can set the default screen on the control panel and the appearance order in the job lists.

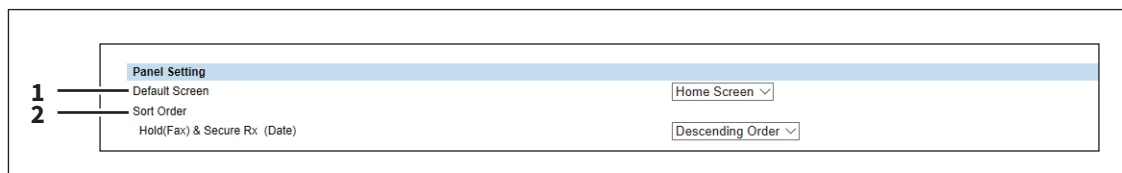

	Item name	Description
1	Default Screen	Specify the functions to be displayed on the default screen after this equipment starts up. Select [Embedded Application] and then press [Assignment] to specify the applications to be set on the default screen.
2	Sort Order	Specify the appearance order of hold (fax) and secure Rx jobs in the job list. <b>Ascending Order</b> — Shows the jobs in the ascending order by day. <b>Descending Order</b> — Shows the jobs in the descending order by day.

## ❑ OCR Setting

You can specify the OCR function.

The screenshot shows the 'OCR Setting' dialog box with the following fields and options:

- 1** Language: 1st [English] 2nd [None]
- 2** Auto Rotation: [Enable]
- 3** XLSX Sheet Composition:
  - 1 Page Becomes 1 Sheet
  - Multi Pages Become 1 Sheet

	Item name	Description
<b>1</b>	Language	Select the prioritized primary and secondary languages.
<b>2</b>	Auto Rotation	Specify whether or not to automatically rotate.
<b>3</b>	XLSX Sheet Composition	Specify how to create the XLSX sheet. <ul style="list-style-type: none"> <li>• <b>1 Page Becomes 1 Sheet</b> — Makes 1 page 1 sheet.</li> <li>• <b>Multi Pages Become 1 Sheet</b> — Combines multiple pages into 1 sheet.</li> </ul>

## ❑ PDF/A Fileformat Setting

You can set the default level of the PDF/A file format.

The screenshot shows the 'PDF/A Fileformat Setting' dialog box with the following field and note:

- 1** Default Conformance Level: [PDF/A-1b]
- \*If OCR is enabled, files not conforming to PDF/A-2b standard may be saved depending on the language selected in OCR setting.

	Item name	Description
<b>1</b>	Default Conformance Level	Select the default conformance level of PDF/A. <ul style="list-style-type: none"> <li>• <b>PDF/A-1b</b> — Selects PDF/A-1b as a default setting.</li> <li>• <b>PDF/A-2b</b> — Selects PDF/A-2b as a default setting.</li> </ul>






















### Note

When you save searchable PDF/A-2b files with the enabled OCR function, they might not conform to the PDF/A-2b standard, depending on several OCR languages that you select. It is recommended that you select PDF/A-1b to save searchable PDF/A files with the OCR function.

---

## ■ Network settings



You can configure the network settings such as TCP/IP, Filtering, IPX/SPX, AppleTalk, Bonjour, LDAP Session, SMB Session, NetWare Session, HTTP Network Service, SMTP Client, SMTP Server, POP3 Network Service, Sntp Service, FTP Client, FTP Server, SNMP Network Service, and Security Service.

-  P.179 “Basic Setting”
-  P.187 “Setting up Filtering”
-  P.188 “Setting up IP Security”
-  P.200 “Setting up SMB”
-  P.204 “Setting up HTTP”
-  P.205 “Setting up WSD”
-  P.207 “Setting up SMTP Server”
-  P.208 “Setting up FTP Server”
-  P.209 “LDAP Client settings”
-  P.213 “Setting up SMTP Client”
-  P.215 “Setting up POP3 Client”
-  P.217 “Setting up FTP Client”
-  P.217 “Setting up Bonjour”
-  P.218 “Setting up SNMP”
-  P.221 “Setting up SLP”
-  P.222 “Setting up LLTD”
-  P.222 “Syslog Setting”
-  P.223 “Setting up IPX/SPX”
-  P.224 “Setting up NetWare”
-  P.224 “Setting up AppleTalk”
-  P.225 “VNC Setting”

### Tip

The [Network] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

-  P.15 “Access Policy Mode”
-  P.165 “[Setup] Item List”

## Basic Setting

You can set TCP/IP, DNS, and DDNS in the Basic Setting. The TCP/IP must be configured to enable TopAccess, SMB printing, Raw TCP or LPR printing, IPP printing, Scan to Email, and Internet Fax.

### General Setting

The screenshot shows a 'General Setting' window with three items:

- 1** Ethernet Speed Duplex Mode: A dropdown menu showing 'AUTO'.
- 2** Host Name: A text input field containing 'MFP11532948'.
- 3** IP Conflict Detect: A dropdown menu showing 'Enable'.

	Item name	Description
<b>1</b>	Ethernet Speed Duplex Mode	Select the ethernet speed. [AUTO] is set as the default.
	<b>Note</b>	<ul style="list-style-type: none"> <li>When you select a specific ethernet speed, you must select the same one as set in the connected network. If you do not know the ethernet speed that must be used, select [AUTO].</li> <li>If the network is not stable, power OFF the equipment then ON.</li> </ul>
<b>2</b>	Host Name	Enter the host name of your equipment. You can enter up to 63 alphanumerical characters including “-” (hyphens). You cannot use a “-” (hyphen) as the first and last character. The MFP name is set as the default.
<b>3</b>	IP Conflict Detect	Specify whether or not to detect IP address conflicts. Select [Enable] to display a message on the touch panel when an IP address conflict is detected. [Enable] is set as the default.





## IPv4

The screenshot shows the IPv4 configuration window with the following settings:

- 1 Address Mode: Static IP
- 2 Obtain a Domain Name automatically: Enable
- 3 Obtain a Domain Server Address automatically: Enable
- 4 Obtain a WINS Server Address automatically: Enable
- 5 Obtain an SMTP Server Address automatically: Disable
- 6 Obtain a POP3 Server Address automatically: Disable
- 7 Obtain an SNTP Server Address automatically: Disable
- 8 IP Address: 192.168.0.12
- 9 Subnet Mask: 255.255.255.0
- 10 Default Gateway: 192.168.0.1

	Item name	Description
1	Address Mode	<p>Select how to set the IP address.</p> <ul style="list-style-type: none"> <li>• <b>Static IP</b> — Select this to assign the static IP address manually. When this is selected, enter the static IP address in the [IP Address] box.</li> <li>• <b>Dynamic</b> — Select this to assign the IP address using the DHCP with Auto-IP addressing enabled. The IP address, subnet mask, gateway address, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address can be automatically acquired from the DHCP server if the network supports DHCP. However, if the network does not support DHCP, use the AutoIP function to assign an IP address.</li> <li>• <b>No AutoIP</b> — Select this to assign the IP address using the DHCP with Auto-IP addressing disabled. The IP address, subnet mask, gateway address, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address can be automatically acquired from the DHCP server if the network supports DHCP. If the communication with the DHCP cannot be established, the previous IP address is used.</li> </ul>
2	Obtain a Domain Name automatically	<p>Select [Enable] when you want to obtain a domain name automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default.</p> <p><b>Note</b></p> <p>When the DHCP server does not have a domain name, the data are left blank in the domain name even if you set the correct domain name manually in the DDNS Session. In that case, select [Disable] here and set the correct domain name in the DDNS Session.</p> <p> P.184 “DDNS”</p>
3	Obtain a Domain Server Address automatically	<p>Select [Enable] when you want to obtain a domain server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default.</p> <p><b>Note</b></p> <p>When the DHCP server does not have a primary and secondary DNS server addresses, the data are left blank in the primary and secondary DNS server addresses, even if you set the correct primary and secondary DNS server addresses manually in the DNS Session. In that case, select [Disable] here and set the correct primary and secondary DNS server address in the DNS Session.</p> <p> P.184 “DNS”</p>



	Item name	Description
4	Obtain a WINS Server Address automatically	Select [Enable] when you want to obtain a primary or secondary WINS server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default.
	<p><b>Note</b></p> <p>When the DHCP server does not have a primary and secondary WINS server addresses, the data are left blank in the primary and secondary WINS server addresses, even if you set the correct primary and secondary WINS server addresses manually in the SMB Session. In that case, select [Disable] here and set the correct primary and secondary WINS server address in the SMB Session.</p> <p> P.200 "Setting up SMB"</p>	
5	Obtain an SMTP Server Address automatically	Select [Enable] when you want to obtain a SMTP server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	<p><b>Note</b></p> <p>When the DHCP server does not have a SMTP server address, the data are left blank in the SMTP server address even if you set the correct SMTP server address manually in the SMTP Client. In that case, select [Disable] here and set the correct SMTP server address in the SMTP Client.</p> <p> P.213 "Setting up SMTP Client"</p>	
6	Obtain a POP3 Server Address automatically	Select [Enable] when you want to obtain a POP3 server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	<p><b>Note</b></p> <p>When the DHCP server does not have a POP3 server address, the data are left blank in the POP3 server address even if you set the correct POP3 server address manually in the POP3 Network Service. In that case, select [Disable] here and set the correct POP3 server address in the POP3 Network Service.</p> <p> P.215 "Setting up POP3 Client"</p>	
7	Obtain an SNTP Server Address automatically	Select [Enable] when you want to obtain a SNTP server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	<p><b>Note</b></p> <p>When the DHCP server does not have a SNTP server address, the data are left blank in the SNTP server address even if you set the correct SNTP server address manually in the SNTP Network Service. In that case, select [Disable] here and set the correct SNTP server address in the SNTP Network Service.</p> <p> P.173 "Setting up SNTP Service"</p>	
8	IP Address	Enter the static IP address for your equipment when [Static IP] is selected in the [Address Mode] box. Specify within the range from 1 to 126 and 128 to 223 for the 1st octet, 0 to 255 for the 2nd to 4th octet.
9	Subnet Mask	Enter the subnet mask if required when [Static IP] is selected in the [Address Mode] box. Specify within the range from 0 0 0 0 to 255 255 255 255. However, you cannot set 0.0.0.0 and 255.255.255.255.
10	Default Gateway	Enter the gateway address if required when [Static IP] is selected in the [Address Mode] box. Specify within the range from 0 0 0 0 to 255 255 255 255.

## IPv6

The screenshot shows the IPv6 configuration window. Callout 1 points to the 'Enable IPv6' dropdown menu, which is set to 'Enable'. Callout 2 points to the 'Link Local Address' field, which contains the value 'fe80::280:91ff:feaf:fa94'. Callout 3 points to the 'Manual' radio button, which is selected. Callout 4 points to the 'Use Stateless Address' radio button, which is unselected. Callout 5 points to the 'Use Stateful Address' radio button, which is selected. The interface includes fields for 'IP Address', 'Prefix Length', and 'Gateway' under the 'Manual' mode, and a table for 'No. IP Address' and 'Prefix Length' under the 'Stateless' mode. There are also checkboxes for 'Use DHCPv6 Server for options' and 'Use DHCPv6 Server for IP Address (M flag)', and a dropdown for 'Update Method' set to 'Server'.

	Item name	Description
1	Enable IPv6	Select whether the IPv6 protocol is enabled or disabled. [Enable] is set as the default.
2	Link Local Address	The automatically generated unique IP Address used for the IPv6 is displayed.
3	Manual	You assign the IPv6 address, prefix and default gateway manually. In this mode, you can assign one IPv6 address to this equipment. <b>IP Address</b> — Assign the IPv6 address for this equipment. Specify within the range from 1:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff. <b>Prefix Length</b> — Assign the prefix length for the IPv6 address. Specify within the range from 0 to 128. “0” is set as the default. <b>Gateway</b> — Assign the default gateway address. Specify within the range from 1:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff. <b>Use DHCPv6 Server for options</b> — Select this check box to use the optional information (IPv6 address for the DNS server, etc.) which is issued from the DHCPv6 server.
	Tip	<ul style="list-style-type: none"> <li>• When [Manual] is selected, a stateful address cannot be set.</li> <li>• If the selected IPv6 address is already assigned, DAD (Duplicate Address Detection) detects it and notifies you on the touch panel of this equipment.</li> </ul>

	Item name	Description
4	Use Stateless Address	<p>Use the IPv6 addresses (Stateless addresses) issued from routers.</p> <ul style="list-style-type: none"> <li>• <b>Use DHCPv6 Server for IP Address(M flag)</b> — Use the IPv6 address issued from the DHCPv6 server in the stateless network environment.</li> <li>• <b>Use DHCPv6 Server for options(O flag)</b> — Use the optional information (IPv6 address for the DNS server, etc.) issued from the DHCPv6 server in the stateless network environment.</li> <li>• <b>FQDN Option</b> — The FQDN option is available if <b>Use DHCPv6 Server for IP Address</b> is selected. Select [Server] or [Client] for [Update Method] if using the FQDN option. [Server] is set as the default.</li> <li>• <b>IP Address</b> — Stateless Addresses obtained from routers are displayed. Up to 7 IPv6 addresses can be retained.</li> </ul>
	<p>Tip</p> <p>When this equipment receives a router advertisement (RA) from a router, of which M flag configuration is “0”, the DHCPv6 function is disabled. If you change a router advertisement (RA) M flag configuration from “0” to “1”, it is necessary to reboot this equipment to enable the DHCPv6 function.</p>	
5	Use Stateful Address	<p>Use the Stateful address issued from DHCPv6 server.</p> <ul style="list-style-type: none"> <li>• <b>Use DHCPv6 Server for IP Address</b> — Select whether or not the IPv6 address which is issued from the DHCPv6 server is used for this equipment.</li> <li>• <b>Use DHCPv6 Server for options</b> — Select whether or not the optional information (IPv6 address for the DNS server, etc.) except the IPv6 address for this equipment, which is issued from the DHCPv6 server is used on this equipment.</li> <li>• <b>FQDN Option</b> — The FQDN option is available if <b>Use DHCPv6 Server for IP Address</b> is selected. Select [Server] or [Client] for [Update Method] if using the FQDN option. [Server] is set as the default.</li> <li>• <b>IP Address</b> — A stateful address, Prefix Length and Gateway obtained from DHCPv6 Server are displayed.</li> </ul>

## DNS

In DNS Session, you can specify the DNS server to enable the FQDN (Fully Qualified Domain Name) rather than the IP address on specifying each server address such as SMTP server, POP3 server, and LDAP server.

### Tip

When the DNS service is enabled and the DNS server supports the dynamic DNS service, Set the DDNS Session as well.  
[P.184 “DDNS”](#)

	Item name	Description
1	Enable DNS	Select whether the DNS server is enabled or not. [Enable] is set as the default.
2	Primary DNS Server Address	Specify the IP address of the primary DNS server when the DNS service is enabled. Specify within the range from 0 0 0 0 to 255 255 255 255.
3	Secondary DNS Server Address	Specify the IP address of the secondary DNS server when the DNS service is enabled, as you require. Specify within the range from 0 0 0 0 to 255 255 255 255.
4	Primary DNS Server Address(IPv6)	Specify the IP address of the primary DNS server when the DNS service is enabled in IPv6. Specify within the range from 1:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff.
5	Secondary DNS Server Address(IPv6)	Specify the IP address of the secondary DNS server when the DNS service is enabled in IPv6, as required. Specify within the range from 1:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff.

### Tip

When the [Obtain a Domain Server Address automatically] option is enabled in the TCP/IP settings, the server address of the primary and secondary DNS server addresses can be obtained using the DHCP server.


[P.179 “Basic Setting”](#)

## DDNS

In DDNS Session, you can enable the Dynamic DNS service if the DNS server supports the dynamic DNS.


### Note

- When using the security in DDNS, if the difference between the time set in the server, in which Windows DNS record is to be updated, and the one set in the equipment exceeds the time stated in the account policy of the server, the DNS update using the security will fail. Check the time set for the DNS server and match it with the one set for the equipment.
- When using DDNS and the IP address is assigned using DHCP, enable “006 DNS Servers” and “015 DNS Domain Name” in the DHCP Server’s Scope Options or Server Options.


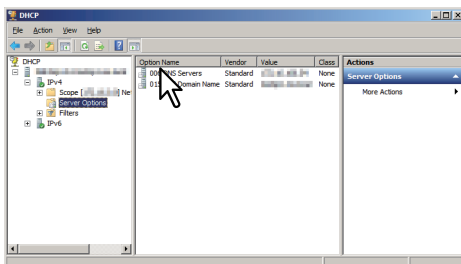


- When using DDNS, make sure the “Dynamic updates” option is set to “Nonsecure and secure” (for Windows Server 2008) for the Forward Lookup Zones and Reversed Lookup Zones.  
If the setting of Windows Server 2008 is other than “Nonsecure and secure” for this DDNS function, you need to set the correct primary login name and primary password to update the DNS server by DDNS.  
If you do not want to use DDNS such as managed by a primary and secondary login name and password, you need to add the equipment’s host name manually in the Forward and Reversed Lookup Zone.

Forward Lookup Zones  
(Windows 2008 Server)

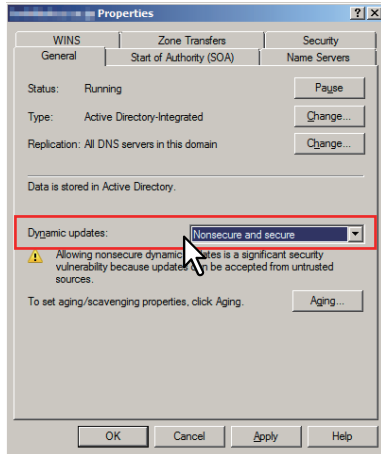

Reversed Lookup Zones  
(Windows 2008 Server)

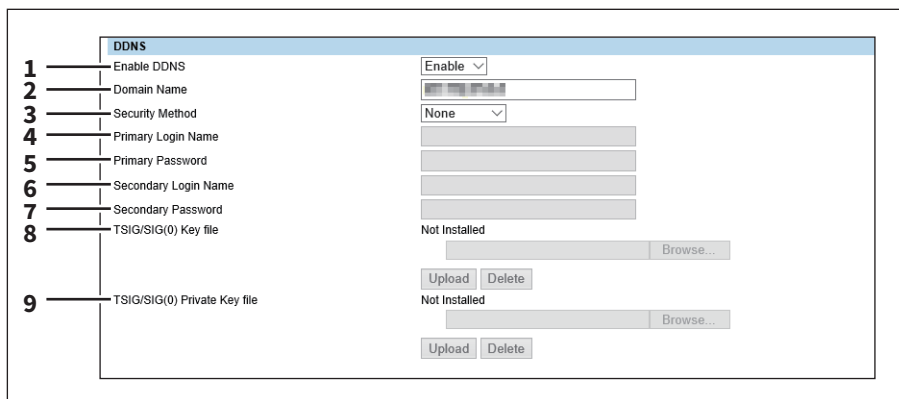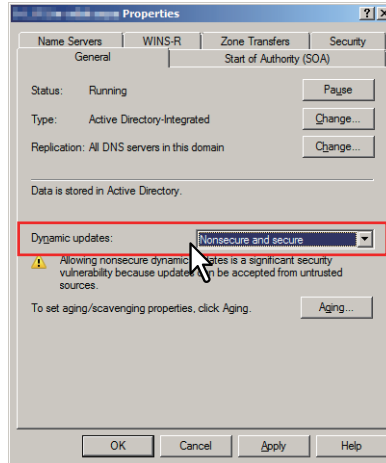

	Item name	Description
1	Enable DDNS	Select whether the dynamic DNS service is enabled or disabled. [Enable] is set as the default.
2	Domain Name	Enter the domain name that will be added to the DNS server using DDNS. You can enter up to 96 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
	<div style="border: 1px solid gray; padding: 2px; width: fit-content;">Tip</div> <p>When the [Obtain a Domain Name automatically] option is enabled in the TCP/IP settings, the domain name can be obtained using the DHCP server.</p> <p> P.179 “Basic Setting”</p>	

	Item name	Description
3	Security Method	<p>Enter the security method.</p> <ul style="list-style-type: none"> <li>• <b>None</b> Select this to perform a non-secure DDNS update.</li> <li>• <b>GSS-TSIG</b> Select this to perform a secure DDNS session using GSS-TSIG. You must set a log-in name and a password. If both are not set, the secure DDNS session will not be available.</li> <li>• <b>TSIG</b> Select this to perform a secure DDNS session using TSIG. To select this, you must upload a key file and a private key file. If any of them is not uploaded, the security setting will be disabled.</li> <li>• <b>SIG(0)</b> Select this to perform a secure DDNS session using SIG(0). To select this, you must upload a key file and a private key file. If any of them is not uploaded, the security setting will be disabled.</li> </ul>
4	Primary Login Name	Enter the primary login name if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
5	Primary Password	Enter the primary password if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
6	Secondary Login Name	Enter the secondary login name if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
7	Secondary Password	Enter the secondary password if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
8	TSIG/SIG(0) Key file	Use this setting to upload or delete a key file to be used for TSIG and SIG(0). To upload it, click [Browse..] and specify a private key file to be uploaded, and then click [Upload]. To delete it, click [Delete].
9	TSIG/SIG(0) Private Key file	Use this setting to upload or delete a private key file to be used for TSIG and SIG(0). To upload it, click [Browse..] and specify a private key file to be uploaded, and then click [Upload]. To delete it, click [Delete].

## LLMNR

	Item name	Description
1	LLMNR	Select whether LLMNR is enabled or disabled. [Enable] is set as the default.

## ❑ Setting up Filtering

You can set filtering in order to restrict access from client computers to this equipment. Filtering can be specified with an IP address or a MAC address.

### Note

MAC address filtering is given priority over IP address filtering.

The screenshot shows the 'Filtering' configuration interface. It includes a 'Save' and 'Cancel' button at the top. Below are several sections with numbered callouts (1-7) pointing to specific elements:


- 1:** 'Enable IP Filtering' dropdown menu, currently set to 'Disable'.
- 2:** 'IP Filtering Rule' dropdown menu, currently set to 'Permit'.
- 3:** 'IP Filtering' table with columns for Filter (1-10), Start Address, End Address, and Port Number. A note above the table states: '\*When Port Number is empty, All ports are the target of filter.' The table contains 10 rows, each with '0' in the Start and End Address fields and an empty Port Number field.
- 4:** 'Apply the ICMP Filter' dropdown menu, currently set to 'Disable'.
- 5:** 'Enable MAC Address Filtering' dropdown menu, currently set to 'Disable'.
- 6:** 'MAC Address Filtering Rule' dropdown menu, currently set to 'Permit'.
- 7:** 'MAC Address Filtering' table with columns for Filter (1-10) and MAC Address. The table contains 10 rows, each with an empty MAC Address field.

	Item name	Description
1	Enable IP Filtering	Select [Enable] for IP address filtering. When [Enable] is selected, access from devices on a network to which the IP address (specified in [IP Filtering]) is set is restricted under conditions set in [IP Filtering Rule]. [Disable] is set as the default.
	<b>Note</b>	IP filtering is valid only in a network environment implemented with IPv4. It is not available in an IPv6 network environment. If you need to use IP address filtering under IPv6 environment, select MAC address filtering.
2	IP Filtering Rule	Select IP address filtering rules. <ul style="list-style-type: none"> <li>• <b>Permit</b> — Select this to permit access from devices on a network to which the IP address (specified in [IP Filtering]) is set.</li> <li>• <b>Deny</b> — Select this to deny access from devices to which the specified IP address is set.</li> </ul>
3	IP Filtering	Enter the start IP address, end IP address, and port number of the clients to apply IP filtering. Up to 10 addresses can be specified.
	<b>Note</b>	Only IPv4 addresses are available. An IPv6 address cannot be specified.
4	Apply the ICMP Filter	Specify [Enable] if you want to filter the Internet Control Message Protocol. The default is [Disable].

	Item name	Description
5	Enable MAC Address Filtering	Select [Enable] for MAC address filtering. When [Enable] is selected, access from devices on a network to which the MAC address (specified in [MAC Address Filtering]) is set is restricted under conditions set in [MAC Address Filtering Rule]. [Disable] is set as the default.
6	MAC Address Filtering Rule	Select MAC address filtering rules. <ul style="list-style-type: none"> <li>• <b>Permit</b> — Select this to permit access from devices on a network to which the MAC address (specified in [MAC Address Filtering]) is set.</li> <li>• <b>Deny</b> — Select this to deny access from devices to which the specified MAC address is set.</li> </ul>
7	MAC Address Filtering	Enter the MAC address of a target client computer for MAC address filtering. Up to 10 addresses can be specified.





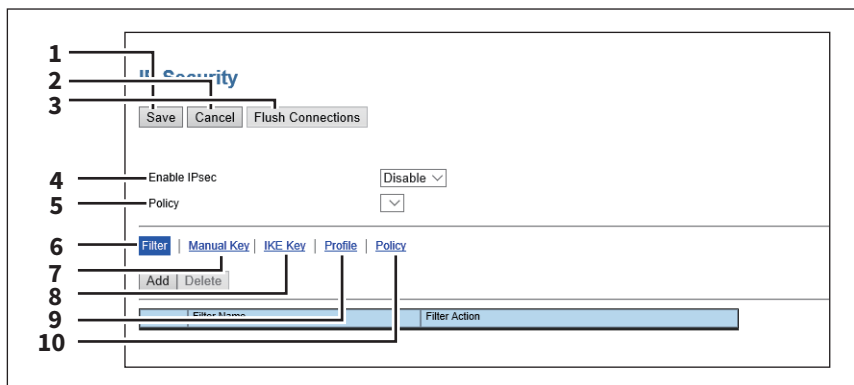




## □ Setting up IP Security

With the IP security function, you can enable data encryption communication using IPsec (IP Security Protocol).



	Item name	Description
1	[Save] button	Saves the IP Security setting.
2	[Cancel] button	Cancels the IP Security setting.
3	[Flush Connections] button	With the [Flush Connections] button, if the keys for IPsec communication are leaked or a security violation occurs, you can manually delete (flush) the current session with the flush connection function and start a new session. If you want to delete the information of SAD (Security Association Database) for any reason, you can delete it in the same way.
4	Enable IPsec	Specify whether or not to enable IPsec. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables IPsec.</li> <li>• <b>Disable</b> — Disables IPsec.</li> </ul>
5	Policy	Select a policy to use in IPsec. To enable data encryption communication using IPsec, you must first create IPsec policies according to your system environment. P.199 “[Add Policy] / [Modify Policy] screen”



	Item name	Description
6	Filter	<p>Creates a filter for the IPsec environment.</p> <p><b>[Add] button</b> — You can add a filter on the [Add Filter] screen.   P.190 “[Add Filter] / [Modify Filter] screen”</p> <p><b>[Delete] button</b> — Select filters to delete and click the [Delete] button to delete them.</p> <p><b>Filter Name</b> — Click a registered filter name to modify its content.   P.190 “[Add Filter] / [Modify Filter] screen”</p> <p><b>Filter Action</b> — Displays the action of the registered filter.</p>
7	Manual Key	<p>Set the IPsec manual key.</p> <p><b>[Add] button</b> — You can add a manual key on the [Add Manual Key] screen.   P.192 “[Add Manual Key] / [Modify Manual Key] screen”</p> <p><b>[Delete] button</b> — Select manual keys to delete and click the [Delete] button to delete them.</p> <p><b>Manual Key Name</b> — Click a registered manual key name to modify its content.   P.192 “[Add Manual Key] / [Modify Manual Key] screen”</p> <p><b>Encryption Algorithm</b> — Displays the registered encryption algorithms.</p>
8	IKE Key	<p>Set the IPsec IKE key.</p> <p><b>[Add] button</b> — You can add an IKE key on the [Add IKE] screen.   P.193 “[Add IKE] / [Modify IKE] screen”</p> <p><b>[Delete] button</b> — Select keys to delete and click the [Delete] button to delete them.</p> <p><b>Key Name</b> — Click a registered key name to modify its content.   P.193 “[Add IKE] / [Modify IKE] screen”</p> <p><b>IKE Type</b> — Displays the registered IKE types.</p>
9	Profile	<p>First create a filter and a manual key or IKE key according to your IPsec environment, and then create profiles by combining them.</p> <p><b>[Add] button</b> — You can add a profile on the [Add Profile] screen.   P.197 “[Add Profile] / [Modify Profile] screen”</p> <p><b>[Delete] button</b> — Select profiles to delete and click the [Delete] button to delete them.</p> <p><b>Profile Name</b> — Click a registered profile name to modify its content.   P.197 “[Add Profile] / [Modify Profile] screen”</p> <p><b>Profile Mode</b> — Displays the registered profile mode.</p>
10	Policy	<p>Create a policy to use in IPsec by combining the registered profiles.</p> <p><b>[Add] button</b> — You can add a policy on the [Add Policy] screen.   P.199 “[Add Policy] / [Modify Policy] screen”</p> <p><b>[Delete] button</b> — Select policies to delete and click the [Delete] button to delete them.</p> <p><b>Policy Name</b> — Click a registered policy name to modify its content.   P.199 “[Add Policy] / [Modify Policy] screen”</p>

## [Add Filter] / [Modify Filter] screen

You can display this screen by clicking the [Add] button for Filter or a registered filter name.  
You can create a filter to use in IPsec.

	Item name	Description
1	[OK] button	Saves the folder setting.
2	[Cancel] button	Cancels registration of the folder.
3	[Reset] button	Returns the settings to the defaults.
4	Filter Name	Enter a filter name. You can enter up to 63 alphanumeric characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), ", and =.
5	Internet Protocol Version	Select the IP version for IPsec. <ul style="list-style-type: none"> <li>• <b>IPv4</b> — Select this to use IPsec under the IPv4 environment.</li> <li>• <b>IPv6</b> — Select this to use IPsec under the IPv6 environment.</li> </ul>
6	Source Address	The IP address of this equipment is set as the source address to which the filter is applied. [My IP Address] is displayed in this box. This item cannot be changed.

	Item name	Description
7	Destination Address	<p>Specify the destination address for the communication to which the filter is applied.</p> <ul style="list-style-type: none"> <li>• <b>Specific IP Address</b> — Set a specific IP address. Enter the IP address in the address input box.</li> <li>• <b>Subnet / Prefix</b> — Set the destination with its IP address and subnet mask. Enter the IP address and the prefix of the subnet mask directly in the address input box.</li> <li>• <b>FQDN</b> — Sets FQDN for the destination. Enter FQDN in the address input box. You can enter up to 255 alphanumeric characters including hyphen (-) and period (.). However, neither hyphen (-) nor period (.) can be used as first or last character.</li> <li>• <b>Any IP Address</b> — Set any IP address.</li> </ul>
8	Protocol Type	<p>Select a protocol for the filter.</p> <ul style="list-style-type: none"> <li>• <b>Any</b> — Set any protocol.</li> <li>• <b>TCP</b> — Select this to use TCP only.</li> <li>• <b>UDP</b> — Select this to use UDP only.</li> <li>• <b>ICMP</b> — Select this to use ICMP only.</li> </ul>
9	Source Port	<p>Specify the source port number. This setting is available only if you selected TCP or UDP in the protocol type setting.</p> <ul style="list-style-type: none"> <li>• <b>Any</b> — Set any source port.</li> <li>• <b>Port Number</b> — Set the port number of the sender. Enter the port number in the port number input box.</li> </ul>
10	Destination Port	<p>Set the destination port number. This setting is available only if you selected TCP or UDP in the protocol type setting.</p> <ul style="list-style-type: none"> <li>• <b>Any</b> — Set any destination port.</li> <li>• <b>Port Number</b> — Set the port number of the destination. Enter the port number in the port number input box.</li> </ul>
11	Filter Action	<p>Set the operation of the filter.</p> <ul style="list-style-type: none"> <li>• <b>Permit</b> — Select this to permit access from the specified destination.</li> <li>• <b>Block</b> — Select this to block access from the specified destination.</li> <li>• <b>Negotiate Security</b> — IPsec communication is performed with the specified destination. When this item is set, you must select the security protocol type to be used in IPsec communication from the following: <ul style="list-style-type: none"> <li>- <b>ESP</b> — Select this to use ESP (Encapsulating Security Payload).</li> <li>- <b>AH</b> — Select this to use AH (Authentication Header).</li> </ul> </li> </ul>

## [Add Manual Key] / [Modify Manual Key] screen

You can display this screen by clicking the [Add] button for Manual Key or a registered manual key name. You can set a manual key to use in IPsec.

	Item name	Description
1	[OK] button	Saves the key setting.
2	[Cancel] button	Cancels registration of the key.
3	[Reset] button	Returns the settings to the defaults.
4	Manual Key Name	Enter the name of the manual key. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), ", and =.
5	Encryption Algorithm	Select an encryption algorithm. <ul style="list-style-type: none"> <li>• <b>None</b> — Select this not to perform data encryption.</li> <li>• <b>AES-256-CBC</b> — Select this to use AES-CBC (256 bits).</li> <li>• <b>AES-192-CBC</b> — Select this to use AES-CBC (192 bits).</li> <li>• <b>AES-128-CBC</b> — Select this to use AES-CBC (128 bits).</li> <li>• <b>3DES-CBC</b> — Select this to use 3DES-CBC.</li> <li>• <b>DES-CBC</b> — Select this to use DES-CBC.</li> </ul>


	Item name	Description
6	Hash Algorithm	Select a hash algorithm. <ul style="list-style-type: none"> <li>• <b>SHA1</b> — Select this to use SHA1.</li> <li>• <b>MD5</b> — Select this to use MD5.</li> <li>• <b>AES-XCBC-MAC</b> — Select this to use AES-XCBC-MAC.</li> </ul>
7	Inbound Key	Select a key for the receiving side.
	Security Parameter Index	Specify a security parameter index (SPI) for identification. You can enter a value in the range from 256 to 4095.
	ESP Encryption Key	Enter an ESP (Encapsulating Security Payload) encryption key.
	ESP Authentication Key	Enter an ESP (Encapsulating Security Payload) authentication key.
	AH Authentication Key	Enter an AH (Authentication Header) authentication key.
8	Outbound Key	Select a key for the destination.
	Security Parameter Index	Specify a security parameter index (SPI) for identification. You can enter a value in the range from 256 to 4095.
	ESP Encryption Key	Enter an ESP (Encapsulating Security Payload) encryption key.
	ESP Authentication Key	Enter an ESP (Encapsulating Security Payload) authentication key.
	AH Authentication Key	Enter an AH (Authentication Header) authentication key.

### [Add IKE] / [Modify IKE] screen

You can display this screen by clicking the [Add] button for IKE Key or a registered key name. You can set an IKE key to use in IPsec.

The screenshot shows the 'Add IKE' configuration window. It includes the following elements:

- 1:** Title bar 'Add IKE'.
- 2:** 'OK', 'Cancel', and 'Reset' buttons.
- 3:** A note: 'Selecting 'Save' in the Main Window is required to Save the new settings.'
- 4:** 'IKE Key Name' text input field.
- 5:** 'IKE Type' section with radio buttons for 'IKEv1(Main Mode)' and 'IKEv2'. Under 'IKEv1(Main Mode)', there are radio buttons for 'Authentication Method' (Certificate, Preshared Key) and a text input for the Preshared Key. A note states: '[Note: This selection will be applicable for all IKEv1 settings]'. Under 'IKEv2', there are radio buttons for 'Authentication Method' (Certificate, Preshared Key), and text inputs for 'Local ID' and 'Remote ID', each with an 'IP Address' dropdown menu.
- 6:** 'Session Key Settings' section with a text input for 'Generate a new key after' (set to 28800) and a checkbox for 'Enable PFS'.
- 7:** 'Filter IKE Transforms' section with two columns: 'Integrity' (checkboxes for SHA1, MD5, AES-XCBC-MAC) and 'Encryption' (checkboxes for AES-256-CBC, AES-192-CBC, AES-128-CBC, AES-CTR, 3DES-CBC, DES-CBC). A 'Diffie-Hellman algorithm' dropdown menu is set to 'MODP 1024 (Group 2)'.

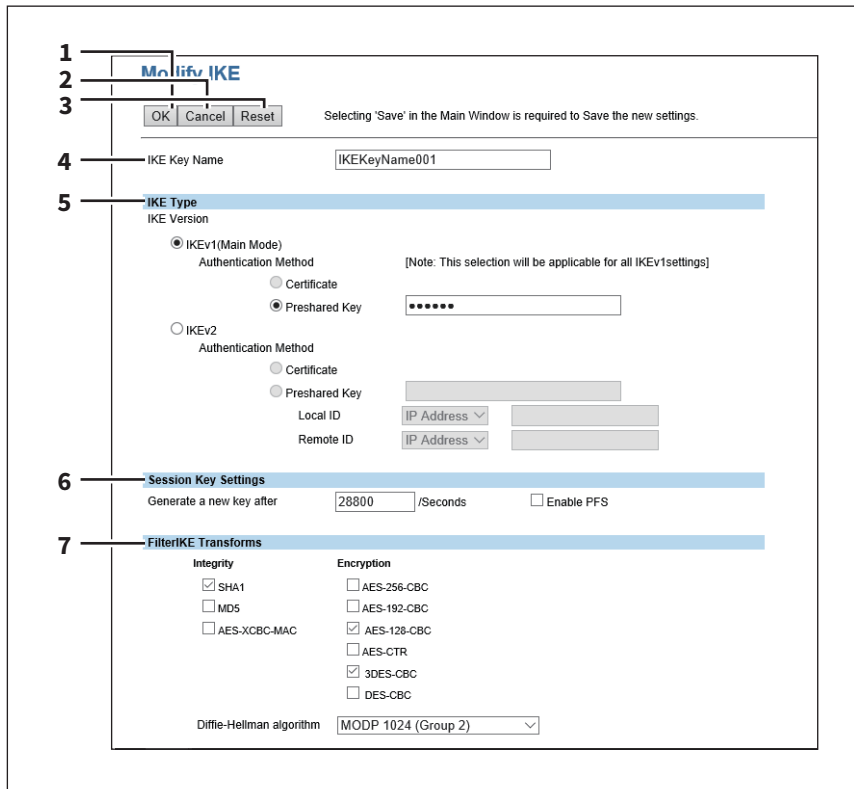

	Item name	Description
1	[OK] button	Saves the key setting.
2	[Cancel] button	Cancels registration of the key.
3	[Reset] button	Returns the settings to the defaults.
4	IKE Key Name	Enter the name of the IKE key. You can enter up to 63 alphanumeric characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), " , and =.
	<div style="border: 1px solid gray; padding: 2px; display: inline-block;">Tip</div> Up to 30 IKE keys can be created.	

	Item name	Description
5	IKE Type	
	IKEv1 (Main Mode)	<p>Select this to use IKEv1.</p> <p><b>Certificate</b> — Select this to use an electronic certificate. To select this, IPsec certificate must be installed in this equipment in advance.</p> <p><b>Preshared Key</b> — Select this to perform authentication by sharing key information with the recipient of the communication in advance. Enter key information to be shared in the entry box. You can enter up to 128 alphanumerical characters and symbols other than &amp;, &lt;, and “.</p>
	<p><b>Note</b></p> <p>If you register more than one Preshared Key for IKEv1, only the one that you registered last will be valid.</p>	
	IKEv2	<p>Select this to use IKEv2.</p> <p><b>Certificate</b> — Select this to use an electronic certificate. To select this, IPsec certificate must be installed in this equipment in advance.</p> <p><b>Preshared Key</b> — Select this to perform authentication by sharing key information with the recipient of the communication in advance. Enter key information to be shared in the entry box. You can enter up to 128 alphanumerical characters and symbols other than &amp;, &lt;, and “.</p> <ul style="list-style-type: none"> <li>• <b>Local ID</b> — Select among IP Address, FQDN, Email and Key-ID. When you have selected the Key-ID, enter the value to the corresponding item. You can enter up to 128 alphanumerical characters and symbols other than &amp;, &lt;, and “.</li> <li>• <b>Remote ID</b> — Select among IP Address, FQDN, Email and Key-ID. When you selected FQDN, Email or Key-ID, enter a value corresponding to the item you selected. When you selected Key-ID, enter the corresponding value. You can enter up to 128 alphanumerical characters and symbols except the following: &amp; &lt; “. When you selected Email, you can enter up to 192 alphanumerical characters. When you selected FQDN, you can enter up to 255 alphanumerical characters including hyphen (-) and period (.). However, neither hyphen (-) nor period (.) can be used as first or last character.</li> </ul>
6	Session Key Settings	
	Generate a new key after	<p>Enter the interval between generating key information for IPsec communications in seconds. Set the interval period for regenerating key information for IPsec communication from 60 seconds to 604,800 seconds (7 days).</p> <p><b>Enable PFS</b> — Select the check box when using the PFS (Perfect Forward Secrecy) function in IKE.</p>

	Item name	Description
7	FilterIKE Transforms	
	Integrity	Select the authentication algorithm to be used in IKE. <ul style="list-style-type: none"> <li>• <b>SHA1</b> — Select this to use SHA1.</li> <li>• <b>MD5</b> — Select this to use MD5.</li> <li>• <b>AES-XCBC-MAC</b> — Select this to use AES-XCBC-MAC.</li> </ul>
	Encryption	Select the encryption algorithm to be used in IKE. <ul style="list-style-type: none"> <li>• <b>AES-256-CBC</b> — Select this to use AES-CBC (256 bits).</li> <li>• <b>AES-192-CBC</b> — Select this to use AES-CBC (192 bits).</li> <li>• <b>AES-128-CBC</b> — Select this to use AES-CBC (128 bits).</li> <li>• <b>AES-CTR</b> — Select this to use AES-CTR.</li> <li>• <b>3DES-CBC</b> — Select this to use 3DES-CBC.</li> <li>• <b>DES-CBC</b> — Select this to use DES-CBC.</li> </ul>
	Diffie-Hellman algorithm	Select the Diffie-Hellman group to be used in IKE. <ul style="list-style-type: none"> <li>• <b>MODP 768 (Group 1)</b> — Select this to use the MODP group in 768 bits.</li> <li>• <b>MODP 1024 (Group 2)</b> — Select this to use the MODP group in 1024 bits.</li> <li>• <b>MODP 2048 (Group 14)</b> — Select this to use the MODP group in 2048 bits.</li> <li>• <b>Elliptic Curve P-256 (Group 19)</b> — Select this to use Elliptic Curve P-256.</li> <li>• <b>Elliptic Curve P-384 (Group 20)</b> — Select this to use Elliptic Curve P-384.</li> <li>• <b>Elliptic Curve P-521 (Group 21)</b> — Select this to use Elliptic Curve P-521.</li> </ul>



## [Add Profile] / [Modify Profile] screen

You can display this screen by clicking the [Add] button for Profile or a registered profile name.

You can create a profile for an IPsec environment by combining the registered filter and either a manual key or an IKE key.

	Item name	Description
1	[OK] button	Saves the profile setting.
2	[Cancel] button	Cancels registration of the profile.
3	[Reset] button	Returns the settings to the defaults.

	Item name	Description
4	Profile Name	Enter the profile name. You can enter up to 63 alphanumerical characters, including hyphen (-) and underscore (_).
	Tip	Up to 30 profiles can be created.
5	Tunnel Settings	
	Tunnel mode	Select whether or not to use tunnel mode for IPsec communications. <ul style="list-style-type: none"> <li>• <b>Yes</b> — Select this to use the tunnel mode.</li> <li>• <b>No</b> — Select this not to use the tunnel mode. (The transport mode will be used instead.)</li> </ul>
	IPv4/IPv6 Address	Enter the IP address for the gateway which encrypts and decrypts data in tunnel mode.
6	Key Selection	
	Key	Displays the IKE key settings registered in the equipment. IKE keys already registered in this equipment are displayed.
7	Proposals	
	ESP Transforms	Specify the transform for ESP. <ul style="list-style-type: none"> <li>• <b>Integrity</b> — Selects the authentication algorithm to be used in ESP. <ul style="list-style-type: none"> <li>- <b>SHA1</b> — Select this to use SHA1.</li> <li>- <b>MD5</b> — Select this to use MD5.</li> <li>- <b>AES-XCBC</b> — Select this to use AES-XCBC.</li> </ul> </li> <li>• <b>Encryption</b> — Selects the encryption algorithm to be used in ESP. <ul style="list-style-type: none"> <li>- <b>AES-256-CBC</b> — Select this to use AES-CBC (256 bits).</li> <li>- <b>AES-192-CBC</b> — Select this to use AES-CBC (192 bits).</li> <li>- <b>AES-128-CBC</b> — Select this to use AES-CBC (128 bits).</li> <li>- <b>AES-CTR</b> — Select this to use AES-CTR.</li> <li>- <b>3DES-CBC</b> — Select this to use 3DES-CBC.</li> <li>- <b>DES-CBC</b> — Select this to use DES-CBC.</li> <li>- <b>None</b> — Select this not to perform data encryption.</li> </ul> </li> </ul>
	AH Transforms	Specify the transform for AH. <ul style="list-style-type: none"> <li>• <b>Integrity</b> — Selects the authentication algorithm to be used in AH. <ul style="list-style-type: none"> <li>- <b>SHA1</b> — Select this to use SHA1.</li> <li>- <b>MD5</b> — Select this to use MD5.</li> <li>- <b>AES-XCBC</b> — Select this to use AES-XCBC.</li> </ul> </li> </ul>
	Session Key Settings	Specify the session key for IPsec communications. <ul style="list-style-type: none"> <li>• <b>Session Key Settings</b> — Sets an interval for regenerating the session key. The interval can be set in time or the amount of data. Select the desired check box and then key in the value in the entry box. <ul style="list-style-type: none"> <li>- <b>Generate a new key after [ ]/Seconds</b> — Specify the interval between key generations in seconds. Specify within the range from 180 to 86,400 seconds (24 hours).</li> <li>- <b>Generate a new key after [ ]/KBytes</b> — Specify the data volume between key generations in Kbytes. Specify within the range from 20,480 to 214,783,647 Kbytes.</li> </ul> </li> </ul>
	IPCOMP Transform	Select if using the IPCOMP transform.

	Item name	Description
8	IP Filter	You can display a list of filter settings registered in this equipment. Select the check box for the filter to be applied to the profile. If more than one filter is registered, you can change their order in the list. Click [Move] for the desired filter, and then click [Move Up] or [Move Down] to move the filter.

### [Add Policy] / [Modify Policy] screen

You can display this screen by clicking the [Add] button for Policy or a registered policy name. You can create a policy to use in IPsec by combining the registered profiles.

	Item name	Description
1	[OK] button	Saves the profile setting.
2	[Cancel] button	Cancels registration of the profile.
3	Policy Name	Enter the policy name. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (single quotation), ; (semicolon), , (comma), " (double quotation) and =.
	Tip	Up to 10 policies can be created.
4	Profile Name	Select profiles to apply to the policy. You can select multiple profiles.


## ❑ Setting up SMB


In SMB, you can specify the SMB network properties to access this equipment through a Microsoft Windows Network and enable SMB printing. When you enable the SMB, users can also browse the local folder in the equipment. You can also specify the WINS server when the WINS server is used to enable the Windows print sharing and Windows file sharing services between the different subnets.

The screenshot shows the SMB configuration window with the following settings:

- SMB Server Protocol:** Enable
- Restriction:** None
- NetBIOS Name:** MFP12345678
- Logon:** Workgroup
- Authentication of SMB Server:** Enable
- Authentication of SMB Client:** Kerberos/NTLMv2
- SMB Signing of SMB Server:** If client agrees, digital signature is done for the communication.
- SMB Signing of SMB Client:** If server agrees, digital signature is done for the communication.

	Item name	Description
1	SMB Server Protocol	Select whether the SMB protocol is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to enable SMB.</li> <li>• <b>Disable</b> — Select this to disable SMB.</li> </ul>
2	Restriction	Specify restrictions on SMB. <ul style="list-style-type: none"> <li>• <b>None</b> — Select this to not specify restrictions on SMB.</li> <li>• <b>Print Share</b> — Select this to enable the file sharing service using SMB, but disable SMB printing.</li> <li>• <b>File Share</b> — Select this to enable SMB printing, but disable the file sharing service using SMB.</li> </ul>
3	NetBIOS Name	Enter the NetBIOS name of this equipment. The equipment uses “MFP<NIC Serial Number>” as the default NetBIOS name.
	<b>Note</b>	You can enter only alphanumerical characters and “-” (a hyphen) for NetBIOS names. If you use any other characters, a warning message will be displayed.

	Item name	Description
4	Logon	<p>Enter the workgroup or domain that this equipment joins.</p> <ul style="list-style-type: none"> <li>• <b>Workgroup</b> — To include the equipment in the workgroup, enter the workgroup name. All client computers can access this equipment without a user name and password.</li> <li>• <b>Domain</b> — Select this and enter the domain name when the equipment will log on in the domain. Any client computers which are not members of the domain will need a valid user name and password to access this equipment. Use this to enhance access security to this equipment.</li> </ul>
	<p><b>Note</b></p> <p>For workgroup and domain names, you can use only alphanumerical characters and symbols other than the following:            ; : " &lt; &gt; + = \   ? , * #            If you use any other characters, a warning message will be displayed.</p>	
5	Primary Domain Controller	Specify the server name or IP address of the primary domain controller when this equipment will log on the domain network. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
6	Backup Domain Controller	Specify the server name or IP address of the backup domain controller when this equipment will log on the domain network, if required. If the Primary Domain Controller is unavailable, the Backup Domain Controller will be used to log on. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
	<p><b>Note</b></p> <p>If the wrong primary or backup domain controller is specified, the NETWORK INITIALIZING message will be displayed for up to 4 minutes while the equipment searches for the primary or backup domain controller. In that case, correct the primary or backup domain controller setting after the NETWORK INITIALIZING message disappears.</p>	
7	Logon User Name	Enter a valid user name to log on to the specified domain. You can enter up to 128 alphanumerical characters and symbols other than " / \ [ ] ;   = , + * ? < > .
8	Password	Enter the password for the specified log on user name to log on the domain network. You can enter up to 128 alphanumerical characters.
9	Primary WINS Server	Specify the IP address of the primary WINS server when the WINS server is used to provide the NetBIOS name in your local area network. This option would be more useful to access this equipment using the NetBIOS Name from a different subnet.
	<p><b>Tip</b></p> <p>When the [Obtain a WINS Server Address automatically] option is enabled in the TCP/IP settings, the primary and secondary WINS server address can be obtained using the DHCP server.</p> <p> P.179 “Basic Setting”</p>	

	Item name	Description
10	Secondary WINS Server	Specify the IP address of the secondary WINS server as you require when the WINS server is used to provide NetBIOS name in your local area network. If the Primary WINS Server is unavailable, the Secondary WINS Server will be used.
	<p><b>Tip</b></p> <p>When the [Obtain a WINS Server Address automatically] option is enabled in the TCP/IP settings, the primary and secondary WINS server address can be obtained using the DHCP server.   P.179 “Basic Setting”</p> <p><b>Note</b></p> <p>If “0.0.0.0” is entered for the Primary WINS Server and Secondary WINS Server, this equipment will not use the WINS server.</p>	
11	Host announcement sending of super sleep mode	Specify this to display this equipment’s icon in the “Network” folder on the Windows computer even in super sleep mode. <ul style="list-style-type: none"> <li>• <b>Disable:</b> Disables host announcement sending in super sleep mode.</li> <li>• <b>Enable:</b> Even in super sleep mode, the icon for this printer is displayed in the “Network” folder on Windows computers.</li> </ul>
	<p><b>Note</b></p> <p>When the printer’s super sleep mode is set to [Disable], the icon for this printer is displayed in the “Network” folder on Windows computers regardless of this setting.</p>	
12	Guest Logon	Select whether a guest user can log on to the SMB server. [Enable] is set as the default.
13	User Name	Enter a name of the user who logs on to the SMB server if [Guest Logon] is set to [Disable]. You can enter up to 32 alphanumerical characters and symbols except " / \ [ ] ;   = , + * ? < > .
	<p><b>Note</b></p> <p>If you connect to the SMB server for this equipment before changing the user name, qualification information on the user name and the password is cached in your Windows computer. Restart your Windows computer to clear qualification information.</p>	
14	Password	Enter a password of the specified user if [Guest Logon] is set to [Disable]. You can enter up to 128 alphanumerical characters and symbols.
	<p><b>Note</b></p> <p>If you connect to the SMB server for this equipment before changing the password, qualification information on the user name and the password is cached in your Windows computer. Restart your Windows computer to clear qualification information.</p>	

	Item name	Description
15	SMB Client Authentication	<p>Specify the authentication method for the SMB clients.</p> <ul style="list-style-type: none"> <li>• <b>Kerberos/NTLMv2</b> — Specify this when connecting to an SMB server using Kerberos/NTLMv2 authentication. NTLMv2 authentication is used if Kerberos authentication has failed.</li> <li>• <b>Kerberos/NTLMv1</b> — Specify this when connecting to an SMB server using Kerberos/NTLMv1 authentication. NTLMv1 authentication is used if Kerberos authentication has failed.</li> <li>• <b>Kerberos</b> — Specify this when connecting to an SMB server using Kerberos authentication.</li> <li>• <b>NTLMv2</b> — Specify this when connecting to an SMB server using NTLMv2 authentication.</li> <li>• <b>NTLMv1</b> — Specify this when connecting to an SMB server using NTLMv1 authentication.</li> </ul>
	<p><b>Note</b></p> <p>SMB servers running Mac OS X 10.10 or later do not support NTLMv1 authentication.</p>	
16	SMB Signing of SMB Server	<p>Select whether SMB Signing is enabled or disabled when a client accesses this equipment using SMB, such as when a client accesses the shared folder in this equipment.</p> <ul style="list-style-type: none"> <li>• <b>If client agrees, digital signature is done for the communication.</b> — Select this to use the digital signature to secure communication only when a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication is allowed without the digital signature.</li> <li>• <b>Digital signature is always done for the communication on the server side.</b> — Select this to allow the communication only when a client accesses this equipment with a digital signature. When a client accesses this equipment without a digital signature, the communication is not allowed.</li> <li>• <b>Digital signature isn't done for the communication for the server.</b> — Select this to allow the communication only when a client accesses this equipment without a digital signature. When a client is set to always access an SMB server with a digital signature, the communication is not allowed.</li> </ul>
	<p><b>Note</b></p> <p>If you do not know whether the SMB Signing of SMB Client is enabled or disabled in the client computers, it is recommended to select [If client agrees, digital signature is done for the communication.]. If this is set incorrectly, the SMB communication may become unavailable.</p>	

	Item name	Description
17	SMB Signing of SMB Client	<p>Select whether SMB Signing is enabled or disabled when this equipment accesses the clients using SMB, such as when this equipment stores the scanned data in the network folder using SMB.</p> <ul style="list-style-type: none"> <li>• <b>If server agrees, digital signature is done for the communication.</b> — Select this to use the digital signature to secure the communication to an SMB server only when the SMB Signing of SMB Server that this equipment accesses is enabled. If the SMB Signing of SMB Server is disabled in an SMB server, the communication is performed without the digital signature.</li> <li>• <b>Digital signature is always done for the communication on the client side.</b> — Select this to make this equipment always access an SMB server with a digital signature. When the SMB Signing of SMB Server is disabled in an SMB server, the communication is not allowed.</li> <li>• <b>Digital signature isn't done for the communication for the client.</b> — Select this to communicate to an SMB server without the digital signature. If the SMB Signing of SMB Server is always enabled in an SMB server, the communication is not allowed.</li> </ul>
	<b>Note</b>	<ul style="list-style-type: none"> <li>• If you do not know whether the SMB Signing of SMB Server is enabled or disabled in the SMB servers, it is recommended to select [If server agrees, digital signature is done for the communication.]. If this is set incorrectly, the SMB communication may become unavailable.</li> <li>• The digital signature is always done for the communication on the server side as the default on Windows Server 2008 or later. Therefore specify “If server agrees, digital signature is done for the communication.” or “Digital signature is always done for the communication on the client side.” for SMB communications with Windows Server 2008 or later.</li> </ul>

## ❑ Setting up HTTP

In HTTP, you can enable or disable Web-based services such as TopAccess and e-Filing web utility.

	Item name	Description
1	Enable HTTP Server	Select whether the Web-based services such as TopAccess and e-Filing web utility are enabled or disabled. [Enable] is set as the default.
2	Enable SSL/TLS	Select whether the SSL (Secure Socket Layer)/TLS (Transport Layer Security) is enabled or disabled. When this is enabled, the data transferred between the equipment and client computers will be encrypted using a private key when operating TopAccess and e-Filing web utility. [Disable] is set as the default.
	<b>Note</b>	Not all operating systems support SSL/TLS for all protocols.



	Item name	Description
3	Primary Port Number	Enter the port number for the NIC HTTP server. You can enter a value in the range from 1 to 65535. Generally the default value “80” is used.
	<b>Note</b>	<p>The same port numbers as the ones for the following settings are not usable. Change the applicable port number before that for the Primary Port Number is set.</p> <ul style="list-style-type: none"> <li>• HTTP Network Service / Secondary Port Number</li> <li>• HTTP Network Service / SSL/TLS Port Number</li> <li>• IPP Print / Port Number</li> <li>• IPP Print / SSL/TLS Port Number</li> </ul>
4	Secondary Port Number	Enter the port number for TopAccess and the e-Filing web utility. You can enter a value in the range from 1 to 65535. Generally the default value “8080” is used.
	<b>Note</b>	<p>The same port numbers as the ones for the following settings are not usable. Change the applicable port number before that for the Secondary Port Number is set.</p> <ul style="list-style-type: none"> <li>• HTTP Network Service / Primary Port Number</li> <li>• HTTP Network Service / SSL/TLS Port Number</li> <li>• IPP Print / Port Number</li> <li>• IPP Print / SSL/TLS Port Number</li> </ul>
5	SSL/TLS Port Number	Enter the port number for the SSL/TLS. You can enter a value in the range from 1 to 65535. Generally the default value “10443” is used.
	<b>Note</b>	<p>The same port numbers as the ones for the following settings are not usable. Change the applicable port number before that for the SSL/TLS Port Number is set.</p> <ul style="list-style-type: none"> <li>• HTTP Network Service / Primary Port Number</li> <li>• HTTP Network Service / Secondary Port Number</li> <li>• IPP Print / Port Number</li> <li>• IPP Print / SSL/TLS Port Number</li> </ul>

## ❑ Setting up WSD

In WSD, you can set the Web Services Setting. The Web Services Print operations and Web Services Scan operations are performed on client computers with Windows through a network.

**WSD**

Save Cancel

**General**

1 Enable SSL/TLS Disable ▾

2 Friendly Name [Text Input Field]

**Print**

3 Web Services Print Enable ▾

4 Printer Name [Text Input Field]

5 Printer Information [Text Input Field]

**Scan**


6 Web Services Scan Enable ▾

7 Scanner Name [Text Input Field]

8 Scanner Information [Text Input Field]

9 Authentication for PC Initiated Scan Accept any job ▾

Note: Accept any job : Accounted as Guest if user name is invalid. (Enable Guest account with Remote Scan permission.)

	Item name	Description
1	Enable SSL/TLS	Specify whether or not to use SSL/TLS in Web Service. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to use SSL/TLS.</li> <li>• <b>Disable</b> — Select this no to use SSL/TLS.</li> </ul>
2	Friendly Name	Assign the friendly name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, *, ?, “, >, <,  , !, and , (comma).
3	Web Services Print	Select whether the Web Services Print is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to enable the Web Services Print.</li> <li>• <b>Disable</b> — Select this to disable the Web Services Print.</li> </ul>
	<b>Note</b>	To enable Web Services Print using SSL/TLS, a certificate must be installed in this equipment or a client computer. For the details, see the following pages:  P.324 “[Security] How to Set and How to Operate”
4	Printer Name	Assign the printer name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, *, ?, “, >, <, and  . “MFP model name-Serial number” is set as the default.
5	Printer Information	Assign the printer information for this equipment. You can enter up to 127 characters other than =, ; (semicolon), #, and \ (backslash).
6	Web Services Scan	Select whether the Web Services Scan is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to enable the Web Services Scan.</li> <li>• <b>Disable</b> — Select this to disable the Web Services Scan.</li> </ul>
7	Scanner Name	Assign the scanner name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, *, ?, “, >, <, and  . “MFP model name-Serial number” is set as the default.
8	Scanner Information	Assign the scanner information for this equipment. You can enter up to 127 characters other than =, ; (semicolon), #, and \ (backslash).
9	Authentication for PC Initiated Scan	Specify whether to enable user authentication before accepting a scan from a client PC. <ul style="list-style-type: none"> <li>• <b>Do not accept any job</b> — Select this not to accept any jobs regardless of the result of user authentication.</li> <li>• <b>Accept the job if user name is valid</b> — Select this to accept jobs only after successful user authentication.</li> <li>• <b>Accept any job</b> — Select this to accept any jobs regardless of the result of user authentication.</li> </ul>

## □ Setting up SMTP Server

In SMTP Server, you can enable or disable SMTP transmission for receiving the Internet Fax and E-mails. This function is usually set when you want to enable the Offramp Gateway feature.

	Item name	Description
1	Enable SMTP Server	Select whether this equipment works as an SMTP server or not. This must be enabled when you use the Offramp Gateway feature. When this is enabled, this equipment can receive Internet Faxes or E-mails that are forwarded through the SMTP to the domain of this equipment. [Enable] is set as the default.
2	Port Number	Enter the port number to transmit an Internet Faxes or E-mails. Generally “25” is used.
	<b>Note</b>	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you make a mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.
3	Email Address	Enter the E-mail address of this equipment. When this equipment works as an SMTP server, it can receive all Internet Faxes and E-mails that contain its domain name. If the E-mail address of the received document matches the address you set here, this equipment prints it. You can enter up to 192 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
4	Enable OffRamp Gateway	Select whether the OffRamp Gateway transmission is enabled or disabled. [Disable] is set as the default.
5	OffRamp Security	Select whether the Offramp Security is enabled or disabled. When this is enabled, this equipment cancels the offramp gateway transmissions that are forwarding to the fax numbers not registered in the Address Book of this equipment. This can prevent the unauthorized offramp gateway transmission. [Enable] is set as the default.
6	OffRamp Print	Select whether this equipment should print documents sent using the offramp gateway transmission. When this is enabled, this equipment automatically prints documents sent using offramp gateway transmission, so that they can be confirmed. [Enable] is set as the default.

## □ Setting up FTP Server

In FTP Server, you can enable or disable the FTP server functions.

	Item name	Description
1	Enable FTP Server	Select whether the FTP server is enabled or disabled. Select [Enable] to enable the following functions. <ul style="list-style-type: none"> <li>• FTP printing</li> <li>• Reading/writing the address book data using the AddressBook Viewer</li> <li>• Backing up/Restoring the e-Filing data using the e-Filing Backup/Restore Utility</li> </ul> [Enable] is set as the default.
2	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the FTP server. [Disable] is set as the default.
	<b>Note</b>	Not all operating systems support SSL/TLS for all protocols.
3	Default Port Number	Enter the port number for the FTP server. You can enter a value in the range from 1 to 65535. Generally the default value “21” is used.
	<b>Note</b>	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.
4	SSL/TLS Port Number	Enter the port number that is used to access this equipment using FTP with SSL/TLS. The port number depends on the port setting in the FTP server. You can enter a value in the range from 1 to 65535. Generally the default value “990” is used.
	<b>Note</b>	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.

## LDAP Client settings

You can register the directory service properties of the LDAP (Lightweight Directory Access Protocol) server. When a new directory service is added, the users can search destinations using the LDAP server.

The screenshot shows the 'LDAP Client' configuration window. It includes a 'Server Entry' section with a 'New' button. A table lists three LDAP servers with columns for ID, Directory Service Name, Server IP Address, and Search Base. Below the table is a 'Search Contact' section with a 'Search Method' dropdown menu set to 'Partial match'. At the bottom, there are buttons for 'Server Assignment', 'Move Up', and 'Move Down'. A small preview table at the very bottom shows the first two columns of the main table.

	Item name	Description
1	[New] button	Registers the LDAP server that provides a directory service. 📖 P.210 “[Create LDAP Information]/[Edit LDAP Information] screen”
2	Directory Service List	Displays a list of registered LDAP servers. You can edit the registered details by clicking a directory service name. 📖 P.210 “[Create LDAP Information]/[Edit LDAP Information] screen”
3	Search Method	Select search conditions for LDAP searching. <ul style="list-style-type: none"> <li>• <b>Partial match</b> — Select this to search information partially matching the search conditions.</li> <li>• <b>Prefix match</b> — Select this to search information that starts with contents matching the search conditions.</li> <li>• <b>Suffix match</b> — Select this to search information that ends with contents matching the search conditions.</li> <li>• <b>Full match</b> — Select this to search information fully matching the search conditions.</li> </ul>
4	[Server Assignment] button	Registers the search target server. 📖 P.212 “[Server Assignment] screen”
5	[Move Up]/[Move Down] button	Moves up and down in the search list.


## [Create LDAP Information]/[Edit LDAP Information] screen

You can display this screen by clicking a directory service name in the directly service list or the [New] button.

The screenshot shows the 'Create LDAP Information' screen with the following fields and sections:


- 1**: [Execute] button (labeled as 'Connection Test')
- 2**: \*Directory Service Name
- 3**: \*Server IP Address
- 4**: \*Port Number (value: 389)
- 5**: Server Type (dropdown: Windows Server)
- 6**: Authentication (dropdown: Auto)
- 7**: Search Base
- 8**: User Name
- 9**: Password
- 10**: Search Timeout (dropdown: 1)
- 11**: Enable SSL/TLS (dropdown: Disable)
- 12**: SSL/TLS Port Number (value: 636)
- 13**: Attribute type for Search Contact
  - \*First Name: givenName
  - \*Last Name: sn
  - \*Email Address: mail
  - \*Fax Number: facsimileTelephoneNumber
  - \*Company: company
  - \*Department: department
- 14**: Attribute type for Authentication
  - User Authentication
    - Attribute type of 'User Name': displayName (Default Value)
    - Attribute type of 'Server Name': eBMServerName
  - \*The value registered in this attribute is used for the server name of login user when logging in with Card or PIN.
  - PIN Code Authentication Setting
    - Attribute type of 'PIN': eBMUserPIN
- 15**: Attribute type for Email Address Setting
  - Attribute type of 'Email Address': mail
  - Attribute type of 'From Name': uid

Item name	Description
<b>1</b> [Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
<b>2</b> Directory Service Name	Enter the directory service name to identify the directory service. You can enter up to 64 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
<b>3</b> Server IP Address	Enter the IP address or FQDN of the LDAP server. You can enter up to 128 alphanumeric characters and symbols.
<b>4</b> Port Number	Enter the port number to access the LDAP server. You can enter a value in the range from 1 to 65535. Generally the default value “389” is used to access the LDAP server without SSL/TLS. When the SSL/TLS is required, generally the “636” port is used to access the LDAP server.
<b>5</b> Server Type	Select the LDAP server you want to use for LDAP authentication. <ul style="list-style-type: none"> <li>• <b>Windows Server</b> — Select this when LDAP is running on a Windows server.</li> <li>• <b>LDAP Server (Other than Windows Server)</b> — Select this when the LDAP is running on a server other than a Windows one.</li> </ul>

	Item name	Description
6	Authentication	<p>Select the SASL authentication protocol. If you do not know the authentication type, select [Auto].</p> <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select this to access the LDAP server using the appropriate authentication that this equipment detects.</li> <li>• <b>Kerberos</b> — Select this to access the LDAP server using the Kerberos authentication.</li> <li>• <b>Digest-MD5</b> — Select this to access the LDAP server using the Digest-MD5 authentication.</li> <li>• <b>CRAM-MD5</b> — Select this to access the LDAP server using the CRAM-MD5 authentication.</li> <li>• <b>Login</b> — Select this to access the LDAP server using the login authentication.</li> <li>• <b>Plain</b> — Select this to access the LDAP server using the plain authentication.</li> <li>• <b>Simple Bind</b> — Select this to access the LDAP server using the Simple Bind authentication.</li> </ul>
7	Search Base	Enter the search base. When you configure the Active Directory in Windows server, make sure to enter this option. You can enter up to 256 alphanumerical characters and symbols other than ; (semicolon), #, and \ (backslash).
8	User Name	Enter the log-in user name if a user name is required to access the directory service. You can enter up to 256 alphanumerical characters and symbols.
9	Password	Enter the password if required to access the directory service. You can enter up to 32 alphanumerical characters and symbols.
10	Search Timeout	Select the timeout period for quitting communication when no response is received from the LDAP server. Specify within the range from 1 to 5. "1" is set as the default.
11	Enable SSL/TLS	<p>Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for communicating the LDAP directory service.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the SSL/TLS for communicating the LDAP directory service.</li> <li>• <b>Verify with imported CA certification(s)</b> — Select this to enable the SSL/TLS using the imported CA certificate.</li> <li>• <b>Accept all certificates without CA</b> — Select this to enable the SSL/TLS without using imported CA certificate.</li> </ul>
	<b>Note</b>	<ul style="list-style-type: none"> <li>• When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment.   P.324 "[Security] How to Set and How to Operate"</li> <li>• If at least one of the registered LDAP directory services requires the SSL/TLS, you must enable the [Enable SSL/TLS] option. When the [Enable SSL/TLS] option is enabled, this equipment will connect the registered LDAP directory services using SSL/TLS first. Then if the connection fails using SSL/TLS, this will connect to the registered LDAP directory service without using SSL/TLS. Therefore, even if you enable the [Enable SSL/TLS] option, this equipment can also connect to an LDAP directory service that does not require the SSL/TLS.</li> <li>• Not all operating systems support SSL/TLS for all protocols.</li> </ul>

	Item name	Description
12	SSL/TLS Port Number	Enter the port number to access the LDAP server using SSL/TLS. You can enter a value in the range from 1 to 65535. Generally the default value "636" is used.
13	Attribute type for Search Contact	Enter the attribute type to be used for searching contacts using the external LDAP server. You can enter up to 32 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
14	Attribute type for Authentication	Specify the attribute name for authentication. Enter [Attribute type of 'User Name'], [Attribute type of 'Server Name'], and either [Attribute type of 'PIN'] or [Attribute type of 'Card information'] for authentication. You can enter up to 32 half-width alphanumeric characters and symbols (excluding = ; # \). Click the [Default Value] button to display the predetermined value.
15	Attribute type for Email Address Setting	Specify [Attribute type of 'Email Address'] and [Attribute type of 'From Name'] for authentication. You can enter up to 32 half-width alphanumeric characters and symbols (excluding = ; # \).

### [Server Assignment] screen

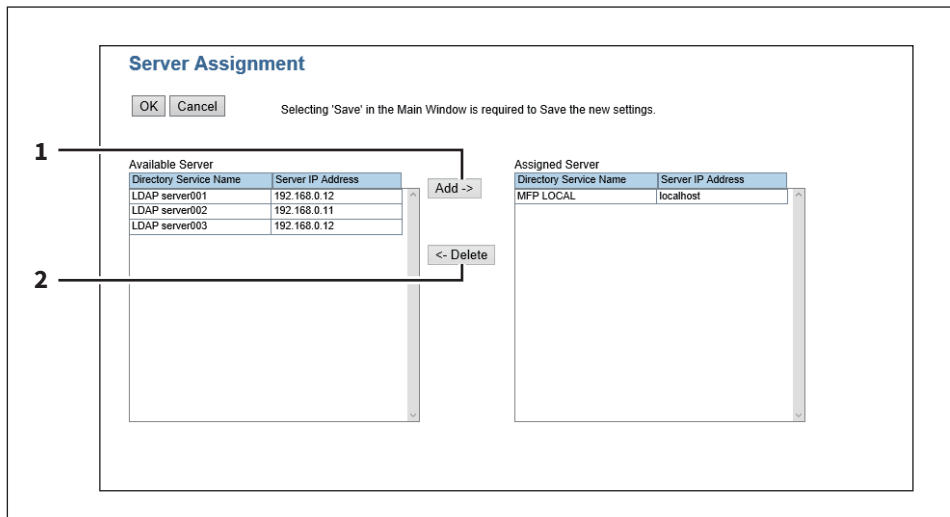

	Item name	Description
1	[Add] button	Adds the server from the server list to the assigned servers.
2	[Delete] button	Deletes the server from the assigned servers.



## □ Setting up SMTP Client

In SMTP Client, you can enable or disable SMTP transmission for sending the Internet Fax and E-mails.

### Note

A From Address setting is also required to send Internet Fax and E-mails. For information about the From Address setting, see the following sections:



📖 P.290 “Setting up E-mail settings”

📖 P.291 “Setting up InternetFax settings”

The From Address can be also determined automatically when the User Management Setting is enabled. For more information about User Management Setting, see the following section:

📖 P.135 “[User Management] Tab Page”


	Item name	Description
1	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
2	Enable SMTP Client	When this is enabled, this equipment sends an Internet Fax and an E-mail to the specified SMTP server for transmission over the Internet. [Enable] is set as the default.
3	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for SMTP transmission. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the SSL/TLS for SMTP transmission.</li> <li>• <b>Verify with imported CA certification(s)</b> — Select this to enable the SSL/TLS using the imported CA certificate.</li> <li>• <b>Accept all certificates without CA</b> — Select this to enable the SSL/TLS without using imported CA certificate.</li> </ul>
	<b>Note</b>	<ul style="list-style-type: none"> <li>• When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment. <ul style="list-style-type: none"> <li>📖 P.324 “[Security] How to Set and How to Operate”</li> </ul> </li> <li>• Not all operating systems support SSL/TLS for all protocols.</li> </ul>

	Item name	Description
4	SSL/TLS	<p>Select the protocol for the SSL/TLS when the [Enable SSL/TLS] option is enabled.</p> <ul style="list-style-type: none"> <li>• <b>STARTTLS</b> — Select this to send a message in TLS (Transport Layer Security) using STARTTLS that is the extension command for SMTP transmission.</li> <li>• <b>Over SSL/TLS</b> — Select this to send a message in SSL (Secure Socket Layer)/TLS (Transport Layer Security).</li> </ul>
	<b>Note</b>	When you select [Over SSL/TLS], make sure to change the port number correctly. Generally, “465” port is used for the Over SSL/TLS instead of “25” port.
5	SMTP Server Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the SMTP server when [Enable SMTP Client] is enabled. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
	<b>Note</b>	If you use FQDN to specify the SMTP server, you must configure the DNS server and enable the DNS in the DNS Session.
	<b>Tip</b>	When the [Obtain a SMTP Server Address automatically] option is enabled in the TCP/IP settings, the SMTP server address can be obtained using the DHCP server.  P.179 “Basic Setting”
6	POP Before SMTP	Select whether the POP Before SMTP authentication is enabled or disabled. [Disable] is set as the default.
7	Authentication	<p>Select the type of authentication to access the SMTP server.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to access the SMTP server using no authentication.</li> <li>• <b>Plain</b> — Select this to access the SMTP server using plain authentication.</li> <li>• <b>Login</b> — Select this to access the SMTP server using the log-in authentication.</li> <li>• <b>CRAM-MD5</b> — Select this to access the SMTP server using CRAM-MD5 authentication.</li> <li>• <b>Digest-MD5</b> — Select this to access the SMTP server using Digest-MD5 authentication.</li> <li>• <b>Kerberos</b> — Select this to access the SMTP server using Kerberos authentication.</li> <li>• <b>NTLM(IWA)</b> — Select this to access the SMTP server using NTLM (IWA) authentication.</li> <li>• <b>AUTO</b> — Select this to access the SMTP server using the appropriate authentication that this equipment detects.</li> </ul>
8	Login Name	Enter the log-in name to access the SMTP server if the SMTP authentication is enabled. You can enter up to 64 alphanumerical characters and symbols.
	<b>Note</b>	Enter the account name for accessing a POP3 server when the POP Before SMTP authentication is enabled.  P.215 “Setting up POP3 Client”



	Item name	Description
9	Password	Enter the password to access the SMTP server if the SMTP authentication is enabled. You can enter up to 64 alphanumeric characters and symbols.
	<p><b>Note</b></p> <p>Enter the password for accessing a POP3 server when the POP Before SMTP authentication is enabled.   P.215 “Setting up POP3 Client”</p>	
10	Maximum Email / InternetFax Size (2-100)	Select the maximum size that this equipment is allowed to send using the SMTP. Specify within the range from 2 to 100 MB.
	<p><b>Note</b></p> <p>The available maximum size includes that for attached files. Approx. 70 MB is the available maximum size for attached files when 100 MB is set in this option.</p>	
11	Port Number	Enter the port number for accessing the SMTP server when [Enable SMTP Client] is enabled. The port number depends on the port setting in the SMTP server. You can enter a value in the range from 1 to 65535. Generally the default value “25” is used.
	<p><b>Note</b></p> <p>When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.</p>	
12	SMTP Client Connection Timeout(1-180)	Enter a timeout period for quitting communication when no response is received from the SMTP server. Specify within the range from 1 to 180 seconds. “30” is set as the default.

**□ Setting up POP3 Client**

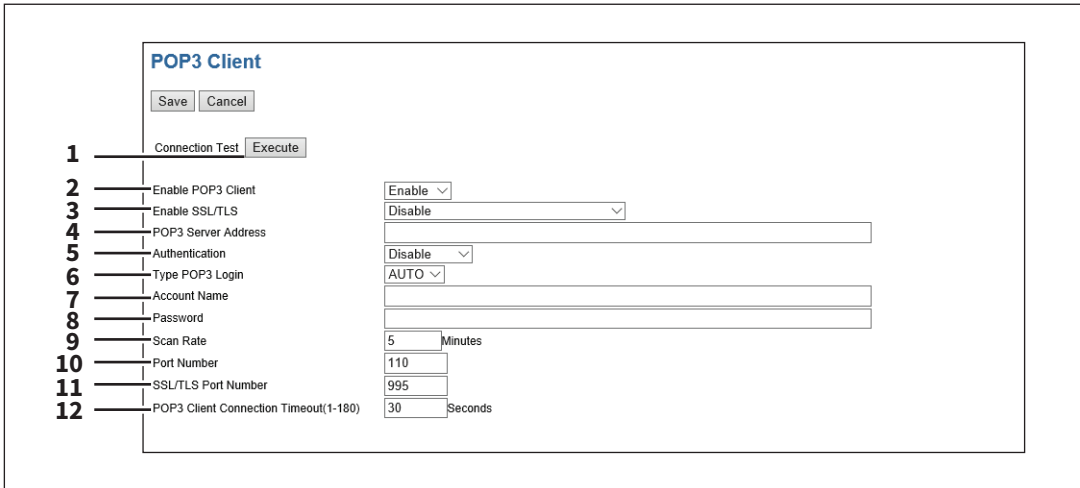In POP3 Client, you can specify the POP3 server to receive an Internet Fax and E-mails.



	Item name	Description
1	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
2	Enable POP3 Client	Select whether retrieving an Internet Fax and an E-mail from the POP3 server is enabled or disabled. [Enable] is set as the default.

	Item name	Description
3	Enable SSL/TLS	<p>Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for POP3 transmission.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the SSL/TLS for POP3 transmission.</li> <li>• <b>Verify with imported CA certification(s)</b> — Select this to enable the SSL/TLS using the imported CA certificate.</li> <li>• <b>Accept all certificates without CA</b> — Select this to enable the SSL/TLS without using imported CA certificate.</li> </ul>
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment.   P.324 “[Security] How to Set and How to Operate”</li> <li>• Not all operating systems support SSL/TLS for all protocols.</li> </ul>	
4	POP3 Server Address	<p>Enter the IP address or FQDN (Fully Qualified Domain Name) of the POP3 server when [Enable POP3 Client] is enabled. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).</p>
	<p><b>Note</b></p> <p>If you use FQDN to specify the POP3 server, you must configure the DNS server and enable the DNS in the DNS Session.</p> <p><b>Tip</b></p> <p>When the [Obtain a POP3 Server Address automatically] option is enabled in the TCP/IP settings, you can obtain the POP3 server address from the DHCP server.   P.179 “Basic Setting”</p>	
5	Authentication	<p>Enable or disable the authentication for accessing the POP3 server.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the authentication.</li> <li>• <b>NTLM/SPA</b> — Select this to access the POP3 server using the NTLM/SPA authentication.</li> <li>• <b>Kerberos</b> — Select this to access the POP3 server using the Kerberos authentication.</li> </ul>
6	Type POP3 Login	<p>Select the POP3 login type.</p> <ul style="list-style-type: none"> <li>• <b>AUTO</b> — Select this to automatically designate the POP3 log-in type of the POP3 server.</li> <li>• <b>POP3</b> — Select this to use the general POP3 log-in type.</li> <li>• <b>APOP</b> — Select this to use the APOP log-in type. APOP allows users to access the POP3 server by encrypting the user name and password.</li> </ul>
	<p><b>Note</b></p> <p>If it is not possible to log in to the mail server using [Auto], manually set the type of POP3 log in to either [POP3] or [APOP].</p>	
7	Account Name	<p>Enter the account name for this equipment to access the POP3 server. You can enter up to 96 alphanumerical characters and symbols.</p>
	<p><b>Note</b></p> <p>Enter the account name without the domain name when [NTLM/SPA] or [Kerberos] is selected in the [Authentication] option.</p>	
8	Password	<p>Enter the password for this equipment to access the POP3 server. You can enter up to 96 alphanumerical characters and symbols.</p>

	Item name	Description
9	Scan Rate	Enter how often this equipment should access the POP3 server for new messages. You can enter a value in the range from 0 to 4096. "5" is set as the default.
10	Port Number	Enter the port number to access the POP3 server. The port number depends on the port setting in the POP3 server. You can enter a value in the range from 1 to 65535. Generally the default value "110" is used.
11	SSL/TLS Port Number	Enter the port number to access the POP3 server using SSL/TLS. The SSL/TLS port number depends on the port setting in the POP3 server. Generally "995" is used.
12	POP3 Client Connection Timeout(1-180)	Enter a timeout period for quitting communication when no response is received from the POP3 server. Specify within the range from 1 to 180 seconds. "30" is set as the default.

## ❑ Setting up FTP Client

In FTP Client, you can specify the default port number used for the Save as file using the FTP protocol.

	Item name	Description
1	SSL/TLS Setting	Specify the certificate used in the SSL/TLS. <ul style="list-style-type: none"> <li>• <b>Verify with imported CA certification(s)</b> – Select this to use the registered certificate(s).</li> <li>• <b>Accept all certificates without CA</b> – Select this to use all certificates.</li> </ul>
2	Default Port Number	Enter the port number to access the FTP site. The port number depends on the port setting in the FTP site. You can enter a value in the range from 1 to 65535. Generally the default value "21" is used.

## ❑ Setting up Bonjour

In Bonjour, you can enable or disable the Bonjour networking that is available for Mac OS X.

	Item name	Description
1	Enable Bonjour	Select whether Bonjour is enabled or disabled. [Enable] is set as the default.

	Item name	Description
2	Link-Local Host Name	Enter the DNS host name of this equipment. You can enter up to 127 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Service Name	Enter the device name of this equipment that will be displayed in the Bonjour network. You can enter up to 63 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).

## □ Setting up SNMP

In SNMP Network Service, you can enable or disable the SNMP to monitor the device status using a network monitoring utility. If an administrator wants to monitor the device status with a monitoring utility, programmed to match the MIB, you must enable the SNMP and SNMP Traps.

The screenshot shows the SNMP configuration page with the following settings and callouts:

- 1**: Enable SNMP V1/V2 (Set to Enable)
- 2**: Read Community (Set to public)
- 3**: Read Write Community (Set to private)
- 4**: Enable SNMP V3 (Set to Disable)
- 5**: SNMP V3 User Information table:
 

Number	User Name	Authentication Protocol	Privacy Protocol	Permissions Level
<input type="checkbox"/> 1	User001	HMAC-MD5	None	Administrator
- 6**: Enable SNMP V3 Trap (Set to Disable)
- 7**: SNMP V3 Trap User Name (Empty)
- 8**: SNMP V3 Trap Authentication Protocol (Set to HMAC-MD5)
- 9**: SNMP V3 Trap Authentication Password (Empty)
- 10**: SNMP V3 Trap Privacy Protocol (Set to None)
- 11**: SNMP V3 Trap Privacy Password (Empty)
- 12**: Enable Authentication Trap (Set to Enable)
- 13**: Enable Alerts Trap (Set to Enable)
- 14**: IP Trap Address1 through IP Trap Address10 (All set to 0.0.0.0)
- 15**: IP Trap Community (Set to public)
- 16**: IPX Trap Address (Empty)

	Item name	Description
1	Enable SNMP V1/V2	Select whether SNMP V1/V2 monitoring with MIB is enabled or disabled. This must be enabled to allow users to connect using TopAccessDocMon, TWAIN driver, File Downloader, or the AddressBook Viewer. [Enable] is set as the default.

	Item name	Description
2	Read Community	Enter the SNMP read community name for the SNMP access. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). "public" is set as the default.
	<b>Note</b>	<ul style="list-style-type: none"> <li>• It is recommended to change the default Read Community name for security reasons.</li> <li>• If changing the Read Community name, match the setting with the applications in use. Otherwise, applications that use MIB (TopAccess, TWAIN driver, File Downloader, and AddressBook Viewer) will become unavailable. The SNMP communication of the printer driver also will be unavailable, so that obtaining the configurations, confirming the department code, and obtaining the available boxes in e-Filing will be disabled.</li> <li>• When you leave the [Read Write Community] option blank, the SNMP communication between the SNMP Browser of the Client computer and this equipment will be disabled.</li> </ul>
3	Read Write Community	Enter the SNMP Read Write community name for the SNMP access. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). "private" is set as the default.
	<b>Note</b>	<ul style="list-style-type: none"> <li>• It is recommended to change the default Read Write Community name for security reasons.</li> <li>• If changing the Read Write Community name, match the setting with the applications in use. Otherwise, applications that use MIB (TopAccess, TWAIN driver, File Downloader, and AddressBook Viewer) will become unavailable. The SNMP communication of the printer driver also will be unavailable, so that obtaining the configurations, confirming the department code, and obtaining the available boxes in e-Filing will be disabled.</li> </ul>
4	Enable SNMP V3	Select whether SNMP V3 monitoring with MIB is enabled or disabled. This must be enabled to allow users to connect using TopAccessDocMon, TWAIN driver, File Downloader and the AddressBook Viewer.
5	SNMP V3 User Information	SNMP V3 user information registered into this equipment is displayed in a list. SNMP V3 user information can be registered, edited, deleted or exported. For the details, see the following: <ul style="list-style-type: none"> <li>📖 P.283 "Registering or editing SNMP V3 user information"</li> <li>📖 P.284 "Exporting SNMP V3 user information"</li> <li>📖 P.285 "Deleting SNMP V3 user information"</li> </ul>
6	Enable SNMP V3 Trap	Select whether SNMP V3 Trap is sent or not. [Disable] is set as the default.
7	SNMP V3 Trap User Name	Enter an SNMP V3 Trap User Name. You can enter up to 31 alphanumerical characters and symbols.
8	SNMP V3 Trap Authentication Protocol	Select an authentication protocol. <ul style="list-style-type: none"> <li>• <b>HMAC-MD5</b> — Select this to use HMAC-MD5.</li> <li>• <b>HMAC-SHA</b> — Select this to use HMAC-SHA.</li> </ul>
9	SNMP V3 Trap Authentication Password	Enter an authentication password. You can enter up to 31 alphanumerical characters and symbols.
10	SNMP V3 Trap Privacy Protocol	Select a protocol for data encryption. <ul style="list-style-type: none"> <li>• <b>None</b> — Select this not to encrypt data.</li> <li>• <b>CBC-DES</b> — Select this to use CBC-DES.</li> <li>• <b>CFB-AES-128</b> — Select this to use AES-128 (CFB mode).</li> </ul>
11	SNMP V3 Trap Privacy Password	Enter a privacy password. You can enter up to 31 alphanumerical characters and symbols.
12	Enable Authentication Trap	Select whether to send SNMP Traps when this equipment is accessed using SNMP V1/V2 from a different read community. [Enable] is set as the default.

	Item name	Description
13	Enable Alerts Trap	Select whether to send SNMP V1/V2 Traps when an alert condition occurs. [Enable] is set as the default.
14	IP Trap Address 1 to 10	Enter the IP address where the SNMP Traps will be sent. You can specify up to 10 addresses. Specify within the range from 0 0 0 0 to 255 255 255 255.
15	IP Trap Community	Enter the trap community name for the IP Traps. You can enter up to 31 alphanumerical characters and symbols. "public" is set as the default.
16	IPX Trap Address	Enter the IPX address where the SNMP Traps will be sent. You can enter up to 20 alphanumerical characters and symbols.
	<b>Note</b>	<p>When you want to use a user name registered in the SNMP V3 User Information list as an SNMP V3 Trap User Name, you must enter the same protocols and passwords registered for the authentication protocol, authentication password (not displayed on the list), privacy protocol and password (not displayed on the list) into the fields such as [SNMP V3 Trap Authentication Protocol], [SNMP V3 Trap Authentication Password], [SNMP V3 Trap Privacy Protocol] and [SNMP V3 Trap Privacy Password].</p> <p>If they do not match, information registered in the list will be adopted.</p>

### [Create SNMP V3 User Information] screen

You can display this screen by clicking the [New] button in the Create SNMP V3 User Information page.

#### Tip

Clicking [Save] on the [Create SNMP V3 User Information] screen instantly registers the SNMP V3 user information, enabling the registered user to access this equipment via SNMP over a network.

	Item name	Description
1	Context Name	Displays the context name.
2	User Name	Enter the user name. You can enter up to 31 alphanumerical characters and symbols.
3	Authentication Protocol	<p>Select an authentication protocol.</p> <ul style="list-style-type: none"> <li>• <b>HMAC-MD5</b> — Select this to use HMAC-MD5.</li> <li>• <b>HMAC-SHA</b> — Select this to use HMAC-SHA.</li> </ul>
4	Authentication Password	Enter the password when the Authentication option is enabled. You can enter up to 31 characters.
5	Privacy Protocol	<p>Select a protocol for data encryption.</p> <ul style="list-style-type: none"> <li>• <b>None</b> — Select this not to encrypt data.</li> <li>• <b>CBC-DES</b> — Select this to use CBC-DES.</li> <li>• <b>CFB-AES-128</b> — Select this to use AES-128 (CFB mode).</li> </ul>



	Item name	Description
6	Privacy Password	Enter the password for the user information. You can enter up to 31 alphanumerical characters and symbols.
7	Permissions Level	Select the access permission level of the SNMP V3 user. <ul style="list-style-type: none"> <li>• <b>General User</b> — Select this to permit only the reading of data.</li> <li>• <b>Administrator</b> — Select this to permit both the reading and writing of data.</li> </ul>

## ❑ Setting up SLP

When SLP is enabled, this equipment becomes a Service Agent that responds to requests from a User Agent for searching particular services and registers services to a Directory Agent.


**Tip**

The SLP setting only supports the print services shown below.  
Raw TCP print, LPD print, IPP print, WSD print, SMB print, FTP print

**Note**

### About the “printer-location” attribute of SLP

SLP has an attribute called “printer-location” as one of the services provided. The information of “printer-location” is the device setting information on the [General] submenu of the [Setup] menu on the [Administration] tab page, and that of the [Location] field of [Device Information] on the [Device] tab page. Turn the equipment off and on if you have changed [Location] from TopAccess. The change is reflected in “printer-location” of SLP after the equipment is restarted.

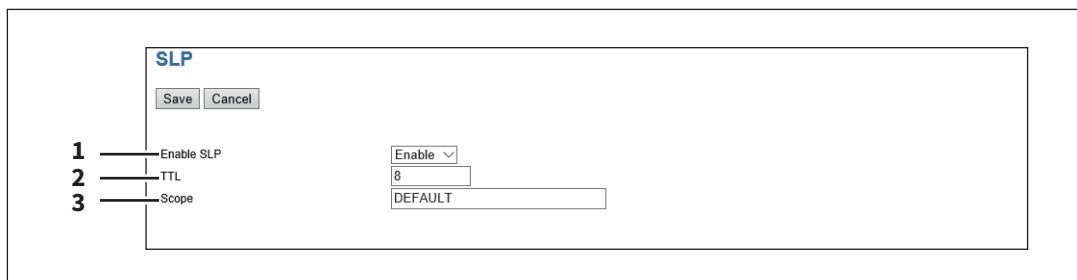

	Item name	Description
1	Enable SLP	Select whether SLP service is enabled or disabled. [Enable] is set as the default.
2	TTL	Set TTL (Time To Live, a scope in the network that provides SLP service). This is to enable the communication among User Agents and Directory Agents located on different networks.
3	Scope	Set this for specifying the scope of groups that provide SLP services. The default value is “DEFAULT”.

**Tip**

- More than one group can be entered for [Scope] by separating them with a comma.
- Characters ( ) \ ! < = > ~ ; \* + cannot be entered in the scope.
- Do not leave this field blank or the SLP setting will be disabled.
- You can search a particular service using Konqueror (SUSE Linux) or SLPSNOOP utility (Novell client) which is a User Agent (UA).

## ❑ Setting up LLTD

Enable this setting for confirming the device connection status, installing devices or accessing the TopAccess. This setting also allows you to discover the desired device over the local network and view device information such as location, IP address, MAC address or profile on the Network Map under the Windows 7/Windows Server 2008 environment.

	Item name	Description
1	Enable LLTD	Select whether the LLTD setting is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables the LLTD.</li> <li>• <b>Disable</b> — Disables the LLTD.</li> </ul>
2	Device Name	Enter a device name to be displayed on the Network Map. You can enter up to 16 characters and symbols other than =, ; (semicolon), #, and \ (backslash).


## ❑ Syslog Setting

Specify these items when sending message logs to a syslog server using syslog.

### Note


Be sure to confirm that message logs are sent to a Syslog server regularly.

	Item name	Description
1	Enable Syslog	Specify whether or not to enable Syslog transmission.
2	Server IP Address/Host Name	Specify the IP address or host name of the Syslog server. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Port Number	Specify the port number to communicate with the Syslog server. You can enter a value in the range from 1 to 65535. Generally the default value “514” is used.

	Item name	Description
4	Protocol	Specify the communications protocol. <ul style="list-style-type: none"> <li>• <b>TCP</b> — Select this to use TCP only.</li> <li>• <b>UDP</b> — Select this to use UDP only.</li> </ul>
5	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the Syslog server. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the SSL/TLS for POP3 transmission.</li> <li>• <b>Verify with imported CA certification(s)</b> — Select this to enable the SSL/TLS using the imported CA certificate.</li> <li>• <b>Accept all certificates without CA</b> — Select this to enable the SSL/TLS without using imported CA certificate.</li> <li>• When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment.   P.324 “[Security] How to Set and How to Operate”</li> <li>• Not all operating systems support SSL/TLS for all protocols.</li> </ul>
6	Severity	Specify the log type to be notified. <ul style="list-style-type: none"> <li>• <b>Error</b> — Notifies when an error occurs.</li> <li>• <b>Warning</b> — Notifies when a warning occurs.</li> <li>• <b>Information</b> — Notifies information.</li> </ul>
7	Facility	Specify the log content to be notified. <ul style="list-style-type: none"> <li>• <b>Security/Authorization</b> — Security/Authorization log.</li> <li>• <b>Local Use0</b> — Log that is other than the above.</li> <li>• <b>Local Use1 (Job Log)</b> — Job log</li> </ul>
	Tip	Specify both if you want to specify “Severity” and “Facility”.

## ❑ Setting up IPX/SPX

You can set the IPX/SPX protocol to enable the communication over IPX/SPX. The IPX/SPX must be configured to enable Novell printing as well as the IPX/SPX “Save as File” function with NetWare server over IPX/SPX.

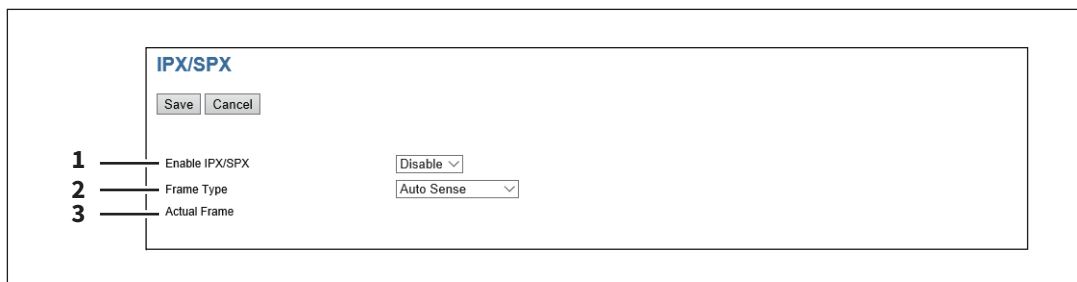

	Item name	Description
1	Enable IPX/SPX	Select whether the IPX/SPX protocol is enabled or disabled. Enable this when configuring Novell printing over the IPX/SPX network. [Disable] is set as the default.
2	Frame Type	Select the desired frame type for IPX/SPX. <ul style="list-style-type: none"> <li>• <b>Auto Sense</b> — Select this to use an appropriate frame type that the equipment found first.</li> <li>• <b>IEEE 802.3/Ethernet II/IEEE 802.3 Snap/IEEE 802.2</b> — Instead of [Auto Sense], select the frame types to be used from these options.</li> </ul>

	Item name	Description
3	Actual Frame	Displays the actual frame type of the equipment.

## ❑ Setting up NetWare

In NetWare Session, you can set the NetWare Bindery or NDS service. This must be set when configuring a Novell printing environment.

	Item name	Description
1	Enable NetWare	Select whether NetWare is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables NetWare.</li> <li>• <b>Disable</b> — Disables NetWare.</li> </ul>
2	Enable Bindery	Select whether the NetWare Bindery mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in the bindery mode, you must enable this.
3	Enable NDS	Select whether the NetWare NDS mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in NDS mode, you must enable this. When this is enabled, you should also specify the context and tree for the NDS.
4	Context	Enter the NDS context where the NetWare print server for this equipment is located.
5	Tree	Enter the NDS tree.
6	Preferred File Server	Enter the NetWare server name in which this equipment preferentially searches for the queues.

## ❑ Setting up AppleTalk

You can set the protocol to enable communication over AppleTalk. AppleTalk must be configured to enable AppleTalk printing from Mac computers.

	Item name	Description
1	Enable Apple Talk	Select whether the AppleTalk protocol is enabled or disabled. Enable this when configuring AppleTalk printing. [Disable] is set as the default.
2	Device Name	Enter the device name of the equipment that will be displayed in the AppleTalk network. You can enter up to 32 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Desired Zone	Enter the zone name where the equipment will connect — if required. You can enter up to 32 alphanumeric characters and symbols other than =, ; (semicolon), #, and \ (backslash). The equipment will connect to the default zone if you enter “*”.

## ❑ VNC Setting

You can use a computer or a mobile terminal such as a tablet and a smartphone to check and operate the control panel.

### Note

- The default password for this VNC function is “d9kvgn”. Be sure to change it before using this function. Specify a password with six or more and eight or less alphanumeric letters.
- You can use only one computer or mobile terminal for the VNC function.

### Tip

- It is recommended that you use UltraVNC (client software) on Windows 8.1 or later for the VNC function.
- When this VNC function is enabled, the equipment does not enter the Super Sleep mode.

	Item name	Description
1	Enable VNC Function	Select whether the VNC function is enabled or disabled. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables the VNC function.</li> <li>• <b>Disable</b> — Disables the VNC function.</li> </ul>
2	Old Password	Enter the old password for the VNC function.
3	New Password	Enter a new password for the VNC function.
4	Retype Password	Retype the new password for the VNC function.
5	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the VNC function. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Enables the VNC function.</li> <li>• <b>Disable</b> — Disables the VNC function.</li> </ul>

## ■ Copier settings

You can specify copier settings.

📖 P.226 “Setting up Default setting”

📖 P.228 “Setting up Copy Job Enforcement Continue”

### Tip

The [Copier] submenu can be accessed from the [Setup] menu on the [Administration] tab.


See the following pages for how to access it and information on the [Setup] menu:

📖 P.15 “Access Policy Mode”

📖 P.165 “[Setup] Item List”

## □ Setting up Default setting

In Default setting, you can set the default copier settings that apply for copy operation from the touch panel.

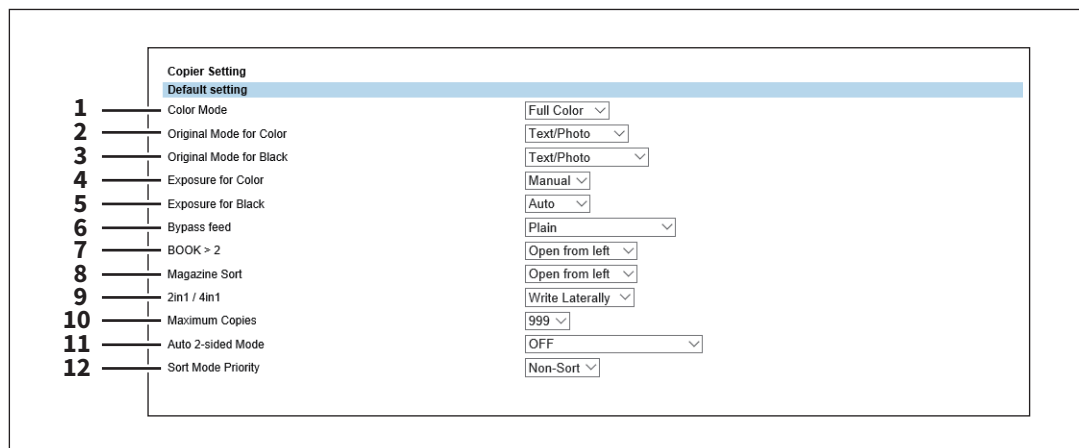

	Item name	Description
1	Color Mode <sup>*1</sup>	Select the default color mode for copying. <ul style="list-style-type: none"> <li>• <b>Auto Color</b> — The equipment automatically judges the type of each color on originals. Colored originals are copied in full color and black and white originals are copied in black and white.</li> <li>• <b>Full Color</b> — All originals are copied in full color.</li> <li>• <b>Black</b> — All originals are copied in black and white.</li> </ul>
	<b>Note</b>	<ul style="list-style-type: none"> <li>• Only [Black] can be selected when the No Limit Black function is enabled. For the details of the No Limit Black function, refer to the <b>MFP Management Guide</b>.</li> </ul>
2	Original Mode for Color <sup>*1</sup>	Select the default original mode for color originals. <ul style="list-style-type: none"> <li>• <b>Text/Photo</b> — Originals with text and photographs mixed.</li> <li>• <b>Text</b> — Originals with text (or text and line art) only.</li> <li>• <b>Photo</b> — Originals with general photographs on photographic printing paper.</li> <li>• <b>Printed Image</b> — Originals with photogravure (e.g. magazine, brochure).</li> <li>• <b>Map</b> — Originals with fine illustrations or text.</li> </ul>


	Item name	Description
3	Original Mode for Black <sup>*1</sup> / Original Mode	Select the default original mode for black and white originals. <ul style="list-style-type: none"> <li>• <b>Text/Photo</b> — Originals with text and photographs mixed.</li> <li>• <b>Text</b> — Originals with text (or text and line art) only.</li> <li>• <b>Photo</b> — Originals with photographs.</li> <li>• <b>Image Smoothing</b> <sup>*2</sup> — Originals with text and photographs mixed (especially originals requiring higher reproducibility on photos).</li> </ul>
4	Exposure for Color <sup>*1</sup>	Select the type of image density for color copies. <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select this to set the Auto mode as the default exposure for color copy. The Auto mode automatically detects the density of the original to make copies at the optimum exposure.</li> <li>• <b>Manual</b> — Select this to set the Manual mode as the default exposure for color copy. The manual mode allows you to manually specify the density of the original.</li> </ul>
5	Exposure for Black <sup>*1</sup> / Exposure	Select the type of image density for black and white copies. <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select this to set the Auto mode as the default exposure for black and white copies. The Auto mode automatically detects the density of the original to make copies at the optimum exposure.</li> <li>• <b>Manual</b> — Select this to set the Manual mode as the default exposure for black and white copies. The manual mode allows you to manually specify the density of the original.</li> </ul>
6	Bypass feed	Select the default paper type for the Bypass Tray.
7	BOOK > 2 <sup>*2</sup>	Select the default page arrangement of the book-type originals for Book to 2-sided copies. Available only when the Automatic Duplexing Unit is installed. <ul style="list-style-type: none"> <li>• <b>Open from left</b> — Select this to copy the booklet originals that can be read from the left page.</li> <li>• <b>Open from right</b> — Select this to copy the booklet originals that can be read from the right page.</li> </ul>
8	Magazine Sort <sup>*2</sup>	Select the default page arrangement for magazine sort copies. Available only when the Automatic Duplexing Unit is installed. <ul style="list-style-type: none"> <li>• <b>Open from left</b> — Select this to create a booklet that can be read from the left page.</li> <li>• <b>Open from right</b> — Select this to create a booklet that can be read from the right page.</li> </ul>
9	2in1 / 4in1	Select the default page arrangement for 2in1/4in1 copies. <ul style="list-style-type: none"> <li>• <b>Write Laterally</b> — Select this to copy two pages or four pages from left to right or from top to bottom. When the portrait originals are copied using 2in1 or 4in1, this equipment copies them from left to right. When the landscape originals are copied using 2in1 or 4in1, this equipment copies them from top to bottom.</li> <li>• <b>Write Vertically</b> — Select this to copy each two pages or four pages from right to left or from top to bottom. When the portrait originals are copied using 2in1 or 4in1, this equipment copies them from right to left. When the landscape originals are copied using 2in1 or 4in1, this equipment copies them from top to bottom.</li> </ul>
10	Maximum Copies	Select the maximum numbers of pages that users can specify for copying. You can select from [9999] <sup>*2</sup> , [999], [99] or [9].

	Item name	Description
11	Auto 2-sided Mode	<p>Select how the 2-sided mode initially applies to copy settings when originals are set in the Reversing Automatic Document Feeder. Available only when the Reversing Automatic Document Feeder and the Automatic Duplexing Unit are installed.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to initially apply [1-&gt;1 SIMPLEX] when originals are set in the Reversing Automatic Document Feeder.</li> <li>• <b>One-sided/Double-sided</b> — Select this to initially apply [1-&gt;2 DUPLEX] when originals are set in the Reversing Automatic Document Feeder.</li> <li>• <b>Double-sided/Double-sided</b> — Select this to initially apply [2-&gt;2 DUPLEX] when originals are set in the Reversing Automatic Document Feeder.</li> <li>• <b>User Selection</b> — Select this to initially display the screen to select the 2-sided mode when originals are set in the Reversing Automatic Document Feeder.</li> </ul>
12	Sort Mode Priority	<p>Select the default sort mode for copying.</p> <ul style="list-style-type: none"> <li>• <b>Non-Sort</b> — Copies exit without sorting.</li> <li>• <b>Staple</b> — Copies exit with their corner stapled.</li> <li>• <b>Sort</b> — Copies exit in the same page order as the originals one set after another.</li> <li>• <b>Group</b> — Copies grouped by page exit.</li> </ul>

\*1 Available only for models that support color printing.

\*2 This function is not available for some models.

## □ Setting up Copy Job Enforcement Continue

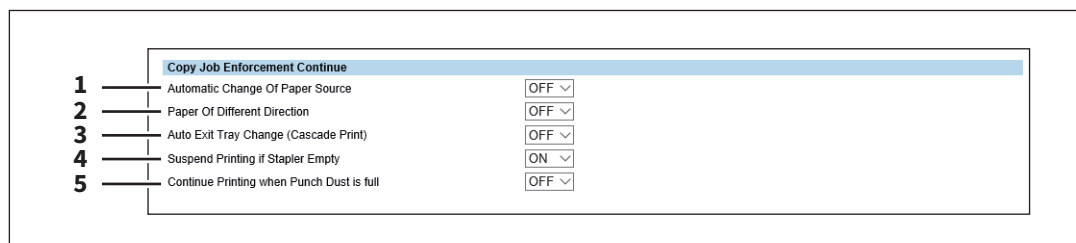

	Item name	Description
1	Automatic Change Of Paper Source	<p>Specify whether or not to change the paper source automatically when the size of the original and the paper in the paper source do not match.</p> <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to change the paper source and continue processing the job.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
2	Paper Of Different Direction <sup>*1</sup>	<p>Specify whether or not to copy on paper which is loaded in the paper source in a different orientation from the original.</p> <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue processing the job by copying on paper in a different orientation.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
3	Auto Exit Tray Change (Cascade Print)	<p>Specify whether or not to switch the receiving tray automatically.</p> <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue processing the job by switching the receiving tray.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>



	<b>Item name</b>	<b>Description</b>
<b>4</b>	Suspend Printing if Stapler Empty	Specify whether to stop printing when staples run out. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to stop printing when staples run out.</li> <li>• <b>OFF</b> — Select this not to stop printing when staples run out.</li> </ul>
<b>5</b>	Continue Printing when Punch Dust is full <sup>*1</sup>	Specify whether to continue printing when the punch dust bin is full. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue printing even when the punch dust bin is full.</li> <li>• <b>OFF</b> — Select this to stop printing when the punch dust bin is full.</li> </ul>

\*1 This function is not available for some models.



	Item name	Description
2	Fax Number	Enter the fax number of this equipment. This fax number will be printed at the leading edge of all documents transmitted from Line 1.
3	Line2 Number	Enter the fax number for Line 2 of this equipment, if installed. This fax number will be printed at the leading edge of all documents transmitted from Line 2.
4	Monitor Volume	Select the volume of the line monitor during transmission.
5	Completion Tone Volume	Select the volume of the line monitor when completing the printing of a received fax.
6	Reception Mode	Select how this equipment activates when a fax is received. <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select this to automatically receive incoming originals when the bell rings. Select this when the line is being used exclusively by the fax transmission.</li> <li>• <b>Manual</b> — Select this to manually receive incoming originals after pressing the [Start] button on the control panel.</li> </ul>
7	Dial Type	Select the dial type for Line 1. <ul style="list-style-type: none"> <li>• <b>DP</b> — Select this to use the Dial Pulse type for Line 1.</li> <li>• <b>MF</b> — Select this to use Multi-frequency type for Line 1.</li> </ul>
	Tip	The following items are displayed for some models. <ul style="list-style-type: none"> <li>• 10 PPS — Select this to use the Dial Pulse type for 10 PPS.</li> <li>• 20 PPS — Select this to use the Dial Pulse type for 20 PPS.</li> <li>• PB — Select this to use a tone type push phone line.</li> </ul>
8	Dial Type(Line 2) <sup>*1</sup>	Select the dial type for Line 2, if installed. <ul style="list-style-type: none"> <li>• <b>DP</b> — Select this to use the Dial Pulse type for Line 2.</li> <li>• <b>MF</b> — Select this to use Multi-frequency type for Line 2.</li> </ul>
	Tip	The following items are displayed for some models. <ul style="list-style-type: none"> <li>• 10 PPS — Select this to use the Dial Pulse type for 10 PPS.</li> <li>• 20 PPS — Select this to use the Dial Pulse type for 20 PPS.</li> <li>• PB — Select this to use a tone type push phone line.</li> </ul>
9	Line-2 Mode <sup>*1</sup>	Select how Line 2 is used, if installed. <ul style="list-style-type: none"> <li>• <b>Tx / Rx</b> — Select this to use Line 2 for sending and receiving a fax.</li> <li>• <b>Rx Only (24 Hour)</b> — Select this to use Line 2 only for receiving a fax.</li> <li>• <b>Rx Only (Timer)</b> — Select this to use Line 2 only for receiving a fax during specified time. When this is selected, enter the start time and end time that Line 2 is used for only receiving a fax.</li> </ul>
10	Resolution	Select the default resolution for sending faxes. <ul style="list-style-type: none"> <li>• <b>Standard</b> — Select this to use the standard mode as the default resolution. This mode is suitable when you are frequently transmitting text documents with normal size characters.</li> <li>• <b>Fine</b> — Select this to use the fine mode as the default resolution. This mode is suitable when you are transmitting documents with small size characters or fine drawings.</li> <li>• <b>Ultra Fine</b> — Select this to use the ultra fine mode as the default resolution. This mode is suitable when you are transmitting documents with very small size characters or detailed drawings.</li> </ul>

	Item name	Description
11	Original Mode	Select the default image quality mode for sending faxes. <ul style="list-style-type: none"> <li>• <b>Text</b> — Select this to set the Text mode as the default image quality mode appropriate for sending text originals.</li> <li>• <b>Text/Photo</b> — Select this to set the Text/Photo mode as the default image quality mode appropriate for sending originals containing both text and photos.</li> <li>• <b>Photo</b> — Select this to set the Photo mode as the default image quality mode appropriate for sending photo originals.</li> </ul>
12	Exposure	Select the default exposure for sending faxes. Select [Auto] to automatically apply the ideal contrast according to the original or select the contrast manually in 11 stages.
13	TTI	Select whether to print a transmission header (TTI) on received faxes to identify the sender of received faxes.
	<b>Note</b>	The printed time is the transmission time of each page.
14	RTI	Select whether to print a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
15	ECM	Select whether to enable or disable the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
16	Discard	Select whether to discard the lower portion of the received fax image if it is larger than the recording paper.
17	Reduction	Select whether to reduce the received fax image if it is larger than the effective printing area of the recording paper.
18	Duplex Print	Select whether to print the received fax images on both sides of the recording paper. Available only when the Automatic Duplexing Unit is installed.
19	Rotate Sort <sup>*1</sup>	Select whether to rotate the output direction in the tray for each reception.
20	Recovery Transmit	Select whether to re-transmit a fax after failing the initially specified number of redial attempts. When this is enabled, select the stored time length from 1 to 24 hours.
21	Journal Auto Print	Select whether to automatically print a transmission and reception journal after every transmission completed.
22	Memory Transmission Report	Select how to print a result report after a memory transmission. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to not print a memory transmission report.</li> <li>• <b>Always</b> — Select this to print a memory transmission report with all page images for each memory transmission completed.</li> <li>• <b>ON ERROR</b> — Select this to print a memory transmission report with all page images only when the memory transmission is not successfully completed.</li> <li>• <b>Always (Print 1st Page Image)</b> — Select this to print a memory transmission report with the 1st page image for each memory transmission completed.</li> <li>• <b>ON ERROR (Print 1st Page Image)</b> — Select this to print a memory transmission report with the 1st page image only when the memory transmission is not successful.</li> </ul>

	Item name	Description
23	Multi Transmission Report	<p>Select how to print a result report after a multi-address transmission.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to not print a multi-address transmission report.</li> <li>• <b>Always</b> — Select this to print a multi-address transmission report with all page images for each multi-address transmission completed.</li> <li>• <b>ON ERROR</b> — Select this to print a multi-address transmission report with all page images only when the multi-address transmission is not successfully completed.</li> <li>• <b>Always (Print 1st Page Image)</b> — Select this to print a multi-address transmission report with the 1st page image for each multi-address transmission completed.</li> <li>• <b>ON ERROR (Print 1st Page Image)</b> — Select this to print a multi-address transmission report with the 1st page image only when the multi-address transmission is not successful.</li> </ul>
24	Polling Report	<p>Select how to print a result report after a multi-polling reception.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to not print a multi-polling report.</li> <li>• <b>Always</b> — Select this to print a multi-polling report for each multi-polling reception.</li> <li>• <b>ON ERROR</b> — Select this to print a multi-polling report only when the multi-polling reception is not successful.</li> </ul>
25	Relay Originator	<p>Select how to print a result report after a relay transmission.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to not print a relay station report.</li> <li>• <b>Always</b> — Select this to print a relay station report with all page images for each relay transmission completed.</li> <li>• <b>ON ERROR</b> — Select this to print a relay station report with all page images only when the relay transmission is not successful.</li> <li>• <b>Always (Print 1st Page Image)</b> — Select this to print a relay station report with the 1st page image for each relay transmission completed.</li> <li>• <b>ON ERROR (Print 1st Page Image)</b> — Select this to print a relay station report with the 1st page image only when the relay transmission is not successful.</li> </ul>
26	RX End Tone	<p>Select how to sound the RX end tone after the completion of reception.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — The RX end tone does not sound.</li> <li>• <b>Print End</b> — The RX end tone sounds at the completion of printing.</li> <li>• <b>Receive End</b> — The RX end tone sounds at the completion of reception.</li> </ul>
27	TX End Tone	<p>Select how to sound the TX end tone after the completion of transmission.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — The TX end tone does not sound.</li> <li>• <b>Always</b> — The TX end tone sounds at the completion of transmission.</li> <li>• <b>ON ERROR</b> — Sounds in the case of a transmission failure.</li> <li>• <b>Normal End</b> — Sounds at the normal completion of transmission.</li> </ul>
28	Line Monitor	<p>Select this to check the connection with the remote fax by confirming Line Monitor.</p> <ul style="list-style-type: none"> <li>• <b>OFF</b> — Line Monitor not confirmed</li> <li>• <b>ON</b> — Line Monitor confirmed</li> </ul>







	Item name	Description
29	Secure Receive	<p>You can set the Secure Receive function to store received fax jobs in the equipment without printing them.</p> <p>With this function, you can prevent the leaking of confidential information in a fax received when no people are present in your office, such as nighttime or holidays, or when an unspecified number of people visit your office.</p> <ul style="list-style-type: none"> <li> <b>Enable</b> — Enables the Secure Receive function.           <p>To print the fax jobs the Secure Receive function received, you must set [Line1 : Password] and [Retype Password] or [Line2 : Password]*1 and [Retype Password] *1. For the password, you can enter up to 20 alphanumerical characters and symbols (! # ( ) * + , - . / : ; = ? @ \$ ^ _ ` {   } ~ \ space).</p> </li> <li> <b>Disable</b> — Disables the Secure Receive function.           </li> <li> <b>Weekly Schedule</b> — Sets whether the Secure Receive function is enabled or disabled for each day of the week. You can set the time to enable and disable the Secure Receive function (24-hour display).           <ul style="list-style-type: none"> <li>- For a day on which you want to enable the Secure Receive function all day, specify “00:00” for “Disable” and “00:00” for Enable.</li> <li>- For a day on which you want to disable the Secure Receive function all day, specify “00:00” for “Disable” and “24:00” for Enable.</li> </ul> <p>To print the fax jobs the Secure Receive function received, you must set [Line1 : Password] and [Retype Password] or [Line2 : Password] and [Retype Password]. For the password, you can enter up to 20 alphanumerical characters and symbols (! # ( ) * + , - . / : ; = ? @ \$ ^ _ ` {   } ~ \ space).</p> </li> </ul>

\*1 This function is not available for some models.

## Report Setting

You can select how to report fax results.

The screenshot shows the 'Report Setting' configuration page. It includes several sections: 'Select Agent' with checkboxes for Print, Save as file, and Email; 'User Authentication' with radio buttons for Local User and LDAP registered; '1st Destination' and '2nd Destination' text input fields; 'Email Setting' with fields for Subject, From Address, From Name, Body, and File Name; 'Save as file Setting' with fields for Destination and File Name; and 'Common Setting' with fields for File Format and Encryption.

	Item name	Description
1	[Select Agent] button	<p>You can make detailed settings by selecting one of the following items, and then clicking [Select Agent].</p> <p><b>Print</b> — Select this to print. There are no settings available in [Select Agent].</p> <p><b>Save as file</b> — Select this to save as a file. Click [Select Agent] to make settings for [Save as file Setting] and [Common Setting].</p> <p><b>Email</b> — Select this to send an email. Click [Select Agent] to make address settings, and settings for [Email Setting] and [Common Setting].</p>
2	Use login user address (User authentication)	<p>Set whether or not to use the E-mail address for a login user as the destination for E-mail transmission during user authentication. You can set the following items when you select this check box.</p> <p><b>Use Email Address which was registered Local User:</b> The E-mail address for a user set in MFP Local Authentication is used as the destination for E-mail transmission.</p> <p><b>Use Email Address which was LDAP registered:</b> The E-mail address for a server registered in LDAP Client is used as the destination for E-mail transmission. Click [Server Assignment]. Up to 4 LDAP servers can be assigned.   P.209 “LDAP Client settings”</p>
3	[1st Destination] / [2nd Destination] button	<p>This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to display the address list where you can set addresses.   P.58 “Destination Setting”</p>
4	[Email Setting] button	<p>This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to set the following items on the agent settings page for the Email settings.</p> <ul style="list-style-type: none"> <li>• Subject</li> <li>• From Address</li> <li>• From Name</li> <li>• Body</li> <li>• File Name</li> </ul> <p> P.66 “Email Setting”</p>
5	[Save as file Setting] button	<p>This is enabled when you select [Save as file] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to set the following items on the agent settings page for the Save as file settings.</p> <ul style="list-style-type: none"> <li>• Destination</li> <li>• File Name</li> </ul> <p> P.70 “Save as file Setting”</p>
6	[Common Setting] button	<p>This is enabled when you select [Email] or [Save as file] from Report Settings, and then click the [Select Agent] button.</p> <p>You can set the following items on the agent settings page.</p> <ul style="list-style-type: none"> <li>• File Format</li> <li>• Encryption</li> </ul> <p> P.66 “Email Setting”   P.70 “Save as file Setting”</p>

## ■ Save as file settings

You can configure the Save as file settings that apply to the Save as file operations.

- 📖 P.236 “Setting up Local Storage Path”
- 📖 P.237 “Setting up Storage Maintenance”
- 📖 P.237 “Setting up Destination”
- 📖 P.238 “Setting up Folder Name”
- 📖 P.238 “Setting up Format”
- 📖 P.239 “Setting up Single Page Data Saving Directory”
- 📖 P.240 “Setting up File Composition”
- 📖 P.240 “Setting up User Name and Password at User Authentication for Save as File”
- 📖 P.241 “Setting up Searching Interval”
- 📖 P.241 “Setting up Remote 1 and Remote 2 Settings”
- 📖 P.245 “Setting up N/W-Fax Destination”
- 📖 P.245 “Setting up N/W-Fax Folder”


### Tip

The [Save as file] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

## □ Setting up Local Storage Path

You can see the folder path where files are stored by the Save as file to local folder. You can open the local folder by browsing this equipment from a Windows network.

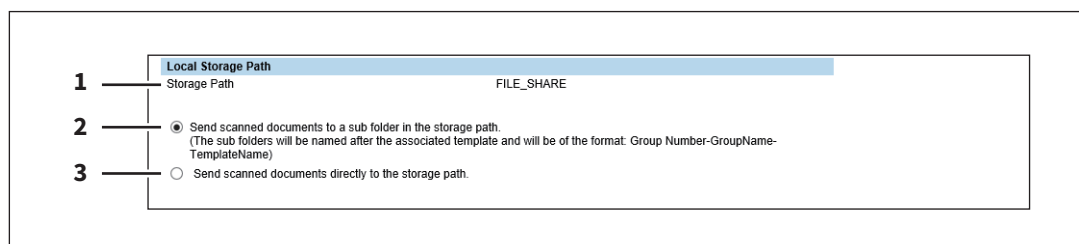

	Item name	Description
1	Storage Path	Displays the local storage path where files are stored when files are saved to the local folder by the Save as file functions.
2	Send scanned documents to a sub folder in the storage path.	Select this to save the files in the sub folder that is named as “Group Number-Group Name-Template Name”.
3	Send scanned documents directly to the storage path.	Select this to save the files directly in the storage path.




## ❑ Setting up Storage Maintenance

In Storage Maintenance, you can select how to delete files stored in the local folder.

### Note


The folder created when storing the files in the local folder will be deleted automatically when all files in the folder are deleted.

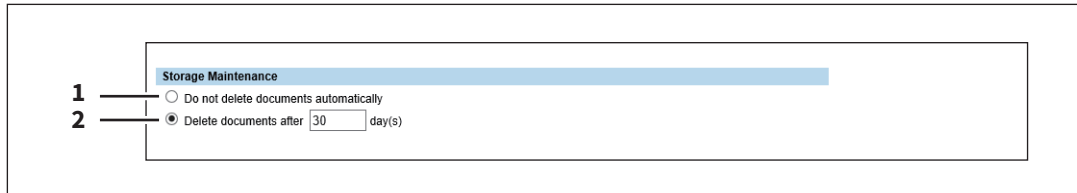

	Item name	Description
1	Do not delete documents automatically	Select this to delete files stored in the local folder manually. If you select this option, files saved in the shared folder will not be deleted automatically.
2	Delete documents after [ ] day(s)	Select this to automatically delete files stored in the local folder after a specified number of days. When this is selected, enter the number of days that the files are to remain. [30days] is set as the default.

## ❑ Setting up Destination


You can specify whether a network folder can be used for Save as file.

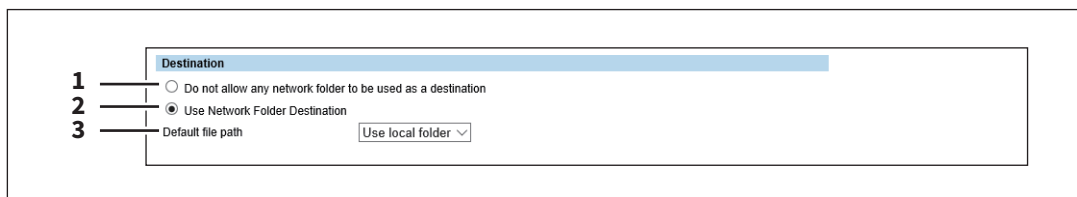

	Item name	Description
1	Do not allow any network folder to be used as a destination	You can specify that a network folder cannot be used for Save as file. When this is selected, users can only save a file in the local folder or USB media.
2	Use Network Folder Destination	You can specify that a network folder can be used for Save as file. When this is selected, set the Remote 1 and Remote 2 Settings to specify how users can select the network folders for Save as file destinations.
3	Default file path	Select the destination that will be set as the default destination when performing Save as file from the touch panel. <ul style="list-style-type: none"> <li>• <b>Use local folder</b> — Select this to save in a local folder.</li> <li>• <b>Remote 1</b> — Select this to save in the folder set in Remote 1.</li> <li>• <b>Remote 2</b> — Select this to save in the folder set in Remote 2.</li> </ul>

## ❑ Setting up Folder Name


You can select whether to add information related to this equipment or users to the name of a folder created automatically when you save files.

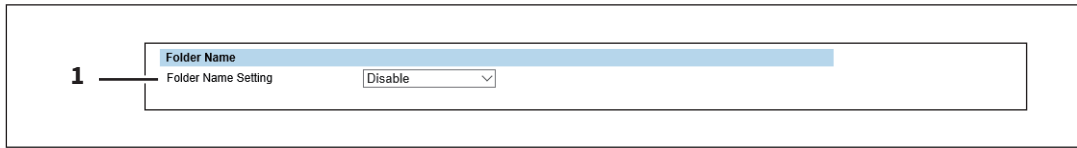

	Item name	Description
1	Folder Name Setting	<p>Select additional information of the name of a folder created when you save files.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this not to add any information.</li> <li>• <b>Add MachineName</b> — Select this to add the NetBIOS name of this equipment.</li> <li>• <b>Add UserName</b> — Select this to add a user name set in user authentication.</li> </ul>

## ❑ Setting up Format

You can set how to name files of the scanned images when you save them into the “FILE\_SHARE” folder of this equipment or USB.

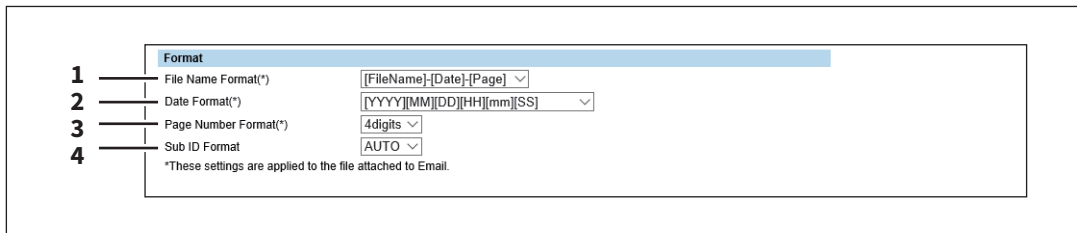


	Item name	Description
1	File Name Format	<p>Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format. The added information will also be applied to file names attached to E-mails.</p> <ul style="list-style-type: none"> <li>• <b>[FileName]-[Date]-[Page]</b></li> <li>• <b>[FileName]-[Page]-[Date]</b></li> <li>• <b>[Date]-[FileName]-[Page]</b></li> <li>• <b>[Date]-[Page]-[Filename]</b></li> <li>• <b>[Page]-[FileName]-[Date]</b></li> <li>• <b>[Page]-[Date]-[FileName]</b></li> <li>• <b>[FileName]_[Date]-[Page]</b></li> </ul>

	Item name	Description
2	Date Format	<p>Select how you add “date and time” of the file name selected in [File Name Format]. The added information will also be applied to file names attached to E-mails.</p> <ul style="list-style-type: none"> <li>• <b>[YYYY][MM][DD][HH][mm][SS]</b> — Year (4 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YY][MM][DD][HH][mm][SS]</b> — Year (2 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD]</b> — Year (4 digits), month, and day are added.</li> <li>• <b>[YY][MM][DD]</b> — Year (2 digits), month, and day are added.</li> <li>• <b>[HH][mm][SS]</b> — Hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD][HH][mm][SS][mm0]</b> — Year (4 digits), month, day, hour, minute, second and random number (2 digits and “0”) are added.</li> </ul>
3	Page Number Format	Select the number of digits of a page number applied to “Page” of the file name selected in [File Name Format] from 3 to 6. The added information will also be applied to file names attached to E-mails. [4digits] is set as the default.
4	Sub ID Format	This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [AUTO]. [AUTO] is selected by default. If [AUTO] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.

**❑ Setting up Single Page Data Saving Directory**


If [SINGLE] is selected in [MULTI/SINGLE PAGE] on the scan menu of this equipment, the scanned data are saved as a single-page file. This setting is to select whether a subfolder is created or not when you are saving a single-page file.

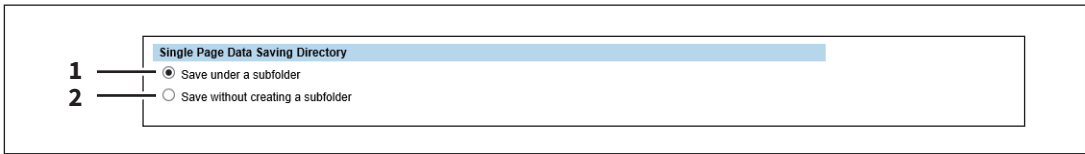

	Item name	Description
1	Save under a subfolder	A subfolder is created in a specified directory and you can save the file into it.
2	Save without creating a subfolder	A subfolder is not created and the file is saved in a specified directory.

## ❑ Setting up File Composition


If [SINGLE] is selected in [MULTI/SINGLE PAGE] on the scan menu of this equipment, the scanned data are saved as a single-page file. This setting is to select a page configuration of a single-page file to be saved. The added information will also be applied to file names attached to E-mails.

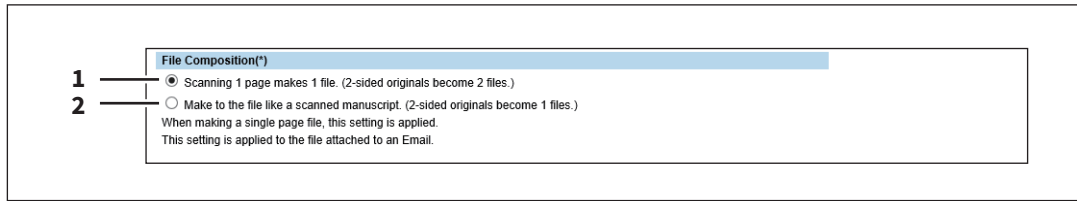

	Item name	Description
1	Scanning 1 page makes 1 file. (2-sided originals become 2 files.)	When 1 page of an original is scanned, the scanned data are saved as 1 file. When you scan 1 sheet of a 2-sided original, for example, the data of its front side are saved as 1 file and those of its back side are also saved as 1 file.
2	Make to the file like a scanned manuscript. (2-sided originals become 1 files.)	When 1 page of an original is scanned, the scanned data are saved as 1 file. When you scan 1 sheet of a 2-sided original, for example, the data of both the front and back sides (= 2 pages) are saved as 1 file.

## ❑ Setting up User Name and Password at User Authentication for Save as File


If user authentication is enabled, you can select whether a user name and a password used for user authentication are automatically applied to [LOGIN USER NAME] and [PASSWORD] to be used for saving files into a network folder (specified in REMOTE 1/2) or not. This setting is applied only when [Use Network Folder Destination] of the Destination setting for the Remote 1 or the Remote 2 is checked.

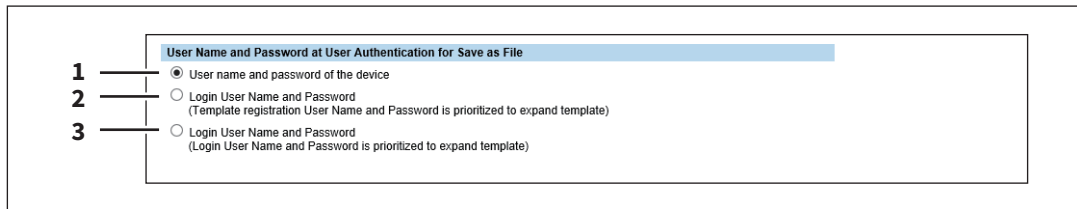

	Item name	Description
1	User name and password of the device	User names and passwords being logged in will not be applied. Enter [LOGIN USER NAME] and [PASSWORD] as required when scanning originals.
2	Login User Name and Password (Template registration User Name and Password is prioritized to expand template)	A user name and a password being logged in will be automatically applied. When a template is used, a user name and a password registered there will be automatically applied.
3	Login User Name and Password (Login User Name and Password is prioritized to expand template)	A user name and a password being logged in will be automatically applied. When a template is used, the user name and password being logged in will be applied.

## ❑ Setting up Searching Interval

Select the interval for searching expired files in the “FILE\_SHARE” folder. The content of this setting will also be applied to files in e-Filing boxes.

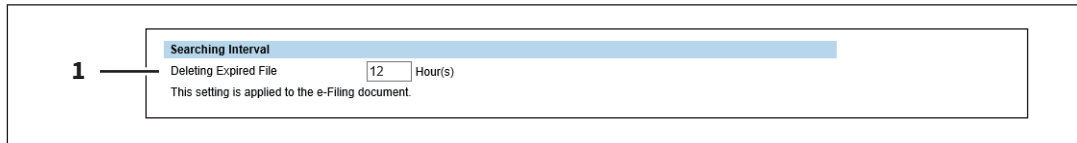


	Item name	Description
1	Deleting Expired File [ ] Hour(s)	This equipment searches expired files every time a specified period of time has passed. The period can be selected from 1 to 24 hours. 12 hours is set by default.
	Tip	You can set the expiration date of each file in the “FILE_SHARE” folder or whether to delete expired files or not using the items below. <a href="#">P.237 “Setting up Storage Maintenance”</a>

## ❑ Setting up Remote 1 and Remote 2 Settings

In Remote 1 and Remote 2, you can specify how users can select the network folders for Save as file destination when you select [Use Network Folder Destination] in the Destination setting. You can specify two network folders; Remote 1 and Remote 2. The setting items are the same for both Remote 1 and Remote 2.

### Note

The network folder as a destination must be set to be shared by all users.

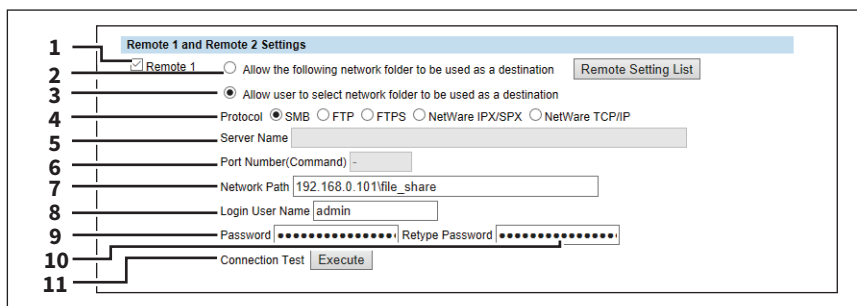


	Item name	Description
1	[Remote 1]/[Remote 2]	Select the remote network folder you want to use.
2	Allow the following network folder to be used as a destination	Select this to restrict users to select only the network folder that you have specified. Otherwise, select [Allow user to select network folder to be used as a destination]. <b>[Remote Setting List] button</b> — Sets a list of network folders for Save as file destination, which can be selected from Remote 1 and Remote 2. To select the specified setting list from the touch panel, you must select [Allow user to select network folder to be used as a destination]. <a href="#">P.243 “[Remote Setting List] screen”</a>

	Item name	Description
3	Allow user to select network folder to be used as a destination	Select this to allow users to specify a network folder as a destination. When the list of Save as file destinations has been set in [Remote Setting List], you can select a network folder from the list. Otherwise, select [Allow the following network folder to be used as a destination].
	Tip	If you want to allow users to specify either Remote 1 or Remote 2, select the one that is not set for the network folder as a destination and select [Allow user to select network folder to be used as a destination] of the selected folder.
4	Protocol	Select the protocol to be used for uploading a file to the network folder. <ul style="list-style-type: none"> <li>• <b>SMB</b> — Select this to send a file to the network folder using the SMB protocol.</li> <li>• <b>FTP</b> — Select this to send a file to the FTP server.</li> <li>• <b>FTPS</b> — Select this to send a file to the FTP server using FTP over SSL/TLS.</li> <li>• <b>NetWare IPX/SPX</b> — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.</li> <li>• <b>NetWare TCP/IP</b> — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.</li> </ul>
5	Server Name	When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “192.168.1.1” in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumeric characters and symbols.
6	Port Number(Command)	Enter the port number to be used for controls if you select [FTP] as the protocol. Generally “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and hyphens (-). “-” is set as the default.
7	Network Path	When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the “users\scanned” folder in the computer named “Client01”, enter “\\Client01\users\scanned”. When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “user/scanned”. When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the “sys\scan” folder in the NetWare file server, enter “\sys\scan”. You can enter up to 128 alphanumeric characters and symbols.
8	Login User Name	Enter the log-in user name to access an SMB server, an FTP server, or a NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. You can enter up to 32 alphanumeric characters and symbols other than <, >, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
9	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. You can enter up to 32 alphanumeric characters, symbols, and spaces. A single space only can also be entered.

	Item name	Description
10	Retype Password	Enter the same password again for a confirmation.
11	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.

### [Remote Setting List] screen


In this screen, you can set a list of network folders for Save as file destination, which can be selected from Remote 1 and Remote 2. You can register up to 30 items in the Remote Setting List.

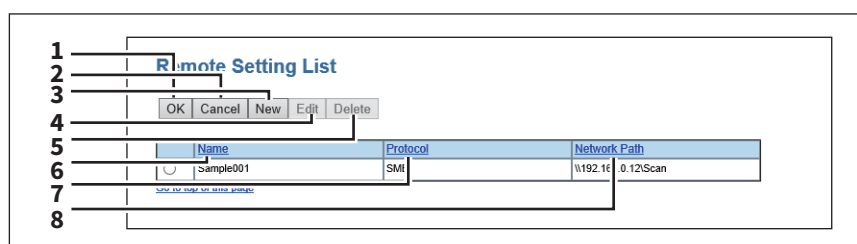

	Item name	Description
1	[OK] button	Registers the remote setting list.
2	[Cancel] button	Cancels the registration of the remote setting list.
3	[New] button	Sets a new remote setting. 📖 P.243 “[Remote Setting] screen”
4	[Edit] button	Edits the item selected in the remote setting list. 📖 P.243 “[Remote Setting] screen”
5	[Delete] button	Deletes the item selected in the remote setting list.
6	Name	Displays the name of the remote setting.
7	Protocol	Displays the protocol of the remote setting.
8	Network Path	Displays the network path of the remote setting.

### [Remote Setting] screen

In this screen, you can set the network folders for Save as file destination that are to be registered in the list.

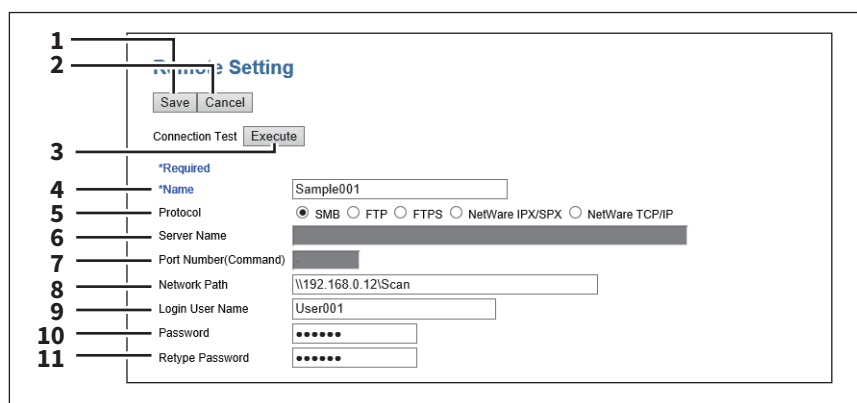

	Item name	Description
1	[Save] button	Saves the specified network folder for Save as file destination.
2	[Cancel] button	Cancels the settings.

	Item name	Description
3	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
4	Name	Enter the name of the network folder for Save as file destination.
5	Protocol	Select the protocol to be used for uploading a file to the network folder. <ul style="list-style-type: none"> <li>• <b>SMB</b> – Select this to send a file to the network folder using the SMB protocol.</li> <li>• <b>FTP</b> – Select this to send a file to the FTP server.</li> <li>• <b>FTPS</b> – Select this to send a file to the FTP server using FTP over SSL/TLS.</li> <li>• <b>NetWare IPX/SPX</b> – Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.</li> <li>• <b>NetWare TCP/IP</b> – Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.</li> </ul>
6	Server Name	When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “192.168.1.1” in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumeric characters and symbols.
7	Port Number(Command)	Enter the port number to be used for controls if you select [FTP] as the protocol. Generally “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and hyphens (-). “-” is set as the default.
8	Network Path	When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the “users\scanned” folder in the computer named “Client01”, enter “\\Client01\users\scanned”. When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “user/scanned”. When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the “sys\scan” folder in the NetWare file server, enter “\sys\scan”. You can enter up to 128 alphanumeric characters and symbols.
9	Login User Name	Enter the log-in user name to access an SMB server, an FTP server, or a NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. You can enter up to 32 alphanumeric characters and symbols other than <, >, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
10	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. You can enter up to 32 alphanumeric characters, symbols, and spaces. A single space only can also be entered.
11	Retype Password	Enter the same password again for a confirmation.



## ❑ Setting up N/W-Fax Destination

You can configure a network folder to store documents that are sent using the N/W-Fax driver with the Save as file option enabled.

	Item name	Description
1	Do not allow any network folder to be used as a destination	Select this to not allow any network folders to be used as Save as file destinations for N/W-Faxes documents. When selected, users can only save an N/W-Fax document with the Save as file option enabled to local storage.
2	Use Network Folder Destination	Select this to allow network folders to be used as Save as file destinations for N/W-Fax documents. When selected, set the N/W-Fax Folder settings to specify which network folder to use.

## ❑ Setting up N/W-Fax Folder

In the N/W-Fax Folder, you can specify in which network folder N/W-Fax documents are saved.

	Item name	Description
1	Check box	Select the check box so that the popup prompts you to enter the network path or the server name if you try to save the settings without it.
2	Protocol	Select the protocol for uploading an N/W-Fax document to a network folder. <ul style="list-style-type: none"> <li>• <b>SMB</b> — Select this to send an N/W-Fax document to the network folder using the SMB protocol.</li> <li>• <b>FTP</b> — Select this to send a file to the FTP server.</li> <li>• <b>FTPS</b> — Select this to send a file to the FTP server using FTP over SSL/TLS.</li> <li>• <b>NetWare IPX/SPX</b> — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.</li> <li>• <b>NetWare TCP/IP</b> — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.</li> </ul>
3	Server Name	When you select [FTP] as the protocol, enter the FTP server name or IP address where an N/W-Fax document will be sent. For example, to send an N/W-Fax document to the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “192.168.1.1” in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server.

	<b>Item name</b>	<b>Description</b>
<b>4</b>	Port Number(Command)	Enter the port number to be used for controls if you select [FTP] as the protocol. Generally “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number.
<b>5</b>	Network Path	When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the “users\scanned” folder in the computer named “Client01”, enter “\\Client01\users\scanned”. When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “user/scanned”. When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the “sys\scan” folder in the NetWare file server, enter “\sys\scan”.
<b>6</b>	Login User Name	Enter the login user name to access an SMB server, an FTP server, or a NetWare file server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
<b>7</b>	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. The space can be entered.
<b>8</b>	Retype Password	Enter the same password again for a confirmation.
<b>9</b>	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.

## ■ Email settings

You can configure the E-mail settings that are needed for Scan to Email operations. This section describes necessary settings for E-mail transmissions.

### Tip

The [Email Setting] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

📖 P.15 “Access Policy Mode”

📖 P.165 “[Setup] Item List”


### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting up Email Setting

You can specify the file format, fragment message size, and default body strings that apply to the Scan to Email documents.

	Item name	Description
1	SMTP Client	Specify SMTP transmission for e-mails.
	Tip	See the following for how to set SMTP Client. 📖 P.213 “Setting up SMTP Client”
2	POP3 Client	Specify the POP3 server that receives e-mail print jobs.
	Tip	See the following for how to set POP3 Client. 📖 P.215 “Setting up POP3 Client”

	Item name	Description
3	From Address	Enter the E-mail address of this equipment.
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• Email addresses are displayed on the transmission/reception history (log).</li> <li>• The operation using easy-to-understand addresses is recommended.</li> </ul> <p><b>Note</b></p> <p>The [From Address] must be entered to enable E-mail transmission. However, the E-mail address of the user who is logged in to this equipment will be automatically set if any user management settings apart from MFP local authentication are enabled. For more information about User Management Setting, see the following section:</p> <p> P.135 “[User Management] Tab Page”</p>	
4	From Name	Enter the name of this equipment.
5	Message Header (Inbound FAX Routing)	Select TTI to be used as a subject when the received Internet Fax is forwarded.
6	Recipient Domain Name	<p>Enable or disable automatic addition of a domain name while a destination is being entered.</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to add a domain name.</li> <li>• <b>Disable</b> — Select this not to add a domain name.</li> </ul> <p>Enter the domain name to be added in the text box. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), # and \ (backslash).</p>


	Item name	Description
7	File Format(Black)	<p>Select the file format of files to be sent when scanning in black mode.</p> <ul style="list-style-type: none"> <li>• <b>TIFF(Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF(Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF(Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF(Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>XPS(Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS(Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> <li>• <b>PDF/A(Multi)</b> — Select this to save scanned images as a Multi-page PDF/A file.</li> <li>• <b>PDF/A(Single)</b> — Select this to save scanned images separately as Single-page PDF/A files.</li> <li>• <b>DOCX(Multi)</b> — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.</li> <li>• <b>DOCX(Single)</b> — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.</li> <li>• <b>XLSX(Multi)</b> — Select this to save scanned images as a Multi-page Excel file (XLSX) after OCR processing.</li> <li>• <b>XLSX(Single)</b> — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.</li> <li>• <b>PPTX(Multi)</b> — Select this to save scanned images as a Multi-page PowerPoint file (PPTX) after OCR processing.</li> <li>• <b>PPTX(Single)</b> — Select this to save scanned images as a Single-page PowerPoint file (PPTX) after OCR processing.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>

	Item name	Description
8	File Format(Color)	<p>Select the file format of files to be sent when scanning in color mode.</p> <ul style="list-style-type: none"> <li>• <b>TIFF(Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF(Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF(Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF(Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>Slim PDF(Multi)</b> — Select this to save scanned images as Multi-page slim PDF files. Select this when you give priority to minimizing the file size over quality of image.</li> <li>• <b>Slim PDF(Single)</b> — Select this to save scanned images separately as Single-page slim PDF files. Select this when you give priority to minimizing the file size over quality of image.</li> <li>• <b>XPS(Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS(Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> <li>• <b>JPEG</b> — Select this to save scanned images as JPEG files.</li> <li>• <b>PDF/A(Multi)</b> — Select this to save scanned images as a Multi-page PDF/A file.</li> <li>• <b>PDF/A(Single)</b> — Select this to save scanned images separately as Single-page PDF/A files.</li> <li>• <b>DOCX(Multi)</b> — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.</li> <li>• <b>DOCX(Single)</b> — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.</li> <li>• <b>XLSX(Multi)</b> — Select this to save scanned images as a Multi-page Excel file (XLSX) after OCR processing.</li> <li>• <b>XLSX(Single)</b> — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.</li> <li>• <b>PPTX(Multi)</b> — Select this to save scanned images as a Multi-page PowerPoint file (PPTX) after OCR processing.</li> <li>• <b>PPTX(Single)</b> — Select this to save scanned images as a Single-page PowerPoint file (PPTX) after OCR processing.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>
	Tip	Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.
9	Number of Retry	Enter the number of times to try sending scanned images when it fails. “3” is set as the default.
10	Retry interval	Enter the interval to try sending scanned images when it fails. [1minutes] is set as the default.
	Note	When the [Number of Retry] and [Retry interval] options are changed, the [Number of Retry] and [Retry interval] options in the Internet Fax settings are also changed.  P.253 “Setting up InternetFax Setting”
11	Fragment Message Size	Select the size of the message fragmentation.

	Item name	Description
12	Default Subject	Select whether to set the E-mail subject to the factory default or a desired string. <ul style="list-style-type: none"> <li>• <b>Factory Default</b> — Select this to display the BCC address entry column.</li> <li>• <b>&lt;Entry box&gt;</b> — Enter the desired subject.</li> </ul>
13	Add the date and time to the Subject	Select whether to append or not date and time to the E-mail subject. This is set as a default. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to append date and time to the subject.</li> <li>• <b>Disable</b> — Select this to not append date and time to the subject.</li> </ul>
14	Editing of Subject	Select whether to allow or not editing of the E-mail subject. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to allow the user to edit the E-mail subject.</li> <li>• <b>Disable</b> — Select this to not allow the user to edit the E-mail subject.</li> </ul>
15	Default Body Strings	Enter the body text that will be automatically entered in the [Body] box when users operate Scan to Email from the touch panel. This sets only the default body text, so that it can be changed on each operation by users.
16	Body Strings Transmission	Select whether the body strings will be sent or not.
17	BCC Address Display on Job Log, Job Status	Select the display form of the destination of the bcc address displayed in the scan log and the scan job. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to display [Bcc Address], instead of the destination of the bcc address.</li> <li>• <b>OFF</b> — Select this to display the destination of the bcc address.</li> </ul>
18	From Address cannot be edited in Scan to Email.	Select this item to prohibit modification of the From Address.

### ❑ Setting up URL Transmission Settings

You can set to provide a URL (link) to the saving directory of the file instead of attaching it before sending a scanned image by email.

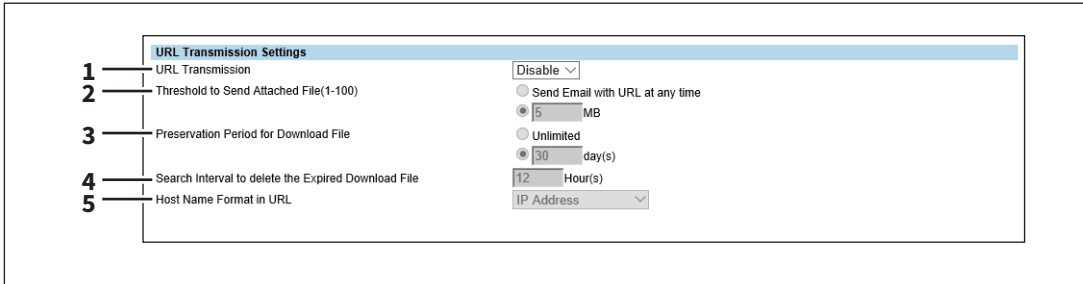

	Item name	Description
1	URL Transmission	Select whether to enable or disable the function to provide a URL to the saving directory of the scanned data. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Provides a URL to the saving directory.</li> <li>• <b>Disable</b> — Sends the data as attachments.</li> </ul>
	<div style="background-color: #e0e0e0; padding: 5px; margin-bottom: 5px;">Tip</div> <ul style="list-style-type: none"> <li>• The scanned data is stored in MFP Local.</li> <li>• If a URL to the saving directory is provided, its link and the preservation period are stated in the email.</li> </ul>	

	Item name	Description
2	Threshold to Send Attached File (1-100)	Select the maximum size of an attached file. The allowable range is between 1 MB and 100 MB. Select [Send Email with URL at any time] if you want to provide a URL to the saving directory of the file, regardless of the file size. If a maximum size is specified, any file whose size is smaller than the specified one is attached to an email message. On the other hand, if a file exceeds the specified maximum size, a URL to the saving directory is provided.
3	Preservation Period for Download File	Select the preservation period of the file if a URL to the saving directory is provided. If you do not want to impose any limits on the preservation period, select [Unlimited]. If you prefer to automatically delete download files regularly, select a period until the data is deleted.
	<p><b>Tip</b></p> <p>If the data cannot be stored in MFP Local because it is full, this results in an error. Delete the stored files regularly. If you want to delete them manually, all scanned data in the shared folder is deleted.   P.360 “Deleting the data from local folder”</p>	
4	Search Interval to delete the Expired Download File	Selects the interval of monitoring the expiration of the specified preservation period.
5	Host Name Format in URL	Selects the host name of the format. <ul style="list-style-type: none"> <li>• <b>IP Address:</b> Select this to use the IP address set in the equipment.</li> <li>• <b>Host Name (FQDN):</b> Select this to use the FQDN configured with the combination of the host and domain names set in the equipment.</li> <li>• <b>NetBIOS Name:</b> Select this to use the NetBIOS name set in the equipment.</li> </ul>
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Be sure to set the domain name of DDNS when [Host Name (FQDN)] is selected. If it has not been set, the IP Address is used for the format of the host name. Perform the name resolution for FQDN in the DNS server so that connection to a URL from a client PC becomes possible.   P.184 “DDNS”</li> <li>• [NetBIOS Name] means “[NetBIOS Name] of SMB” set in this equipment. If [Disable] is selected for [SMB Server Protocol] of SMB, the IP Address is used for the format of the host name.   P.200 “Setting up SMB”</li> </ul>	

## ■ InternetFax settings

You can specify Internet Fax settings. This section describes necessary settings for Internet Fax transmissions.

### Tip

The [InternetFax] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

P.15 “Access Policy Mode”

P.165 “[Setup] Item List”

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.



## ❑ Setting up InternetFax Setting

You can specify the fragment page size and default body strings that apply to the Internet Faxes.

The screenshot shows the 'InternetFax Setting' configuration interface. On the left, a legend lists 15 items corresponding to the settings on the right. The 'General Setting' section is expanded, showing fields for 'From Address', 'From Name', 'Message Header (Inbound FAX Routing)', 'Recipient Domain Name', 'Number of Retry', 'Retry interval', 'Fragment Page Size', and 'Default Body Strings'. Below these are 'Body String Transmission', 'TTI', 'RTI', and 'To/Bcc Destination'. The right side of the form contains input boxes, dropdown menus, and radio buttons for each setting.

	Item name	Description
1	SMTP Client	Specify SMTP transmission for InternetFax.
	Tip	See the following for how to set SMTP Client. <a href="#">P.213 “Setting up SMTP Client”</a>
2	POP3 Client	Specify the POP3 server that receives InternetFax print jobs.
	Tip	See the following for how to set POP3 Client. <a href="#">P.215 “Setting up POP3 Client”</a>
3	SMTP Server	Specify SMTP reception for InternetFax.
	Tip	See the following for how to set SMTP Server. <a href="#">P.207 “Setting up SMTP Server”</a>
4	From Address	Enter the E-mail address of this equipment.
	Note	The [From Address] must be entered to enable Internet Fax transmission. However, the E-mail address of the user who is logged in to this equipment will be automatically set if any user management settings apart from MFP local authentication are enabled. For more information about User Management Setting, see the following section: <a href="#">P.135 “[User Management] Tab Page”</a>
5	From Name	Enter the name of this equipment.
6	Message Header (Inbound FAX Routing)	Select TTI to be used as a subject when the received Internet Fax is forwarded.

	Item name	Description
7	Recipient Domain Name	Enable or disable automatic addition of a domain name while a destination is being entered. <b>Enable:</b> Select this to add a domain name. <b>Disable:</b> Select this not to add a domain name. Enter the domain name to be added in the text box. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), # and \ (backslash).
8	Number of Retry	Enter the number of times to try sending the Internet Faxes when it fails. "3" is set as the default.
9	Retry interval	Enter the interval to try sending the Internet Faxes when it fails. [1minutes] is set as the default.
	<b>Note</b>	When the [Number of Retry] and [Retry interval] options are changed, the [Number of Retry] and [Retry interval] options in the E-mail settings are also changed. 📖 P.247 "Email settings"
10	Fragment Page Size	Select the size of the message fragmentation.
11	Default Body Strings	Enter the body text that will be automatically entered in the [Body] box when users operate Scan to Internet Fax from the touch panel. This sets only the default body text, so that it can be changed on each operation by users.
12	Body String Transmission	Select whether the body strings will be sent or not.
13	TTI	Specify whether or not to add the sender information in the header.
14	RTI	Specify whether or not to add the sender information in the footer.
15	To/Bcc Destination	You can set the destination of the internet fax to be sent only to To or Bcc.
	<b>Note</b>	When Bcc is set as the destination, To becomes blank and the transmitted internet fax may be treated as spam depending on the settings of the mail server, mailer or security software. Check the settings for spam.

## ❑ Report Setting

You can select how to report internet fax results.







The screenshot shows the 'Report Setting' configuration screen with the following sections and callouts:

- 1** Select Agent
  - Print
  - Save as file
  - Email
- 2** Use login user address (User Authentication)
  - Use Email Address which was registered Local User
  - Use Email Address which was LDAP registered
- 3** 1st Destination
  - 1st Destination
- 3** 2nd Destination
  - 2nd Destination
- 4** Email Setting
 

Subject	Report from (Device Name)_{YYYYMMDDHHmmSS}
From Address	
From Name	
Body	
File Name	(ReportName)_{YYYY}MM{DD}[H][mm][SS]_{Page}_{Sub ID}
- 5** Save as file Setting
 

Destination	
File Name	(ReportName)_{YYYY}MM{DD}[H][mm][SS]_{Page}_{Sub ID}
- 6** Common Setting
 

File Format	PDF(Multi)
Encryption	Disable

	Item name	Description
1	[Select Agent] button	<p>You can make detailed settings by selecting one of the following items, and then clicking [Select Agent].</p> <p><b>Print</b> — Select this to print. There are no settings available in [Select Agent].</p> <p><b>Save as file</b> — Select this to save as a file. Click [Select Agent] to make settings for [Save as file Setting] and [Common Setting].</p> <p><b>Email</b> — Select this to send an email. Click [Select Agent] to make address settings, and settings for [Email Setting] and [Common Setting].</p>
2	Use login user address (User Authentication)	<p>Set whether or not to use the E-mail address for a login user as the destination for E-mail transmission during user authentication. You can set the following items when you select this check box.</p> <p><b>Use Email Address which was registered Local User:</b> The E-mail address for a user set in MFP Local Authentication is used as the destination for E-mail transmission.</p> <p><b>Use Email Address which was LDAP registered:</b> The E-mail address for a server registered in LDAP Client is used as the destination for E-mail transmission. Click [Server Assignment]. Up to 4 LDAP servers can be assigned.   P.209 “LDAP Client settings”</p>
3	[1st: Destination] / [2nd: Destination] button	<p>This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to display the address list where you can set addresses.   P.58 “Destination Setting”</p>
4	[Email Setting] button	<p>This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to set the following items on the agent settings page for the Email settings.</p> <ul style="list-style-type: none"> <li>• Subject</li> <li>• From Address</li> <li>• From Name</li> <li>• Body</li> <li>• File Name</li> </ul> <p> P.66 “Email Setting”</p>
5	[Save as file Setting] button	<p>This is enabled when you select [Save as file] from Report Settings, and then click the [Select Agent] button.</p> <p>Click to set the following items on the agent settings page for the Save as file settings.</p> <ul style="list-style-type: none"> <li>• Destination</li> <li>• File Name</li> </ul> <p> P.70 “Save as file Setting”</p>
6	[Common Setting] button	<p>This is enabled when you select [Email] or [Save as file] from Report Settings, and then click the [Select Agent] button.</p> <p>You can set the following items on the agent settings page.</p> <ul style="list-style-type: none"> <li>• File Format</li> <li>• Encryption</li> </ul> <p> P.66 “Email Setting”   P.70 “Save as file Setting”</p>

## ■ Printer/e-Filing settings


### Tip

The [Printer/e-Filing] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

📖 P.15 “Access Policy Mode”

📖 P.165 “[Setup] Item List”

## □ Setting up Printer/e-Filing Job Enforcement Continue

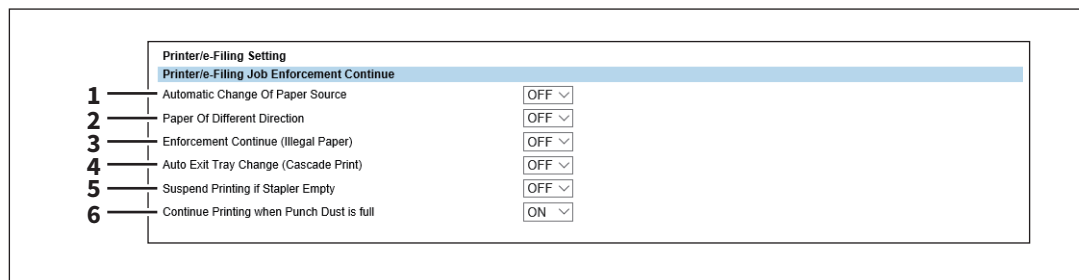

	Item name	Description
1	Automatic Change Of Paper Source	Specify whether or not to change the paper source automatically when the size of the original and the paper in the paper source do not match. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to change the paper source and continue processing the job.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
2	Paper Of Different Direction <sup>*1</sup>	Specify whether or not to copy on paper which is loaded in the paper source in a different orientation from the original. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue processing the job by copying on paper in a different orientation.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
3	Enforcement Continue (Illegal Paper)	Specify whether or not to continue processing the job forcibly when the specified output tray is incorrect. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to print to the specified output tray.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
4	Auto Exit Tray Change (Cascade Print)	Specify whether or not to switch the receiving tray automatically. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue processing the job by switching the receiving tray.</li> <li>• <b>OFF</b> — Select this to stop the job.</li> </ul>
5	Suspend Printing if Stapler Empty	Specify whether to stop printing when staples run out. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to stop printing when staples run out.</li> <li>• <b>OFF</b> — Select this not to stop printing when staples run out.</li> </ul>
6	Continue Printing when Punch Dust is full <sup>*1</sup>	Specify whether to continue printing when the punch dust bin is full. <ul style="list-style-type: none"> <li>• <b>ON</b> — Select this to continue printing even when the punch dust bin is full.</li> <li>• <b>OFF</b> — Select this to stop printing when the punch dust bin is full.</li> </ul>

<sup>\*1</sup> This function is not available for some models.

## ■ Printer settings

You can configure how the printer works and the printer options needed for the raw print jobs.

- 📖 P.257 “Setting up General Setting”
- 📖 P.258 “Setting up Default Direct Print Setting”
- 📖 P.259 “Setting up Driver Customization Packages Setting”
- 📖 P.260 “Setting up Default Raw Job Setting”
- 📖 P.261 “Setting up Raw Job Setting”

### Tip


The [Printer] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

## □ Setting up General Setting

In General Setting, you can specify the printer related options.

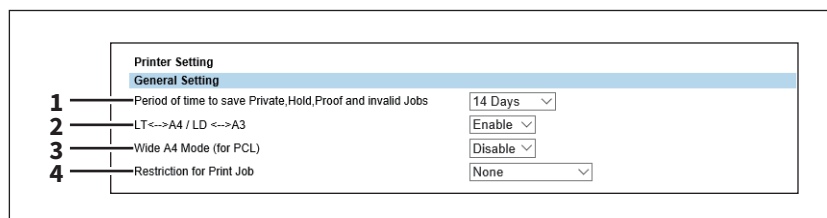

	Item name	Description
1	Period of time to save Private, Hold, Proof and invalid Jobs	Select how long the private, hold, and test print jobs are kept. You can select in the range from 1 to 12 hours, or from 1 to 30 days. Select [Indefinite] to retain all jobs in the queues until a user manually deletes them. [14 Days] is set as the default.
2	LT<-->A4 / LD <-->A3 (LT<-->A4) *1	Select whether to print a document intended for one paper size can be printed on paper of a different size. For example, you can print a document set up for Letter size on A4 paper. When disabled, this equipment will prompt users for the correct paper size. [Enable] is set as the default.
3	Wide A4 Mode (for PCL)	Select whether the width of the printable area of copy paper is widened or not when you are printing a PCL print job on A4 paper. Select [Enable] to widen it for approx. 3.5 mm / 0.14 inch (when in a portrait direction) and approx. 1.5 mm / 0.06 inch (when in a landscape direction). Thus more data can be printed for each line. [Disable] is set as the default.
	<b>Note</b>	This item is available only for some models.
4	Restriction for Print Job	Select whether or not to restrict printing certain print jobs. <ul style="list-style-type: none"> <li>• <b>None</b> — Select this to print all data.</li> <li>• <b>Only Private</b> — Select this to print private print jobs only.</li> <li>• <b>Only Hold</b> — Select this to print hold print jobs only.</li> <li>• <b>Only Private/Hold</b> — Select this to print private and hold print jobs only.</li> </ul>

\*1 This function is not available for some models.

## ❑ Setting up Default Direct Print Setting

You can set the default settings for USB Direct Print and E-mail Direct Print.

### Note

Some print settings do not work on printouts according to file formats.

- The [PDF Overprint], [PDF Prioritize Original Size], and [PDF Size Options] settings can work only on PDF printouts.
- The [Enable Print Header] and [Enable Print Message Body] settings can work only on the E-mail Direct Print function.
- E-mails with encrypted PDF (secure PDF) files attached cannot be printed by the E-mail Direct Print function.

### Color models

Item	Setting
1	Color Mode: Auto Color
2	2-Sided: 1Side
3	Size: A4
4	Finishing: NON-Staple
5	PDF Overprint: ON(PDF/X only)
6	PDF Prioritize Original Size: ON
7	PDF Size Options: Fit
8	Email Direct Print: Disable
9	Enable Print Header: Disable
10	Enable Print Message Body: Enable

### Monochromatic models


Item	Setting
2	2-Sided: 1Side
3	Size: A4
4	Finishing: NON-Staple
6	PDF Prioritize Original Size: ON
7	PDF Size Options: Fit
8	Email Direct Print: Disable
9	Enable Print Header: Disable
10	Enable Print Message Body: Enable

	Item name	Description
1	Color Mode	Select the default color mode setting for direct print. This item is available only for color models. <ul style="list-style-type: none"> <li>• <b>Auto Color</b> — Select this to enable auto color print.</li> <li>• <b>Full Color</b> — Select this to enable full color print.</li> <li>• <b>Black</b> — Select this to enable monochrome print.</li> </ul>
2	2-Sided	Select the default setting to print one side or both sides of paper for direct print. This item is available only when Automatic Document Feeder has been installed. <ul style="list-style-type: none"> <li>• <b>1Side</b> — Select this to enable one-side print.</li> <li>• <b>Book</b> — Select this to enable duplex book print.</li> <li>• <b>Tablet</b> — Select this to enable duplex tablet print.</li> </ul>
3	Size	Select the default paper size for direct print.

	Item name	Description
4	Finishing	Select the default setting as to whether to staple paper or not. <ul style="list-style-type: none"> <li>• <b>NON-Staple</b> — Select this to disable stapling paper.</li> <li>• <b>Upper Left</b> — Select this to staple paper on the upper left corner.</li> <li>• <b>Upper Right</b> — Select this to staple paper on the upper right corner.</li> </ul>
5	PDF Overprint	Select the default setting as to whether to overprint colors in PDF files or not. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to disable overprint.</li> <li>• <b>ON</b> — Select this to enable overprint.</li> <li>• <b>ON (PDF/X only)</b> — Select this to enable overprint only for PDF/X files.</li> </ul>
6	PDF Prioritize Original Size	Select the default setting as to whether to prioritize the PDF original size or not. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Select this to prioritize the selected paper size over the original size.</li> <li>• <b>ON</b> — Select this to prioritize the original size over the selected paper size, which prints PDF files without enlargement or reduction.</li> </ul>
7	PDF Size Options	Select the default setting as to how to print PDF files when [PDF Prioritize Original Size] is set to [OFF]. <ul style="list-style-type: none"> <li>• <b>Fit</b> — Select this to enlarge or reduce pages by fitting the original size to the paper size.</li> <li>• <b>Shrink Oversized Pages</b> — Select this to reduce pages if the original size is larger than the paper size. Pages are printed without enlargement if the original size is equal to or smaller than the paper size.</li> </ul>
8	Email Direct Print	Select the default setting as to whether to print E-mails with PDF, JPEG, and XPS files attached by the Email Direct Print function. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable Email Direct Print.</li> <li>• <b>Auto</b> — Select this to process Email Direct Print automatically.</li> </ul>
9	Enable Print Header	Select whether to print the E-mail header when receiving E-mail print jobs. [Disable] is set as the default.
10	Enable Print Message Body	Select whether to print the body message when receiving E-mail print jobs. [Enable] is set as the default.

## ❑ Setting up Driver Customization Packages Setting

You can set the function to download the customization packages for the printer driver.

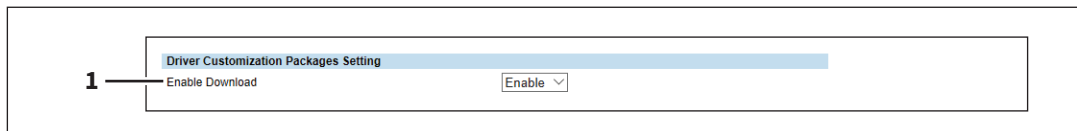

	Item name	Description
1	Enable Download	Select whether the function is enabled or disabled to download customization packages for the printer driver. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to enable this download function.</li> <li>• <b>Disable</b> — Select this to disable this download function.</li> </ul>

## ❑ Setting up Default Raw Job Setting

In Default Raw Job Setting, you can specify the default raw job setting, which applies to a raw job for which no queue name is specified or for which a specified queue name does not exist.

### Note

This setting is available only for some models.

### Tip

You can also add LPR queue names and specify the raw job setting for each queue.

📖 P.261 “Setting up Raw Job Setting”

	Item name	Description
1	Raw Jobs - Duplex Printing	Select whether a raw job will be printed on both sides of the paper.
2	Raw Jobs - Default Paper Size	Select the default paper size that applies to a raw job.
3	Raw Jobs - Default Paper Type	Select the default paper type that applies to a raw job.
4	Raw Jobs - Default Orientation	Select the default orientation that applies to a raw job.
5	Raw Jobs - Default Stapling	Select whether a raw job will be stapled.
6	Raw Jobs - Default Output Tray	Select the default output tray that applies to a raw job. A banner page that is created by NetWare, UNIX, and Windows operating systems also will be outputted to the tray set here.
7	PCL Form Line	Enter the point size of line spacing. (12.00 makes 6 lines/inch)
8	PCL Font Pitch	Enter the font pitch when the selected font number represents a fixed pitch scalable font. The font pitch indicates the number of ANK characters per inch. 10 pitch prints 10 ANK characters within an inch.
9	PCL Font Point Size	Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.
10	PCL Font Number	Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Refer to the <b>Specifications Guide</b> for the font number and internal PCL fonts.
11	PCL Line Termination	Select the type of the line termination.
12	Symbol set	Select the symbol set that applies to a raw job.
13	Paper Source	Select the paper source that applies to a raw job.



	Item name	Description
14	Do not Print Blank Pages	Select whether blank pages are printed or not.
	<b>Note</b>	When printing is performed using the UNIX filters or CUPS, this setting is not reflected. If you do not want to print blank pages in these printings, enable [Do not Print Blank Pages] in the UNIX filter command or CUPS setting. For the setting instructions, refer to the <b>Software Installation Guide</b> or <b>Printing Guide</b> .
15	Letterhead Print Mode	Select whether the last page (odd page number) is printed on the same side as the other odd-number pages when printing both sides of a Raw print job whose total page number is odd. Select [ON] to print the last page on the same side (back) as the other odd-number pages. Select [OFF] to print it on the same side (front) as even-number pages.
	<b>Note</b>	This item is available only for some models.

## ❑ Setting up Raw Job Setting

In Raw Job Setting, you can add up to 16 LPR queue names and specify the raw job setting for each queue. These queue names can be used when printing without a printer driver, such as printing from UNIX workstation.

### Note

This setting is available only for some models.

Queue Name	Duplex Printing	Paper Size	Paper Type	Orientation	Stapling	Output Tray	PCL Form Line	PCL Font Pitch	PCL Font Point Size	PCL Font Number	PCL Line Termination	Symbol set	Paper Source	Do not Print Blank Pages	Letterhead Print Mode
QueueName001	Disable	A4	Plain	Portrait	OFF	Tray1	12.0	10.0	12.0	0	Auto	Roman-8	Auto	OFF	OFF

	Item name	Description
1	[Add] button	Select this to add a LPR queue. P.262 “[Add New LPR Queue] screen”
2	[Edit] button	Select this to edit the LPR queue selected in the LPR queue list. P.262 “[Add New LPR Queue] screen”
3	[Delete] button	Select this to delete the LPR queue selected in the LPR queue list.
4	LPR queue list	Select this to display the list of registered LPR queues.

## [Add New LPR Queue] screen

Item Number	Item Name	Value
1	Queue Name	test001
2	Duplex Printing	Disable
3	Paper Size	A4
4	Paper Type	Plain
5	Orientation	Portrait
6	Stapling	OFF
7	Output Tray	Inner Tray
8	PCL Form Line	12.0
9	PCL Font Pitch	10.0
10	PCL Font Point Size	12.0
11	PCL Font Number	0
12	PCL Line Termination	Auto
13	Symbol set	Roman-8
14	Paper Source	Auto
15	Do not Print Blank Pages	OFF
16	Letterhead Print Mode	OFF
17	Toner Mode	Black

	Item name	Description
1	Queue Name	Enter the queue name with up to 31 alphanumeric characters. The queue name is case sensitive so that “Queue1” and “queue1” will be added as different queues.
2	Duplex Printing	Select whether a raw job will be printed on both sides of the paper.
3	Paper Size	Select the default paper size that applies to a raw job.
4	Paper Type	Select the default paper type that applies to a raw job.
5	Orientation	Select the default orientation that applies to a raw job.
6	Stapling	Select whether a raw job will be stapled.
7	Output Tray	Select the default output tray that applies to a raw job. A banner page that is created by NetWare, UNIX, and Windows operating systems also will be outputted to the tray set here.
8	PCL Form Line	Enter the number of lines printed per page.
9	PCL Font Pitch	Enter the font pitch when the selected font number represents a fixed pitch scalable font. The font pitch indicates the number of ANK characters per inch. 10 pitch prints 10 ANK characters within an inch.
10	PCL Font Point Size	Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.
11	PCL Font Number	Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Refer to the <b>Specifications Guide</b> for the font number and internal PCL fonts.
12	PCL Line Termination	Select the type of the line termination.
13	Symbol set	Select the symbol set that applies to a raw job.
14	Paper Source	Select the paper source that applies to a raw job.

	Item name	Description
15	Do not Print Blank Pages	Select whether blank pages are printed or not.
	<p><b>Note</b></p> <p>When printing is performed using the UNIX filters or CUPS, this setting is not reflected. If you do not want to print blank pages in these printings, enable [Do not Print Blank Pages] in the UNIX filter command or CUPS setting. For the setting instructions, refer to the <b>Software Installation Guide</b> or <b>Printing Guide</b>.</p>	
16	Letterhead Print Mode	Select whether the last page (odd page number) is printed on the same side as the other odd-number pages when printing both sides of a Raw print job whose total page number is odd. Select [ON] to print the last page on the same side (back) as the other odd-number pages. Select [OFF] to print it on the same side (front) as even-number pages.
	<p><b>Note</b></p> <p>This item is available only for some models.</p>	

## ■ Print Service settings

You can configure such print services as Raw TCP Print, LPD Print, IPP Print, FTP Print, NetWare Print, Email Print, and Multi Station Print.

- 📖 P.264 “Setting up Raw TCP Print”
- 📖 P.265 “Setting up LPD Print”
- 📖 P.265 “Setting up IPP Print”
- 📖 P.267 “Setting up FTP Print”
- 📖 P.267 “Setting up NetWare Print”
- 📖 P.268 “Setting up Email Print”
- 📖 P.268 “Setting up USB Cable Print”
- 📖 P.269 “Setting up Multi Station Print”

### Tip

The [Print Service] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

## □ Setting up Raw TCP Print

In Raw TCP Print, you can enable or disable the Raw TCP print service.

	Item name	Description
1	Enable Raw TCP	Enable or disable Raw TCP print service. [Enable] is set as the default.
2	Port Number	If enabling the Raw TCP, enter the Raw TCP port number for the Raw TCP print. You can enter a value in the range from 1024 to 32767. Generally the default value “9100” is used.
	<b>Note</b>	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.
3	Enable Raw bi-directional	Enable or disable Raw bi-directional communication. [Disable] is set as the default.
	<b>Note</b>	This item is available only for some models.

## ❑ Setting up LPD Print

In LPD Print, you can set the LPD print options to enable the LPD/LPR print service.

	Item name	Description
1	Enable LPD	Enable or disable LPD print service. [Enable] is set as the default.
2	Port Number	Enter the port number for LPR printing. You can enter a value in the range from 1 to 65535. Generally the default value “515” is used.
	<b>Note</b>	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.
3	Banners	Select whether to print a banner page for each print job using LPR printing. [OFF] is set as the default.
	<b>Note</b>	This item is available only for some models.

## ❑ Setting up IPP Print

In IPP Print, you can set the IPP Print options to enable the IPP print service.

	Item name	Description
1	Enable IPP	Enable or disable the IPP print service. [Enable] is set as the default.
2	Port80 Enable	Enable or disable Port80 for IPP printing. Port631 is usually used for IPP access so users must specify the IPP port to the URL, i.e. “http://<IP address or DNS name>:631/Print”, for the IPP port. When this is enabled, this equipment allows IPP access through the Port80, which is the default port for the HTTP access so users do not have to specify the port number in the IPP port, i.e. “http://<IP address or DNS name>/Print”. [Disable] is set as the default.

	Item name	Description
3	Port Number	If enabling the IPP, enter the IPP port number. You can enter a value in the range from 1 to 65535. Generally the default value “631” is used.
	<p><b>Note</b></p> <p>The same port numbers as the ones for the following settings are not usable. Change the applicable port number before that for the Port Number is set.</p> <ul style="list-style-type: none"> <li>• HTTP Network Service / Primary Port Number</li> <li>• HTTP Network Service / Secondary Port Number</li> <li>• HTTP Network Service / SSL/TLS Port Number</li> </ul>	
4	URL	Display the URL for IPP printing. You cannot change the URL for IPP printing. This URL should be set as the print port when users set up the printer driver for IPP printing.
5	Enable SSL/TLS	Enable or disable SSL/TLS for IPP printing. [Enable] is set as the default.
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• When the SSL/TLS is enabled, users can print to the IPP print port using the SSL/TLS. To print to the IPP print port using the SSL/TLS, specify the following URL for the IPP print port. https://&lt;IP Address&gt;:&lt;SSL/TLS Port Number&gt;/Print Example: https://192.168.53.204:443/Print</li> <li>• Not all operating systems support SSL/TLS for all protocols.</li> </ul>	
6	SSL/TLS Port Number	Enter the port number for SSL/TLS. You can enter a value in the range from 1 to 65535. Generally the default value “631” is used.
	<p><b>Note</b></p> <p>The same port numbers as the ones for the following settings are not usable. Change the applicable port number before that for the SSL/TLS Port Number is set.</p> <ul style="list-style-type: none"> <li>• HTTP Network Service / Primary Port Number</li> <li>• HTTP Network Service / Secondary Port Number</li> <li>• HTTP Network Service / SSL/TLS Port Number</li> </ul>	
7	SSL/TLS URL	Display the SSL/TLS URL for IPP printing. You cannot change the SSL/TLS URL for IPP printing. This SSL/TLS URL should be set as the print port when users set up the printer driver for IPP printing if the SSL/TLS for IPP printing is enabled.
8	Printer Name	Enter the printer name for IPP printing. You can enter up to 127 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). The MFP name is set as the default.
9	Authentication	<p>Enable or disable the authentication for creating the IPP queue on the client computers. When this is enabled, the dialog box to enter a user name and password will be displayed when a user creates the IPP print port.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this to disable the authentication.</li> <li>• <b>Basic</b> — Select this to enable the authentication.</li> </ul>
	<p><b>Note</b></p> <p>When IPP printing is used for printing from the Mac OS printer driver (PPD), do not enable the authentication. The Mac OS printer driver (PPD) does not support the authentication for IPP printing.</p>	
10	User Name	Enter the user name when the Authentication option is enabled. Users must enter this user name to create an IPP queue on the client computers. You can enter up to 127 alphanumerical characters and symbols other than =, ; (semicolon), #, @, and \ (backslash).

	Item name	Description
11	Password	Enter the password when the Authentication option is enabled. Users must enter this password to create an IPP queue on the client computers. You can enter up to 127 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). "password" is set as the default.

## □ Setting up FTP Print

In FTP Print, you can set the FTP Print options to enable the FTP print service.

	Item name	Description
1	Enable FTP Printing	Enable or disable FTP print service. [Disable] is set as the default.
2	Print User Name	Enter the user name if you want to request the log-in user name from someone who attempts FTP printing. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). If you leave this box blank, the default user name "Print" is used.
3	Print Password	Enter the password if you want to request the log-in password of users who attempt FTP printing. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).


## □ Setting up NetWare Print

In NetWare Print, you can set the NetWare print options to enable the Novell print service.

	Item name	Description
1	Print Server Name	Enter the print server name that is created in the NetWare file server. You can enter up to 47 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). The MFP name is set as the default.
2	Password	Enter the password that is set to the print server, if required. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Print Queue Scan Rate	Enter how frequently to scan the print queues for print jobs. This should be entered in seconds. You can enter between 1 to 255. "30" is set as the default.


## □ Setting up Email Print

In Email Print, you can set how the E-mail print jobs are printed.

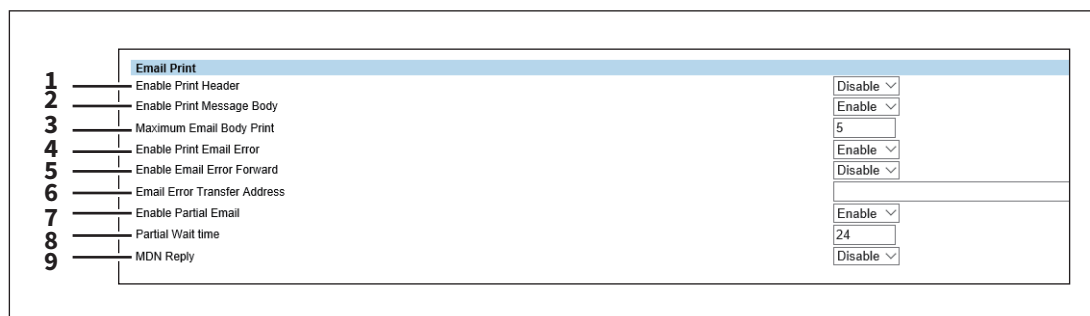

	Item name	Description
1	Enable Print Header	Select whether to print the E-mail header when receiving E-mail print jobs. [Disable] is set as the default.
2	Enable Print Message Body	Select whether to print the body message when receiving E-mail print jobs. [Enable] is set as the default.
3	Maximum Email Body Print	Enter the maximum number of pages to print the body strings of the received E-mail print job. You can enter between 1 to 99. "5" is set as the default.
4	Enable Print Email Error	Select whether to print the report when an error occurs for E-mail printing. [Enable] is set as the default.
5	Enable Email Error Forward	Select whether to send an error message to an administrative E-mail address when E-mail printing cannot be completed. [Disable] is set as the default.
6	Email Error Transfer Address	If enabling the Email Error Forward, enter an administrative E-mail address where the error message is sent. You can enter up to 192 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
7	Enable Partial Email	Select whether to print E-mail jobs that are partially received. [Enable] is set as the default.
8	Partial Wait time	Enter how long this equipment should wait before printing a partial E-mail job. Specify within the range from 1 to 168 hours. "24" is set as the default.
9	MDN Reply	Select whether to send an MDN message reply or not when the equipment receives an E-mail print job with an MDN request. [Disable] is set as the default.

## □ Setting up USB Cable Print

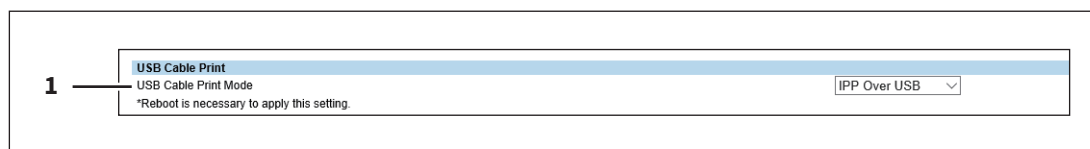

	Item name	Description
1	USB Cable Print Mode	Select the mode used for printing via a USB connection. <b>IPP Over USB</b> — Normally use this mode. <b>Legacy USB (Win)</b> — Use this mode when you are already using Toshiba MFPs and want to grant priority to the compatibility with them.



## ❑ Setting up Multi Station Print

For the operation of the setting, see the following.

📖 P.431 “Setting Multi Station Print”

### Note

You need the Multi Station Print Enabler option to use the [Multi Station Print] function. Contact your service technician for details.

### Tip

- Use this service in an environment where the number of PCs to connect to 1 MFP is 30 or less.
- You can connect up to 10 MFPs in a group and connect up to 5 groups including a group to which this MFP belongs: you can add 4 groups for the connection.

The screenshot shows the 'Multi Station Print' configuration page. On the left, a vertical list of numbers 1 through 17 points to specific settings:

- 1: Enable Multi Station Print (dropdown: Enable)
- 2: Document Expired Time (dropdown: 1 Hour(s))
- 3: Number of Display Job (dropdown: 35)
- 4: Sort Order (dropdown: Date)
- 5: Print Order (radio buttons: Ascending Order, Descending Order)
- 6: Enable Printed Jobs (dropdown: Enable)
- 7: Connection MFP (dropdown: 30631)
- 8: Authentication (dropdown: Disable)
- 9: User Name (text input)
- 9: Password (password input)
- 10: Add/Delete buttons for connections
- 11: IP Address / Host Name table with 192.168.0.12 and Connection Test buttons
- 12: Group Connection Enable (dropdown: Enable)
- 13: Own Group Name (text input)
- 14: Connection Group (dropdown: Add/Delete)
- 15: Add/Delete buttons for groups
- 16: Group table with columns: Group Name, Primary IP Address / Host Name, Secondary IP Address / Host Name. Row: Group01, 192.168.0.12
- 17: Multi Station Job (button: Delete All)

	Item name	Description
1	Enable Multi Station Print	Specify whether to enable or disable the Multi Station Print service.
2	Document Expired Time	Specify the retention period of the printed document.
3	Number of Display Job	Specify the number of jobs to be displayed.
4	Sort Order	Specify the display order.
5	Print Order	Specify the print order.
	<div style="background-color: #cccccc; padding: 2px;">Tip</div> When you select [Indication Order] from [Print Order], documents are printed according to the [Sort Order] setting at the item 4.	
6	Enable Printed Jobs	Specify whether to enable or disable reprinting.

	Item name	Description
7	Connection MFP	<p>Specify the following communication settings for the multi station print.</p> <ul style="list-style-type: none"> <li>• <b>Port Number</b> — Enter the port number.</li> <li>• <b>Enable SSL/TLS</b> — Select the SSL/TLS setting for the multi station print. <ul style="list-style-type: none"> <li>- <b>Disable</b> — Select this to disable SSL/TLS.</li> <li>- <b>Verify with imported CA certification(s)</b> — Select this to use CA certificates for connection. You need to export the certificate from each MFP and import it into all MFPs.</li> <li>- <b>Accept all certificates without CA</b> — Select this to accept all certificates without CA. There is no need to import the certificate of each MFP.</li> </ul> </li> <li>• <b>Authentication</b> — Select [Disable] or [Basic] for authentication. [Disable] is set as the default.</li> <li>• <b>User Name</b> — Enter the user name. You can enter up to 127 alphanumeric characters and symbols except = ; # @ \.</li> <li>• <b>Password</b> — Enter the password of the user. You can enter up to 127 alphanumeric characters and symbols except = ; # \.</li> </ul>
	<p><b>Note</b></p> <p>All MFPs should have the same settings for the connection.</p> <p><b>Tip</b></p> <p>Although the multi station print is available even if the user authentication is disabled, this MFP cannot be connected to other MFPs: the job list is not shared.</p>	
8	[Add] button	Allows you to add the device to connect.
9	[Delete] button	Allows you to delete the selected device.
10	Connection MFP entry field	Enter the IP address or host name of the MFP you want to register.
	<p><b>Tip</b></p> <p>If the user authentication is disabled with more than one address registered in the [Connection MFP] list, the [Connection MFP] settings are not displayed.</p>	
11	[Connect] button	Tests the connection with the specified MFP to check if the communications can be established.
	<p><b>Note</b></p> <p>Be sure to save the Multi Station Print settings with the [Save] button before you test the MFP connection with the [Connect] button.</p>	
12	[TopAccess] button	Starts TopAccess.
13	Group Connection Enable	Select whether to connect the MFP groups. [Disable] is set as the default.
14	Own Group Name	Enter a group name to which this MFP belongs. You can enter up to 12 characters.
	<p><b>Note</b></p> <p>All groups should share the same name of each group for the connection.</p>	

	Item name	Description
15	[Add] button	<p>Allows you to add a group. Click this button to show the [Add Connection Group Information] screen. Set the following information and click [Save] to save the settings. To edit the information, click the name of the group added in the list.</p> <ul style="list-style-type: none"> <li>• <b>Group Name</b> — Enter the name of the connection group. You can enter up to 12 characters.</li> <li>• <b>Primary IP Address / Host Name</b> — Enter the IP address or host name of the primary device which represents the connection group. You can enter up to 256 characters. This device accesses the specified primary device first to retrieve the job list.</li> <li>• <b>Secondary IP Address / Host Name</b> — Enter the IP address or host name of the secondary device which represents the connection group. You can enter up to 256 characters. If the access to the primary device fails, this device accesses the specified secondary device next to retrieve the job list.</li> </ul>
16	[Delete] button	Allows you to delete the selected group.
17	[Delete All] button	Deletes all of the multi station print jobs.

## ■ ICC Profile settings

You can set up profiles used in printing functions.

- 📖 P.272 “Setting up RGB Source Profile”
- 📖 P.272 “Setting up CMYK Source Profile”
- 📖 P.273 “Setting up Destination Profile”
- 📖 P.273 “Setting up Customized RGB Profile”

### Note

This setting is available only for some models.

### Tip


The [ICC Profile] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

## □ Setting up RGB Source Profile


Select an input profile to be used for RGB color space conversion when you print RGB data.

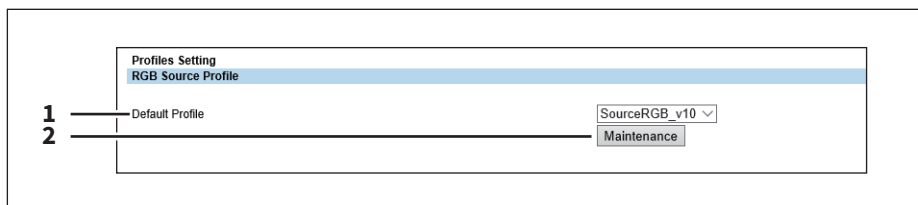




	Item name	Description
1	Default Profile	Select an RGB source profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among the RGB source profiles already registered in this equipment.
2	[Maintenance] button	Click this to perform maintenance of RGB source profiles. The Maintenance RGB Source Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following: <ul style="list-style-type: none"> <li>📖 P.297 “Importing profiles”</li> <li>📖 P.298 “Exporting profiles”</li> <li>📖 P.299 “Deleting profiles”</li> </ul>

## □ Setting up CMYK Source Profile

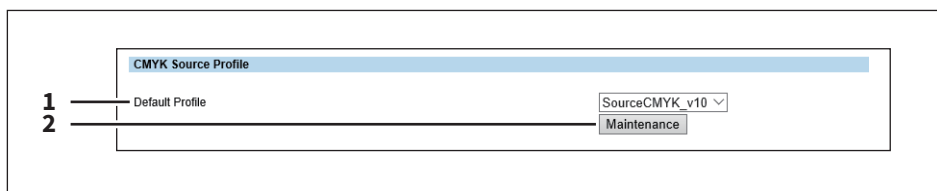Select an input profile to be used for CMYK color space conversion when you print CMYK data.







	Item name	Description
1	Default Profile	Select an CMYK source profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among CMYK source profiles already registered in this equipment.

	Item name	Description
2	[Maintenance] button	Click this to perform maintenance of CMYK source profiles. The Maintenance CMYK Source Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following:  P.297 “Importing profiles”  P.298 “Exporting profiles”  P.299 “Deleting profiles”

## ❑ Setting up Destination Profile

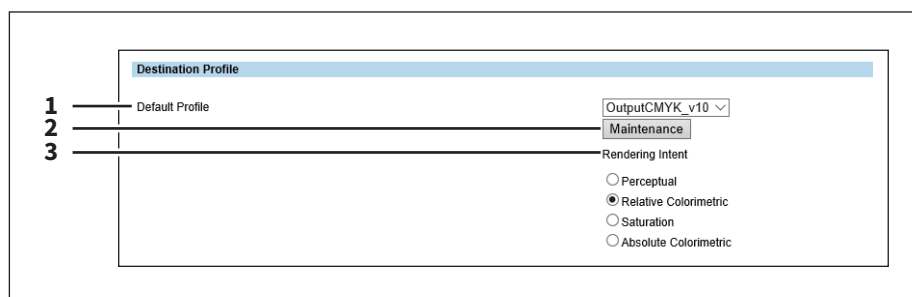
Select an output profile to be used for color space conversion when you print color data.



	Item name	Description
1	Default Profile	Select a destination profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among destination profiles already registered in this equipment.
2	[Maintenance] button	Click this to perform maintenance of destination profiles. The Maintenance Destination Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following:  P.297 “Importing profiles”  P.298 “Exporting profiles”  P.299 “Deleting profiles”
3	Rendering Intent	Select from [Perceptual], [Relative Colorimetric], [Saturation], and [Absolute Colorimetric] for the Rendering Intent of the Destination Profile.

## ❑ Setting up Customized RGB Profile

Contact your service technician for details on Customized RGB Profile.

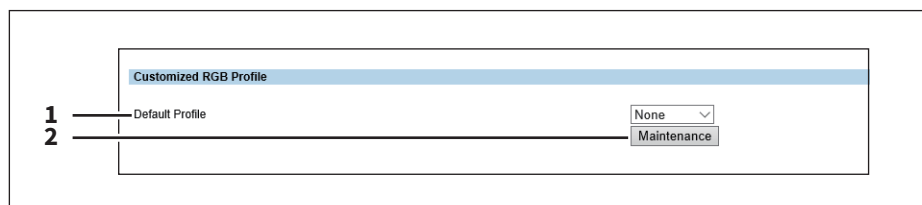

	Item name	Description
1	Default Profile	Specify the Customized RGB Profile to be displayed as the default for the color profile setting of the printer driver when printing. You can select from the Customized RGB Profiles registered in this equipment.

	Item name	Description
2	[Maintenance] button	Click this button when maintaining the Customized RGB Profile. When you click, the Customized RGB Profile maintenance page is displayed that allows you to import the profile into this equipment, or delete the registered profiles. See the following for details. P.297 “Importing profiles” P.298 “Exporting profiles” P.299 “Deleting profiles”

## ■ Print Data Converter settings


For the details of the print data converter, contact your service technician.

### Tip

The [Print Data Converter] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

P.15 “Access Policy Mode”

P.165 “[Setup] Item List”

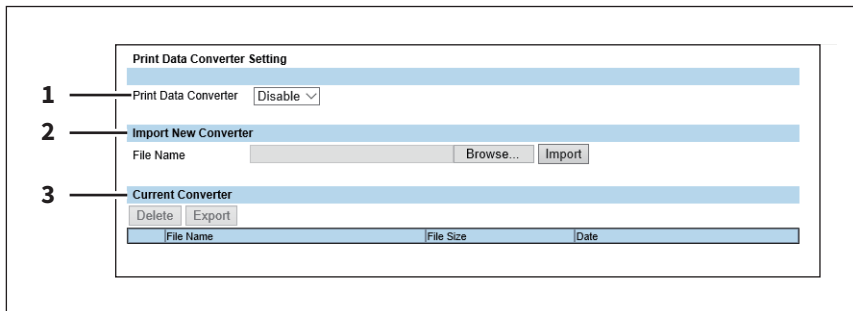

	Item name	Description
1	Print Data Converter	Select whether the print data converter function is enabled or disabled. You cannot enable the function if the converter setting file has not been imported.
2	Import New Converter	Import the converter setting file. <div style="border: 1px solid gray; padding: 5px; margin-top: 5px;"> <p>Tip</p> <p>Click the [Browse...] button to select the file to import and click [Open]. Check the file name and click the [Import] button.</p> </div>
3	Current Converter	Display the imported converter setting file.

## ■ Embedded Web Browser settings

You can set the EWB (Embedded Web Browser) function to display a web page on the touch panel.

- 📖 P.275 “Setting up Home Page Setting”
- 📖 P.275 “Setting up Proxy Setting”
- 📖 P.276 “Setting up EWB History Setting”
- 📖 P.276 “Setting up Server Registration Setting”
- 📖 P.277 “Setting up URL List for Home screen”
- 📖 P.277 “[Add New URL] screen”

### Tip

The [EWB] submenu can be accessed from the [Setup] menu on the [Administration] tab.  
See the following pages for how to access it and information on the [Setup] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.165 “[Setup] Item List”

### Note

- The External Interface Enabler is required to use the EWB (Embedded Web Browser) function.
- This setting is available only for some models.

## □ Setting up Home Page Setting

You can specify the home page for the EWB function.

	Item name	Description
1	Home Page	Enter the URL of the home page.
2	Enforcement automatic screen change	Specify whether or not the screen is automatically changed to [JOB STATUS] when a job cannot be performed due to paper empty or toner empty, etc. while the EWB screen is displayed. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to change the screen to [JOB STATUS].</li> <li>• <b>Disable</b> — Select this not to change the screen.</li> </ul>

## □ Setting up Proxy Setting


You can set the proxy for the EWB function.

	Item name	Description
1	Host Name	Enter the host name of the proxy server.
2	Port Number	Enter the port number of the proxy server.
3	Exception URL	Enter URLs which do not use the proxy server delimited with a semicolon (;).

	Item name	Description
4	Use automatic configuration script	Enable or disable the automatic configuration script.
5	URL	Specify the location of the PAC file by URL for the automatic configuration script.
	<p><b>Note</b></p> <p>Note the following points for the PAC file.</p> <ul style="list-style-type: none"> <li>• Be sure to enter the protocol.</li> <li>• Do not use functions.</li> </ul>	

## ❑ Setting up EWB History Setting


You can set the history conditions for the EWB function.

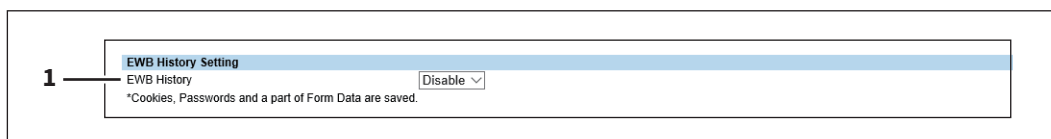

	Item name	Description
1	EWB History	Specify whether to restrict the size of the recorded history information. The size is restricted to 100MB if you restrict.

## ❑ Setting up Server Registration Setting

You can register the address of the server used for the EWB function.

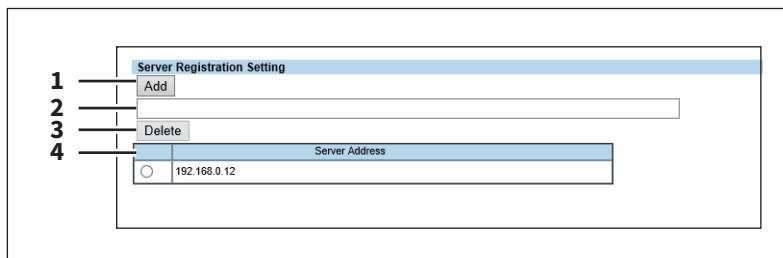


	Item name	Description
1	[Add] button	Registers the server address entered in the entry column into the list.
2	Entry column	Enter the server address.
3	[Delete] button	Deletes the selected server address from the list.
4	Server Address list	Lists the registered server addresses.




## ❑ Setting up URL List for Home screen

You can register URLs to be displayed in the Home screen on the touch panel.

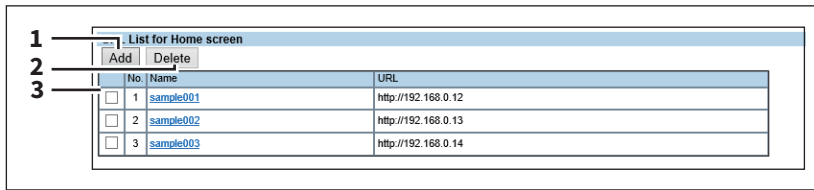

	Item name	Description
1	[Add] button	Registers a URL to be displayed on the touch panel. 📖 P.277 “[Add New URL] screen”
2	[Delete] button	Deletes the URL that you have selected from the URL list for Home screen.
3	URL list	Lists URLs which are displayed on the touch panel.

## ❑ [Add New URL] screen

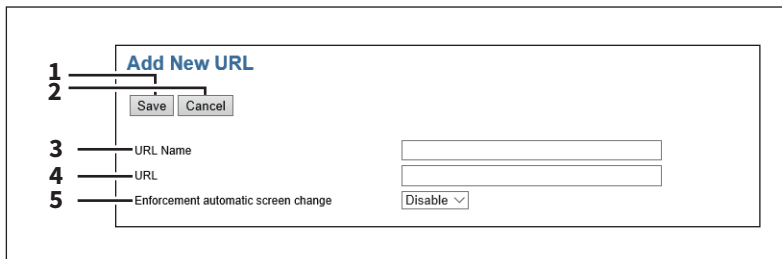

	Item name	Description
1	[Save] button	Registers the entered URL name and URL.
2	[Cancel] button	Cancels adding a URL.
3	URL Name	Enter the URL name to be registered.
4	URL	Enter the URL to be registered.
5	Enforcement automatic screen change	Specify whether or not the screen is automatically changed to [JOB STATUS] when a job cannot be performed due to paper empty or toner empty, etc. while the EWB screen is displayed.

## ■ Off Device Customization Architecture settings

Set ODCA (Off Device Customization Architecture) when you are linking external application software to services provided by this equipment.

For details, refer to the application software manual.

📖 P.278 “Setting up Network”

📖 P.278 “Setting up Configuration”

📖 P.278 “Notification Events”

### Tip


The [ODCA] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

📖 P.15 “Access Policy Mode”


📖 P.165 “[Setup] Item List”

## □ Setting up Network

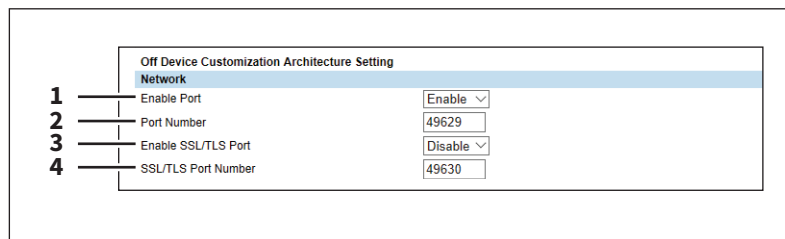


	Item name	Description
1	Enable Port	Select whether the external connection is enabled or disabled.
2	Port Number	Specify the port number where the external connection is enabled.
3	Enable SSL/TLS Port	Select whether SSL/TLS is enabled or disabled for the external connection.
4	SSL/TLS Port Number	Specify the SSL/TLS port number where the external connection is enabled.

## □ Setting up Configuration

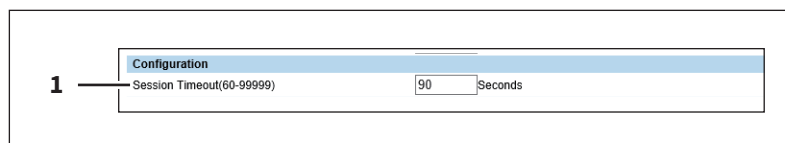

	Item name	Description
1	Session Timeout(60-99999)	Specify the duration to maintain the connection.

## □ Notification Events

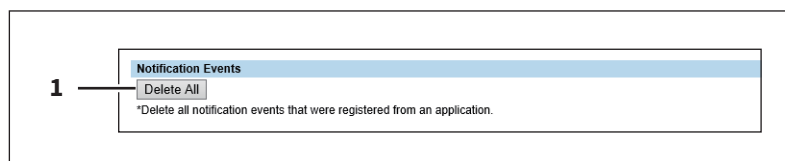


	Item name	Description
1	[Delete All] button	Deletes all notification events registered with external application software.


## Version


Displays version information of your equipment.

### Tip

The [Version] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

 P.15 “Access Policy Mode”

 P.165 “[Setup] Item List”

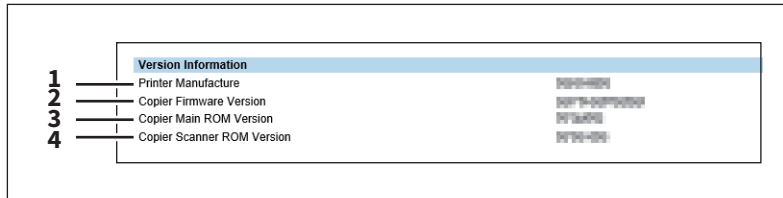

	Item name	Description
1	Printer Manufacture	Displays the manufacturer name of your equipment.
2	Copier Firmware Version	Displays the firmware version of your equipment.
3	Copier Main ROM Version	Displays the main ROM version information of your equipment.
4	Copier Scanner ROM Version	Displays the copier scanner ROM version information of your equipment.

## [Setup] How to Set and How to Operate

This section describes how to set up the equipment using TopAccess.

- 📖 P.280 “Setting up General settings”
- 📖 P.282 “Setting up Network settings”
- 📖 P.283 “SNMP V3 settings”
- 📖 P.286 “Setting up Copier settings”
- 📖 P.287 “Setting up Fax settings”
- 📖 P.288 “Setting up Save as file settings”
- 📖 P.290 “Setting up E-mail settings”
- 📖 P.291 “Setting up InternetFax settings”
- 📖 P.292 “Setting up Printer/e-Filing settings”
- 📖 P.293 “Setting up Printer settings”
- 📖 P.295 “Setting up Print Service settings”
- 📖 P.296 “Setting up ICC Profile settings”
- 📖 P.300 “Setting up Print Data Converter settings”
- 📖 P.301 “Configuring the EWB function”
- 📖 P.302 “Setting up Off Device Customization Architecture settings”
- 📖 P.303 “Displaying version information”

### Note

The paper size for each drawer cannot be set from TopAccess. Set from the touch panel of the equipment. For instructions on how to set the paper size for each drawer, refer to the **Paper Preparation Guide**.

## ■ Setting up General settings


You can configure general settings such as Device Information, Energy Save, Date & Time, and Web General Setting from the [General] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

## □ Setting the General settings

- 1 Start TopAccess access policy mode.**  
📖 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Setup] menu and [General] submenu.**

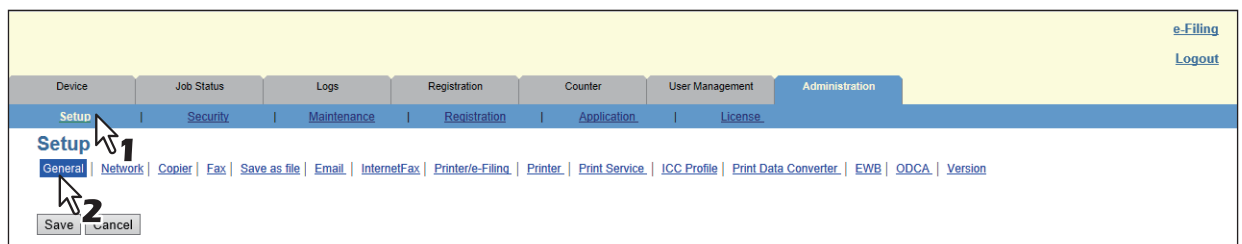

The General submenu page is displayed.

## 4 In the General submenu page, set the General settings as required.

General Setting	
Device Information	
Name	MFP1200
Copier Model	MFP1200
Serial Number	12345678
MAC Address	00:00:00:00:00:00
Save as File & e-Filing Space Available	120843 MB
Fax Space Available	974 MB
Data Cloning Function	Enable
USB Direct Print	Enable
Location	
Geo Location	geo:90,180
Contact Information	
Service Phone Number	
Administrative Message	

You can set the following in this page.

- P.166 “Setting up Device Information”
- P.167 “Setting up Functions”
- P.168 “Long File Name Setting”
- P.168 “Setting up e-Filing Notification Events”
- P.168 “Setting up Job Skip Control”
- P.169 “Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator”
- P.169 “Restriction of Destination Selection Method”
- P.169 “Setting up Confidentiality Setting”
- P.170 “Setting up Energy Save”
- P.172 “Shutdown Setting”
- P.173 “Setting up Date & Time”
- P.173 “Setting up SNTP Service”
- P.174 “Setting up Daylight Savings Time Setting”
- P.174 “Setting up WEB General Setting”
- P.175 “Home Setting”
- P.176 “Assignment for Programmable Button”
- P.177 “OCR Setting”
- P.177 “PDF/A Fileformat Setting”

## 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note


The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Setting up Network settings

You can configure TCP/IP, Filtering, IPX/SPX, AppleTalk, Bonjour, LDAP, SMB, NetWare, HTTP, SMTP Client, SMTP Server, POP3, SMTP Settings, FTP Client, FTP Server, SNMP, Security Setting, and others from the [Network] submenu under the [Setup] menu.


### □ Setting the network settings

- 1 Start TopAccess access policy mode.  
 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Setup] menu and [Network] submenu.

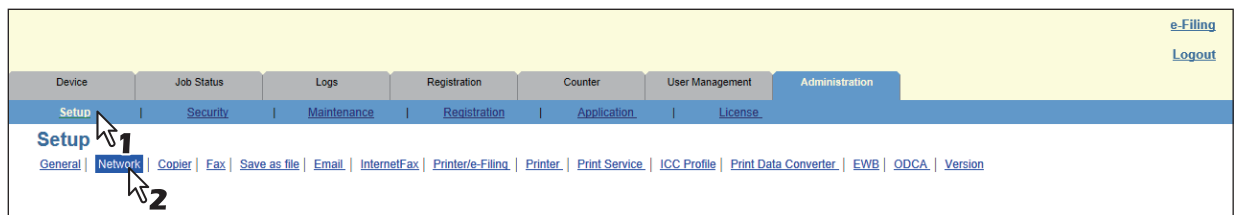

The Network submenu page is displayed.

- 4 In the Network submenu page, click link or scroll the page to find the setting table, and click the function name of the setting to set the network settings as required.

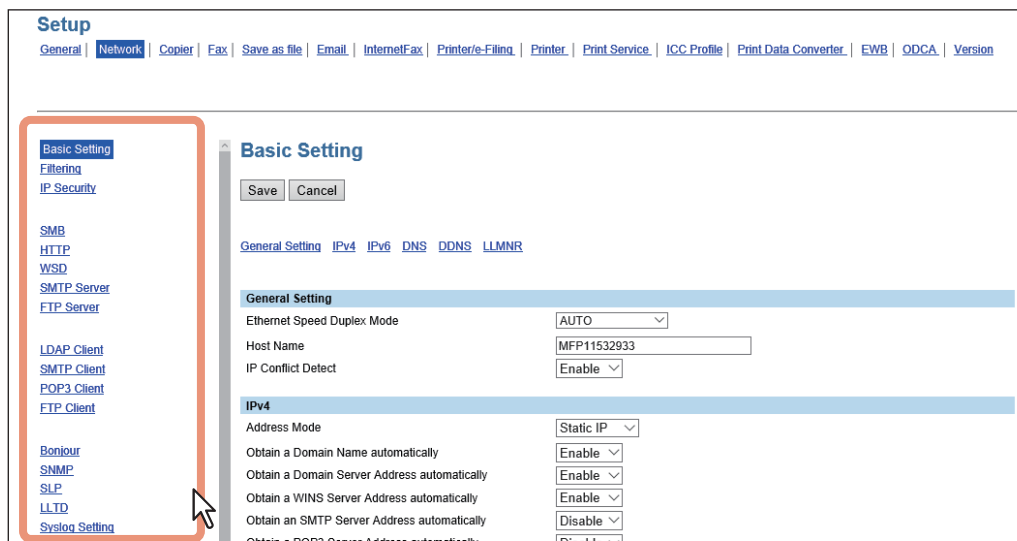

You can set the following in this page.

- P.179 “Basic Setting”
- P.187 “Setting up Filtering”
- P.188 “Setting up IP Security”
- P.200 “Setting up SMB”
- P.204 “Setting up HTTP”
- P.205 “Setting up WSD”
- P.207 “Setting up SMTP Server”
- P.208 “Setting up FTP Server”
- P.209 “LDAP Client settings”
- P.213 “Setting up SMTP Client”
- P.215 “Setting up POP3 Client”
- P.217 “Setting up FTP Client”
- P.217 “Setting up Bonjour”
- P.218 “Setting up SNMP”
- P.221 “Setting up SLP”
- P.222 “Setting up LLTD”
- P.222 “Syslog Setting”

- P.223 “Setting up IPX/SPX”
- P.224 “Setting up NetWare”
- P.224 “Setting up AppleTalk”
- P.225 “VNC Setting”

## 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

This equipment starts initializing the network interface card to apply the changes.

### Note

During the initialization of the network interface card, the network will not be available. A message is displayed to inform you that it will reconnect to TopAccess after a while. Also, the touch panel on this equipment displays a message to inform you that the network is not ready. When this message disappears, TopAccess will once again be available.

## ■ SNMP V3 settings

- P.283 “Registering or editing SNMP V3 user information”
- P.284 “Exporting SNMP V3 user information”
- P.285 “Deleting SNMP V3 user information”

### ❑ Registering or editing SNMP V3 user information

- 1 Click the [SNMP] from the [Network] submenu under the [Setup] menu.
- 2 Click [New] to create new SNMP V3 user information, or click the desired user name on the list to edit SNMP V3 user information already registered.

**SNMP**

Save Cancel

Enable SNMP V1/V2 Enable

Read Community

Read Write Community

Enable SNMP V3 Disable

New Delete Delete All Export

ID	User	User Name	Authentication Protocol	Privacy Protocol	Permissions Level
<input type="checkbox"/>	1	User001	HMAC-MD5	None	Administrator

Enable SNMP V3 Trap Disable

SNMP V3 Trap User Name

SNMP V3 Trap Authentication Protocol HMAC-MD5

The Create SNMP V3 User Information page is displayed.

### 3 Specify the following items and click [Save].

**Create SNMP V3 User Information**

Save Cancel

Confirmation  
User Name  
Authentication Protocol  
Authentication Password  
Privacy Protocol  
Privacy Password  
Permissions Level

MFP  
HMAC-MD5  
None  
Administrator

You can set the following in this page.

P.220 “[Create SNMP V3 User Information] screen”

The Create SNMP V3 User Information page is closed and the newly created user information is registered on the SNMP V3 user information list.

The confirmation dialog box appears.

#### Tip

Clicking [Save] on the [Create SNMP V3 User Information] screen instantly registers the SNMP V3 user information, enabling the registered user to access this equipment via SNMP over a network.

### 4 Click [OK].

The specified or modified content is registered.

## Exporting SNMP V3 user information

1 Click the [SNMP] from the [Network] submenu under the [Setup] menu.

2 Select the check box of SNMP V3 user information that you want to export from the corresponding list, and then click [Export].

**SNMP**

Save Cancel

Enable SNMP V1/V2 Enable  
Read Community public  
Read Write Community private  
Enable SNMP V3 Disable

New Delete Delete All Export

Number	User Name	Authentication Protocol	Privacy Protocol	Permissions Level	
<input checked="" type="checkbox"/>	1	User001	HMAC-MD5	None	Administrator

Enable SNMP V3 Trap Disable  
SNMP V3 Trap User Name  
SNMP V3 Trap Authentication Protocol HMAC-MD5

The Export page is displayed.

#### Note

If a message to prompt you to save the network setting is displayed, click [Save] on the Network submenu page, and then export.

3 Click the link for the file name of user information to be exported.


**Export SNMP V3 User Information**

File Name	Size
<a href="#">SNMPv3-User001-attribute(1).id</a>	136

The file is downloaded.



## 4 Close the Export SNMP V3 User Information page.

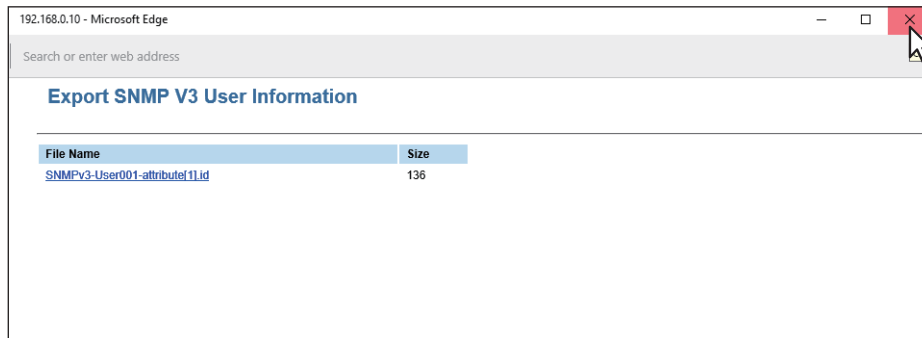

### Note


The export operation may be unstable if administrators are accessing this equipment from multiple computers simultaneously in the access policy mode to export information. Be sure that the administrator accesses this equipment from only one computer when exporting.

## ❑ Deleting SNMP V3 user information

- 1 Click the [SNMP] from the [Network] submenu under the [Setup] menu.
- 2 Select the check box of SNMP V3 user information that you want to delete from the SNMP V3 user information list, and then click [Delete].

### Tip

Click [Delete All] to delete all the SNMP V3 user information.

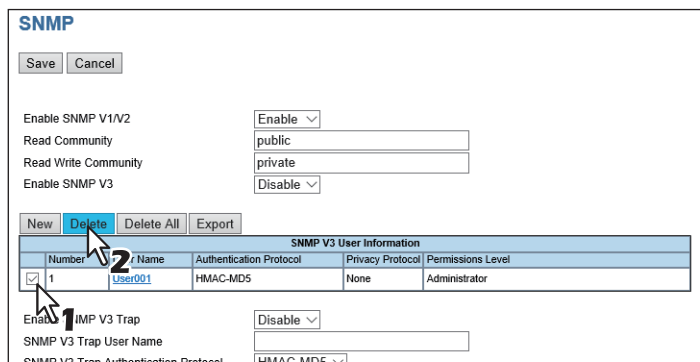

The confirmation dialog box appears.

- 3 Click [OK].  
The SNMP V3 user information is deleted.

## ■ Setting up Copier settings


You can configure copy operation settings from the [Copier] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting the copier setting

- 1 Start TopAccess access policy mode.**  
📖 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Setup] menu and [Copier] submenu.**

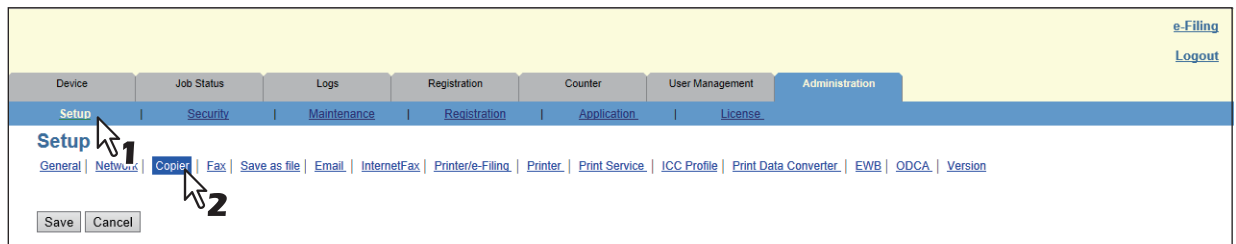

The Copier submenu page is displayed.

- 4 In the Copier submenu page, set the copier settings as required.**

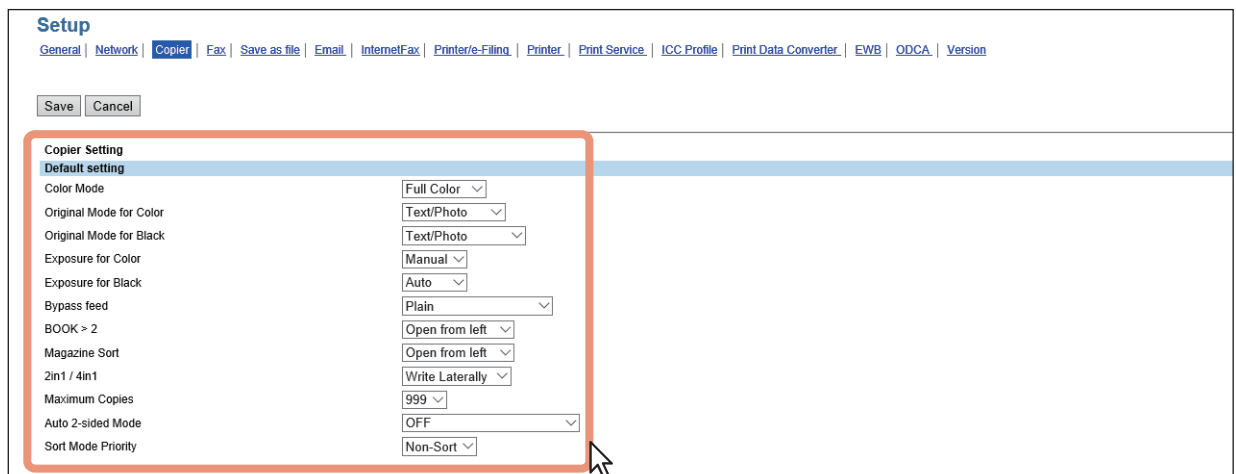

You can set the following in this page.

- 📖 P.226 “Setting up Default setting”
- 📖 P.228 “Setting up Copy Job Enforcement Continue”

- 5 Click [Save].**  
The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## Setting up Fax settings

You can configure the fax device and fax operation settings from the [Fax] submenu under the [Setup] menu.

### Note

- Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.
- The [Fax] submenu in the [Setup] menu is available only when the Fax Unit is installed.


### Setting the fax settings

#### 1 Start TopAccess access policy mode.

P.15 “Access Policy Mode”


#### 2 Click the [Administration] tab.

#### 3 Click the [Setup] menu and [Fax] submenu.

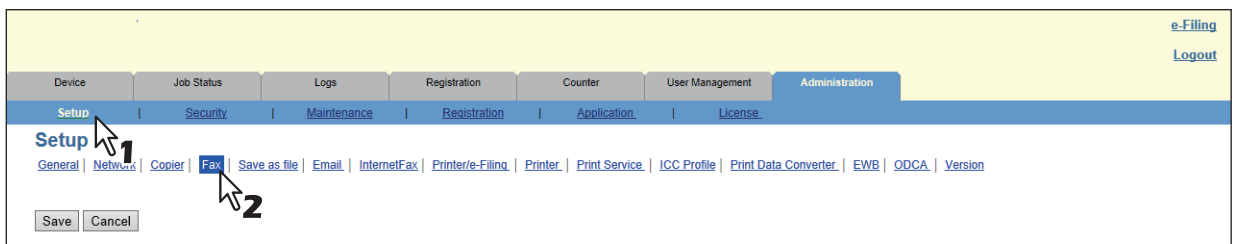

The Fax submenu page is displayed.

#### 4 In the Fax submenu page, set the fax settings as required.

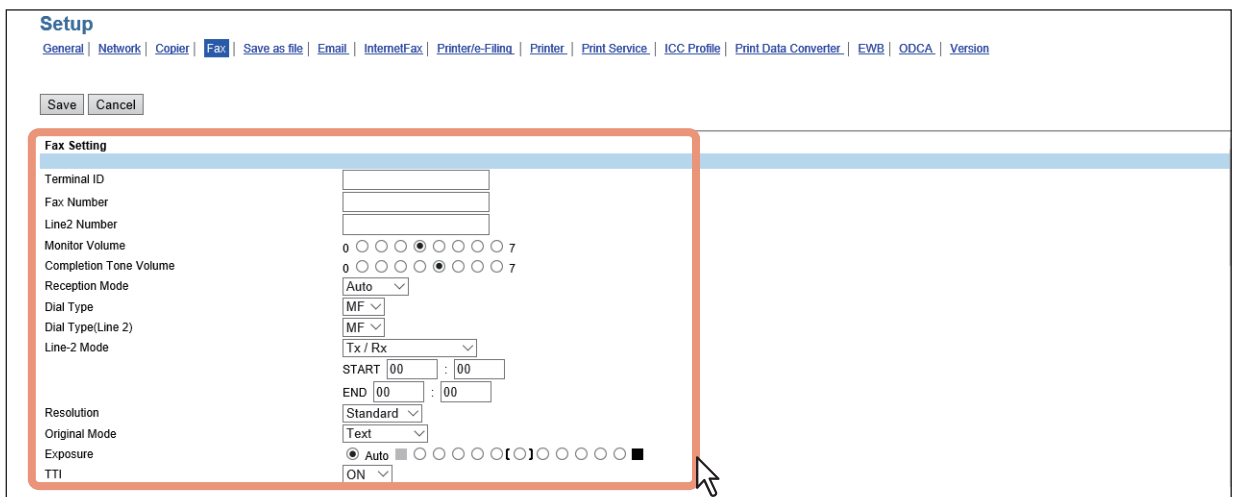

You can set the following in this page.

P.230 “Setting up Fax Setting”

## 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Setting up Save as file settings

You can configure file saving operations and the Save as File function by the N/W-Fax driver from the [Save as file] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting the Save as file settings

### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”

### 2 Click the [Administration] tab.

### 3 Click the [Setup] menu and [Save as file] submenu.

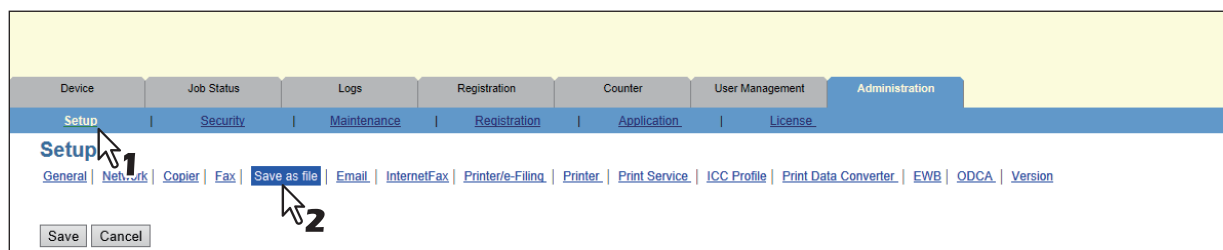

The Save as file submenu page is displayed.

## 4 In the Save as file submenu page, set the Save as file settings as required.

**Setup**  
General | Network | Copier | Fax | **Save as file** | Email | InternetFax | Printer/e-Filing | Printer | Print Service | ICC Profile | Print Data Converter | EWB | ODCA | Version

Save Cancel

**Save as file Setting**

**Local Storage Path**  
Storage Path FILE\_SHARE

Send scanned documents to a sub folder in the storage path.  
(The sub folders will be named after the associated template and will be of the format: Group Number-GroupName-TemplateName)

Send scanned documents directly to the storage path.

**Storage Maintenance**

Do not delete documents automatically

Delete documents after 30 day(s)

You can set the following in this page.

- P.236 “Setting up Local Storage Path”
- P.237 “Setting up Storage Maintenance”
- P.237 “Setting up Destination”
- P.238 “Setting up Folder Name”
- P.238 “Setting up Format”
- P.239 “Setting up Single Page Data Saving Directory”
- P.240 “Setting up File Composition”
- P.240 “Setting up User Name and Password at User Authentication for Save as File”
- P.241 “Setting up Searching Interval”
- P.241 “Setting up Remote 1 and Remote 2 Settings”
- P.245 “Setting up N/W-Fax Destination”
- P.245 “Setting up N/W-Fax Folder”

## 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

When using Internet Explorer, the changes may not be reflected on the Save as file page immediately after changing the settings and clicking [Save]. If that happens, click the [Save as file] submenu to refresh the page.

## ■ Setting up E-mail settings


You can configure E-mail transmission operations from the [E-mail] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting the E-mail settings

- 1 Start TopAccess access policy mode.**  
P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Setup] menu and [Email] submenu.**

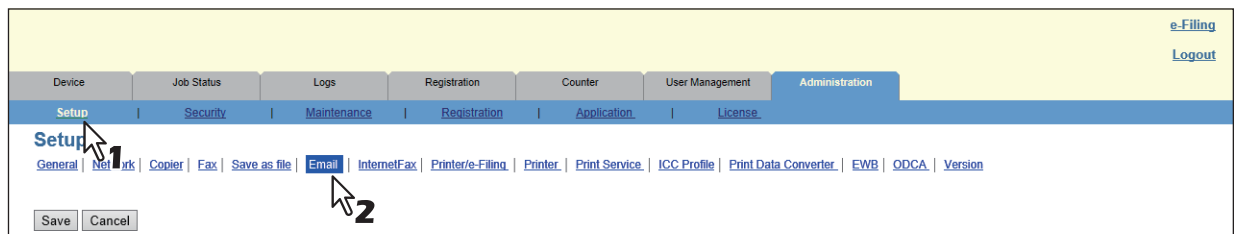

The Email submenu page is displayed.

- 4 In the Email submenu page, set the E-mail settings as required.**

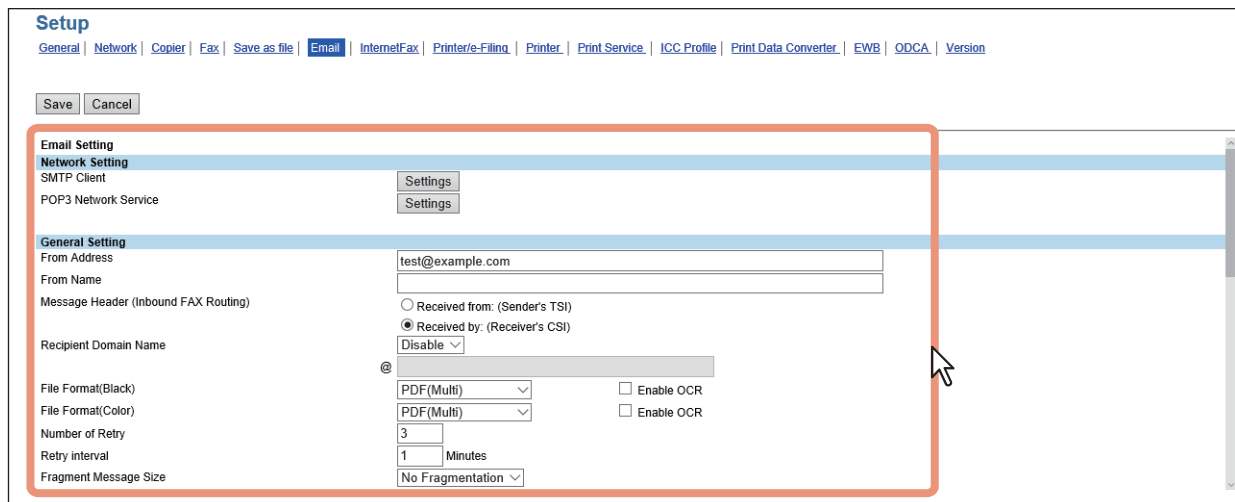

You can set the following in this page.

P.247 “Email settings”

- 5 Click [Save].**  
The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

- 6 Click [OK] to apply the changes.**

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Setting up InternetFax settings


You can configure Internet Fax operations from the [InternetFax] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting the Internet Fax settings

- 1 **Start TopAccess access policy mode.**  
P.15 “Access Policy Mode”
- 2 **Click the [Administration] tab.**
- 3 **Click the [Setup] menu and [InternetFax] submenu.**

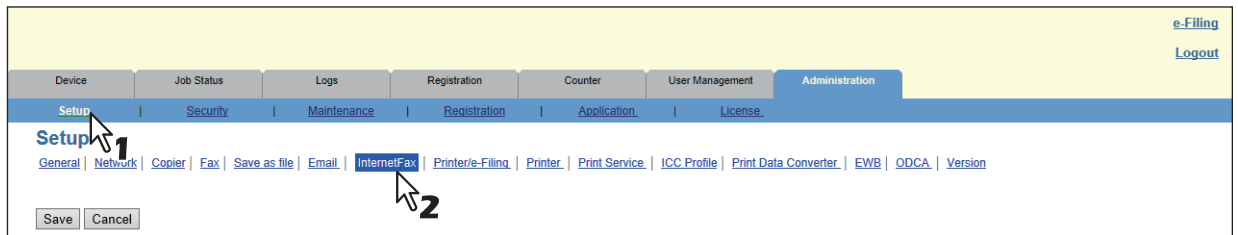

The InternetFax submenu page is displayed.

- 4 **In the InternetFax submenu page, set the Internet Fax settings as required.**

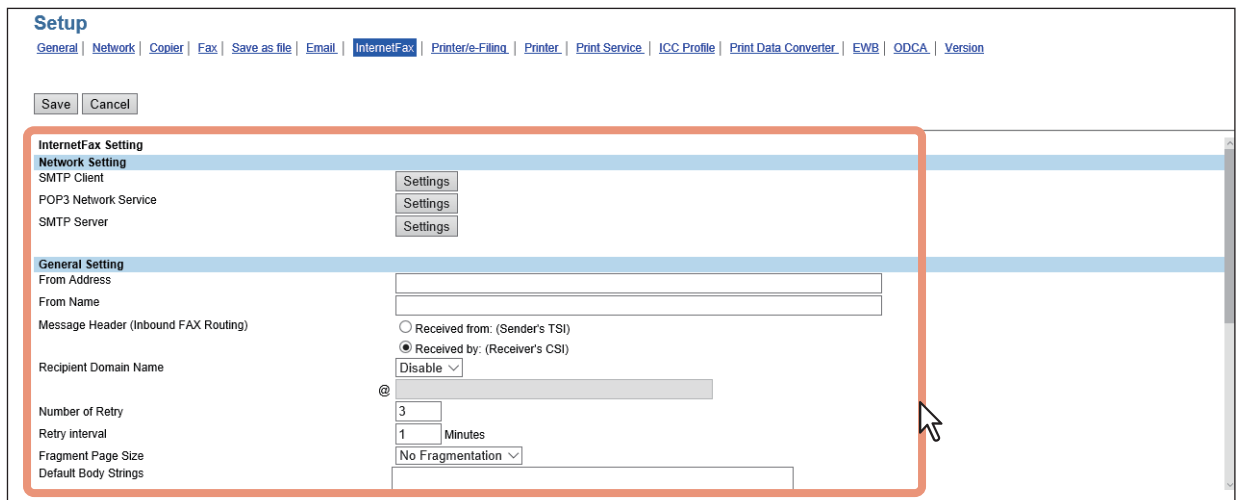

You can set the following in this page.

P.253 “Setting up InternetFax Setting”

- 5 **Click [Save].**  
The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

- 6 **Click [OK] to apply the changes.**

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Setting up Printer/e-Filing settings

You can configure how to continue print jobs and e-Filing jobs from the [Printer/e-Filing] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after a time period.


## □ Setting the Printer/e-Filing settings

### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”

### 2 Click the [Administration] tab.

### 3 Click the [Setup] menu and [Printer/e-Filing] submenu.

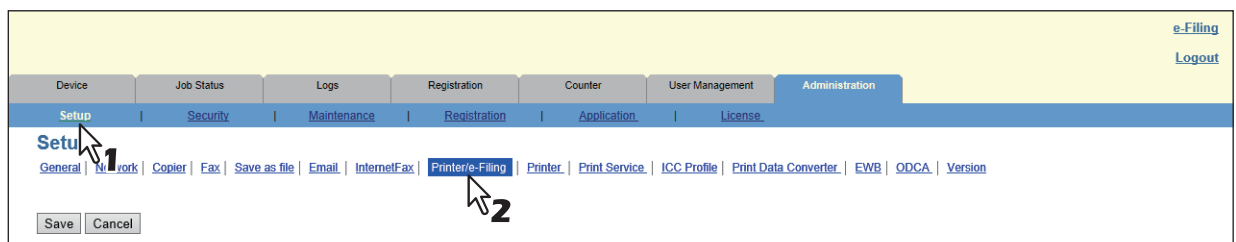

The Printer/e-Filing submenu page is displayed.

### 4 In the Printer/e-Filing submenu page, set the Printer/e-Filing settings as required.



You can set the following in this page.

📖 P.256 “Setting up Printer/e-Filing Job Enforcement Continue”

### 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

### 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.



## ■ Setting up Printer settings

You can configure printer operations and printer options for RAW print jobs from the [Printer] submenu under the [Setup] menu.

📖 P.294 “Setting up Raw Job Setting”


### ❑ Setting the Printer settings

#### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


#### 2 Click the [Administration] tab.

#### 3 Click the [Setup] menu and [Printer] submenu.

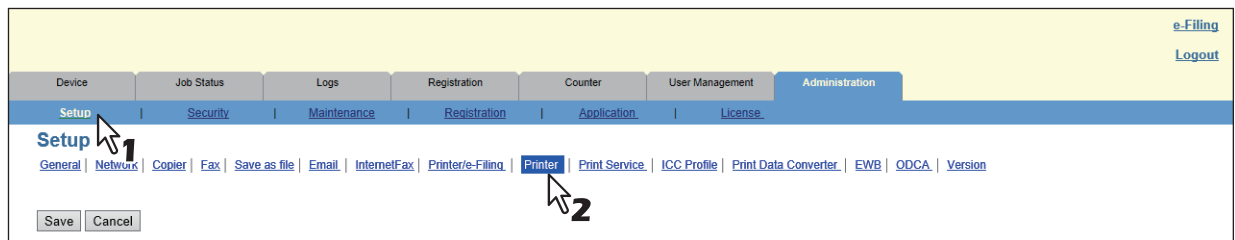

The Printer submenu page is displayed.

#### 4 In the Printer submenu page, set the Printer settings as required.

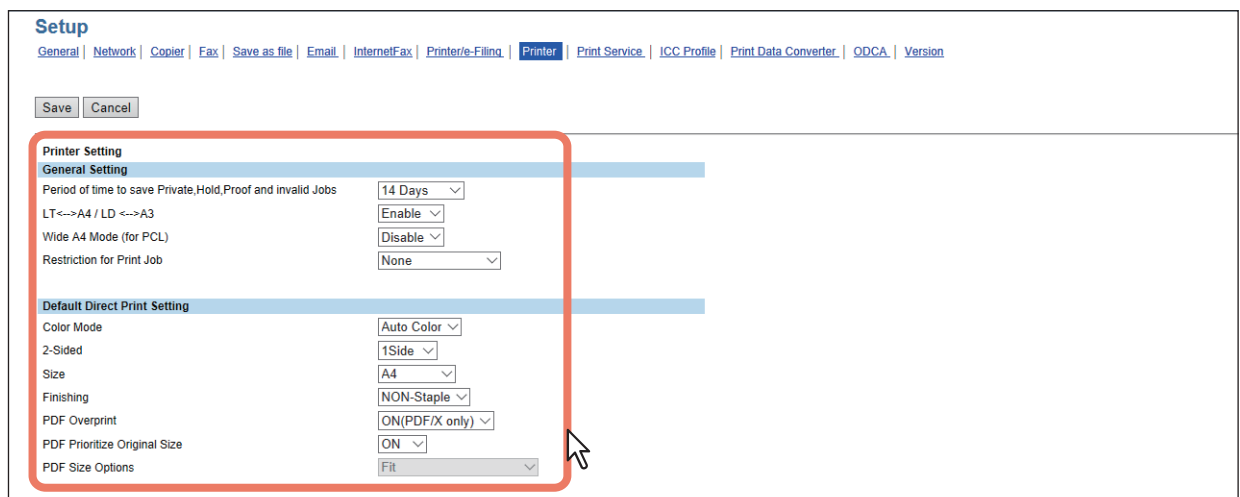

You can set the following in this page.

📖 P.257 “Setting up General Setting”

📖 P.258 “Setting up Default Direct Print Setting”

📖 P.259 “Setting up Driver Customization Packages Setting”

📖 P.260 “Setting up Default Raw Job Setting”

📖 P.261 “Setting up Raw Job Setting”

#### 5 Click [Save].

The confirmation dialog box appears.

##### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ❑ Setting up Raw Job Setting

 
In Raw Job Setting, you can add up to 16 LPR queue names and specify the raw job setting for each queue. These queue names can be used when printing without a printer driver, such as printing from UNIX workstation. You can add, edit, or delete an LPR queue.

📖 P.294 “Adding or editing an LPR queue”

📖 P.294 “Deleting an LPR queue”

### Adding or editing an LPR queue

- 1 To add a new LPR queue, click [Add] in Raw Job Setting. To edit an existing LPR queue, select a radio button of a queue that you want to edit and click [Edit].



The Add New LPR Queue page is displayed.

- 2 Enter the following items as required.

Queue Name	
Duplex Printing	Disable
Paper Size	A4
Paper Type	Plain
Orientation	Portrait
Stapling	OFF
Output Tray	Tray1
PCL Form Line	12.0
PCL Font Pitch	10.0
PCL Font Point Size	12.0
PCL Font Number	0
PCL Line Termination	Auto
Symbol set	Roman-8
Paper Source	Auto
Do not Print Blank Pages	OFF

You can set the following in this page.


📖 P.261 “Setting up Raw Job Setting”

- 3 Click [Save].

The queue name is added to the list.

### Deleting an LPR queue

- 1 Select a radio button of a queue that you want to delete and click [Delete].

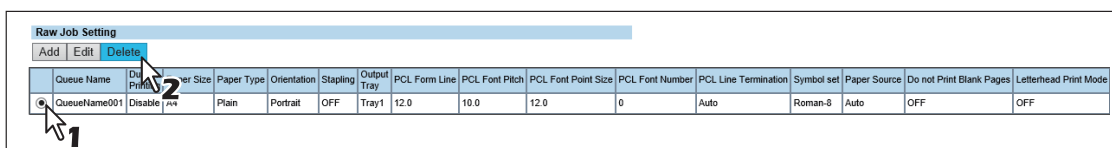

The confirmation dialog box appears.

- 2 Click [OK].

The selected queue is deleted.

## ■ Setting up Print Service settings


You can configure print services such as Raw TCP Print, LPD Print, IPP Print, FTP Print, NetWare Print, Email Print, and Multi Station Print from the [Print Service] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


## □ Setting the Print Service settings

- 1 Start TopAccess access policy mode.  
P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Setup] menu and [Print Service] submenu.

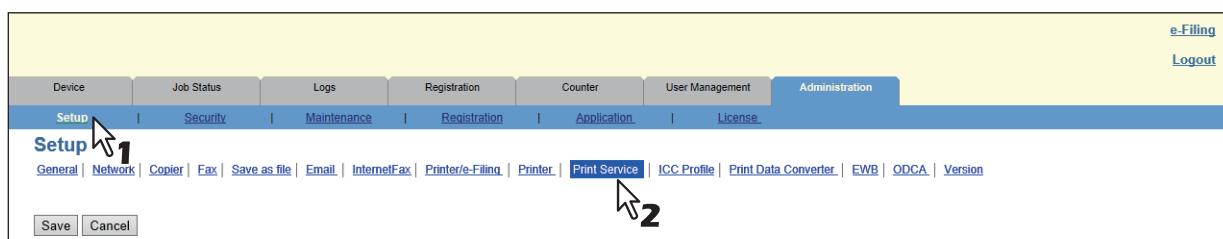

The Print Service submenu page is displayed.

- 4 In the Print Service submenu page, set the Print Service settings as required.

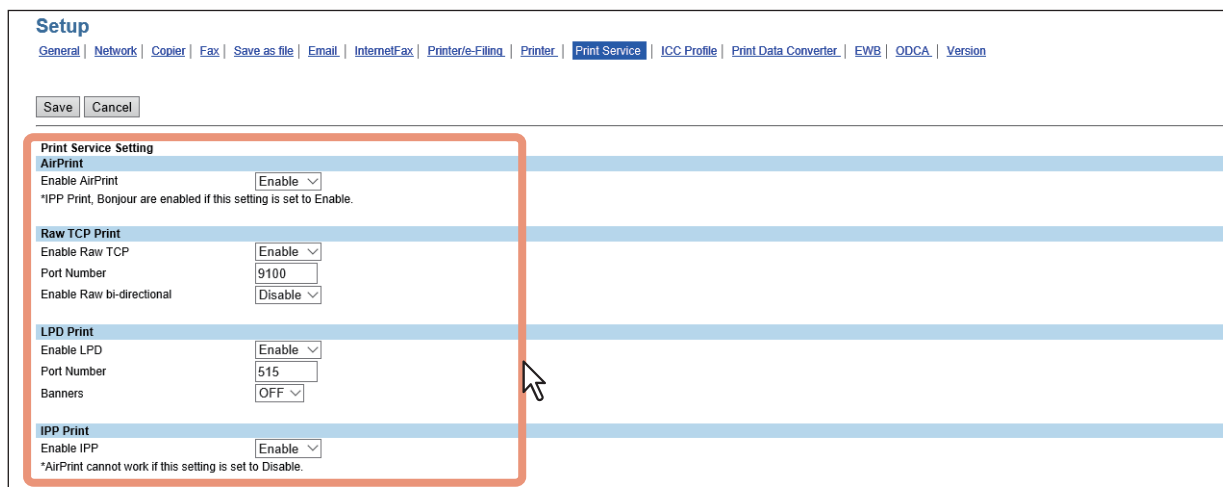

You can set the following in this page.

- P.264 “Setting up Raw TCP Print”
- P.265 “Setting up LPD Print”
- P.265 “Setting up IPP Print”
- P.267 “Setting up FTP Print”
- P.267 “Setting up NetWare Print”
- P.268 “Setting up Email Print”
- P.269 “Setting up Multi Station Print”

- 5 Click [Save].  
The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Setting up ICC Profile settings

You can configure profiles for printer functions from the [ICC Profile] submenu under the [Setup] menu.

📖 P.297 “Configuring the source profile”

### Note

This setting is available only for some models.


## □ Setting the ICC Profile settings

### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

### 3 Click the [Setup] menu and [ICC Profile] submenu.

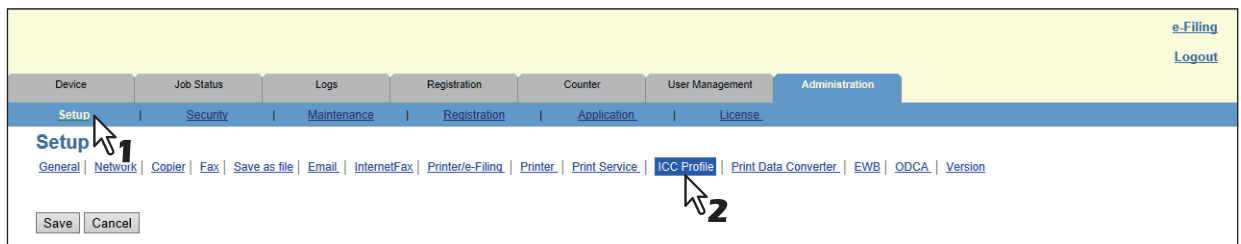

The ICC Profile submenu page is displayed.

### 4 In the ICC Profile submenu page, set the ICC Profile settings as required.

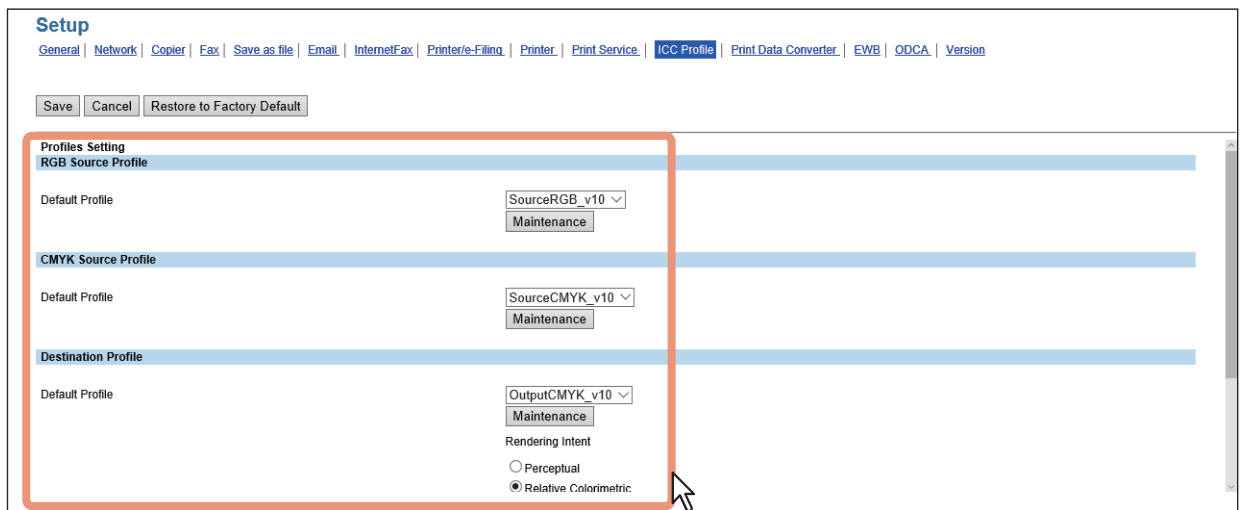

You can set the following in this page.

📖 P.272 “Setting up RGB Source Profile”

📖 P.272 “Setting up CMYK Source Profile”

📖 P.273 “Setting up Destination Profile”

📖 P.273 “Setting up Customized RGB Profile”

## 5 Click [Save].

The confirmation dialog box appears.

### Tip

- When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. Click this to clear all the changes made and return the settings to the current ones.
- Click [Restore to Factory Default] to return the settings to the factory default.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ❑ Configuring the source profile


📖 P.297 “Importing profiles”

📖 P.298 “Exporting profiles”

📖 P.299 “Deleting profiles”


### Importing profiles

#### 1 Click [Maintenance] of the desired profile.

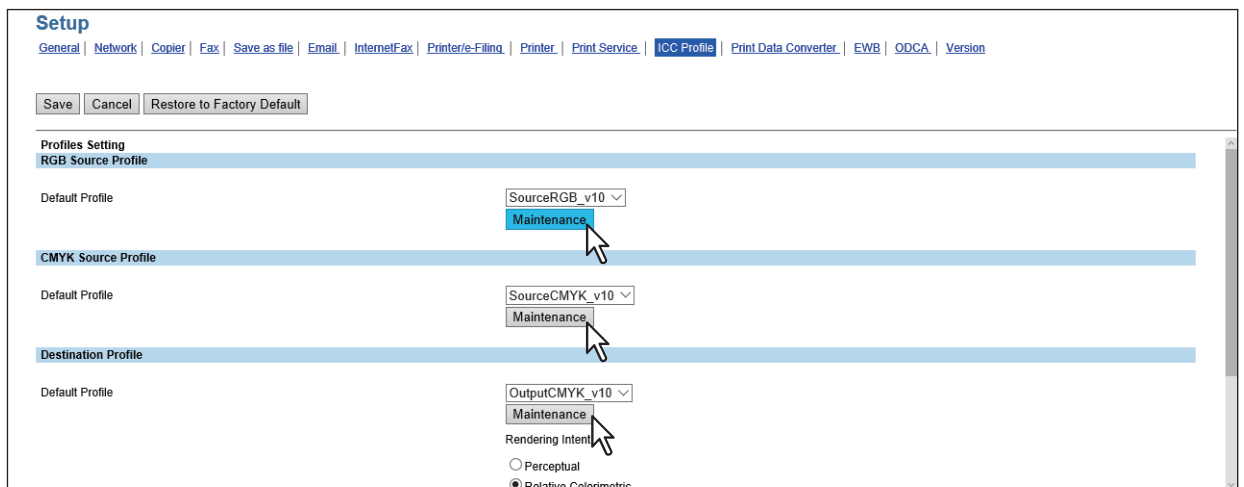


The Maintenance Profile page of the selected profile is displayed.

#### 2 Click [Browse] in [Import new Profile] to select the file of the selected profile, and then click [Import].

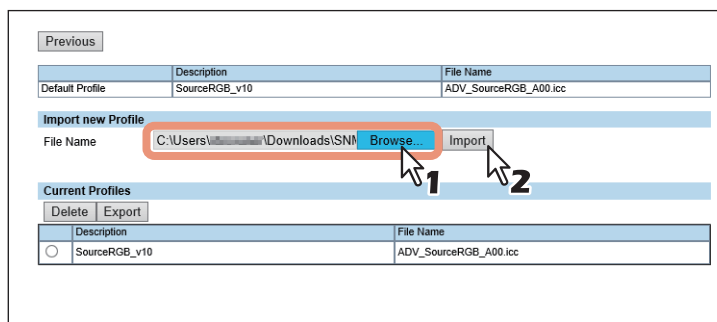

Importing starts.


### 3 The profile is imported. Click [Previous] to close the Maintenance Profile page.

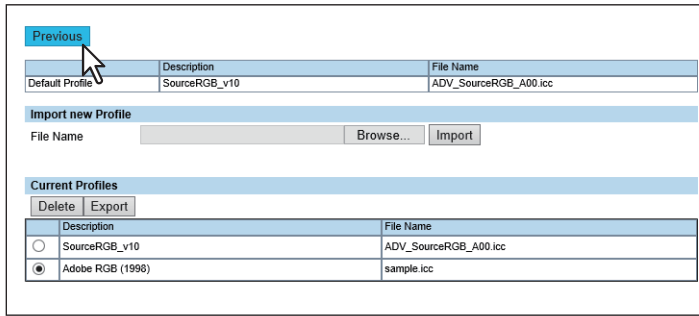

The imported profile is added to the [Current Profiles] list.


## Exporting profiles

### 1 Click [Maintenance] of the desired profile.

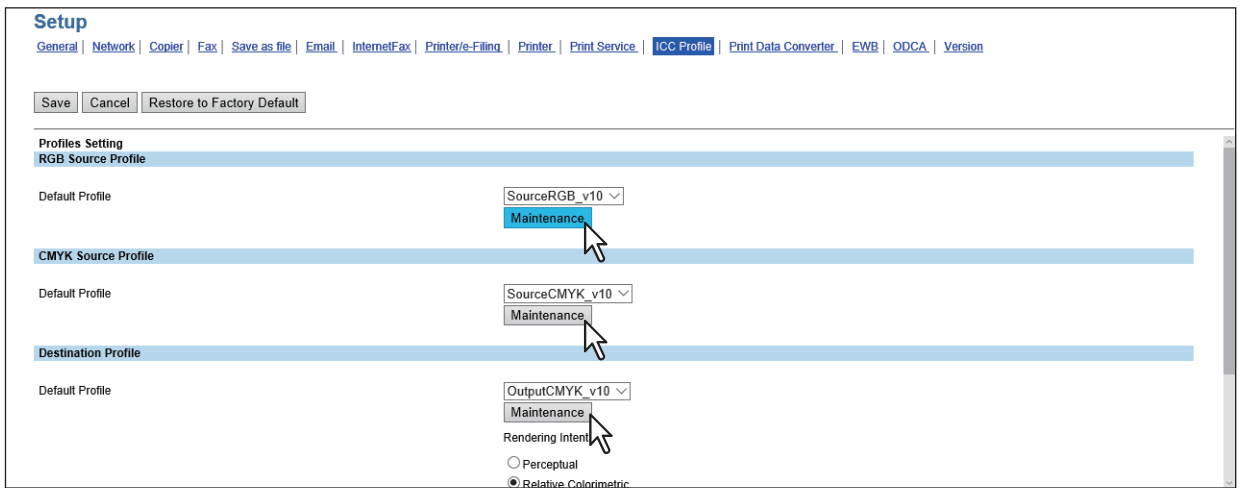

The Maintenance Profile page of the selected profile is displayed.

### 2 Select the desired profile in the [Current Profiles] list, and then click [Export].

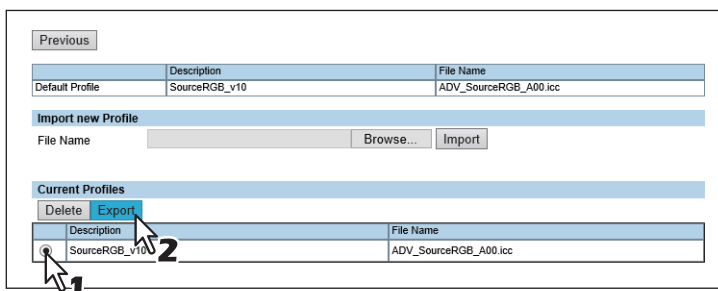


The Export page is displayed.

#### Note


Profiles registered as a factory default cannot be exported.

### 3 Click the [File Name] link of a profile to be exported.

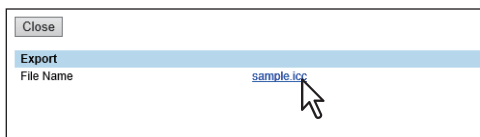


The file is downloaded.

#### 4 Click [Close] to close the Export page.

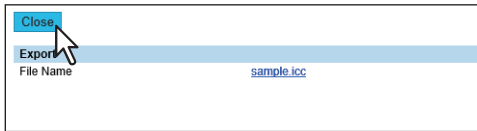


#### 5 Click [Previous] to close the Maintenance Profile page.

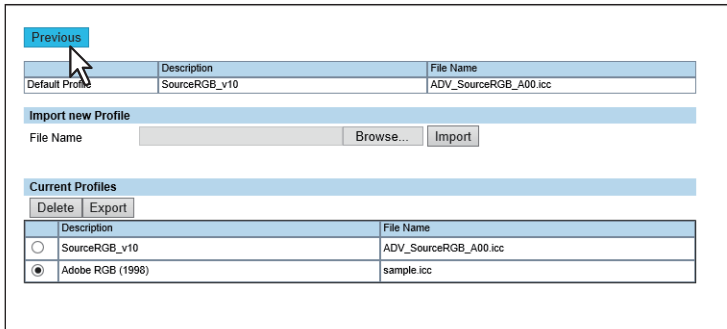


### Deleting profiles

#### 1 Click [Maintenance] of the desired profile.

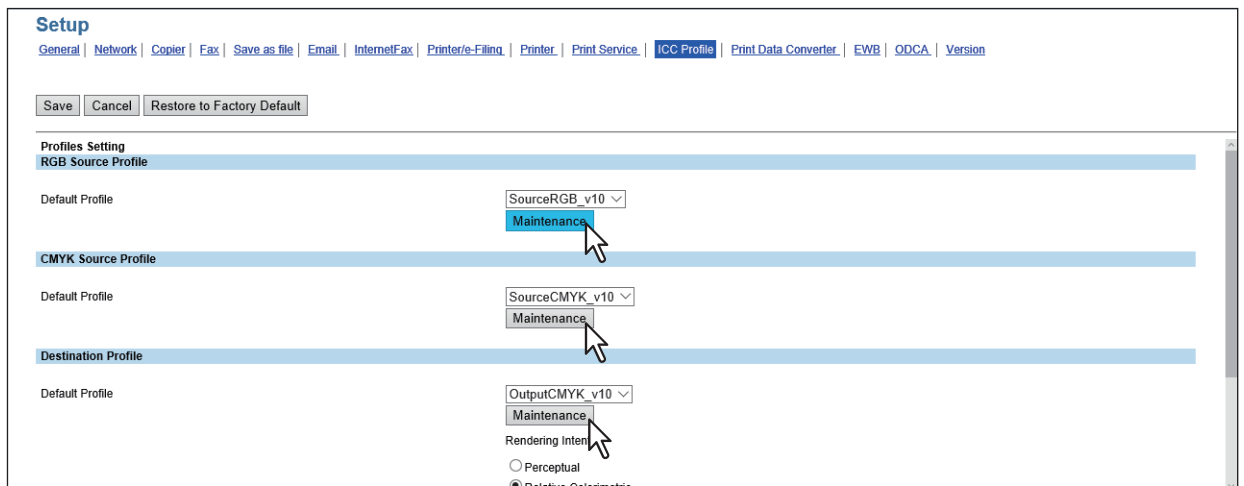

The Maintenance Profile page of the selected profile is displayed.

#### 2 Select the desired profile in the [Current Profiles] list, and then click [Delete].

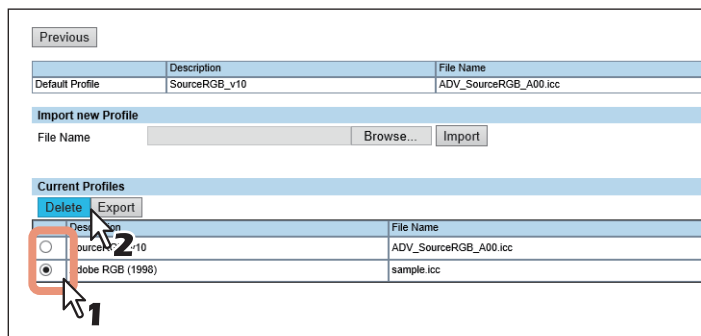


The confirmation dialog box appears.

#### Note

Profiles registered as a factory default cannot be deleted.

- 3 Click [OK].  
The Profile is deleted.

- 4 Click [Previous] to close the Maintenance Profile page.

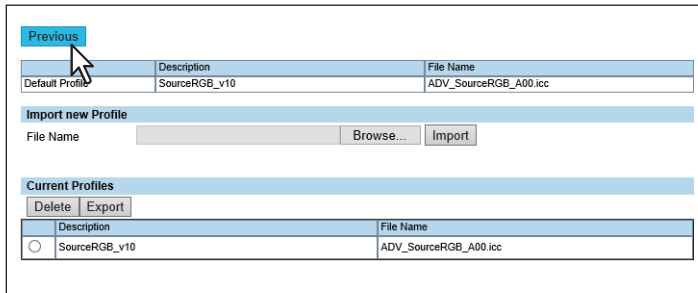

The profile is deleted from the [Current Profiles] list.

## ■ Setting up Print Data Converter settings


For information on Print Data Converter, contact your service technician.  
You can configure Print Data Converter from the [Print Data Converter] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


### □ Setting the Print Data Converter settings

- 1 Start TopAccess access policy mode.  
P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Setup] menu and [Print Data Converter] submenu.

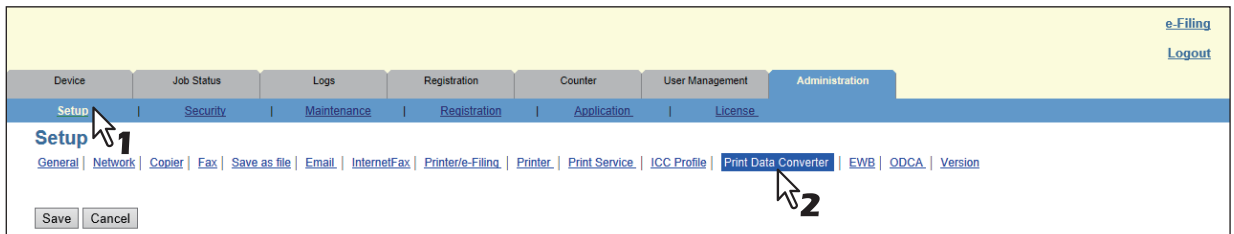

The Print Data Converter submenu page is displayed.

- 4 In the Print Data Converter submenu page, set the Print Data Converter settings as required.

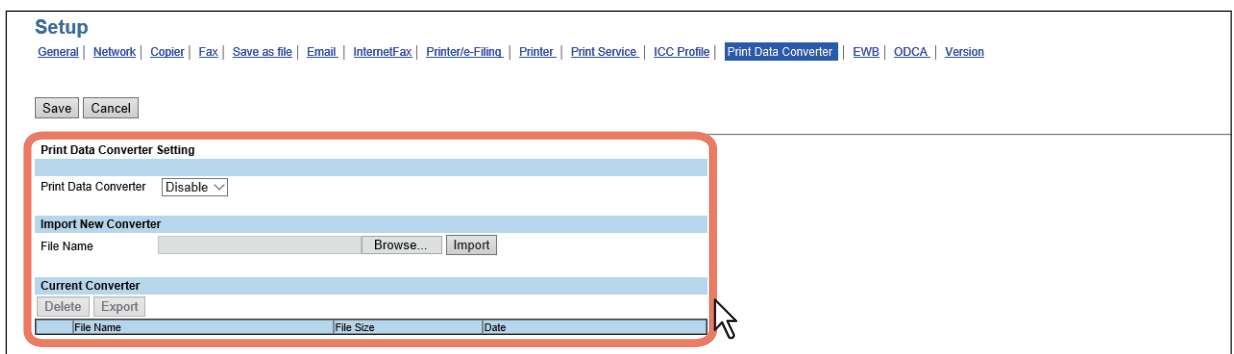

You can set the following in this page.  
P.274 “Print Data Converter settings”



## 5 Click [Save].

The confirmation dialog box appears.

### Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

## 6 Click [OK] to apply the changes.

### Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

## ■ Configuring the EWB function

You can configure the EWB (Embedded Web Browser) function which displays web pages on the touch panel from the [EWB] submenu under the [Setup] menu.

📖 P.301 “Registering a server”

📖 P.302 “Deleting a server”

### Note

- The EWB function is available only when the External Interface Enabler is installed on this equipment.
- This setting is available only for some models.


## □ Registering a server

### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

### 3 Click the [Setup] menu and [EWB] submenu.

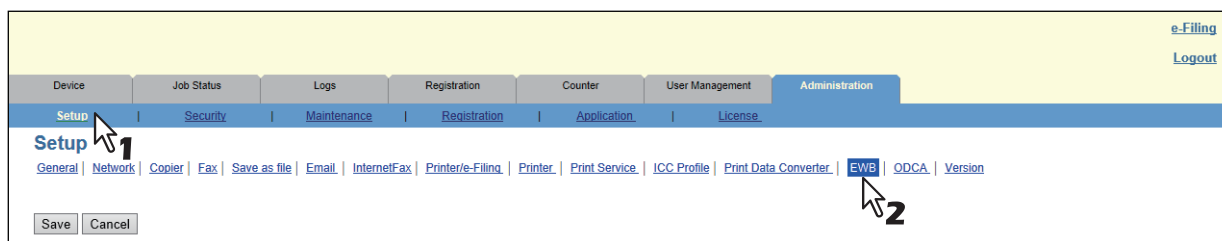

The EWB submenu page is displayed.

### 4 To register a server for the EWB function, enter the server address and then click [Add].

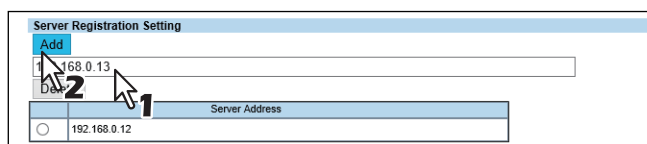


The server is registered.

To register more than one server, repeat this procedure.


## ❑ Deleting a server

- 1 Start TopAccess access policy mode.  
📖 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Setup] menu and [EWB] submenu.

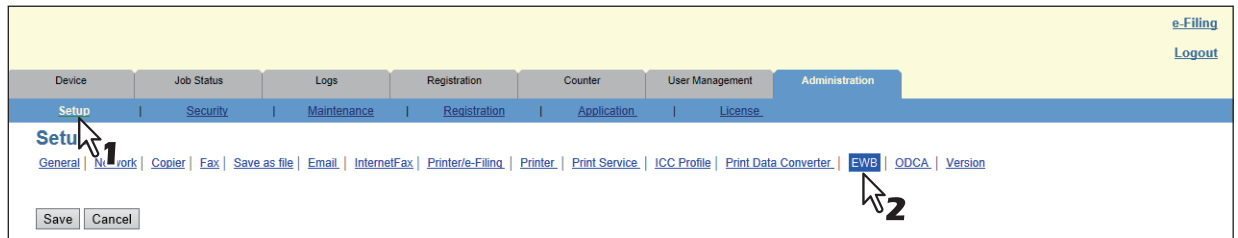

The EWB submenu page is displayed.

- 4 To delete a server registered for the EWB function, select the server that you want to delete, and then click [Delete].

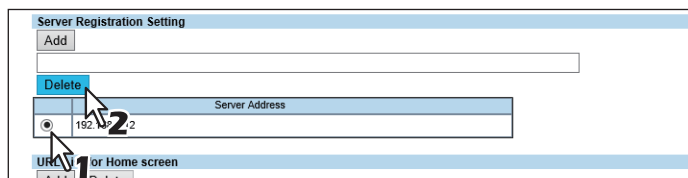

- 5 Click [OK].  
The server is deleted.

## ■ Setting up Off Device Customization Architecture settings


For the details of ODCA (Off Device Customization Architecture), contact your service technician. You can configure ODCA (Off Device Customization Architecture) from the [ODCA] submenu under the [Setup] menu.

### Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

## ❑ Setting the Off Device Customization Architecture settings

- 1 Start TopAccess access policy mode.  
📖 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Setup] menu and [ODCA] submenu.

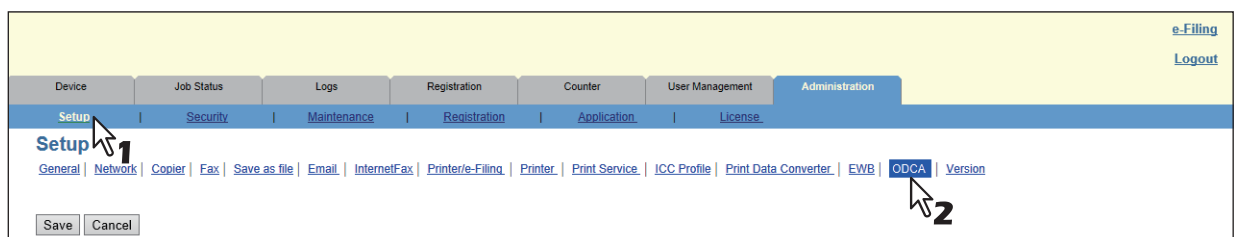

The ODCA submenu page is displayed.

**4 In the ODCA submenu page, set the Off Device Customization Architecture settings as required.**



You can set the following in this page.

- 📖 P.278 “Setting up Network”
- 📖 P.278 “Setting up Configuration”
- 📖 P.278 “Notification Events”

**5 Click [Save].**

The confirmation dialog box appears.

**Tip**

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

**6 Click [OK] to apply the changes.**

**Note**


The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

**■ Displaying version information**

You can check the system software version information of this equipment from the [Version] submenu under the [Setup] menu.


**□ Displaying the version information**

- 1 Start TopAccess access policy mode.**  
📖 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Setup] menu and [Version] submenu.**

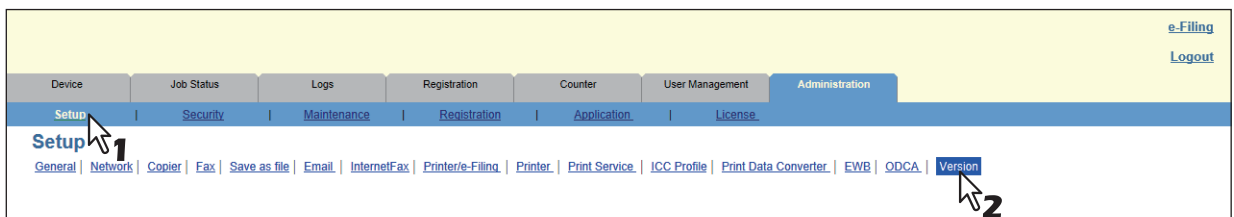

The Version submenu page is displayed.

## 4 In the Version submenu page, you can confirm the version information of the system software.

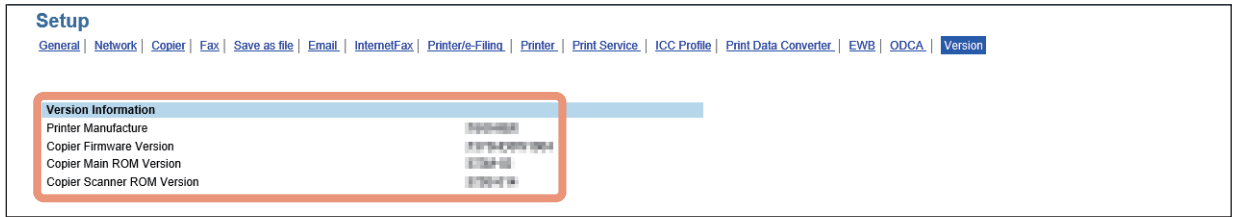

## [Security] Item List

- 📖 P.305 “Authentication settings”
- 📖 P.316 “Certificate management settings”
- 📖 P.320 “Password Policy settings”
- 📖 P.323 “Security Stamp Setting”

### Tip

Users who are granted administrator privileges in access policy mode can access the [Security] menu from the [Administration] tab.

See the following pages for how to access it:

- 📖 P.15 “Access Policy Mode”

## ■ Authentication settings

You can restrict user operations using the authentication function of your equipment.

- 📖 P.305 “Setting up Department Setting”
- 📖 P.307 “Setting up User Authentication Setting”
- 📖 P.313 “Setting up Email Authentication”
- 📖 P.314 “Setting up Email Address Setting”
- 📖 P.315 “Setting up Single Sign On Setting”
- 📖 P.315 “Setting up Home Directory Setting”

### Tip

The [Authentication] submenu can be accessed from the [Security] menu on the [Administration] tab.

See the following pages for how to access it and information on [Security] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.305 “[Security] Item List”


## □ Setting up Department Setting

When you want to manage the counters for every department, enable department management. If this is done, the department code input screen will be displayed on the computer and the touch panel when copying, scanning, faxing, faxing via the Internet, and operating on e-Filing to enable you to manage operations by departments.

### Note

The following applications can access your equipment regardless of the department setting.

- AddressBook Viewer
- Backup/Restore Utility
- TWAIN Driver
- File Downloader

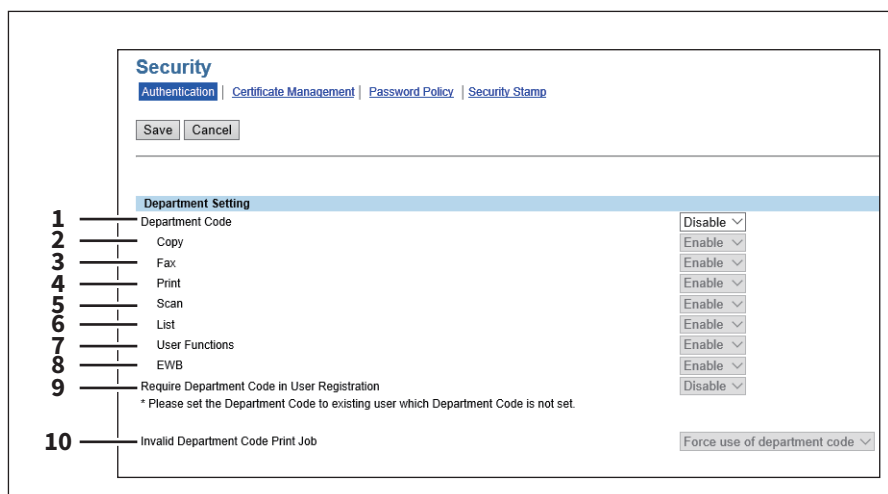



	Item name	Description
1	Department Code	Select whether or not to enable department management. [Disable] is set as the default.
2	Copy	When this function is enabled, the following counters are managed in each department. - Number of copied sheets - Number of originals scanned while copying [Enable] is set as the default.
3	Fax	When this function is enabled, the following counters are managed in each department. - Number of transmitted fax pages - Number of original pages scanned while transmitting faxes - Number of received fax pages - Number of received fax pages which are printed* [Enable] is set as the default.
4	Print	When this function is enabled, the number of outputs in printing (for printing, received E-mail and Internet Fax) is managed in each department. [Enable] is set as the default.
5	Scan	When this function is enabled, the number of originals scanned such as when they are stored in the shared folder is managed in each department. [Enable] is set as the default.
6	List	When this function is enabled, the number of system page outputs is managed in each department. [Enable] is set as the default.
7	User Functions	When this function is enabled, operations in the USER FUNCTION menu are managed in each department. [Enable] is set as the default.
8	EWB	Specify whether or not to enable the EWB (Embedded Web Browser) function. You need the External Interface Enabler option to use EWB.
9	Require Department Code in User Registration	Select whether or not to register the department code when registering a user. [Disable] is set as the default.
10	Invalid Department Code Print Job	Select whether or not to print jobs without a department code or with an invalid department code when department management is enabled. <ul style="list-style-type: none"> <li>• <b>Force use of department code</b> — Select this to force the entry of the department code when printing.</li> <li>• <b>Print</b> — Select this to print jobs with an invalid department code.</li> <li>• <b>Delete</b> — Select this to delete jobs with an invalid department code.</li> </ul>
	Tip	While SNMP communication is disabled in the printer driver, if the Invalid Department Code Print Job is set to Force use of department code and an invalid department code is entered in the printer driver, a printing job will be registered in Invalid department code print job list.

\* The number of outputs are only counted for received faxes, in which the department code needs to be entered, such as manual reception, polling reception or the printing of originals stored in the confidential mailbox and the bulletin mailbox.

## ❑ Setting up User Authentication Setting

You can configure user authentication to access your equipment.


	Item name	Description
1	User Authentication	Select whether or not to enable user authentication. [Disable] is set as the default.
	<b>Note</b>	<ul style="list-style-type: none"> <li>You cannot configure “E-mail authentication” if you enable user authentication.</li> <li>The No Limit Black function becomes unavailable if you enable user authentication. For details of the No Limit Black function, refer to the <b>MFP Management Guide</b>.</li> </ul>
2	User Authentication According To Function	Specify whether or not to authenticate users for each function.
3	Copy	Enable or disable user authentication when the Copy function is used. [Enable] is set as the default.
4	Fax	Enable or disable user authentication when the FAX function is used. [Enable] is set as the default.
	<b>Note</b>	When you want to set [Disable] for this function, use the latest version of a N/W-Fax driver. For details, contact your service technician.
5	Print	Enable or disable user authentication when the Print function is used. [Enable] is set as the default.
	<b>Note</b>	When you want to set [Disable] for this function, use the latest version of a printer driver. For details, contact your service technician.
6	Scan	Enable or disable user authentication when the Scan function is used. [Enable] is set as the default.
7	List	Enable or disable user authentication when the List function is used. [Enable] is set as the default.
8	User Functions	Enable or disable user authentication when the User Functions are used. [Enable] is set as the default.

	Item name	Description
9	EWB	Specify whether or not to enable the EWB (Embedded Web Browser) function. You need the External Interface Enabler option to use EWB.
10	Authentication Method for Admin	Select the administrator authentication method. <ul style="list-style-type: none"> <li>• <b>User Name and Password</b> —Select this to authenticate an administrator with a user name and a password.</li> <li>• <b>Only Password</b> —Select this to authenticate an administrator with a password.</li> </ul>
11	Authentication failed print job/Raw Print Job	Select whether or not to print jobs which have failed user authentication. <ul style="list-style-type: none"> <li>• <b>Hold</b> — Select this to register in the hold print job.</li> <li>• <b>Print</b> — Select this to print jobs which failed authentication.</li> <li>• <b>Delete</b> — Select this to delete jobs which failed authentication.</li> </ul>
	<b>Note</b>	When the N/W-Fax driver is used, selecting [Hold] deletes the job.
12	Auto Release on Login	Specify whether to process private jobs and hold jobs at login. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this not to print at login.</li> <li>• <b>Enable</b> — Select this to print at login.</li> </ul>
13	Project Management	Specify whether or not to enable project management.
14	Print Job(Without Project Code)	Specify whether or not to print the print jobs without project codes when Project Management is enabled. <ul style="list-style-type: none"> <li>• <b>Hold</b> — Registers print jobs to Hold.</li> <li>• <b>Print</b> — Prints print jobs that failed authentication.</li> <li>• <b>Delete</b> — Deletes print jobs that failed authentication.</li> </ul>
15	Use Password Authentication for Print Job	Performs user authentication for each print job. The user name and password are required to execute printing.
16	Enable Guest User	Enables operations by the guest user.
17	Authentication Type	Select the authentication method. <ul style="list-style-type: none"> <li>• <b>MFP Local Authentication</b> You can manage network users with the MFP local authentication of your equipment when you do not have a user authentication system in your environment. When MFP local authentication is enabled, users must enter the user name and password that is registered in the equipment to operate the touch panel.</li> <li>• <b>Windows Domain Authentication</b> You can manage network users with Windows domain authentication when you already manage your network using Windows domains. When Windows domain authentication is enabled, users must enter the user name and password that is registered in the Windows domain to operate the touch panel.  P.310 “Windows Domain Authentication”</li> <li>• <b>LDAP Authentication</b> You can manage network users with LDAP authentication when you already manage your network using LDAP. When LDAP authentication is enabled, users must enter the user name and password that is registered in the LDAP server to operate the touch panel.  P.312 “LDAP Authentication”</li> </ul>




	Item name	Description
18	PIN Code Authentication Setting	<p><b>PIN Code Authentication</b> — Select the PIN code authentication method.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this no to use the PIN code authentication. Use the user name and password for authentication.</li> <li>• <b>Enable</b> — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication.</li> </ul> <p><b>Minimum PIN Code Length</b> — Enter a figure that specifies the minimum digits for the PIN code.</p>
19	Shared Setting	<p><b>Shared User Management</b> —Specify whether this equipment should act as a Primary or a Secondary when synchronizing with other MFP.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Does not synchronize.</li> <li>• <b>Enable(Primary)</b> — Synchronizes as a primary.</li> <li>• <b>Enable(Secondary)</b> — Synchronizes as a secondary.</li> </ul> <p><b>Connection Timeout</b> —Enter the timeout time to stop communicating if you cannot connect to the primary or secondary MFP. You can set 1 to 180 seconds.</p>
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Although the maximum number of users is 10,000 to synchronize user information, it is recommended to keep the number of users within 2,000.</li> <li>• Secondary MFPs cannot perform user information registration, update, or delete from the user management screen.</li> </ul>	

# Windows Domain Authentication

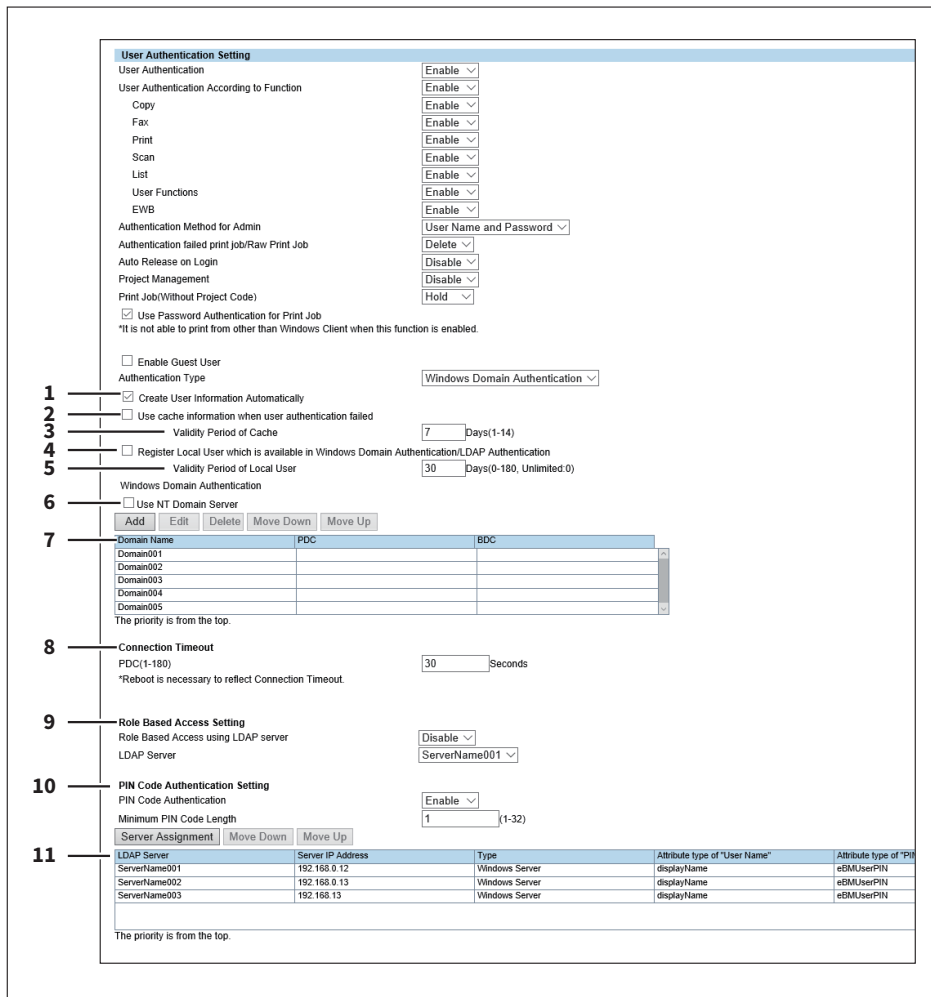

	Item name	Description
1	Create User Information Automatically	Select whether or not to register user information automatically to this equipment. This item is selected as the default. By registering user accounts to the printer, you can manage counters and quotas for each user.
	Tip	When automatically adding a user while printing from the printer driver, enable [Use Password Authentication for Print Job] on the [User Authentication Setting] screen. P.307 “Setting up User Authentication Setting”
2	Use cache information when user authentication failed	Either of the following data is saved according to the authentication method. Password, Card number, Domain name, PIN code, Home Directory information or RBAC information.
	Tip	The cache information will be updated if user authentication succeeds with the authentication server. However, if a user is authenticated with the cache information, it is not updated.
3	Validity Period of Cache	Enter the number of days to maintain the cache information. 1 to 14 days can be set from the latest update.
4	Register Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.

	Item name	Description
5	Validity Period of Local User	Enter the number of valid days for local users. Up to 180 days can be set from the user creation day. If 0 is set, the number of valid days will be indefinite.
6	Use NT Domain Server	Select this check box if you are managing the domain using the NT domain controller.
7	Domain List	<p>Displays a list of domains that are assigned for Windows Domain Authentication.</p> <p>Click [Add] and enter the following items in the displayed screen to register a domain. Select the domain and click [Edit] to edit a domain.</p> <p>Use [Move Up] and [Move Down] to change the priority order in the list. Delete the selected domain using [Delete] button.</p> <p><b>Domain Name</b> — Enter the domain name.</p> <p><b>PDC</b> — Enter the server name or IP address of the Primary Domain Controller (PDC). You can enter up to 128 alphanumeric characters and symbols.</p> <p><b>BDC</b> — Enter the server name or IP address of the Backup Domain Controller (BDC) as required. You can enter up to 128 alphanumeric characters and symbols.</p>
	<b>Note</b>	If the wrong primary or backup domain controller is specified, the [OK] in the user authentication screen on the touch panel is highlighted while this equipment searches for the primary or backup domain controller for 2 to 4 minutes.
8	Connection Timeout	Enter the timeout period for quitting communication when no response is received from the PDC or BDC server. Specify within the range from 1 to 180 seconds.
9	Role Based Access Setting	<p>Configure role based access using an LDAP server.</p> <p><b>Role Based Access using LDAP server</b> — Select whether enable or disable role based access. [Disable] is set as the default.</p> <p><b>LDAP Server</b> — Select the LDAP server that manages the Role Based Access Control.</p>
10	PIN Code Authentication Setting	<p><b>PIN Code Authentication</b> — Select the PIN code authentication method.</p> <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this no to use the PIN code authentication. Use the user name and password for authentication.</li> <li>• <b>Enable</b> — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication.</li> </ul> <p><b>Minimum PIN Code Length</b> — Enter a figure that specifies the minimum digits for the PIN code.</p>
11	LDAP Server List	<p>Displays a list of servers that are assigned for PIN Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client].</p> <p>Use [Move Up] and [Move Down] to change the priority order in the list.</p> <p> P.209 “LDAP Client settings”</p>
	<b>Tip</b>	<p>If [Windows Server] is selected as an LDAP server for the PIN code or IC card authentication, the following attribute type of user name is employed for the one at the login and the one of the user which is automatically registered while [Create User Information Automatically] is enabled.</p> <ul style="list-style-type: none"> <li>• If Kerberos is selected to access the LDAP server: sAMAccountName</li> <li>• If Digest-MD5, CRAM-MD5, Login, Plain or Simple Bind is selected to access the LDAP server: displayName</li> </ul>


# LDAP Authentication

	Item name	Description
1	Create User Information Automatically	Select whether or not to register user information automatically to this equipment. This item is selected as the default. By registering user accounts to the printer, you can manage counters and quotas for each user.
	<p><b>Tip</b></p> <p>When automatically adding a user while printing from the printer driver, enable [Use Password Authentication for Print Job] on the [User Authentication Setting] screen.</p> <p> P.307 “Setting up User Authentication Setting”</p>	
2	Use cache information when user authentication failed	Either of the following data is saved according to the authentication method. Password, Card number, Domain name, PIN code, Home Directory information or RBAC information.
	<p><b>Tip</b></p> <p>The cache information will be updated if user authentication succeeds with the authentication server. However, if a user is authenticated with the cache information, it is not updated.</p>	
3	Validity Period of Cache	Enter the number of days to maintain the cache information. 1 to 14 days can be set from the latest update.

	Item name	Description
4	Register Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.
5	Validity Period of Local User	Enter the number of valid days for local users. Up to 180 days can be set from the user creation day. If 0 is set, the number of valid days will be indefinite.
6	LDAP Server List	Displays a list of servers that are assigned for LDAP Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list. P.209 “LDAP Client settings”
7	Role Based Access Setting	Configure role based access using an LDAP server. <b>Role Based Access using LDAP server</b> — Select whether enable or disable role based access. [Disable] is set as the default. <b>LDAP Server</b> — Select the LDAP server that manages the Role Based Access Control.
8	PIN Code Authentication Setting	<b>PIN Code Authentication</b> — Select the PIN code authentication method. <ul style="list-style-type: none"> <li>• <b>Disable</b> — Select this no to use the PIN code authentication. Use the user name and password for authentication.</li> <li>• <b>Enable</b> — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication.</li> </ul> <b>Minimum PIN Code Length</b> — Enter a figure that specifies the minimum digits for the PIN code.
9	LDAP Server List	Displays a list of servers that are assigned for PIN Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list. P.209 “LDAP Client settings”
	Tip	If [Windows Server] is selected as an LDAP server for the PIN code or IC card authentication, the following attribute type of user name is employed for the one at the login and the one of the user which is automatically registered while [Create User Information Automatically] is enabled. <ul style="list-style-type: none"> <li>• If Kerberos is selected to access the LDAP server: sAMAccountName</li> <li>• If Digest-MD5, CRAM-MD5, Login, Plain or Simple Bind is selected to access the LDAP server: displayName</li> </ul>

## ❑ Setting up Email Authentication


When E-mail authentication is enabled, users must enter the user name and password before performing Scan to Email.

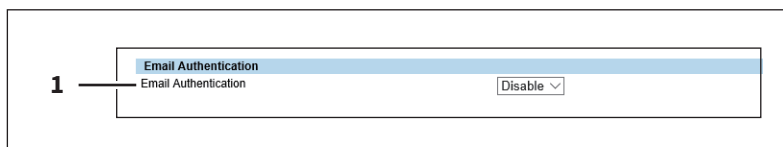

	Item name	Description
1	Email Authentication	Select whether or not to enable E-mail authentication.
	<b>Note</b> You must carry out “E-mail address setting” to use E-mail authentication. P.314 “Setting up Email Address Setting”	

## Setting up Email Address Setting

You can configure the E-mail address when E-mail authentication is enabled.

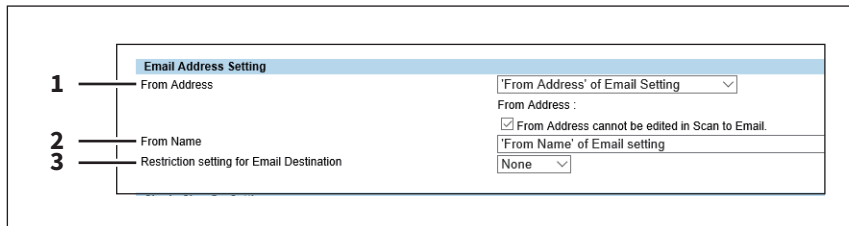


	Item name	Description
1	From Address	<p>Specify the From Address.</p> <p><b>'From Address' of Email Setting:</b> Select this to set the From Address in E-mail settings.</p> <p><b>User Name + @ + Mail Domain Name:</b> Select this to specify the From Address in the “User Name + @ + Mail Domain Name” format. The authenticated user name is employed as the “User Name”. The domain name specified in the [Domain Name] box is used as the “Mail Domain Name”. When this is selected, enter the domain name in the [Domain Name] box.</p> <p><b>'User Name' of LDAP:</b> Select this to set the From Address with the one you have selected from LDAP addresses. When you select this function, a list of servers assigned for LDAP authentication is displayed to allow you to select one. Specify the mail domain name to be used in the case the LDAP server search fails in the [Domain Name] box. The equipment searches the authenticated user name in [Attribute type of “User Name”] of the LDAP server. If the registered user name has been found in the specified schema, the schema value set in [Attribute type of “Email Address”] becomes the sender address. If the registered user name has not been found in the specified schema, the format set in [User Name + @ + Mail Domain Name] becomes the sender address. You can assign up to 4 registered LDAP servers to search. Click the [Server Assignment] button and add the server in the displayed screen to change the assignment. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list.  P.209 “LDAP Client settings”</p> <p><b>Use Email Address which was registered Local User:</b> Specify the Email Address that is registered to the user information.</p> <p><b>From Address cannot be edited in Scan to Email.:</b> Select this check box if you do not want to allow users to edit the From Address.</p>

	Item name	Description
2	From Name	Specify the From Name. <b>Account Name of From Address + From Name of Email Setting:</b> Select this to specify the From Name in the “Account Name of From Address + From Name of Email Setting” format. <b>'From Name' of Email setting:</b> Select this to set the From Name which has been specified in E-mail settings. <b>'User Name' of LDAP:</b> If the “From Address” is already set to “'User Name' of LDAP”, “From Name” is also automatically set to “'User Name' of LDAP” and used as the sender of the e-mail to the selected LDAP address. <b>Login User Name:</b> Specify the Login User Name that is registered to the user information.
3	Restriction setting for Email Destination	When User Authentication or Email Authentication is enabled, select whether to set the Email address of the authenticated user as a destination. <ul style="list-style-type: none"> <li>• <b>None</b> — Not used as a destination.</li> <li>• <b>Fixed To</b> — Only the Email address of the authenticated user is used for “To”.</li> <li>• <b>To</b> — The Email address of the authenticated user is added to “To”.</li> <li>• <b>Cc</b> — The Email address of the authenticated user is added to “Cc”.</li> <li>• <b>Bcc</b> — The Email address of the authenticated user is added to “Bcc”.</li> </ul>

**❑ Setting up Single Sign On Setting**

 
Normally users are required to enter the user name and password for E-mail authentication and Scan to Email; however, you can enable the single sign on setting to eliminate these operations.



	Item name	Description
1	Single Sign On for Scan to Email	Select whether or not to enable single sign on. [Disable] is set as the default.

**❑ Setting up Home Directory Setting**

You can configure the home directory when home directory is enabled.

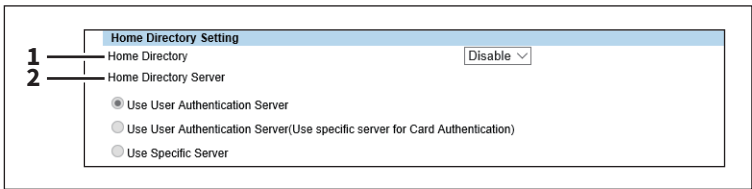

	Item name	Description
1	Home Directory	Select whether or not to enable home directory.

	Item name	Description
2	Home Directory Server	<p>Specify the home directory server.</p> <ul style="list-style-type: none"> <li>• <b>Use User Authentication Server</b> — Select this to use the user authentication server as the home directory server.</li> <li>• <b>Use User Authentication Server(Use specific server for Card Authentication)</b> — Select this to use the user authentication server as the home directory server. However, use the specified server as the home directory server in the case of Card Authentication.</li> <li>• <b>User Specific Server</b> — Select this to specify the home directory server.</li> </ul> <p>If you select “Use User Authentication Server (Use specific server for Card Authentication)” or “User Specific Server”, the LDAP server list appears on the screen. You can set up to 3 servers. Click the “Primary” button to select the primary server.</p> <p>Click the LDAP server name on the list to open the Home Directory Server Setting screen. Select the home directory server for each server name. If you do not specify the server, select “Disable”.</p>

## ■ Certificate management settings

You can manage device certificates and client certificates.

- 📖 P.316 “Setting up Device Certificate”
- 📖 P.318 “Setting up Client Certificate”
- 📖 P.319 “Setting up Certificate Setting”
- 📖 P.319 “Setting up CA Certificate”
- 📖 P.320 “Setting up Certificate Files”

### Tip

The [Certificate Management] submenu can be accessed from the [Security] menu on the [Administration] tab. See the following pages for how to access it and information on the [Security] menu:


- 📖 P.15 “Access Policy Mode”
- 📖 P.305 “[Security] Item List”

## □ Setting up Device Certificate

You can configure the device certificate for encrypted communications using wireless LAN, IEEE 802.1X authentication, IPsec, or SSL/TLS.

The screenshot shows the 'Device Certificate' configuration interface. On the left, there are three numbered sections: 1. Certificate Type (radio buttons for 'self-signed certificate', 'Import', and 'SCEP(Automatic)'); 2. Installed/Not Installed status with 'Create', 'Export', 'Upload', and 'Delete' buttons; 3. Configuration fields for CA Server Address (Primary/Secondary), MFP's Address in Common Name in the Certificate (dropdown for 'IP Address'), Timeout (10 seconds), CA Challenge, Signature Algorithm (SHA1/MD5), Poll Interval (1 Minute), and Maximum Poll Duration (8 Hours).

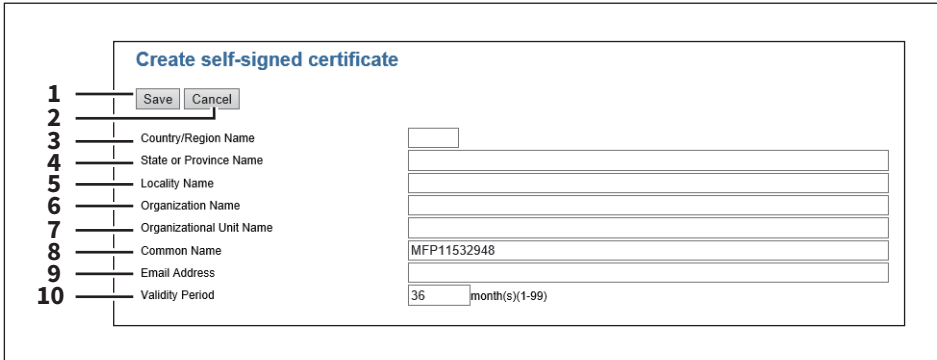


	Item name	Description
1	self-signed certificate	Creates a certificate for encrypted communications using SSL/TLS on your device. <b>[Create] button</b> — Displays the [Create self-signed certificate] screen. Specify items necessary for the certificate to create the self-signed certificate.  P.317 “[Create self-signed certificate] screen” <b>[Export] button</b> — Exports the created self-signed certificate.
2	Import	Import the certificate for encrypted communications using wireless LAN, IEEE 802.1X authentication, IPsec, or SSL/TLS. <b>[Browse] button</b> — Allows you to select the certificate file. <b>[Upload] button</b> — Uploads the selected certificate file. <b>[Delete] button</b> — Deletes the registered certificate file.
3	SCEP(Automatic)	Automatically acquires the certificate for encrypted communications using IP sec or SSL/TLS. <b>CA Server Address (Primary)</b> — Enter the IP address of FQDN of the CA server. You can enter up to 128 alphanumeric characters and symbols. <b>CA Server Address (Secondary)</b> — Enter the IP address of FQDN of the CA server. You can enter up to 128 alphanumeric characters and symbols. <b>MFP's Address in Common Name in the Certificate</b> — Select whether you use the IP address or FQDN as the address of this equipment to be entered in the [Common Name] box of the certificate. [IP Address] is set as the default. <b>Timeout</b> — Enter a timeout period for quitting communication when no response is received from the CA server. Specify within the range from 1 to 120 seconds. “10” is set as the default. <b>CA Challenge</b> — Enter the password for the CA challenge. You can enter up to 16 alphanumeric characters. <b>Signature Algorithm</b> — Select SHA1 or MD5 as the signature algorithm. <b>Poll Interval</b> — Specify the polling interval. [1 Minute] is set as the default. <b>Maximum Poll Duration</b> — Specify the polling duration. [8 Hours] is set as the default. <b>[Request] button</b> — Click this button to request the certificate. <b>[Delete] button</b> — Deletes the registered certificate.

### [Create self-signed certificate] screen

	Item name	Description
1	[Save] button	Saves the self-signed certificate.
2	[Cancel] button	Cancels creating the certificate.
3	Country/Region Name	Enter the country or region name using two alphanumeric characters and symbols. (Example: JP)
4	State or Province Name	Enter the state or province name with alphanumeric characters and symbols. You can enter up to 128 characters.


	Item name	Description
5	Locality Name	Enter the city or town name with alphanumerical characters and symbols. You can enter up to 128 characters.
6	Organization Name	Enter the organization name with alphanumerical characters and symbols. You can enter up to 64 characters.
7	Organizational Unit Name	Enter the organizational unit name with alphanumerical characters and symbols. You can enter up to 64 characters.
8	Common Name	Enter the FQDN or IP address of this equipment with alphanumerical characters and symbols. You can enter up to 64 characters.
9	Email Address	Enter the E-mail address with alphanumerical characters and symbols. You can enter up to 64 characters.
10	Validity Period	Enter the number of months in the validity period of the self-signed certificate.

## ❑ Setting up Client Certificate

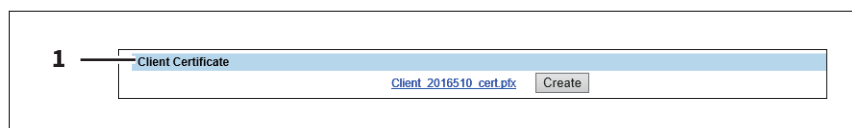

	Item name	Description
1	Client Certificate	Creates the client certificate. <b>[Create] button</b> — Displays the [Create Client Certificate] screen. Specify items necessary for the certificate to create the client certificate. 📖 P.318 “[Create Client Certificate] screen”

## [Create Client Certificate] screen

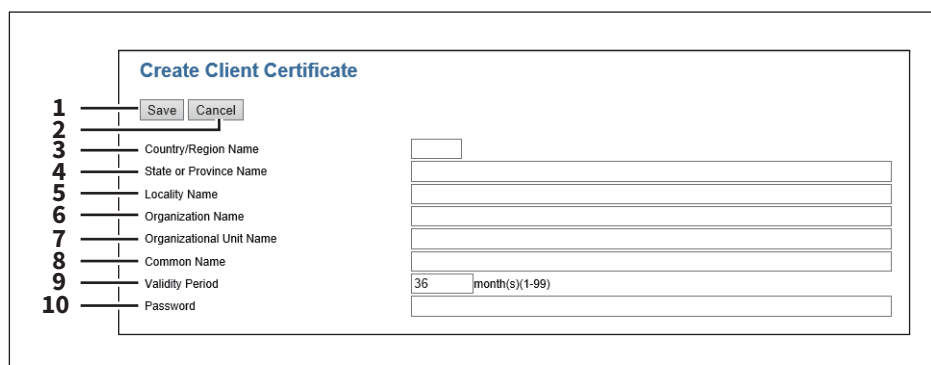

	Item name	Description
1	[Save] button	Saves the Client certificate.
2	[Cancel] button	Cancels creating the certificate.
3	Country/Region Name	Enter the country or region name using two alphanumerical characters and symbols. (Example: JP)
4	State or Province Name	Enter the state or province name with alphanumerical characters and symbols. You can enter up to 128 characters.
5	Locality Name	Enter the city or town name with alphanumerical characters and symbols. You can enter up to 128 characters.

	Item name	Description
6	Organization Name	Enter the organization name with alphanumerical characters and symbols. You can enter up to 64 characters.
7	Organizational Unit Name	Enter the organizational unit name with alphanumerical characters and symbols. You can enter up to 64 characters.
8	Common Name	Enter the FQDN or IP address of this equipment with alphanumerical characters and symbols. You can enter up to 64 characters.
9	Validity Period	Enter the number of months in the validity period of the self-signed certificate.
10	Password	Enter the password of the certificate with alphanumerical characters and symbols. You can enter up to 64 characters.

## □ Setting up Certificate Setting

	Item name	Description
1	Signature Algorithm	Select the signature algorithm to be used in Certificate. <b>SHA1</b> — Select this to use SHA1. <b>SHA256</b> — Select this to use SHA256. <b>SHA384</b> — Select this to use SHA384. <b>SHA512</b> — Select this to use SHA512.
	Tip	Select a signature algorithm other than “SHA1” to create a self-signed certificate.
2	Public Key	Select the public key to be used in Certificate. <b>RSA1024</b> — Select this to use RSA1024. <b>RSA2048</b> — Select this to use RSA2048.
	Tip	Select “RSA2048” for the public key to create a self-signed certificate.

## □ Setting up CA Certificate

When you want to enable SSL/TLS and verify with a CA certificate for the SMTP Client, POP3 Network Service, FTP Client, Directory Service, or Syslog Setting, you must install the CA certificate. You can install up to 10 CA certificates in this equipment.

	Item name	Description
1	CA Certificate(PEM)	Selects the certificate in the PEM format. <b>[Upload] button</b> — Uploads the certificate. <b>[Delete] button</b> — Deletes the registered certificate.

	Item name	Description
2	CA certificate (DER)	Selects the certificate in the DER format. <b>[Upload] button</b> — Uploads the certificate. <b>[Delete] button</b> — Deletes the registered certificate.

## ❑ Setting up Certificate Files

You can display a list of registered certificate files.

## ■ Password Policy settings

You can configure policies for the password to register.

📖 P.320 “Setting up Policy for Users”

📖 P.321 “Setting up Policy for Administrator, Auditor”

📖 P.322 “Setting up Policy for e-Filing Boxes, Template Groups, Templates, SecurePDF, SNMPv3, Cloning, Secure Receive”

### Tip

The [Password Policy] submenu can be accessed from the [Security] menu on the [Administration] tab. See the following pages for how to access it and information on [Security] menu:

📖 P.15 “Access Policy Mode”

📖 P.305 “[Security] Item List”

## ❑ Setting up Policy for Users

You can configure policies for user registration.

### Tip

If you change the settings, they become effective from the next login.

The screenshot shows the 'Password Policy' configuration page for 'Policy for Users'. It features several input fields and dropdown menus. A blue bar at the top indicates the current policy. Four numbered callouts point to specific settings: 1. Minimum Password Length (0), 2. Requirements to Apply (Disable), 3. Lockout Setting (Enable), and 4. Available Period (Disable). Other visible settings include Number of Retry (10), Lockout Time (1 Minute(s)), and Expiration day(s) (day(s)).

	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 0 to 64. “0” is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. <b>Restrictions</b> <ul style="list-style-type: none"> <li>• The user name and password cannot be the same.</li> <li>• The same password cannot be used again.</li> <li>• A password consisting of sequences of the same characters cannot be used.</li> <li>• A password containing the characters entered in the restricted character text box cannot be used.</li> </ul>

	Item name	Description
3	Lockout Setting	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Enable] is set as the default. <b>Number of Retry</b> — Specify the number of incorrect password entry times to lock out the user. Specify within the range from 1 to 30 times. “10” is set as the default. <b>Lockout Time</b> — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. “1” is set as the default.
	Tip	Due to a change in the number of retry times, a user may lock out in the next login. The history of lockouts is registered in the log.
4	Available Period	Select [Enable] to specify how long the password is valid before its expiry. [Disable] is set as the default. <b>Expiration day(s)</b> — Specify how long the password is valid before its expiry. Specify within the range from 1 to 999 days. “180” is set as the default.
	Tip	When the number of days set in [Expiration day(s)] elapses, a screen that prompts the user to change the password will appear the next time the user logs in.

## ❑ Setting up Policy for Administrator, Auditor

You can configure policies for administrator and auditor registration.

The screenshot shows the 'Policy for Administrator, Auditor' configuration window. It contains the following settings:

- 1** Minimum Password Length: 6 (6-64)
- 2** Requirements to Apply: Disable
- Do not allow the following strings to be used as passwords: (empty text boxes)
- 3** Lockout Setting: Enable
- Number of Retry: 10 (1-30)
- Lockout Time: 1 Minute(s)(1-1440)
- 4** Available Period: Disable
- Expiration day(s): day(s)(1-999)

	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 6 to 64. “6” is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. <b>Restrictions</b> <ul style="list-style-type: none"> <li>• The user name and password cannot be the same.</li> <li>• The same password cannot be used again.</li> <li>• A password consisting of sequences of the same characters cannot be used.</li> <li>• A password containing the characters entered in the restricted character text box cannot be used.</li> </ul>

	Item name	Description
3	Lockout Setting	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Enable] is set as the default. <b>Number of Retry</b> — Specify the number of incorrect password entry times to lock out the user. Specify within the range from 1 to 30 times. “10” is set as the default. <b>Lockout Time</b> — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. “1” is set as the default.
	Tip	Due to a change in the number of retry times, a user may lock out in the next login. The history of lockouts is registered in the log.
4	Available Period	Select [Enable] to specify how long the password is valid before its expiry. [Disable] is set as the default. <b>Expiration day(s)</b> — Specify how long the password is valid before its expiry. Specify within the range from 1 to 999 days. “180” is set as the default.
	Tip	When the number of days set in [Expiration day(s)] elapses, a screen that prompts the user to change the password will appear the next time the user logs in.

## ❑ Setting up Policy for e-Filing Boxes, Template Groups, Templates, SecurePDF, SNMPv3, Cloning, Secure Receive

You can configure policies for passwords for operations and applications on your equipment.

	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 0 to 20.* <sup>1</sup> “0” is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. <b>Restrictions</b> <ul style="list-style-type: none"> <li>• The file name and password cannot be the same.*<sup>2</sup></li> <li>• The same password cannot be used again.</li> </ul>
3	Lockout Setting* <sup>3</sup>	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Disable] is set as the default. <b>Number of Retry</b> — Specify the number of incorrect password entry times to lock out the user. “10” is set as the default. <b>Lockout Time</b> — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. “1” is set as the default.
	Tip	Due to a change in the number of retry times, a user may lock out in the next login. The history of lockouts is registered in the log.

\*<sup>1</sup> With SNMPv3 and encrypted PDF files, a password of at least one character is required.

\*<sup>2</sup> With Cloning, you can also register the same password as the file name.

\*<sup>3</sup> The Lockout Setting is enabled only when you are using e-Filing Boxes.

## Security Stamp Setting

You can add information such as the date, time and user name at the edge of the print output or transmission images.

	Item name	Description
1	Print	<b>Copy</b> — Specify whether or not to add information to copy jobs. [Disable] is set as the default. <b>Printer</b> — Specify whether or not to add information to print jobs. [Disable] is set as the default. <b>e-Filing</b> — Specify whether or not to add information to e-Filing jobs. [Disable] is set as the default.
2	Fax	<b>Transmission</b> — Specify whether or not to add information to fax transmission jobs. [Disable] is set as the default.
3	Job ID	Specify whether or not to include the job ID in the stamp.
4	Date & Time	Specify whether or not to include the date and time in the stamp. <ul style="list-style-type: none"> <li>• <b>Date:</b> Prints the date.</li> <li>• <b>Date &amp; Time:</b> Prints the date and time.</li> </ul>
5	Card ID	Specify whether or not to include the card ID in the stamp.
6	User Name	Specify whether or not to include the user name in the stamp.
7	Serial Number	Specify whether or not to include the serial number in the stamp.
8	Department Name	Specify whether or not to include the department name in the stamp.
9	Optional text	Specify whether or not to include optional text in the stamp. You can enter up to 32 alphanumeric characters.

### Note


If you add both the TTI and security stamp, the TTI is added as the first line and the security stamp is added as the second line.  
Security stamps are added at the top 5mm of the fax image; therefore, the top 5mm of the image is not printed at the recipient.

### Tip


When including the date and time in the stamp, the transmission date and time of the first page is printed on all pages for security stamps. Whereas the transmission date and time of each page is printed for TTI.

## [Security] How to Set and How to Operate

In the Security Service page, you can install a wireless LAN certificate for authentication with the RADIUS server, install and export a device certificate to enable SSL/TLS and set up its SCEP (automatic installation), install CA certificate, and install certificates for IEEE 802.1X authentication and set up its SCEP.

 P.324 “Installing a device certificate”

 P.330 “Creating/Exporting a client certificate”


 P.331 “Installing CA certificate”


### ■ Installing a device certificate


To enable SSL/TLS for HTTP setting, FTP server setting, IPP Print Service, Web Services Print, or Off Device Customization Architecture settings, you must install a device certificate for each.


To install these device certificates, you need to create a self-signed certificate, install them from an authentication agency or the CA server. You can also install them automatically from the CA server using SCEP.

 P.324 “Creating/exporting a self-signed certificate”

 P.326 “Installing an imported device certificate”

 P.327 “Deleting an imported device certificate”

 P.328 “Installing a device certificate automatically”


 P.329 “Deleting a device certificate installed automatically”

#### Tip

When you want to enable SSL/TLS for HTTP setting, FTP Server, IPP Print, Web Services Print, or Off Device Customization Architecture settings, the certificates required to install to the equipment and the client PC are as follows:

Use SSL/TLS for...	Required Certificate for this equipment			Required Certificate for Client PC		
	Device Certificate		CA Certificate	Self-signed Certificate	Client Certificate	CA Certificate
	Self-signed Certificate	Device certificates installed from authentication agency / CA server				
HTTP, FTP, IPP Print, Off Device Customization Architecture*	Required	-	-	(Required)	-	-
	-	Required	-	-	-	(Required)
Web Service Print	-	Required	Required	-	Required	Required
	Required	-	-	Required	-	-

\* In the HTTP Network Service, FTP Server, IPP Print, and Off Device Customization Architecture settings, if you create a self-signed certificate for the equipment, you need to install the self-signed certificate to the client PC. If you select to install an imported device certificate to the equipment, also install the CA certificate to the client PC.


 P.331 “Installing CA certificate”

#### Note

When you install the User Certificate in this equipment, it is recommended to connect this equipment and a client computer using a crossing cable for ensuring security.

### □ Creating/exporting a self-signed certificate


#### 1 Start TopAccess access policy mode.

 P.15 “Access Policy Mode”

#### 2 Click the [Administration] tab.




### 3 Click the [Security] menu and [Certificate Management] submenu.

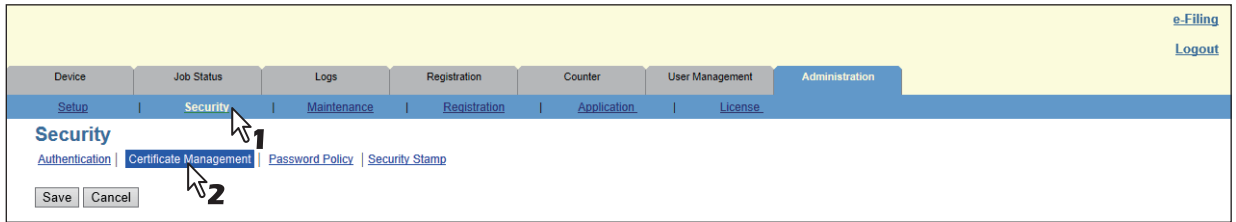


The Certificate Management page is displayed.

### 4 Select [self-signed certificate] under [Device Certificate] and click [Create].

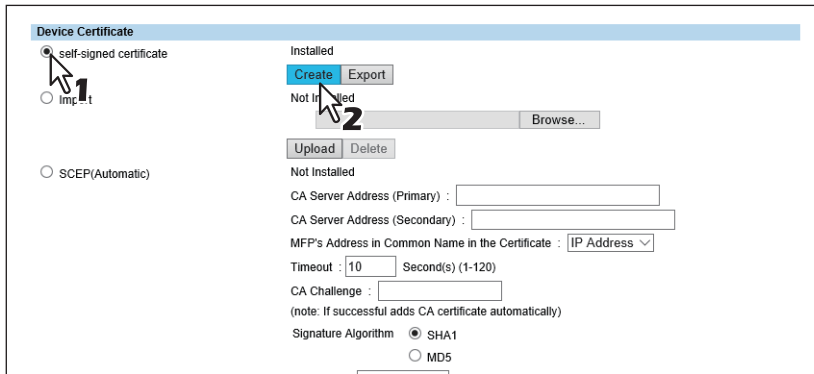

The Create self-signed certificate page is displayed.

### 5 Enter the following items and click [Save].

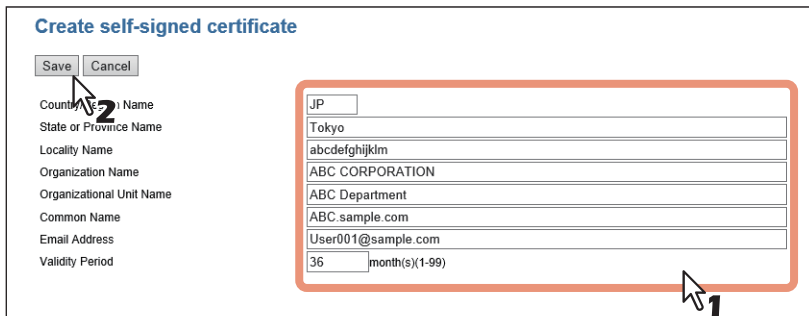


You can set the following in this page.


P.317 “[Create self-signed certificate] screen”

### 6 Click [OK].

### 7 A self-signed certificate is created. Click the [Export] button if you are exporting.

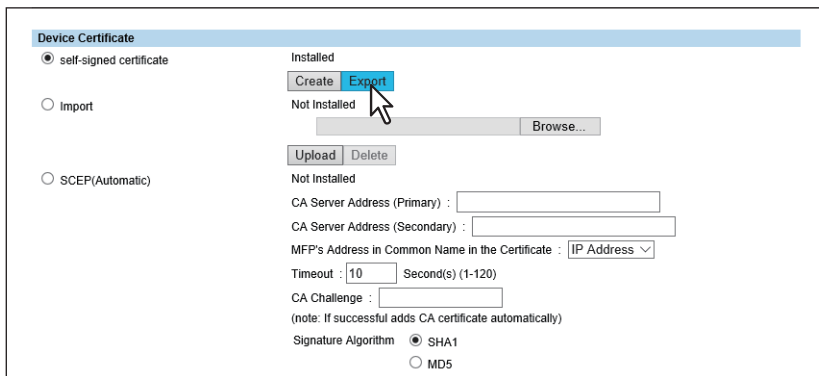

## 8 Click the link for the file name of the certificate to be exported.

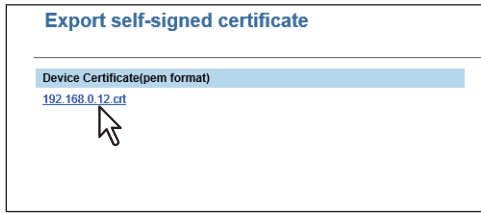

The file is downloaded.

## 9 Then you can enable SSL/TLS for the following network settings.

- P.204 "Setting up HTTP"
- P.205 "Setting up WSD"
- P.208 "Setting up FTP Server"
- P.209 "LDAP Client settings"
- P.213 "Setting up SMTP Client"
- P.215 "Setting up POP3 Client"
- P.265 "Setting up IPP Print"
- P.278 "Off Device Customization Architecture settings"


## ❑ Installing an imported device certificate

### 1 Start TopAccess access policy mode.

- P.15 "Access Policy Mode"


### 2 Click the [Administration] tab.

### 3 Click the [Security] menu and [Certificate Management] submenu.

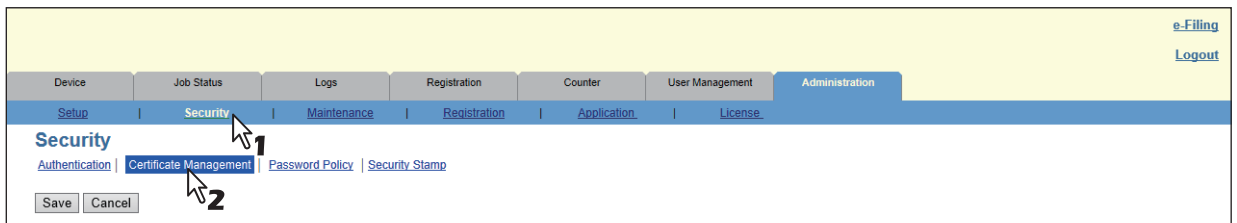


The Certificate Management page is displayed.

### 4 Click [Browse] of [Import] in [Device Certificate] to select a device certificate file, and then click [Upload].

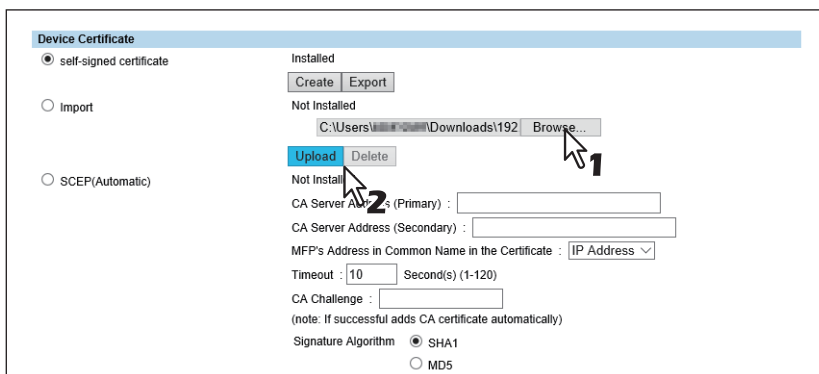

The alert message dialog box appears.

## 5 Enter the password for the device certificate, and then click [OK].

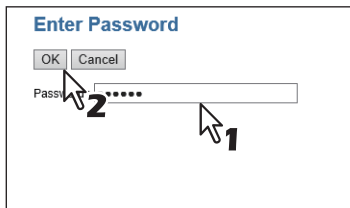

The device certificate is imported.

## 6 Click [Save] on the [Certificate Management] submenu.

## 7 Then you can enable SSL/TLS for the following network settings.

- P.204 “Setting up HTTP”
- P.205 “Setting up WSD”
- P.208 “Setting up FTP Server”
- P.209 “LDAP Client settings”
- P.213 “Setting up SMTP Client”
- P.215 “Setting up POP3 Client”
- P.265 “Setting up IPP Print”
- P.278 “Off Device Customization Architecture settings”


## ❑ Deleting an imported device certificate

### 1 Start TopAccess access policy mode.

P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

### 3 Click the [Security] menu and [Certificate Management] submenu.

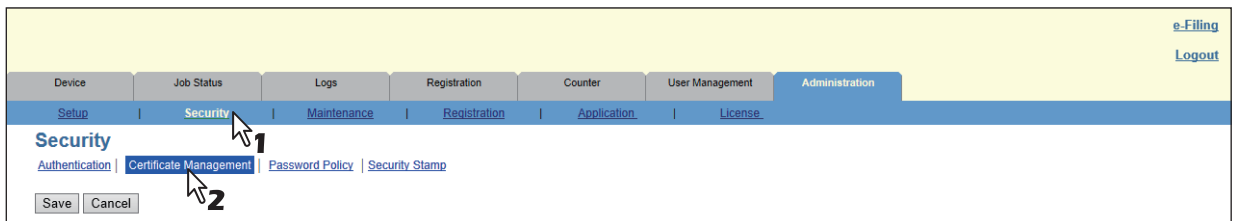

The Certificate Management page is displayed.

### 4 Click [Delete] of [Import] in [Device Certificate].

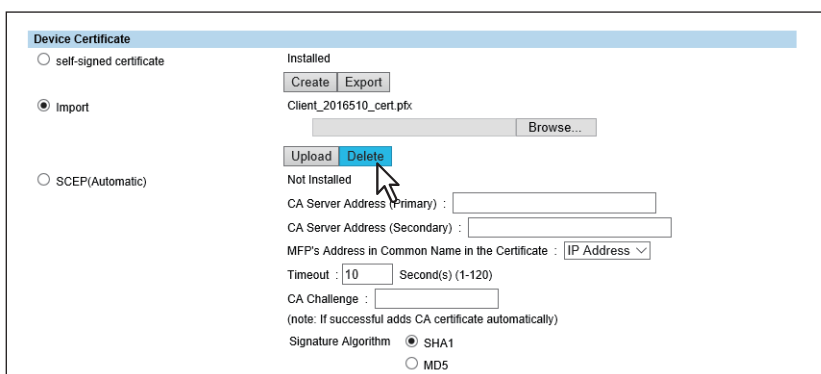

The confirmation dialog box appears.

#### Note

If no device certificate has been imported, you cannot delete it.

### 5 Click [OK].

The device certificate is deleted.

6 Click [Save] on the [Certificate Management] submenu.


## ❑ Installing a device certificate automatically

1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


2 Click the [Administration] tab.

3 Click the [Security] menu and [Certificate Management] submenu.

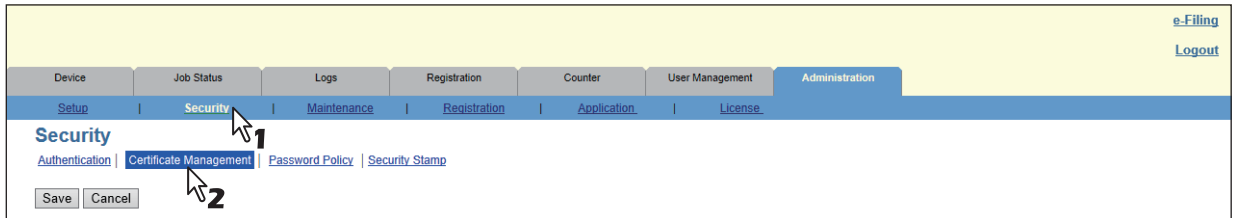

The Certificate Management page is displayed.

4 Enter the following items in [SCEP(Automatic)] of [Device Certificate], and then click [Request].

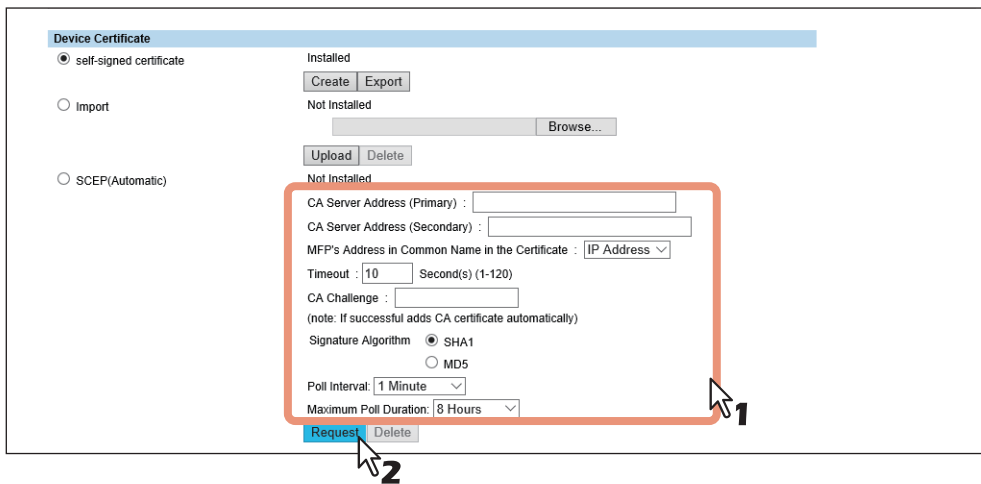

<b>CA Server Address (Primary)</b>	Enter the IP address or FQDN of the CA server. You can enter up to 128 characters.
<b>CA Server Address (Secondary)</b>	Enter the IP address or FQDN of the CA server. You can enter up to 128 characters.
<b>MFP's Address in Common Name in the Certificate</b>	Select whether to use the IP address or FQDN as the address of this equipment to be entered in the [Common Name] box of the certificate.
<b>Timeout</b>	Enter a timeout period for quitting communication when no response is received from the CA server.
<b>CA Challenge</b>	Enter the CA challenge.
<b>Signature Algorithm</b>	Select SHA1 or MD5 as the signature algorithm.
<b>Poll Interval</b>	Specify the polling interval.
<b>Maximum Poll Duration</b>	Specify the polling duration.

### Note

- If FQDN is used in [CA Server address], you need to configure a DNS server and enable DNS settings.
- If [FQDN] is selected in [MFP's Address in Common Name in the Certificate], the IP address of this equipment must be registered in the DNS server.

A device certificate is installed.


**Note**

A CA certificate is installed automatically as well as a device certificate. If a CA certificate is already installed, delete the existing one by clicking [DELETE] of SCEP in [Device Certificate]. Then click [Request] to install a new CA certificate.

- 5 Click [Save] on the [Certificate Management] submenu.**
- 6 Then you can enable SSL/TLS for the following network settings.**
  - P.204 “Setting up HTTP”
  - P.205 “Setting up WSD”
  - P.208 “Setting up FTP Server”
  - P.209 “LDAP Client settings”
  - P.213 “Setting up SMTP Client”
  - P.215 “Setting up POP3 Client”
  - P.265 “Setting up IPP Print”
  - P.278 “Off Device Customization Architecture settings”


**❑ Deleting a device certificate installed automatically**

- 1 Start TopAccess access policy mode.**
  - P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Security] menu and [Certificate Management] submenu.**

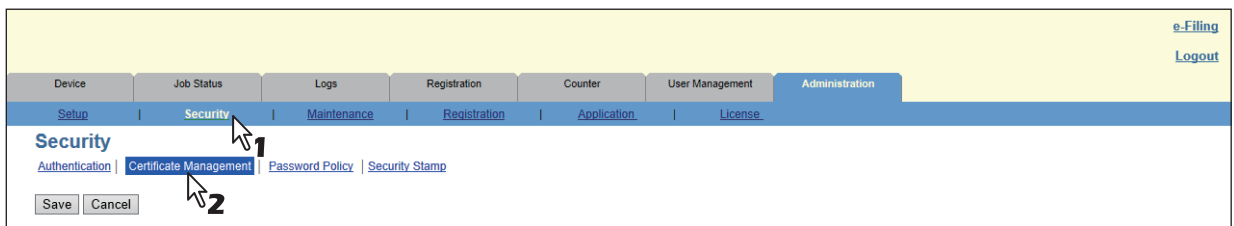

The Certificate Management page is displayed.

- 4 Select [SCEP(Automatic)] in [Device Certificate], and then click [Delete].**

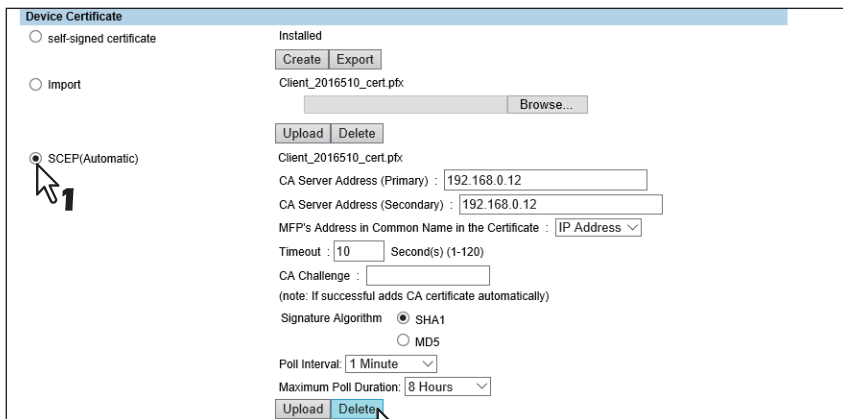

The confirmation dialog box appears.

**Note**


- A CA certificate already installed automatically will be deleted as well as the device certificate.
- Deleting is disabled when no device certificate has been installed automatically.

- 5 Click [OK].**

The device certificate is deleted.
- 6 Click [Save] on the [Certificate Management] submenu.**


## ■ Creating/Exporting a client certificate

- 1 Start TopAccess access policy mode.  
 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.
- 3 Click the [Security] menu and [Certificate Management] submenu.

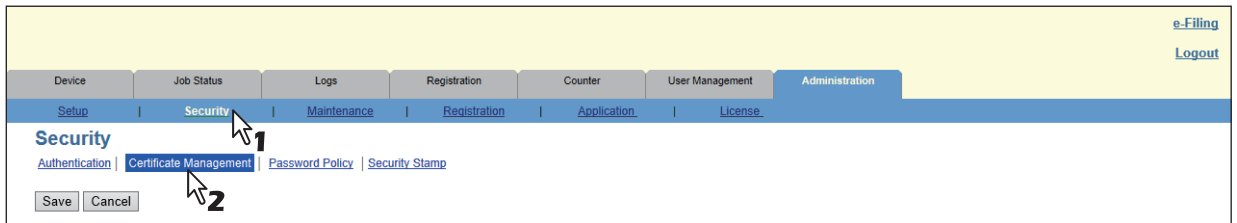

The Certificate Management page is displayed.

 - 4 Click [Create] under [Client Certificate].




The Create Client Certificate page is displayed.

- 5 Enter the following items and click [Save].

You can set the following in this page.

P.318 “[Create Client Certificate] screen”

- 6 Click [OK].
- 7 Click the link for the file name of the certificate to be exported.

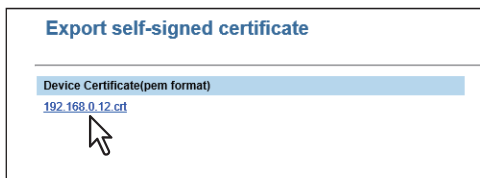

The file is downloaded.

### Tip

If you have not installed a client certificate, enter the password in [Password] and click [Create] to create a certificate.

## ■ Installing CA certificate

When you want to enable SSL/TLS and verify with a CA certificate for the SMTP Client, POP3 Network Service, FTP Client, Directory Service, or Syslog Setting, you must install the CA certificate. You can install up to 10 CA certificates in this equipment.

📖 P.331 “Installing CA certificate”

📖 P.332 “Deleting CA certificate”


### □ Installing CA certificate

#### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


#### 2 Click the [Administration] tab.

#### 3 Click the [Security] menu and [Certificate Management] submenu.

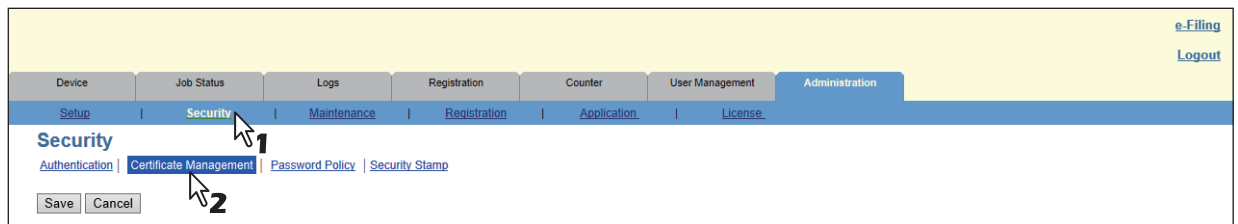

The Certificate Management page is displayed.

#### 4 Select the encryption of CA certificate and click [Browse] to select a CA certificate file. Then click [Upload].

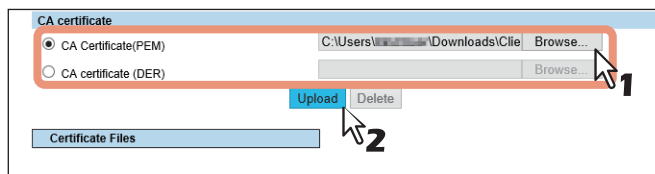

The CA certificate is installed.

#### 5 Click [Save] on the [Certificate management] submenu.

#### 6 Then you can enable SSL/TLS by selecting [Verify with imported CA certification(s)] for the following network settings.

📖 P.205 “Setting up WSD”

📖 P.209 “LDAP Client settings”

📖 P.213 “Setting up SMTP Client”

📖 P.215 “Setting up POP3 Client”


📖 P.217 “Setting up FTP Client”

📖 P.222 “Syslog Setting”

📖 P.278 “Off Device Customization Architecture settings”


## ❑ Deleting CA certificate

### 1 Start TopAccess access policy mode.

 P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

### 3 Click the [Security] menu and [Certificate Management] submenu.

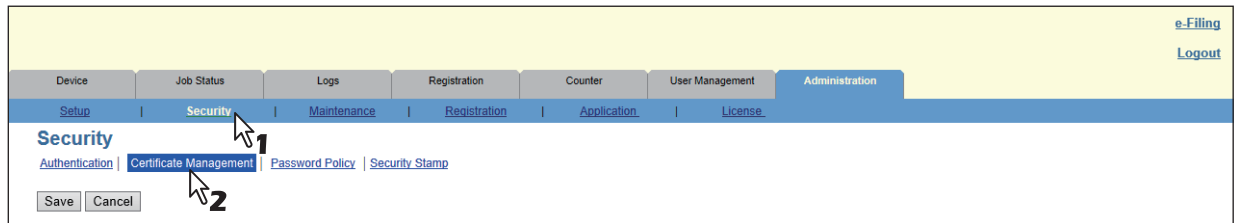

The Certificate Management page is displayed.

### 4 Select the CA certificate file that you want to delete in the [Certificate Files] list, and click [Delete].

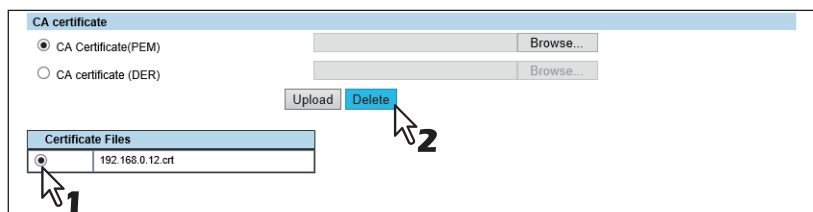















The confirmation dialog box appears.

### 5 Click [OK].

The CA certificate is deleted.

### 6 Click [Save] on the [Certificate Management] submenu.




-  P.333 "Upload Software settings"
-  P.335 "Remove Software settings"
-  P.336 "Create Clone File settings"
-  P.338 "Install Clone File settings"
-  P.340 "Import settings"
-  P.342 "Export settings"
-  P.344 "Delete Files settings"
-  P.344 "Notification settings"
-  P.348 "Languages settings"
-  P.350 "Data Backup"
-  P.352 "User Paper Type"
-  P.353 "System Updates settings"
-  P.354 "Reboot settings"
-  P.354 "Panel View"

### Tip

Users who are granted administrator privileges in access policy mode can access the [Maintenance] menu from the [Administration] tab.

See the following pages for how to access it:

-  P.15 "Access Policy Mode"



## ■ Upload Software settings


You can update client software embedded in your equipment. Users can download client software on their computers using the TopAccess [Install Software] link.

### Tip


The [Upload Software] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

-  P.15 "Access Policy Mode"
-  P.333 "[Maintenance] Item List"

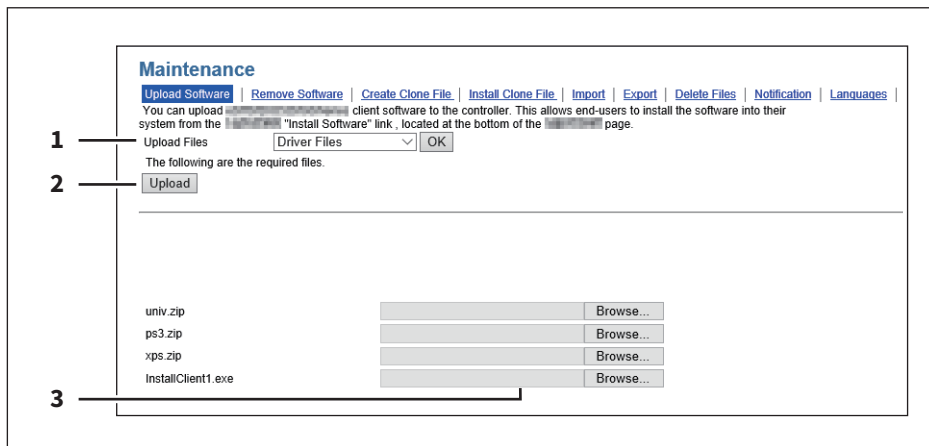

**When [Driver Customization Packages] is selected:**

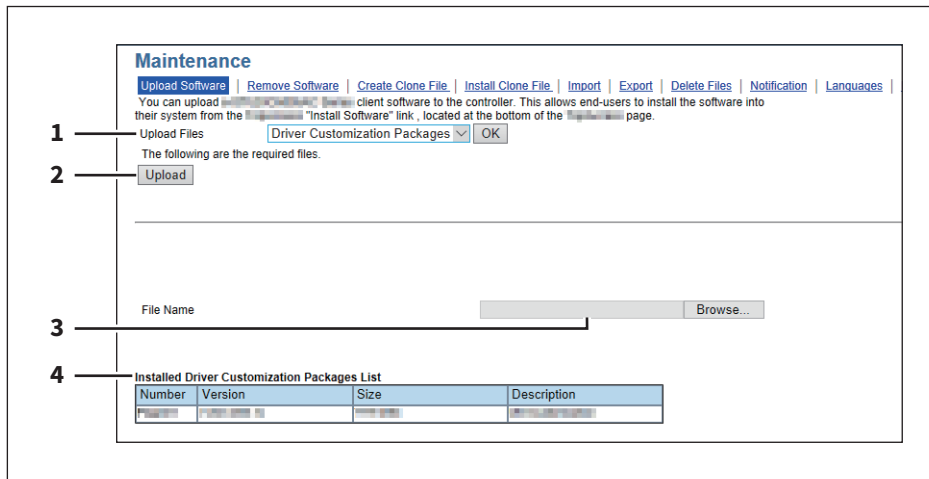

	Item name	Description
1	Upload Files	<p>Select the software you want to upload to the equipment.</p> <ul style="list-style-type: none"> <li>• <b>Driver Files</b> — Select this to upload the setup files.</li> <li>• <b>Macintosh PPD Files</b> — Select this to upload the PPD file which is used by Mac OS X 10.6 or later.</li> <li>• <b>Unix Filters</b> — Select this to upload the tar files that contain filters for each UNIX workstation.</li> <li>• <b>Driver Customization Packages</b> — Select this to upload the custom package file for the printer driver.</li> </ul> <p><b>[OK] button</b> — Confirms the selected software.</p>
	<p>Tip</p> <p>See the following for how to obtain and upload software.   P.357 “Uploading the client software”</p>	
2	[Upload] button	Uploads the browsed setting file.
3	Browse box	Browses the setting file to be uploaded. Select the corresponding setting file.
4	Installed Driver Customization Packages List	Displays a list of installed custom package files.

## ■ Remove Software settings


You can delete the software uploaded to the equipment.

### Tip

The [Remove Software] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

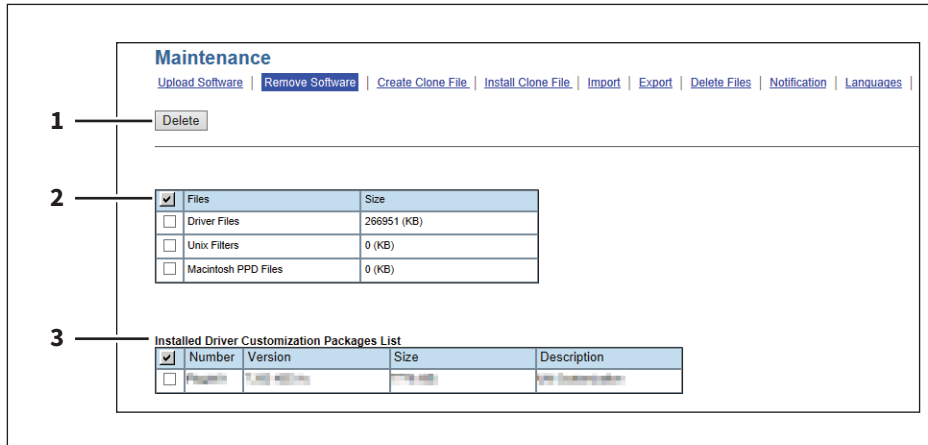

	Item name	Description
<b>1</b>	[Delete] button	Deletes the selected software. Select and click the software to be deleted from the software list.
<b>2</b>	Software list	Displays a list of software uploaded to your equipment. Select the software files you want to delete.
<b>3</b>	Installed Driver Customization Packages List	Displays a list of the installed custom package files. Select the files you want to delete.

## ■ Create Clone File settings

You can create a clone file of the environment on your equipment.

You can implement a cloned environment by installing the created clone file on another equipment.

For the details of the clone file and how to use it, contact your service technician.

📖 P.336 “Setting up Clone File”

📖 P.337 “Setting up Category Setting”

### Note

When an end-user (either an individual or an entity) intends to clone data (font, ICC profile, or any data downloaded or added by the end-user) stored in TTEC products (copier, MFP), the end-user shall investigate, review and confirm terms of use for such data and intellectual property rights thereof. The end-user shall perform such cloning at your own risk and responsibility.

TTEC AND ITS AFFILIATES HEREBY DISCLAIM ANY WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF QUALITY AND PERFORMANCE OF TTEC PRODUCTS, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT OF THIRD PARTIES INTELLECTUAL PROPERTY RIGHTS, IN THE USE OF CLONING BY THE END-USER.

IN NO EVENT WILL TTEC BE LIABLE TO THE END-USER NOR ANY THIRD PARTY FOR ANY DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY LOST PROFITS, LOST DATA OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF CLONING BY THE END-USER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.


### Tip

The [Create Clone File] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:


📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

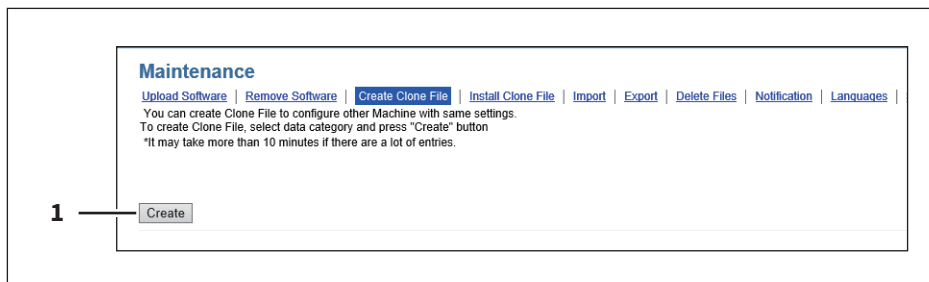

	Item name	Description
1	[Create] button	Creates the clone file of the category selected in the category setting. When you click this button, a screen is displayed to set a password on the clone file.

## □ Setting up Clone File

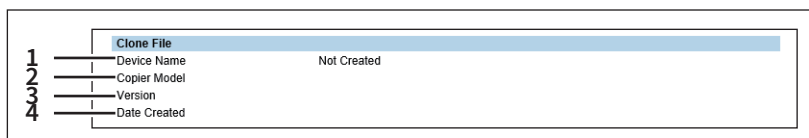

	Item name	Description
1	Device Name	Displays the device name of the created clone file. Click the device name to download the clone file.
2	Copier Model	Displays the copier model of the created clone file.
3	Version	Displays the system ROM version of the created clone file.


	Item name	Description
4	Date Created	Displays the created date of the clone file.

## □ Setting up Category Setting

Select the category for the clone file.

### Tip

The clone file will include the settings listed in “Description” that make up the category you select.

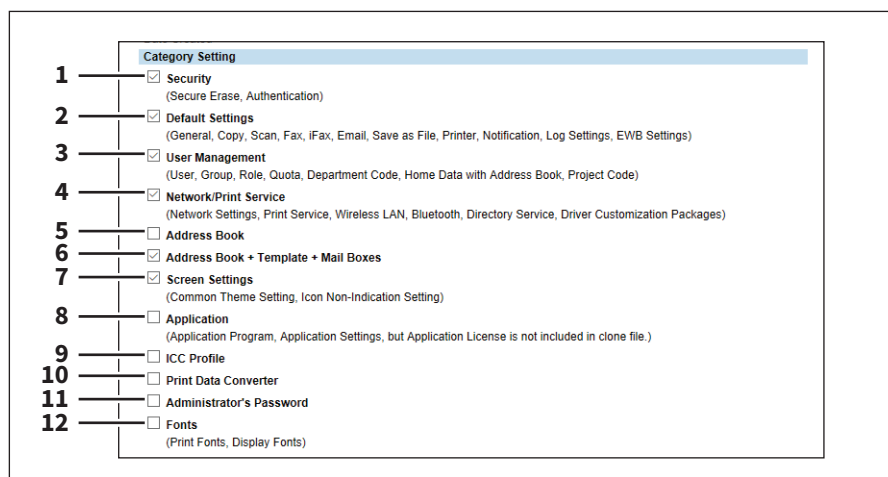

	Item name	Description
1	Security	Includes secure erase and authentication settings in the clone file.
2	Default Settings	Includes the general, copy, scan, fax, ifax, E-mail, save as file, printer, notification, log settings, and EWB settings in the clone file.
3	User Management	Includes the user, group, role, quota, department code, home data with address book, and project code in the clone file.
4	Network/Print Service	Includes network, print service, wireless LAN, Bluetooth, directory service, and driver customization packages settings in the clone file.
5	Address Book	Includes the address book in the clone file.
6	Address Book + Template + Mail Boxes	Includes the address book, template, and mail boxes in the clone file.
7	Screen Settings	Includes the common theme setting and the icon display setting in the clone file.
8	Application	Includes the application program and application setting (except licenses) in the clone file.
9	ICC Profile	Includes ICC profiles installed from TopAccess in the clone file.
	<b>Note</b>	<ul style="list-style-type: none"> <li>You can select ICC profiles only for color models.</li> <li>You are required to have the license to use some ICC profiles.</li> </ul>
10	Print Data Converter	Includes print data converter settings in the clone file.
11	Administrator's Password	Includes the password of the default administrator in the clone file.
12	Fonts	Includes downloaded fonts for print and display in the clone file.
	<b>Note</b>	You are required to have the license to use some fonts.

## ■ Install Clone File settings

You can install the created clone file.

You can implement a cloned environment by installing the clone file created on another equipment.

P.338 “Setting up File Upload”

P.339 “Setting up Clone File Information”

P.339 “Setting up Setting data included in Clone File”

### Note

Before the clone file is installed, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. If any jobs do remain, the installation of the clone files cannot be carried out.

P.24 “[Job Status] Tab Page Overview”


After the clone file has been installed, reboot this equipment in accordance with the guidance. Manually reboot this equipment if you did not do so by closing the installation execution screen.

See the following pages for the details of the rebooting.

P.368 “Rebooting the equipment”


### Tip

- The [Install Clone File] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:
  - P.15 “Access Policy Mode”
  - P.333 “[Maintenance] Item List”
- When the installation of the clone file is complete, the screen shows the reference link so that you can click it to download a file that records the result of the installation.

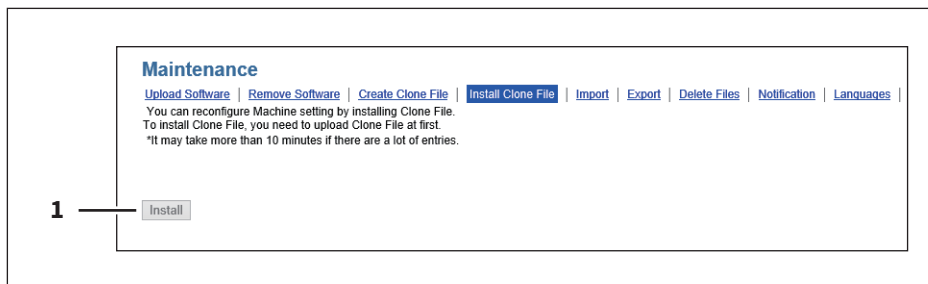


	Item name	Description
1	[Install] button	Installs the selected clone file. When you click this button, a dialog box is displayed to prompt you to enter the password you specified when creating the clone file.

## □ Setting up File Upload

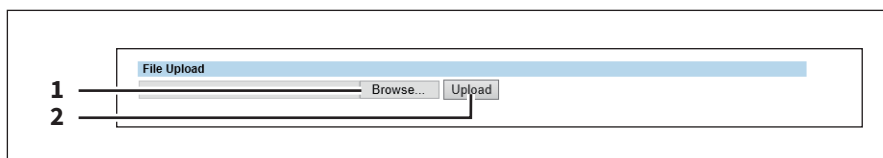


	Item name	Description
1	[Browse] button	Select a clone file.
2	[Upload] button	Displays information on the selected clone file and what is included in the clone file.

## ❑ Setting up Clone File Information

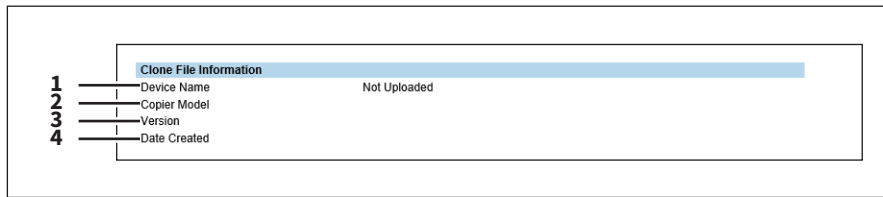

	Item name	Description
1	Device Name	Displays the device name of the created clone file.
2	Copier Model	Displays the copier model of the created clone file.
3	Version	Displays the system ROM version of the created clone file.
4	Date Created	Displays the created date of the clone file.

## ❑ Setting up Setting data included in Clone File

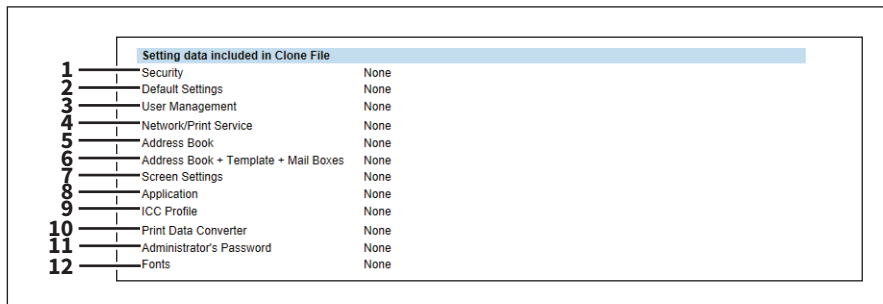

	Item name	Description
1	Security	Displays if secure erase and authentication settings are included.
2	Default Settings	Displays if the general, copy, scan, fax, ifax, E-mail, save as file, printer, notification, log settings, and EWB settings are included.
3	User Management	Displays if the user, group, role, quota, department code, home data with address book, and project code are included.
	Tip	Select whether or not to include the address book information when user management is included but the address book is not. When excluding the address book has been selected, it is necessary to input again the addresses registered from the address book.
4	Network/Print Service	Displays if network, print service, wireless LAN, Bluetooth, directory service, and driver customization packages settings are included.
5	Address Book	Displays if the address book is included.
6	Address Book + Template + Mail Boxes	Displays if the address book, template, and MailBox are included.
7	Screen Settings	Displays if the common theme setting and the icon display setting are included.
8	Application	Displays if the application program and application setting (except licenses) are included.
9	ICC Profile	Displays if the ICC profiles installed from TopAccess are included. This item appears only for color models.

	Item name	Description
10	Print Data Converter	Displays if the print data converter settings are included.
11	Administrator's password	Displays if the password of the default administrator is included.
12	Fonts	Displays if downloaded fonts for print and display are included.

## ■ Import settings

You can import address book data and department code information exported from another equipment.

📖 P.340 “Setting up Address Book”

📖 P.341 “Setting up MailBoxes”

📖 P.341 “Setting up Template”

📖 P.341 “Setting up Combined (Template + Address Book + MailBoxes)”

### Tip

The [Import] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

### Note

Before the data are imported, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. You cannot import data if there are these jobs.

If import is taking too long, try importing data after your equipment has entered sleep mode.

📖 P.24 “[Job Status] Tab Page Overview”

## □ Setting up Address Book

	Item name	Description
1	Import Method	Specify the import method of the address book. <b>Addition</b> — Select this to append the imported information to the existing data. <b>Overwrite</b> — Select this to replace the existing data with the imported information.
2	Address Book Type	Select “Local” or “Shared” as the import source when using the Shared Address Book function.
3	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
4	File Name	Select the address book file to be imported. <b>[Browse] button</b> — Allows you to select the address book file. <b>[Import] button</b> — Imports the selected address book file.



## ❑ Setting up MailBoxes

	Item name	Description
1	File Name	Select the mailbox file to be imported. <b>[Browse] button</b> – Allows you to select the mailbox file. <b>[Import] button</b> – Imports the selected mailbox file.

## ❑ Setting up Template

	Item name	Description
1	Import Method	Specify the import method of the template. <b>Addition</b> – Select this to append the imported information to the existing data. <b>Overwrite</b> – Select this to replace the existing data with the imported information.
2	File Name	Select the template file to be imported. <b>[Browse] button</b> – Allows you to select the template file. <b>[Import] button</b> – Imports the selected template file.

## ❑ Setting up Combined (Template + Address Book + MailBoxes)

	Item name	Description
1	File Name	Select the combined (template + address book + mailboxes) file to be imported. <b>[Browse] button</b> – Allows you to select the combined file. <b>[Import] button</b> – Imports the selected combined file.

## ■ Export settings

You can export the address book, mailboxes, templates and so on.

P.342 “Setting up Address Book”

P.342 “Setting up MailBoxes”

P.343 “Setting up Template”

P.343 “Setting up Combined (Template + Address Book + MailBoxes)”

### Tip


The [Export] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

P.15 “Access Policy Mode”


P.333 “[Maintenance] Item List”

## □ Setting up Address Book

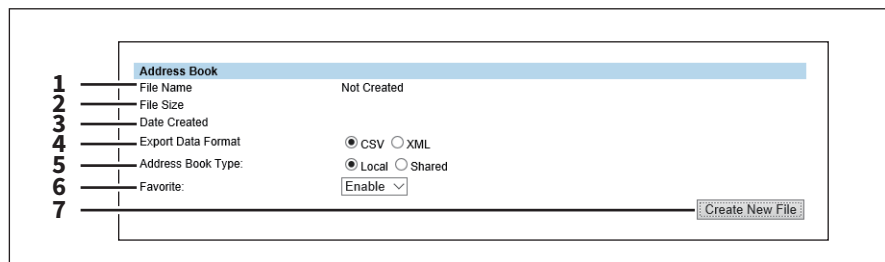


	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	Export Data Format	Format Select the file format of the export file. <ul style="list-style-type: none"> <li>• <b>CSV</b> — Select this to create the file in the CSV format.</li> <li>• <b>XML</b> — Select this to create the file in the XML format.</li> </ul>
5	Address Book Type	Specify “Local” or “Shared” as the export source when using the Shared Address Book function.
6	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
7	[Create New File] button	Creates the export file.

## □ Setting up MailBoxes

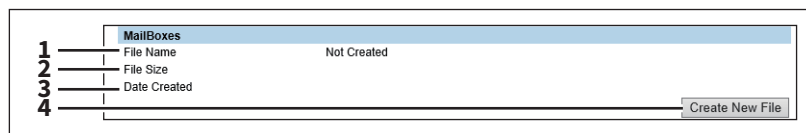


	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.

## ❑ Setting up Template

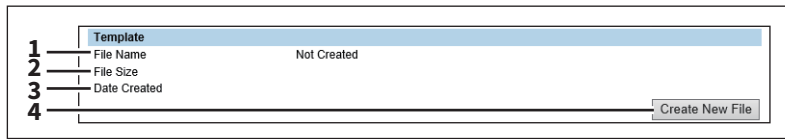

	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.

## ❑ Setting up Combined (Template + Address Book + MailBoxes)

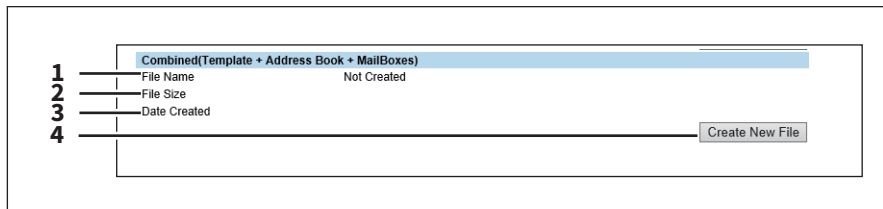

	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.

## ■ Delete Files settings

You can delete information such as scanned data, transmission data, and reception data that are stored in the local folder using the Save as file function. It is recommended to delete the stored data periodically to maintain the internal storage device.


### Tip

The [Delete Files] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

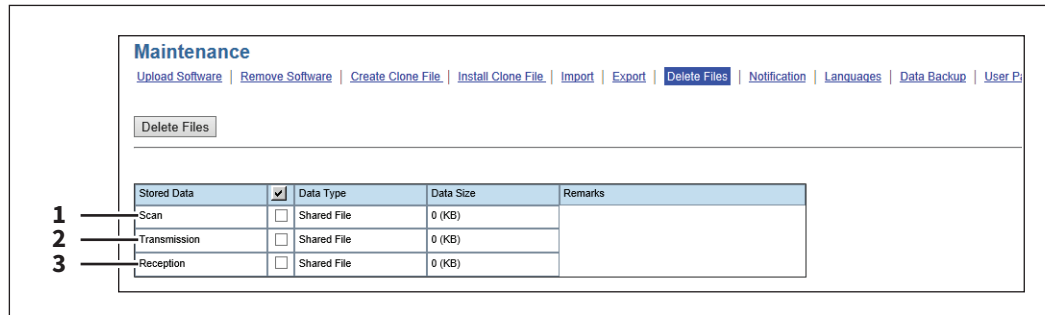

	Item name	Description
1	Scan	Deletes all scan data stored in the shared folder.
2	Transmission	Deletes all fax/ifax transmission data stored in the shared folder.
3	Reception	Deletes all fax/ifax reception data and mailbox/fax/ifax forwarding data in the shared folder.

## ■ Notification settings

You can receive information on your equipment by E-mail.

📖 P.345 “Setting up Email Setting”

📖 P.345 “Setting up System Message Notification Events”

📖 P.347 “Setting up Job Notification Events”

📖 P.347 “Setting up Application”

📖 P.347 “Setting up License”


### Tip

The [Notification] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:


📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

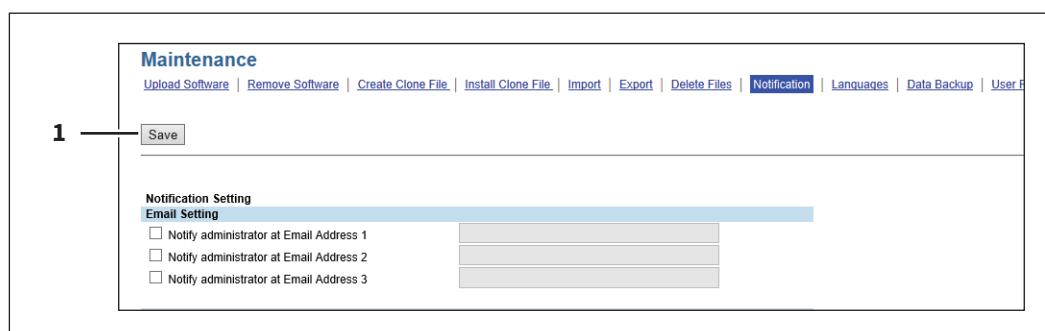


	Item name	Description
1	[Save] button	Stores settings for transmitting the report to the registered E-mail address.

**□ Setting up Email Setting**

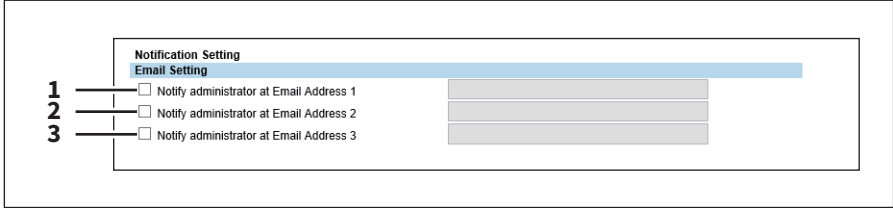

	Item name	Description
1	Notify administrator at Email Address 1	Register E-mail addresses for administrators who receive the notification. The notification is sent to the selected administrators by E-mail.
2	Notify administrator at Email Address 2	
3	Notify administrator at Email Address 3	


**□ Setting up System Message Notification Events**

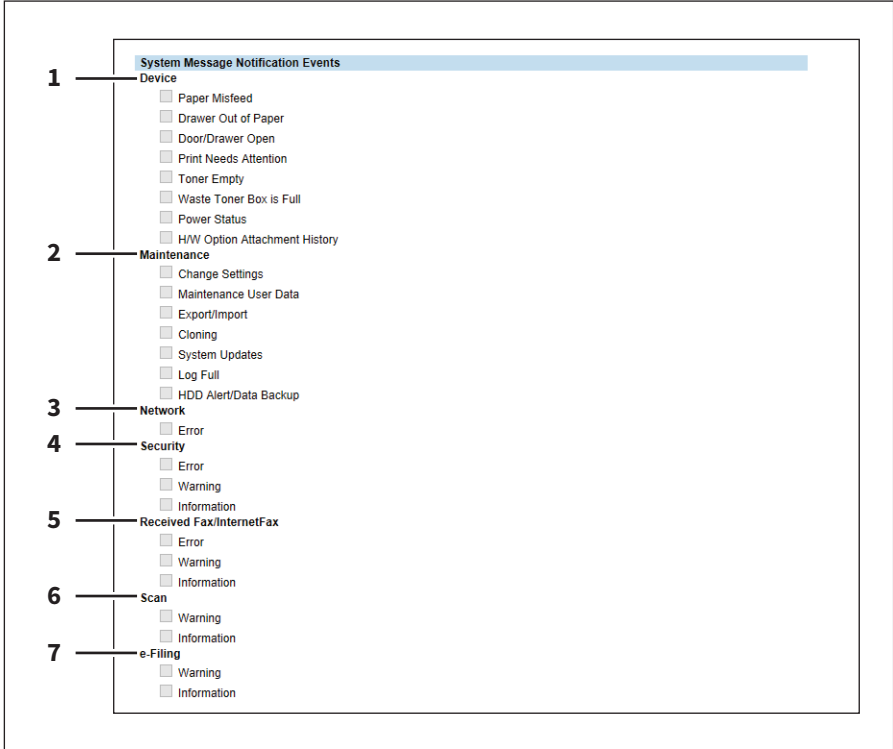

You can select the events to be notified of.

	Item name	Description
1	Device	<p><b>Paper Misfeed</b> — Select this to be notified of paper misfeeds.</p> <p><b>Drawer Out of Paper</b> — Select this to be notified when you are out of paper.</p> <p><b>Door/Drawer Open</b> — Select this to be notified when a cover or drawer is open.</p> <p><b>Print Needs Attention</b> — Select this to be notified when a job is printed.</p> <p><b>Toner Empty</b> — Select this to be notified when a toner is empty.</p> <p><b>Waste Toner Box is Full</b> — Select this to be notified when the waste toner box is full.</p> <p><b>Power Status</b> — Select this to be notified when the power source status changes such as a power cut.</p> <p><b>H/W Option Attachment History</b> — Select this to be notified when a hardware option is installed.</p>
2	Maintenance	<p><b>Change Settings</b> — Select this to be notified of setting changes.</p> <p><b>Maintenance User Data</b> — Select this to be notified when user information is edited.</p> <p><b>Export/Import</b> — Select this to be notified of an export or import.</p> <p><b>Cloning</b> — Select this to be notified when a clone is made.</p> <p><b>System Updates</b> — Select this to be notified of system updates.</p> <p><b>Log Full</b> — Select this to be notified when the log has reached the maximum size.</p> <p><b>HDD Alert/Data Backup</b> — Select this to be notified when the backup or replacement of the internal storage device of this equipment is required due to its abnormality.</p>
3	Network	<p><b>Error</b> — Select this to be notified of network errors.</p>
4	Security	<p><b>Error</b> — Select this to be notified of security errors.</p> <p><b>Warning</b> — Select this to be notified of security warnings.</p> <p><b>Information</b> — Select this to be notified of security information.</p>
5	Received Fax/InternetFax	<p><b>Error</b> — Select this to be notified of fax/Internet Fax reception errors.</p> <p><b>Warning</b> — Select this to be notified of fax/Internet Fax reception warnings.</p> <p><b>Information</b> — Select this to be notified of fax/Internet Fax reception information.</p>
6	Scan	<p><b>Warning</b> — Select this to be notified of the periodical deletion of scanned files or fax/Internet Fax transmission and reception data is successfully completed.</p> <p><b>Information</b> — Select this to be notified of the deletion of scanned files or fax/Internet Fax transmission and reception data by the [Delete Files] function under the [Maintenance] menu is successfully completed.</p>
7	e-Filing	<p><b>Warning</b> — Select this to be notified when the available space in the e-Filing box is low or the preservation period of documents in the e-Filing box is expiring soon.</p> <p><b>Information</b> — Select this to be notified when the e-Filing box is initialized.</p>
	<p><b>Tip</b></p>	<p>Use the e-Filing box web utility and specify in the property screen for each box if you want to notify whether e-Filing box operations are successfully completed. For information on how to set, see the <b>e-Filing Guide</b>.</p>


## ❑ Setting up Job Notification Events

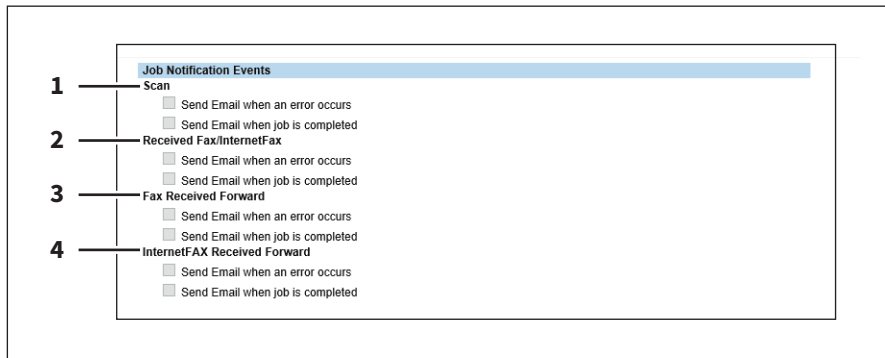

You can select jobs to be notified.

	Item name	Description
1	Scan	Send Email when an error occurs Send Email when job is completed
2	Received Fax/InternetFax	Send Email when an error occurs Send Email when job is completed
3	Fax Received Forward	Send Email when an error occurs Send Email when job is completed
4	InternetFAX Received Forward	Send Email when an error occurs Send Email when job is completed

## ❑ Setting up Application

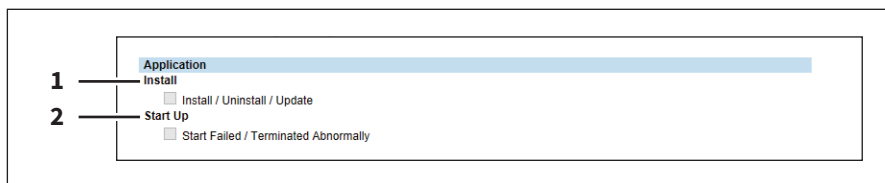


You can select jobs to be notified.

	Item name	Description
1	Install	Notifies when the added application has been installed, uninstalled, or updated.
2	Start Up	Notifies when the application has failed to start or has been terminated abnormally.

## ❑ Setting up License

You can select jobs to be notified.

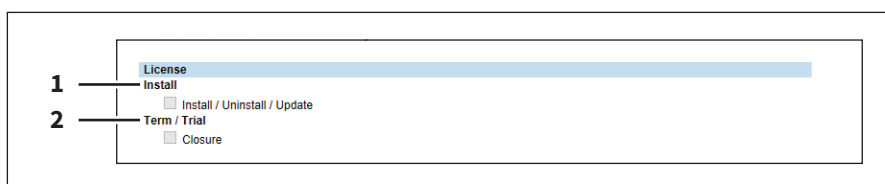

	Item name	Description
1	Install	Notifies when the added license has been installed, uninstalled, or updated.
2	Term / Trial	Notifies when the trial term has been terminated.

## ■ Languages settings


You can specify the language for the touch panel of your equipment.

- 📖 P.348 “Setting up Install Language Pack”
- 📖 P.349 “Setting up Current Language Pack List”
- 📖 P.349 “Setting up Default Setting for PanelUI”

### Tip

The [Languages] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.333 “[Maintenance] Item List”

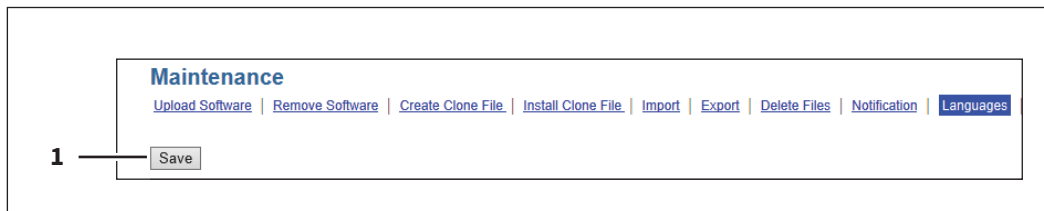


	Item name	Description
1	[Save] button	Saves the registered language.

## ❑ Setting up Install Language Pack

You can install additional language packs.

- 📖 P.349 “Setting up Current Language Pack List”

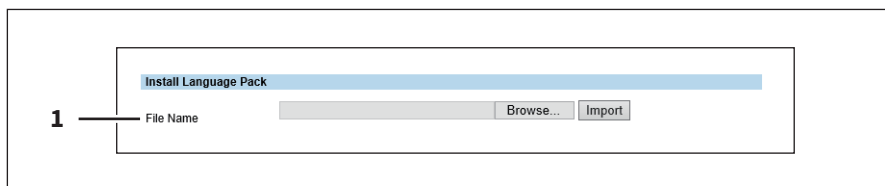


	Item name	Description
1	File Name	Select the language pack file to be installed. <b>[Browse] button</b> — Allows you to select the language pack file. <b>[Import] button</b> — Imports the selected language pack file.



## ❑ Setting up Current Language Pack List


Displays a list of installed language packs. You can delete unnecessary language packs.

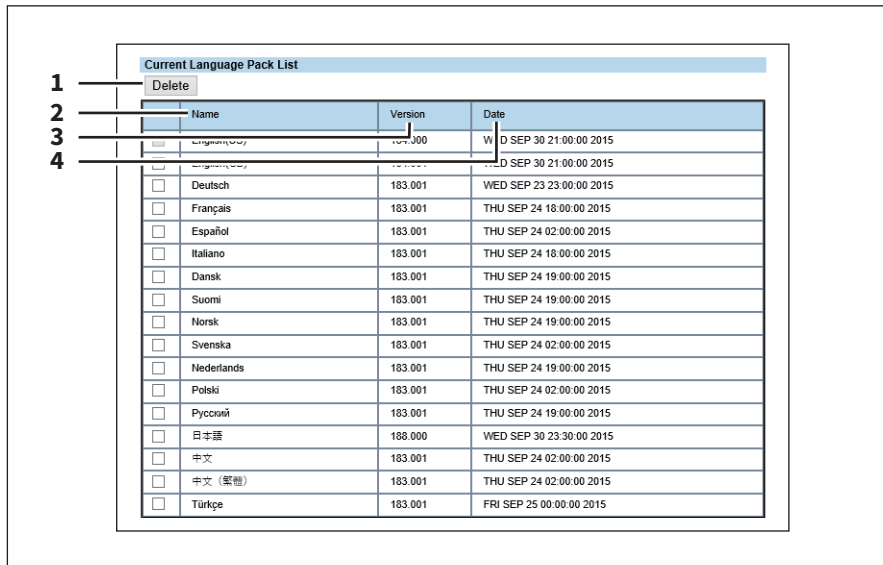

	Item name	Description
1	[Delete] button	Select unnecessary language packs and click the [Delete] button to delete them.
	Tip	You cannot delete [English(US)] or the language selected in [PanelUI Language].
2	Name	Displays the name of the language pack.
3	Version	Displays the version of the language pack.
4	Date	Displays the installed date of the language pack.

## ❑ Setting up Default Setting for PanelUI

Select the display language for the touch panel.

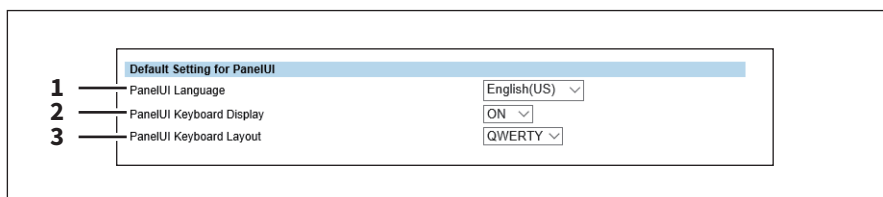

	Item name	Description
1	PanelUI Language	Select the display language for the touch panel.
2	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
3	PanelUI Keyboard Layout	Select the panel keyboard layout displayed on the touch panel.

## ■ Data Backup

You can back up the data of the internal storage device embedded in your equipment.

### Tip

The [Data backup] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

## □ Data Backup

	Item name	Description
1	Data Backup	Select whether the Data backup function is enabled or disabled. [Enable] is set as the default.

	Item name	Description
2	Use External Server for Data Backup	<p>Select this check box to store backed-up data of the internal storage device in an external server.</p> <p>Enter the following items to configure the external server to store the backed-up data of the internal storage device.</p> <p><b>Protocol</b></p> <p>Select the protocol to be used for storing the backed-up data of the internal storage device in an external server.</p> <ul style="list-style-type: none"> <li>• <b>SMB</b> — Select this to send the backed-up data of the internal storage device in an external server using the SMB protocol.</li> <li>• <b>FTP</b> — Select this to send the backed up data of the internal storage device in an FTP server.</li> <li>• <b>FTPS</b> — Select this to send the backed-up data of the internal storage device to an FTP server using FTP over SSL/TLS.</li> </ul> <p><b>Server Name</b></p> <p>When you select [FTP] as the protocol, enter an FTP server name or an IP address.</p> <p>You can enter up to 64 alphanumeric characters and symbols.</p> <p><b>Port Number(Command)</b></p> <p>When you select [FTP] as the protocol, enter the port number to be used for the controls. Generally, “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range within from 0 to 65535 using numbers and hyphens (-). “-” is set as the default.</p> <p><b>Network Path</b></p> <p>When you select [SMB] as the protocol, enter the network path to the network folder.</p> <p>When you select [FTP] as the protocol, enter the directory in the specified FTP server.</p> <p>You can enter up to 128 alphanumeric characters and symbols.</p> <p><b>Login User Name</b></p> <p>Enter the log-in user name to access an SMB server or an FTP server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. Enter the login user name to access an SMB server, an FTP server, or a NetWare server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than &lt;, &gt;, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.</p> <p>You can enter up to 32 alphanumerical characters and symbols other than &lt;, &gt;, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.</p> <p><b>Password</b></p> <p>Enter the password to access an SMB server or an FTP server, if required. You can enter up to 32 alphanumeric characters, symbols and spaces. A single space only can also be entered.</p> <p><b>Retype Password</b></p> <p>Enter the same password again for a confirmation.</p> <p><b>Connection Test</b></p> <p>By clicking [Execute], a connection test is performed by using the specified network settings to check if the communications can be established.</p>

	Item name	Description
2	Use External Server for Data Backup	<p><b>Schedule of Automatic Data Backup</b> Set the period of automatic backup. You can select the period from Disable, Weekly, Every 2 weeks and Monthly.</p> <ul style="list-style-type: none"> <li>• <b>Day of Week:</b> Select this to specify the day of week.</li> <li>• <b>Time:</b> Select this to specify the time. (24-hour display)</li> </ul>
3	Target of Data Backup	Select the data to be backed up.

## ■ User Paper Type

You can set user paper types.


### Note

After you set user paper types, you need to restart the equipment.

### Tip

- The [User Paper Type] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:
  - 📖 P.15 “Access Policy Mode”
  - 📖 P.333 “[Maintenance] Item List”
- For details on the registration of user paper types, consult your service representative.

## □ User Paper Type

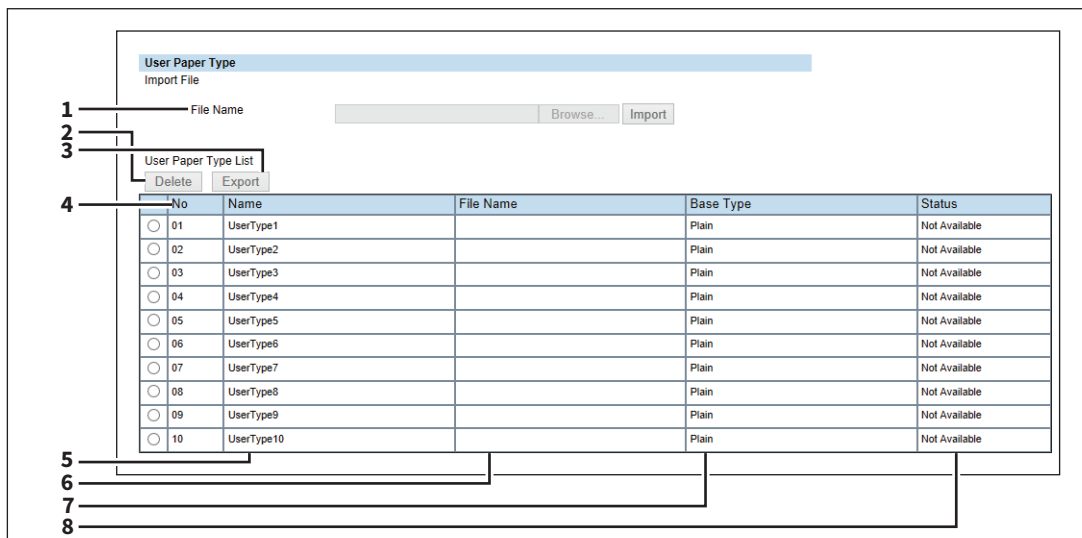

	Item name	Description
1	File Name	<p>Select a file to install a user paper type.</p> <ul style="list-style-type: none"> <li>• <b>[Browse] button</b> — Select a file for the user paper type.</li> <li>• <b>[Import] button</b> — Click this button after you select a user type name in [User Paper Type List], so that the selected user paper type file is imported at the selected user type name.</li> </ul>
2	[Delete] button	Click this button to delete the user paper type selected in [User Paper Type List].

	Item name	Description
3	[Export] button	Click this button to export the user paper type selected in [User Paper Type List].
	Tip	You can export the user paper types that have been imported with the [Import] button.
4	No	Indicates the number for the user paper type. You can import up to 10 files for user paper types.
5	Name	Shows the name of the user paper type. Click this to change the name.
6	File Name	Shows the file name for the user paper type.
7	Base Type	Shows the base paper type for the user paper type.
8	Status	Shows the status of the user paper type.

## ■ System Updates settings

You can update the system on your equipment.

You can also update the fax system when the FAX Unit is installed.

📖 P.353 “Setting up Install Software Package”

📖 P.354 “Setting up Current Software List”

### Note

If a message appears to tell the data is invalid, download the updating file again.


### Tip

The [System Updates] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

📖 P.15 “Access Policy Mode”

📖 P.333 “[Maintenance] Item List”

## ❑ Setting up Install Software Package

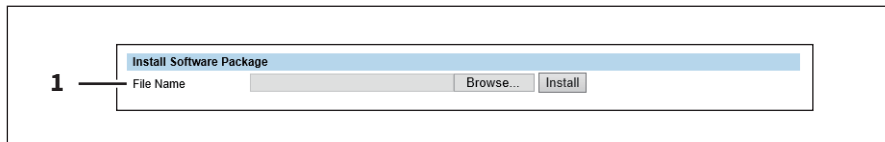

	Item name	Description
1	File Name	Select the software pack file to be installed. <b>[Browse] button</b> — Allows you to select the software pack file. <b>[Install] button</b> — Installs the selected software pack file.

## ❑ Setting up Current Software List

Displays a list of installed System Firmware.

Current Software List				
1	Name	Version	Date Created	Date Installed
2	SYSTEM FIRMWARE	TC01 F0W1100		2018-03 7
3	SYSTEM SOFTWARE	TC01HD0W1101		2018-03 7
4	ENGINE FIRMWARE	TK110MWW151		
	SCANNER FIRMWARE	TK100SLGWW09		
	RADF/DSD FIRMWARE	H816DFWW05		
	PFC FIRMWARE	XXXXXXXX09		
	NIC FIRMWARE	T370NIC0W0012		
	FAX1 FIRMWARE	FAXH625TA10		
	PUNCH FIRMWARE	PUN6105T016		
	FINISHER FIRMWARE	FIN1110T022		

	Item name	Description
1	Name	Displays the name of the System Firmware.
2	Version	Displays the version of the System Firmware.
3	Date Created	Displays the Created date of the System Firmware.
4	Date Installed	Displays the installed date of the System Firmware.

## ■ Reboot settings

You can reboot your equipment.

### Tip

The [Reboot] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.333 “[Maintenance] Item List”

## ■ Panel View

You can customize the appearance on the control panel by showing the necessary buttons and lists and hiding the forbidden buttons and lists.


### Note

After you change the settings, you need to restart the equipment.

### Tip

- The [Panel View] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:
  - 📖 P.15 “Access Policy Mode”
  - 📖 P.369 “[Registration] ([Administration] tab) Item List”

- Hidden functions does not appear but they are not disabled.

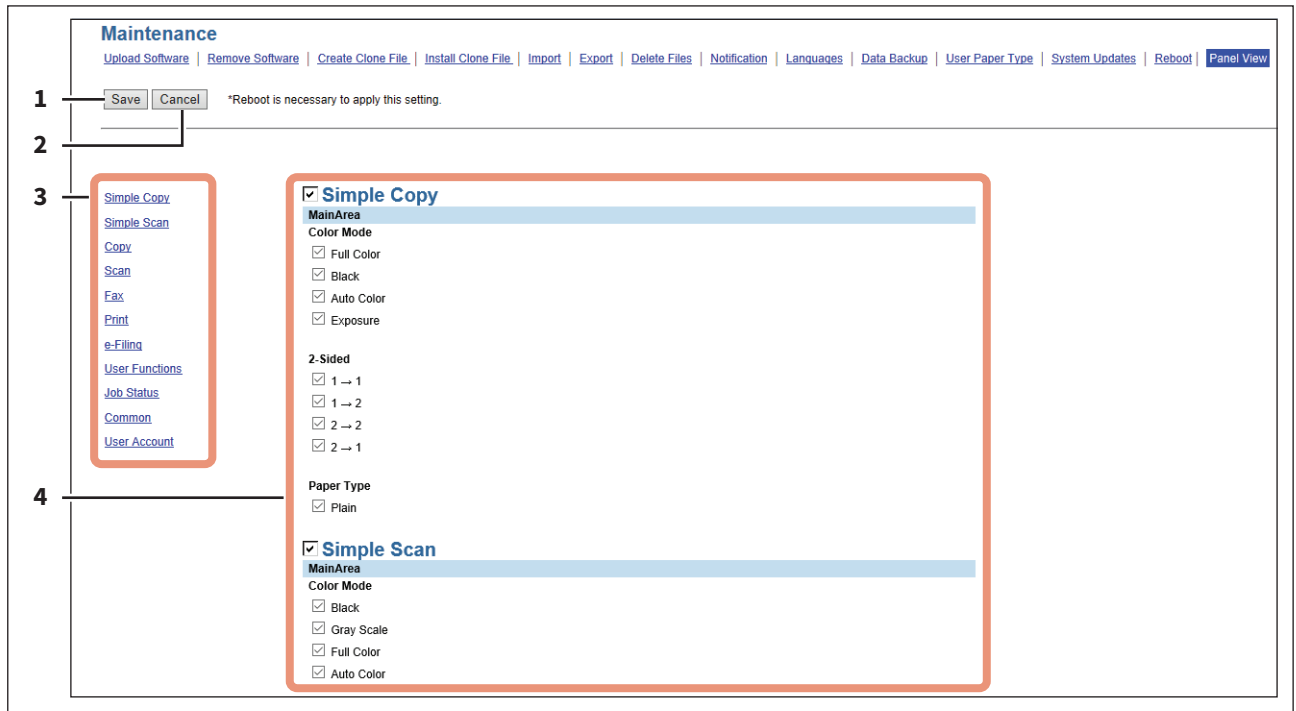



	Item name	Description
1	[Save] button	Saves the changed settings.
2	[Cancel] button	Cancel the changed settings.
3	Simple Copy Simple Scan Copy Scan Fax Print e-Filing User Functions Job Status Common User Account	Select the screen of the control panel that you want to customize.
4	Title Guidance MainArea	The target items are classified into categories. Select the check box for the item that you want to show on the selected screen of the control panel and clear the check box for the item that you want to hide.


## [Maintenance] How to Set and How to Operate


---


This section details procedures for maintaining this equipment. It covers backing up and restoring files, deleting files stored in this equipment, and updating the software on TopAccess.

 P.356 “About the maintenance functions”


 P.357 “Uploading the client software”

 P.359 “Removing the client software”

 P.360 “Deleting the data from local folder”









 P.361 “Setting up notification”

 P.363 “Importing and exporting”

 P.368 “Rebooting the equipment”

### ■ About the maintenance functions

You can carry out the following maintenance tasks in the [Maintenance] menu of the TopAccess access policy mode.

- **Uploading the client software**  
An administrator can upload client software that allows users to download to their computers from TopAccess. This maintenance feature is used to upload new versions of software in TopAccess.  
 P.357 “Uploading the client software”
- **Removing the client software**  
An administrator can remove client software that restricts users from downloading software from TopAccess. This maintenance feature is used to disable specific software in TopAccess.  
 P.359 “Removing the client software”
- **Backing up data in the internal storage device**  
An administrator can create backup files of the address book, mailboxes, and templates in the internal storage device. This maintenance feature is used to create backup files before updating the system software or internal storage device replacement, etc.  
 P.342 “Export settings”
- **Restoring data from backup files**  
An administrator can restore the address book, mailboxes, and templates data from the backup files. This maintenance feature is used to restore the data after updating the system software or internal storage device replacement, etc.  
 P.340 “Import settings”
- **Deleting files stored in the internal storage device**  
An administrator can delete scanned data, transmission data, and reception data in the internal storage device. This maintenance feature must be operated periodically to maintain internal storage device space for future operation.  
 P.360 “Deleting the data from local folder”
- **Setting up notification**  
An administrator can enable the E-mail notification function. The administrator can also specify which events to be notified of.  
 P.361 “Setting up notification”
- **Importing or exporting address book data**  
An administrator can import address book data in a CSV file or XML file created by different applications. An administrator can also export address book data in a CSV file or XML file for other applications.  
 P.363 “Importing and exporting”
- **Rebooting the equipment**  
An administrator can reboot the equipment.  
 P.368 “Rebooting the equipment”



## ■ Uploading the client software

An administrator can upload client software embedded in this equipment. Users can download the software on their computers using the TopAccess [Install Software] link.

- Installer (Setup files) for Client Utilities CD-ROM or Client Utilities/User Documentation DVD
- Macintosh PPD Files
- UNIX Filters

**Note**

Uploading new software overwrites the old version of software that had been uploaded.


**Tip**

The files for uploading are provided for each client software.

- **Driver Files**
  - Contact your dealer for information about obtaining driver files with the installer.
  - You can create a driver file for uploading by compressing folders under “Client\Drivers” in the Client Utilities/User Documentation DVD in zip format.
  - 📖 P.358 “Preparing a driver file for uploading”
- **Macintosh PPD Files** — These files are stored in the “MacPPD\OSX\10\_6-” folders in the Client Utilities/User Documentation DVD. The PPD file for duplex printing is stored in the “2-sided\_default” folder, whereas the PPD file for simplex printing is stored in the “normal” folder.
- **Unix Filters** — These filters are stored in the folder for each workstation in the “Admin\BW\_Unix\_Linux” folder (for black printing) or “Admin\Color\_Unix\_Linux” folder (for color printing) included in the Client Utilities/User Documentation DVD. The CUPS filter for duplex printing is stored in the “2-sided\_default” folder whereas the one for simplex printing is in the “normal” folder.


## □ Uploading new versions of client software in TopAccess

- 1 **Start TopAccess access policy mode.**  
📖 P.15 “Access Policy Mode”
- 2 **Click the [Administration] tab.**
- 3 **Click the [Maintenance] menu and the [Upload Software] submenu.**

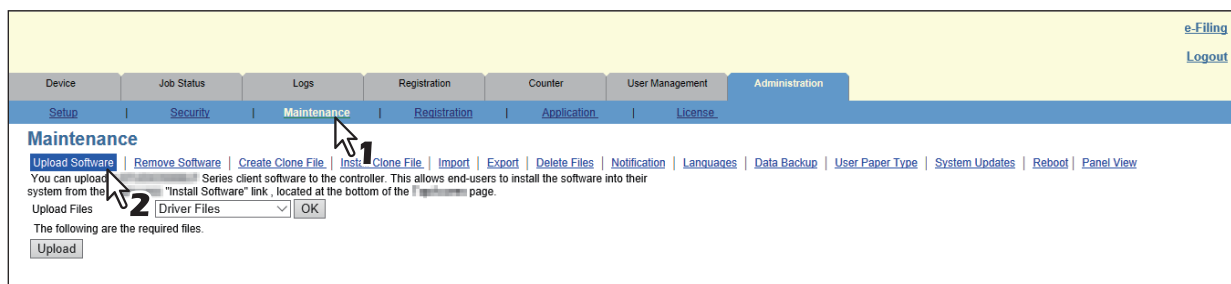

The Upload Software submenu page is displayed.

 - 4 **Select the software that you are going to upload in the [Upload Files] box.**



<b>Driver Files</b>	Uploads the client software installer files. See the following for how to create a driver file for uploading. 📖 P.358 “Preparing a driver file for uploading”
<b>Macintosh PPD Files</b>	Upload PD files for Mac OS X 10.6 and later. In addition, select this to upload the plug-in files used for Mac OS X 10.6 or later.
<b>Unix Filters</b>	Uploads tar files for unit workstations.
<b>Driver Customization Packages</b>	Uploads the custom package file for the printer driver.

## 5 Click [OK].

The bottom section in the page will be changed for selected software.

## 6 In each box displayed, click [Browse] to locate the setup files to be uploaded.

The screenshot shows the 'Maintenance' page with a navigation menu at the top. The 'Upload Software' link is active. Below the menu, there is a section for uploading software. A dropdown menu is set to 'Driver Files', and an 'Upload' button is present. Below this, there are three rows of file upload boxes. The first row is highlighted with a red box, showing the file path 'C:\Users\...Downloads\192.16...' and a 'Browse...' button. The other two rows are partially visible, showing 'ps3.zip' and 'xps.zip' with their respective 'Browse...' buttons.

### Note

At the left of each box, the file name will be displayed. Be sure to specify the same file for each box.

## 7 Click [Upload].

Specified files are uploaded in this equipment.

## ❑ Preparing a driver file for uploading

### 1 Insert the Client Utilities/User Documentation DVD into the PC's CD-ROM or DVD-ROM drive.

### 2 Open the folder where driver files and plug-in files are stored.

They are stored in the "Client\Drivers" folder.

### 3 Compress the folder in zip format to create the driver file for uploading.

Folder name	Name of the ZIP file to be created	Remarks
UNI	univ.zip	Universal printer driver
PS	ps3.zip	PS3 printer driver (PostScript)
XPS	xps.zip	XPS printer driver

### Tip


- See the following for how to upload a driver file.  
📖 P.357 "Uploading new versions of client software in TopAccess"
- Match the name of the ZIP file to be created with the file name displayed on the TopAccess screen. The file name is case sensitive. If the file name is different, you will not be able to upload it.

## ■ Removing the client software

You can remove client software from TopAccess so that it can no longer be installed from TopAccess.


### □ Removing the software from TopAccess

- 1 Start TopAccess access policy mode.**  
 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Maintenance] menu and [Remove Software] submenu.**

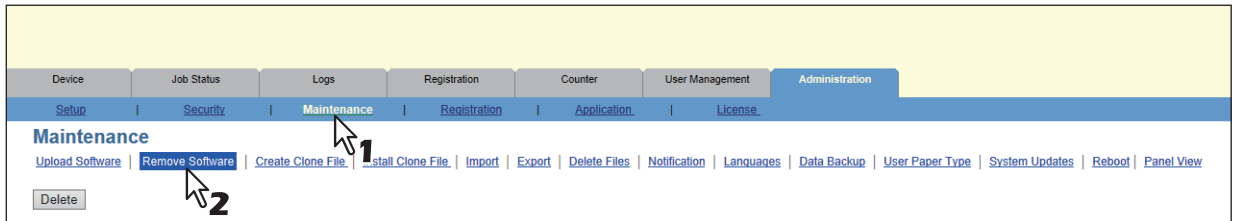

The Remove Software submenu page is displayed.

- 4 Select the check box of the software which you are going to remove and click [Delete].**

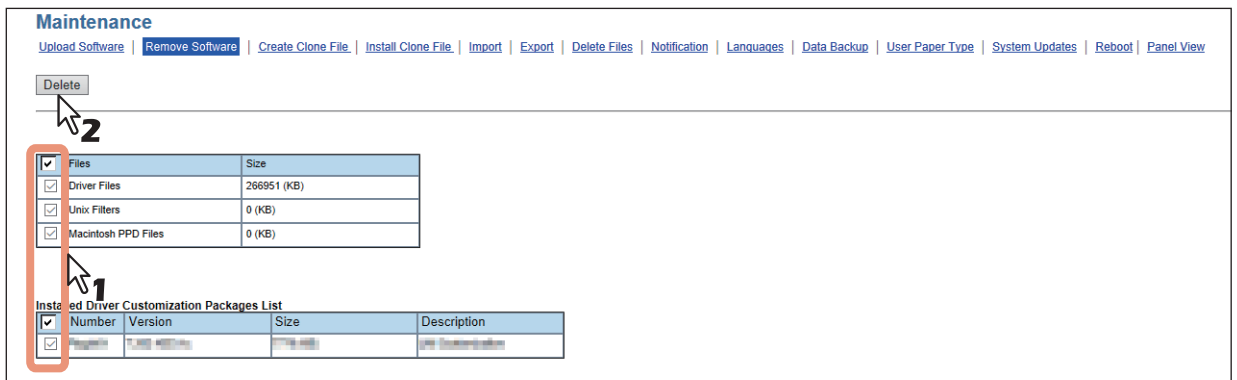


The selected software is deleted from this equipment.

## ■ Deleting the data from local folder

An administrator can delete information such as scanned data, transmission data, and reception data that are stored in the local folder using the Save as file function. It is recommended to delete the stored data periodically to maintain the internal storage device.


### □ Deleting data

#### 1 Start TopAccess access policy mode.

 P.15 “Access Policy Mode”


#### 2 Click the [Administration] tab.

#### 3 Click the [Maintenance] menu and [Delete Files] submenu.

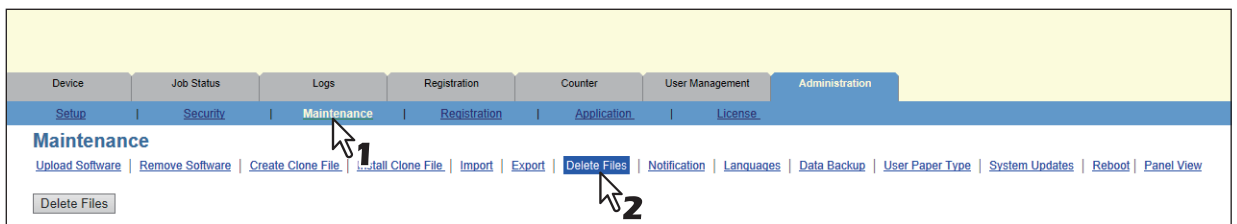


The Delete Files submenu page is displayed.

#### 4 Select the check box of data that you want to delete and click [Delete Files].

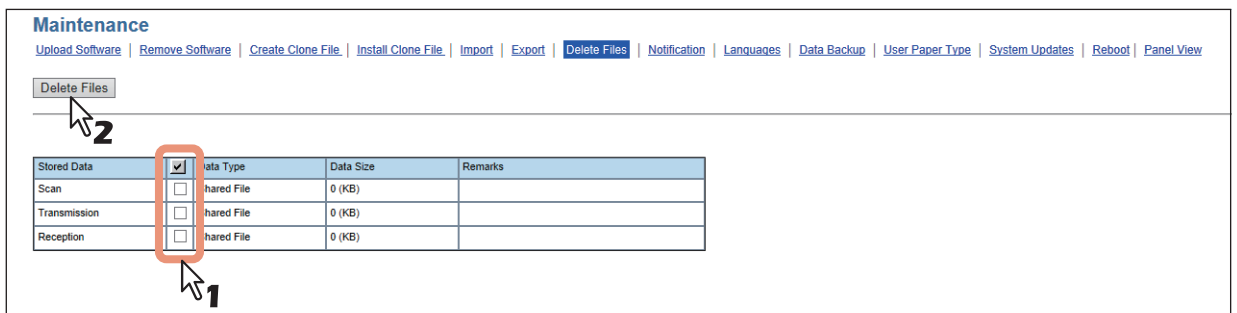

You can set the following in this page.

 P.344 “Delete Files settings”

The confirmation dialog box appears.

#### 5 Click [OK].

The data are deleted.

## ■ Setting up notification

An administrator can configure notification to receive E-mail (mobile terminal can also be used) notifications when an error occurred or a job is complete.

### Note

To enable the E-mail notification, the E-mail settings in the [Setup] menu page must be configured correctly.

📖 P.290 “Setting up E-mail settings”


## □ Setting up the notifications of system errors and events

### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

### 3 Click the [Maintenance] menu and [Notification] submenu.

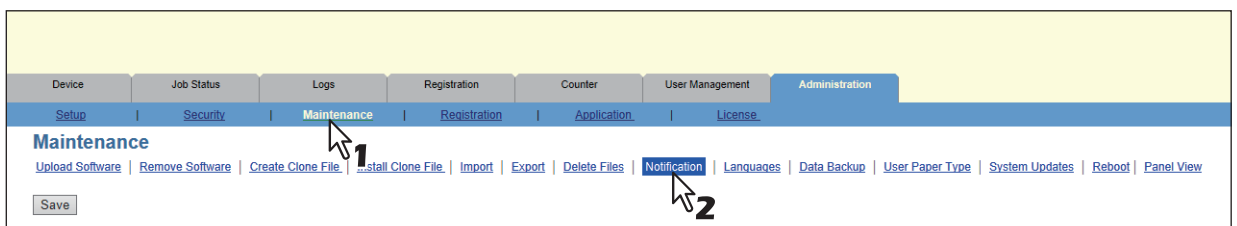

The Notification submenu page is displayed.

### 4 In Email Setting, select the check box [Notify administrator at Email Address 1 to 3] to enable the notifications, and enter the administrator's E-mail address where the notifications are to be sent.

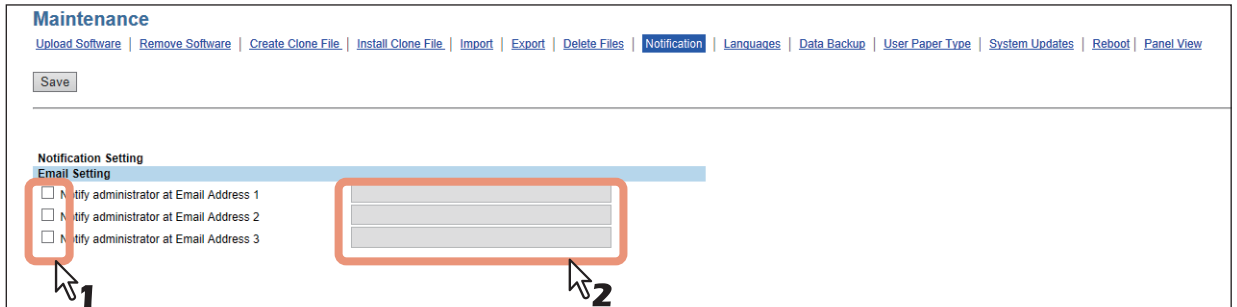

## 5 Select the check boxes of events you want to be notified in [System Message Notification Events], [Job Notification Events], [Application], or [License].

**Maintenance**

[Upload Software](#) | [Remove Software](#) | [Create Clone File](#) | [Install Clone File](#) | [Import](#) | [Export](#) | [Delete Files](#) | [Notification](#) | [Languages](#) | [Data Backup](#) | [User Paper Type](#) | [System Updates](#) | [Reboot](#) | [Panel View](#)

**System Message Notification Events**

Device

- Paper Misfeed
- Drawer Out of Paper
- Door/Drawer Open
- Print Needs Attention
- Toner Empty
- Waste Toner Box is Full
- Power Status
- H/W Option Attachment History

Maintenance

- Change Settings
- Maintenance User Data
- Export/Import
- Cloning
- System Updates
- Log Full
- HDD Alert/Data Backup

Network

- Error

Security

- Error
- Warning
- Information

Received Fax/InternetFax

- Error
- Warning
- Information

Scan

- Warning
- Information

e-Filing

- Warning
- Information

**Job Notification Events**

Scan

- Send Email when an error occurs
- Send Email when job is completed

Received Fax/InternetFax

- Send Email when an error occurs
- Send Email when job is completed

Fax Received Forward

- Send Email when an error occurs
- Send Email when job is completed

InternetFAX Received Forward

- Send Email when an error occurs
- Send Email when job is completed

**Application**

Install

- Install / Uninstall / Update

Start Up

- Start Failed / Terminated Abnormally

**License**

Install

- Install / Uninstall / Update

Term / Trial

- Closure

See the following for details of each event:

- P.345 "Setting up System Message Notification Events"
- P.347 "Setting up Job Notification Events"
- P.347 "Setting up Application"
- P.347 "Setting up License"

## 6 Click [Save].

## ■ Importing and exporting

You can import and export Address Book, MailBoxes, Template, and Combined (Template + Address Book + MailBoxes).

This section describes how to import and export Address Book. You can follow the same procedure to import and export MailBoxes, Template, and Combined (Template + Address Book + MailBoxes) except where you specify the file format of the export data.

📖 P.363 “Importing the address book data”

📖 P.366 “Exporting the address book data”

### □ Importing the address book data

You can import address information exported from an address book on another equipment or a different address book program in the CSV or XML format.

The importing method of address book data is either adding imported data to the address book already registered in this equipment or deleting all the address book data already registered and replacing them with the imported data. It is recommended that you export an address book in the CSV or XML format and edit it when creating address book data.

#### Note

You cannot import an address book when it exceeds the number of characters specified on each item. Invalid characters are replaced with “!”.

- Last Name: 32 characters
- First Name: 32 characters
- Index: 64 characters
- Email Address: 192 alphanumerical characters
- Phone Number: 128 numbers
- Tel Number 2: 128 numbers
- Company: 128 characters
- Department: 128 characters
- Keyword: 256 characters
- SUB: 20 characters
- SID: 20 characters
- SEP: 20 characters
- PWD: 20 characters

#### Tip

The group data are not included in the imported address book data.

### Importing address book data in the CSV/XML format

#### Note

Before the data are imported, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. You cannot import data if there are these jobs.

If import is taking too long, try importing data after your equipment has entered sleep mode.


📖 P.24 “[Job Status] Tab Page Overview”

#### 1 Start TopAccess access policy mode.

📖 P.15 “Access Policy Mode”


#### 2 Click the [Administration] tab.

### 3 Click the [Maintenance] menu and [Import] submenu.

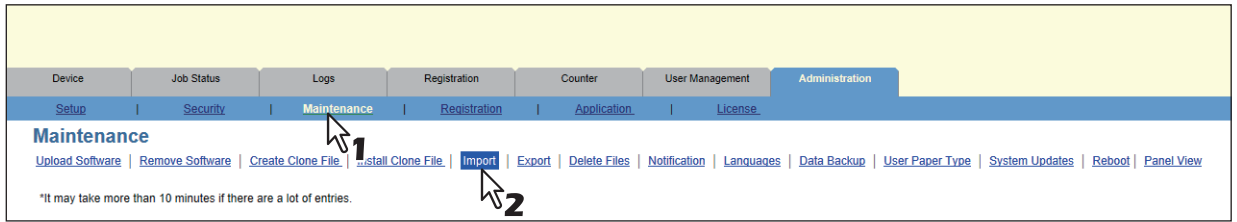

The Import submenu page is displayed.


### 4 Select the import method.

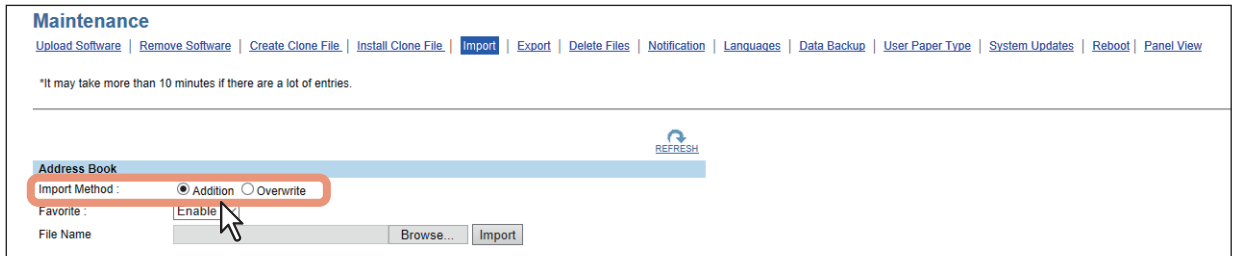


**Addition** — Select this to add the imported address book data into the address book already registered in this equipment.

**Overwrite** — Select this to delete all the address book data registered in this equipment and replace them with the imported address book data.

### 5 When using the Shared Address Book function, select “Local” or “Shared” as the import destination in [Address Book Type].

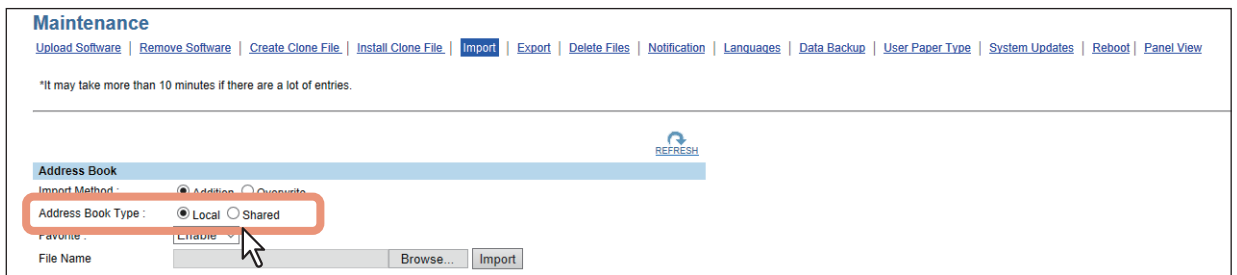


### 6 Specify whether or not to enable Favorite information of the Address Book.

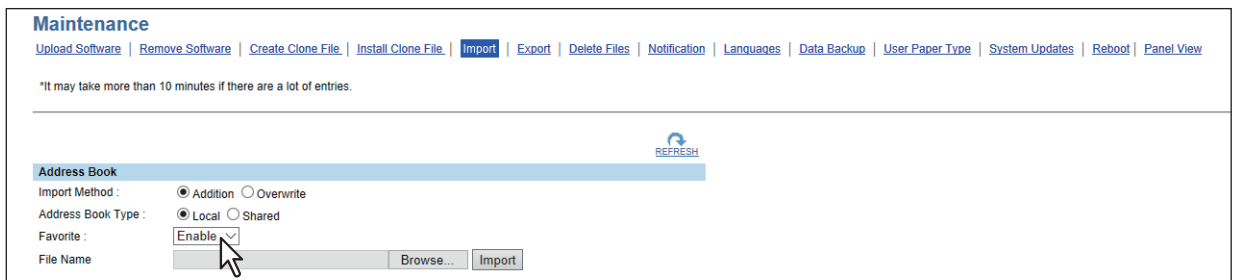




## 7 Click [Browse].

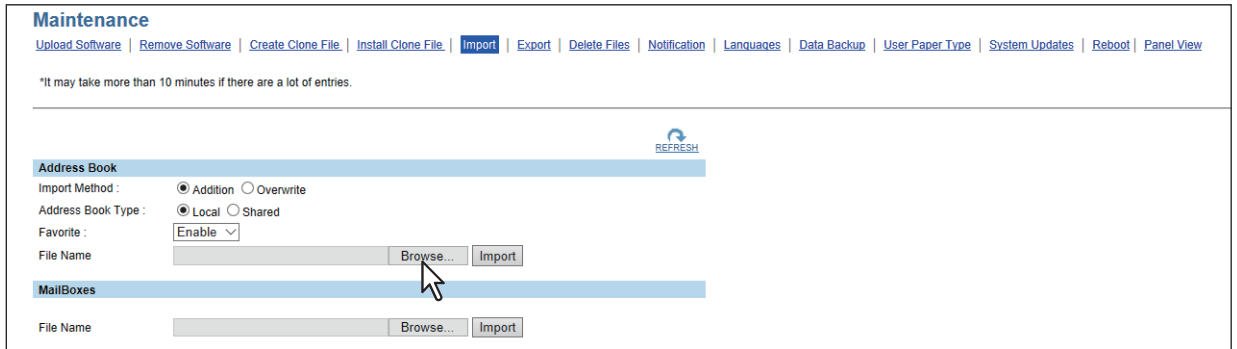


The Choose file dialog box appears.

## 8 Select the CSV/XML file that contains address book data and click [Open].

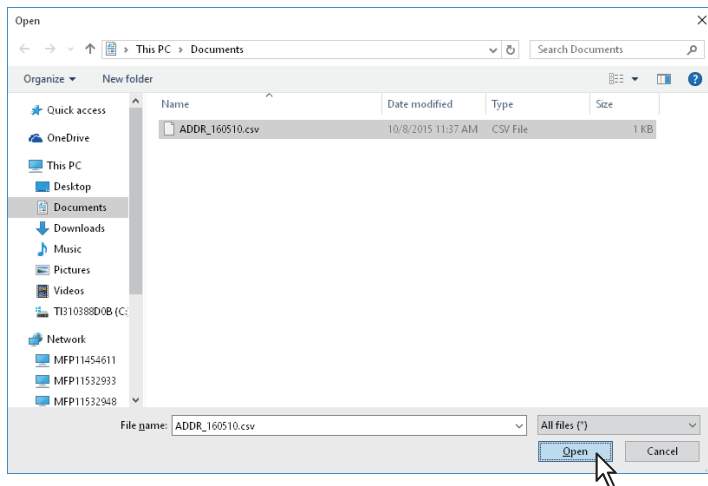

## 9 Click [Import].

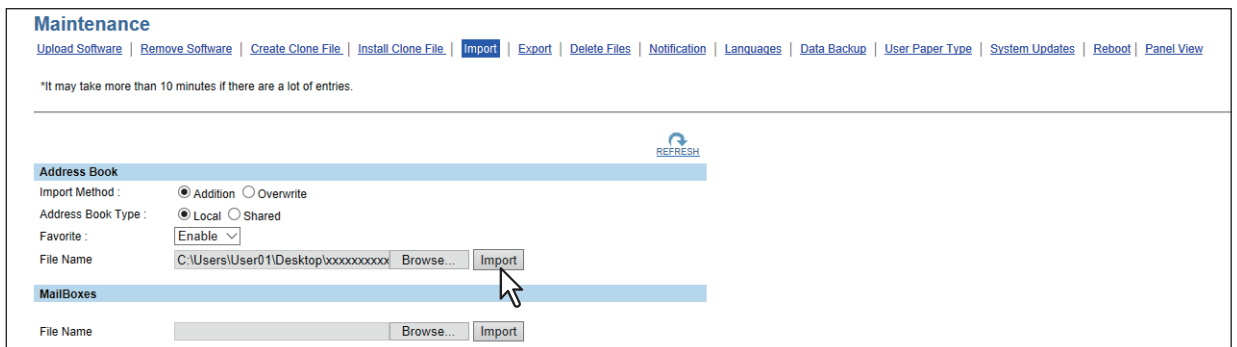

The data are imported to the address book.

## ❑ Exporting the address book data


You can export address information for use in another TopAccess address book or another address book program.

### Tip

The group data are not included in the exported address book data.


### Exporting address book data in the CSV/XML format

- 1 Start TopAccess access policy mode.**  
 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Maintenance] menu and [Export] submenu.**

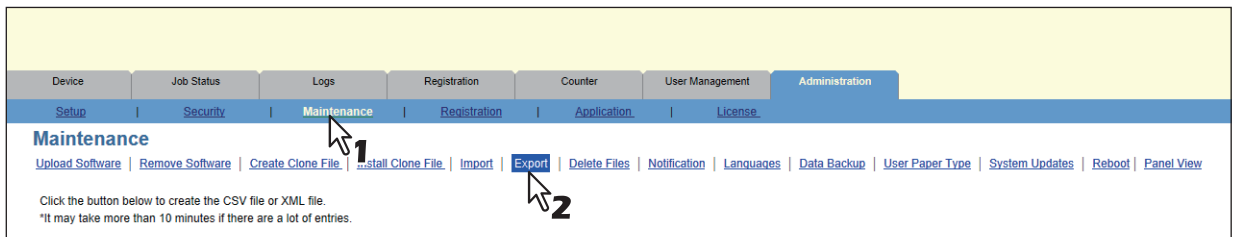


The Export submenu page is displayed.

- 4 When using the Shared Address Book function, select “Local” or “Shared” as the export data in [Address Book Type].**

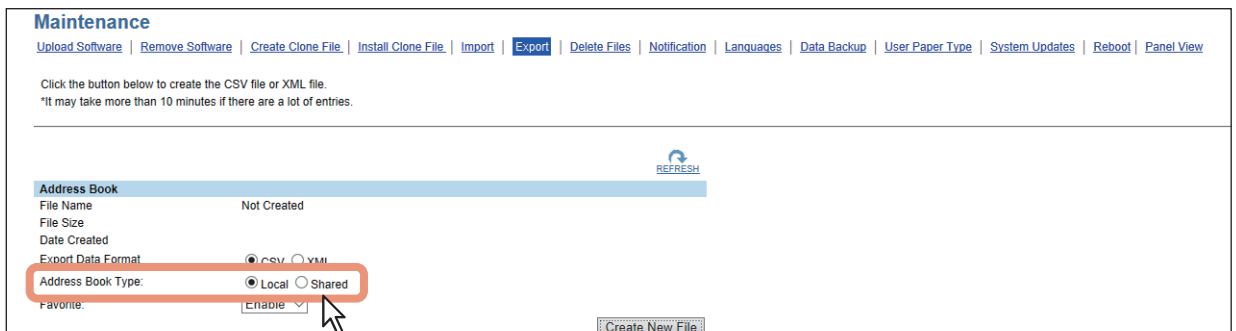

- 5 Select the file format of the address book.**

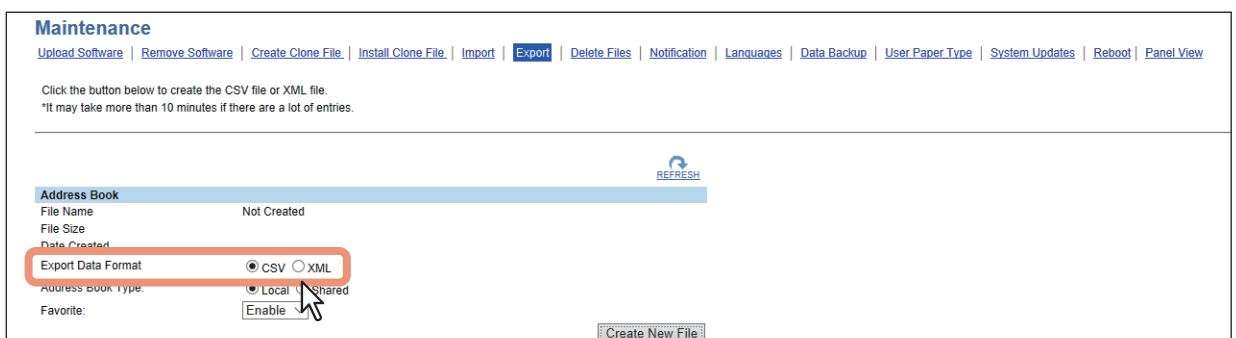

**CSV** — Select this to create the file in the CSV format  
**XML** — Select this to create the file in the XML format.

## 6 Specify whether or not to enable Favorite information of the Address Book.

**Maintenance**  
[Upload Software](#) | [Remove Software](#) | [Create Clone File](#) | [Install Clone File](#) | [Import](#) | [Export](#) | [Delete Files](#) | [Notification](#) | [Languages](#) | [Data Backup](#) | [User Paper Type](#) | [System Updates](#) | [Reboot](#) | [Panel View](#)

Click the button below to create the CSV file or XML file.  
\*It may take more than 10 minutes if there are a lot of entries.

**Address Book** REFRESH

File Name: Not Created  
File Size:  
Date Created:  
Export Data Format:  CSV  XML  
Address Book Type:  Local  Shared  
Favorite: **Enable** ▼

[Create New File](#)

## 7 Click [Create New File].

**Maintenance**  
[Upload Software](#) | [Remove Software](#) | [Create Clone File](#) | [Install Clone File](#) | [Import](#) | [Export](#) | [Delete Files](#) | [Notification](#) | [Languages](#) | [Data Backup](#) | [User Paper Type](#) | [System Updates](#) | [Reboot](#) | [Panel View](#)

Click the button below to create the CSV file or XML file.  
\*It may take more than 10 minutes if there are a lot of entries.

**Address Book** REFRESH

File Name: Not Created  
File Size:  
Date Created:  
Export Data Format:  CSV  XML  
Address Book Type:  Local  Shared  
Favorite: **Enable** ▼

[Create New File](#)

**MailBoxes**

File Name: Not Created  
File Size:  
Date Created:

[Create New File](#)

The exported file information is displayed.

### Tip

If you previously exported address book data, the exported file link and information are displayed in the Address Book area. You can click the link to save the previously exported file.

## 8 Click the [File Name] link.

**Maintenance**  
[Upload Software](#) | [Remove Software](#) | [Create Clone File](#) | [Install Clone File](#) | [Import](#) | [Export](#) | [Delete Files](#) | [Notification](#) | [Languages](#) | [Data Backup](#) | [User Paper Type](#) | [System Updates](#) | [Reboot](#) | [Panel View](#)

Click the button below to create the CSV file or XML file.  
\*It may take more than 10 minutes if there are a lot of entries.

**Address Book** REFRESH

File Name: [ADDR\\_190510.csv](#)  
File Size: 241  
Date Created: FRI MAY 10 01:19:58 2019  
Export Data Format:  CSV  XML  
Address Book Type:  Local  Shared  
Favorite: **Enable** ▼

[Create New File](#)

**MailBoxes**

File Name: Not Created  
File Size:  
Date Created:


[Create New File](#)


The file is downloaded.

## ■ Rebooting the equipment

An administrator can reboot the equipment. If rebooting is performed, warming-up may take longer than normally.


### □ Rebooting the equipment

- 1 Start TopAccess access policy mode.**  
 P.15 “Access Policy Mode”
- 2 Click the [Administration] tab.**
- 3 Click the [Maintenance] menu and [Reboot] submenu.**

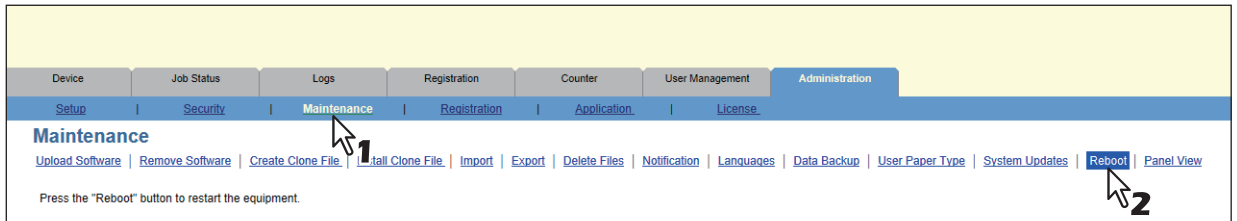

The Reboot submenu page is displayed.

- 4 Click [Reboot] to reboot the equipment.**

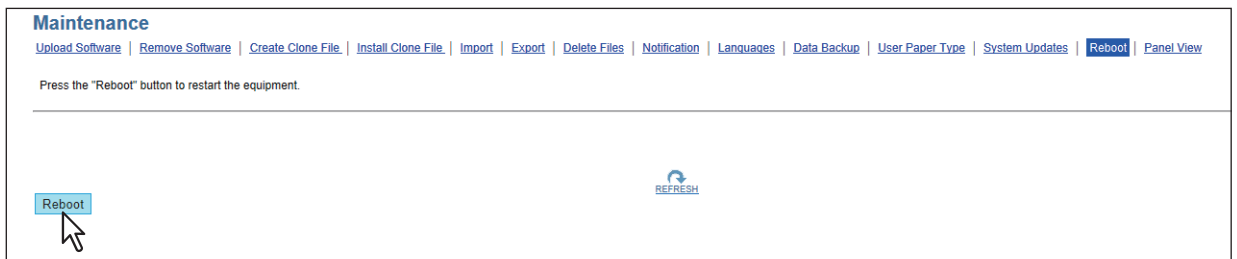

The confirmation dialog box appears.

- 5 Click [OK].**  
The equipment is restarted.

#### Note

While the equipment is being restarted, the network will not be available. A message is displayed to inform you that it will reconnect to TopAccess after a while. Also, the touch panel on this equipment displays a message to inform you that the network is not ready. When this message disappears, TopAccess will once again be available.

## [Registration] ([Administration] tab) Item List

- 📖 P.369 “Public Home”
- 📖 P.373 “Public Theme Settings”
- 📖 P.374 “Public Home Settings”
- 📖 P.375 “Default Home”
- 📖 P.375 “Default Home Settings”
- 📖 P.376 “Simple Screen Settings”
- 📖 P.377 “Image/Icon Management”
- 📖 P.378 “Home Data List”
- 📖 P.379 “Fax Received Forward and InternetFAX Received Forward settings”
- 📖 P.390 “Meta Scan”

### Tip

Users who are granted administrator privileges in access policy mode can access the [Registration] menu from the [Administration] tab.

See the following pages for how to access it:

- 📖 P.15 “Access Policy Mode”

## ■ Public Home

In Public Home, you can set the Home screen that is displayed when you press the [Home] button.

You can register the functions used frequently as panel buttons.


- 📖 P.370 “[Select Home Type] screen”

### Tip

The [Public Home] submenu can be accessed from the [Registration] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Registration] menu:


- 📖 P.15 “Access Policy Mode”
- 📖 P.369 “[Registration] ([Administration] tab) Item List”

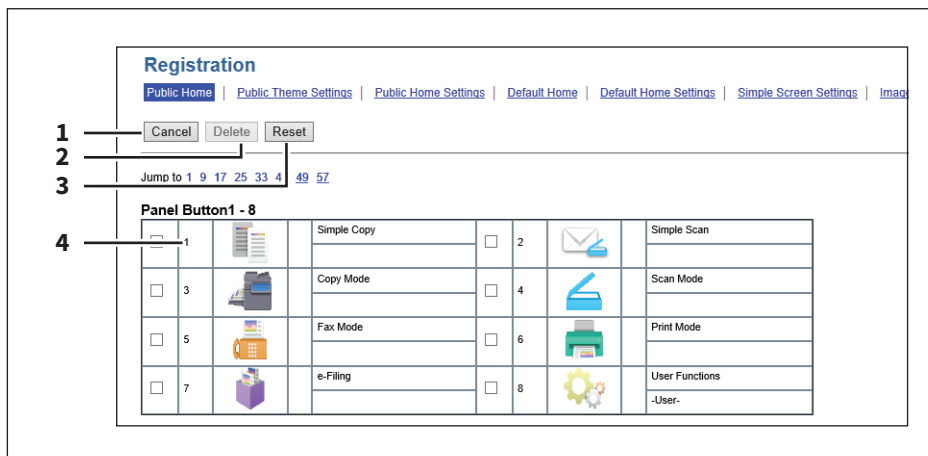

	Item name	Description
1	[Cancel] button	Cancels the operation.
2	[Delete] button	Deletes the selected Panel Button.
3	[Reset] button	Deletes the current settings.
4	Panel button list	Displays a list of panel buttons you can select for the shared home. Select the panel buttons you want to use. Click the link to edit the home type. 📖 P.370 “[Select Home Type] screen”
	Tip	In Public Home, you can register 64 types.


## ❑ [Select Home Type] screen

Select a home type to add to Public Home.

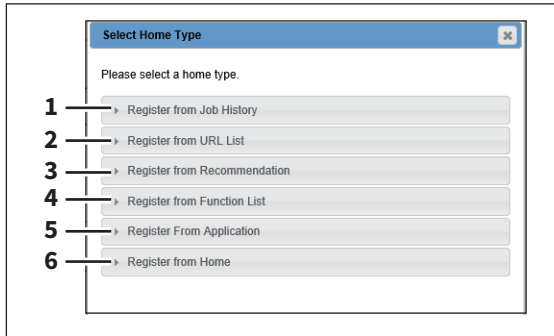


	Item name	Description
1	Register from Job History	Registers a panel button from the job history. 📖 P.370 “[Register from Job History ] screen”
2	Register from URL List	Registers a panel button from the URL list. 📖 P.371 “[Register from URL List] screen”
3	Register from Recommendation	Registers a panel button from the recommendation list. 📖 P.371 “[Register from Recommendation] screen”
4	Register from Function List	Registers a panel button from the function list. 📖 P.371 “[Register from Function List] screen”
5	Register from Application	Registers a panel button from the application. 📖 P.372 “[Register from Application] screen”
6	Register from Home	Registers a panel button from the home screen. 📖 P.372 “[Register from Home] screen”

## [Register from Job History ] screen

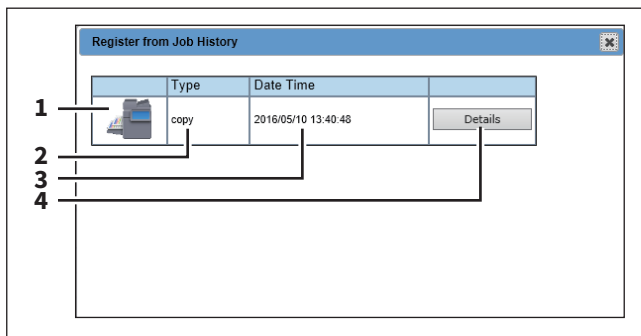


	Item name	Description
1	Button Icon	Displays the button icon.
2	Type	Displays the job type.
3	Date Time	Displays the date and time that a job was performed.
4	[Details] button	Displays the job details.

### [Register from URL List] screen

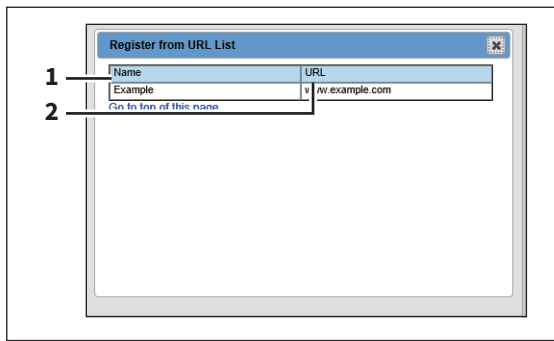


	Item name	Description
1	Name	Displays the name of the connection.
2	URL	Displays the URL.

### [Register from Recommendation] screen

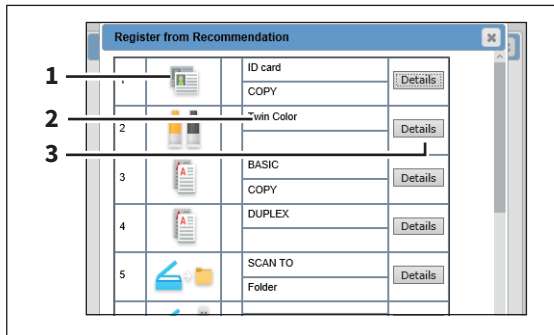


	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.
3	[Details] button	Displays the details for the function.

### [Register from Function List] screen

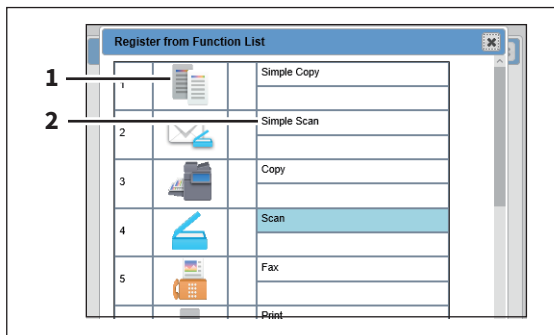

	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.


## [Register from Application] screen

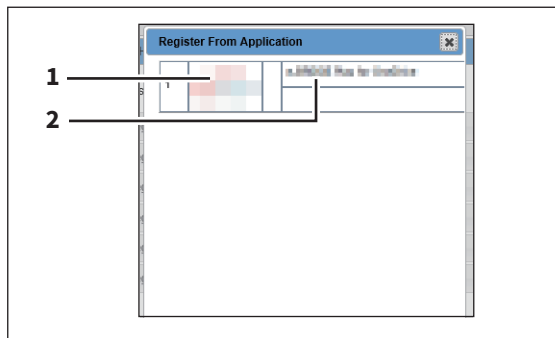

	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.

## [Register from Home] screen

You can register from the Public Home or the User Home screen. The content displayed is the same for both.

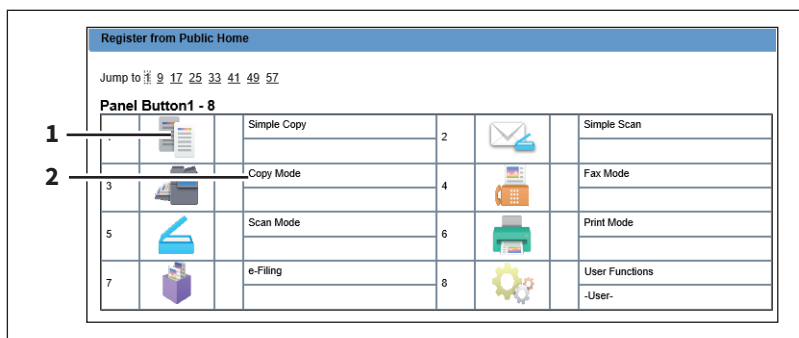


	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.



## Public Theme Settings

You can specify the theme of the shared home screen.

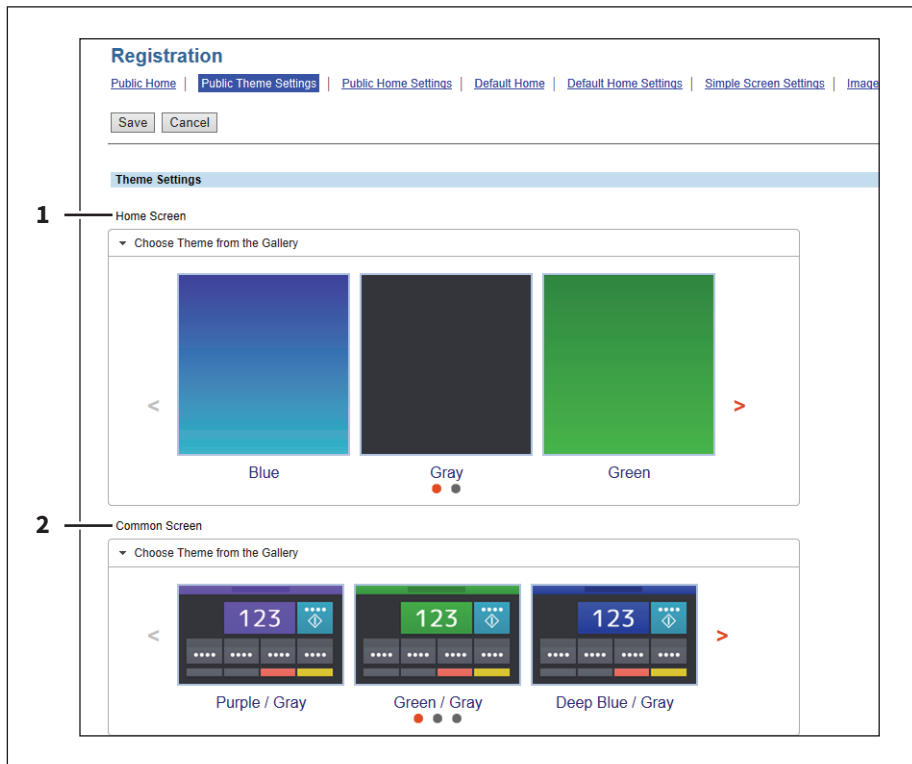

	Item name	Description
1	Home Screen	Specify the theme for Home screen. You can select the theme from a list if you select [Choose Theme from the Gallery].
2	Common Screen	Specify the theme for common screens. You can select the theme from a list if you select [Choose Theme from the Gallery].

## ■ Public Home Settings

You can specify the background, button size, and transparency of the shared home screen.

The screenshot shows the 'Registration' settings page with the following sections:

- 1 Background Settings:** Includes 'Current Background' (Dawn Blue) and a 'Choose Background Image from Gallery' button.
- 2 Button Size Settings:** Includes 'Current Button Size' (Medium) and a 'Choose Button Size from Gallery' button.
- 3 Transparency Settings:** Includes sliders for 'Title' and 'Panel Button' (both at 100%) and a 'Preview' image.
- 4 Font Settings:** Includes 'Font Size' (Medium) and 'Font Color' (White) dropdown menus.

	Item name	Description
1	Background Settings	Specify the background of the home screen. You can select the background design from a list if you select [Choose Background Image from Gallery] at [Current Background].
2	Button Size Settings	Specify the button size. You can select the button size from a list if you select [Choose Button Size from Gallery] at [Current Button Size].
3	Transparency Settings	Specify the transparency of the home screen. <ul style="list-style-type: none"> <li>• <b>Title</b> — You can specify the transparency of the title bar.</li> <li>• <b>Panel Button</b> — You can specify the transparency of the buttons.</li> </ul>
4	Font Settings	Specify the font used on the public home screen. <ul style="list-style-type: none"> <li>• <b>Font Size</b> — You can specify the font size.</li> <li>• <b>Font Color</b> — You can specify the font color.</li> </ul>

## ■ Default Home

You can use Default Home to specify the default status of the home screen that is displayed when you press the [Home] button on the control panel.

### Tip

The [Default Home] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

📖 P.15 “Access Policy Mode”

📖 P.369 “[Registration] ([Administration] tab) Item List”



	Item name	Description
1	[Cancel] button	Cancels the operation.
2	[Delete] button	Deletes the selected panel button.
3	Panel button list	Displays a list of panel buttons you can select for the shared home. Select the panel buttons you want to use. Click the link to edit the home type. 📖 P.370 “[Select Home Type] screen”

## ■ Default Home Settings

You can specify the background, button size, and transparency of the initial home screen. Setting items are the same as [Public Home Settings].

📖 P.374 “Public Home Settings”

## ■ Simple Screen Settings


You can select the background of the simple screen.

### Tip

The [Simple Screen Settings] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

📖 P.15 “Access Policy Mode”

📖 P.369 “[Registration] ([Administration] tab) Item List”

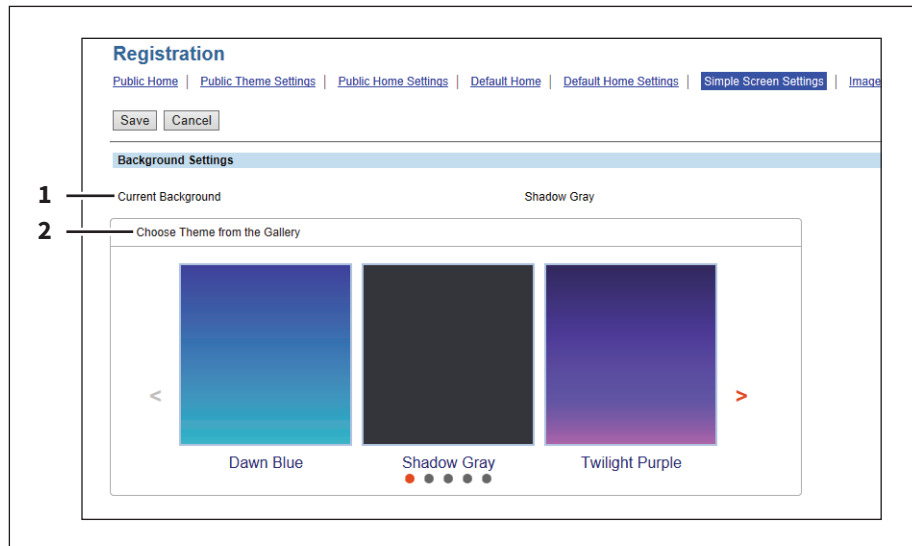

	Item name	Description
1	Current Background	Shows the name of the current background.
2	Choose Theme from the Gallery	Click this to show the list, so that you can select the background.


## ■ Image/Icon Management

You can manage background and icon images.

📖 P.377 “Panel Background Image”

📖 P.377 “Panel Icon Image”

### □ Panel Background Image

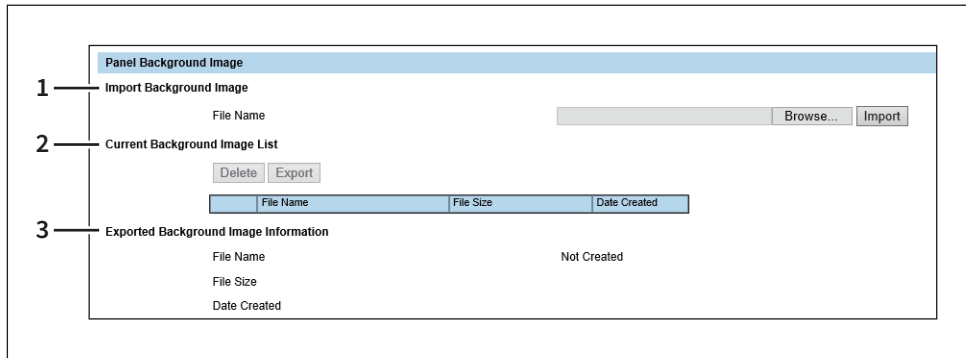


	Item name	Description
1	Import Background Image	Imports a background image. <ul style="list-style-type: none"> <li>• <b>[Browse] button</b> — You can select an image file.</li> <li>• <b>[Import] button</b> — You can import the selected image file.</li> </ul>
2	Current Background Image List	Displays the list of the registered images and allows you to manage them. <ul style="list-style-type: none"> <li>• <b>[Delete] button</b> — You can delete the selected image file.</li> <li>• <b>[Export] button</b> — You can export the selected image file.</li> </ul>
3	Exported Background Image Information	Displays information on the selected image file.

You can import images in the following format.

- Image size: 1280 x 600 pixels (recommended size)
- Image format: png
- Color: 24 bits
- Maximum file size: 1.5MB

### □ Panel Icon Image

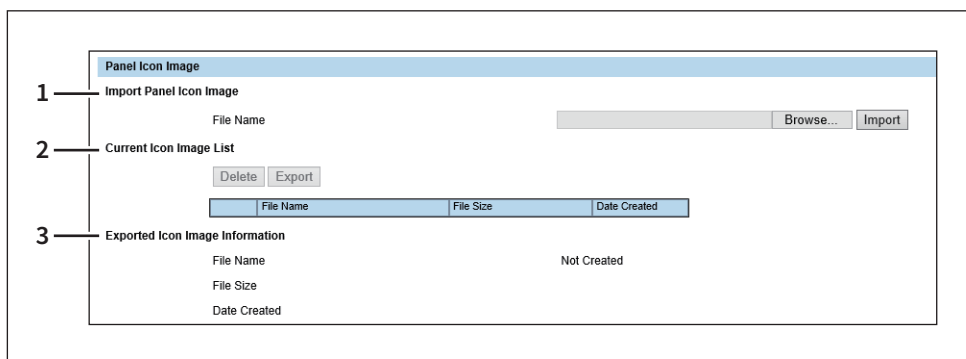

	Item name	Description
1	Import Panel Icon Image	Imports an icon image. <ul style="list-style-type: none"> <li>• <b>[Browse] button</b> — You can select an image file.</li> <li>• <b>[Import] button</b> — You can import the selected image file.</li> </ul>
2	Current Icon Image List	Displays the list of the registered images and allows you to manage them. <ul style="list-style-type: none"> <li>• <b>[Delete] button</b> — You can delete the selected image file.</li> <li>• <b>[Export] button</b> — You can export the selected image file.</li> </ul>
3	Exported Icon Image Information	Displays information on the selected image file.

You can import images in the following format.

- Image size: 193 x 128 pixels
- Image format: png
- Color: 24 bits
- Maximum file size: 50KB

## ■ Home Data List

You can use Home Data List to display a list of all saved home screens and manage them.


Tip

The [Home Data List] submenu can be accessed from the [Registration] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Registration] menu:

📖 P.15 “Access Policy Mode”

📖 P.369 “[Registration] ([Administration] tab) Item List”

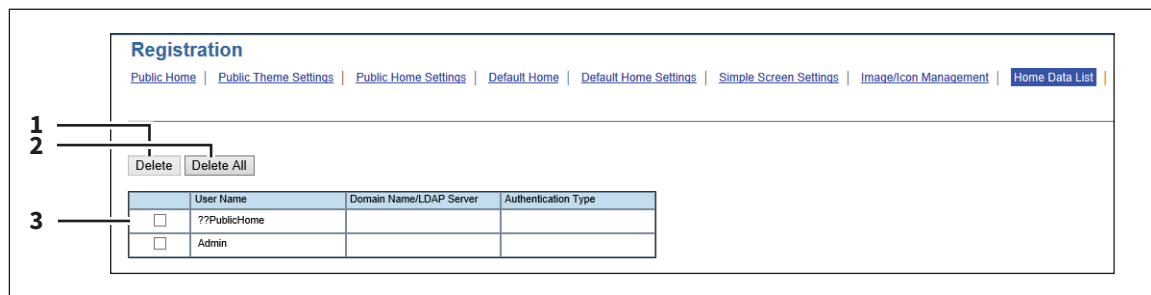

	Item name	Description
1	[Delete] button	Deletes the selected home screen.
2	[Delete All] button	Deletes all home screens.
3	Home screen list	Displays a list of registered home screens.

## ■ Fax Received Forward and InternetFAX Received Forward settings

- 📖 P.379 “Setting up Document Print (Fax/InternetFax Received Forward)”
- 📖 P.379 “Setting up Destination Setting (Fax/Internet Fax Received Forward)”
- 📖 P.380 “Setting up InternetFax Setting (Fax/Internet Fax Received Forward)”
- 📖 P.381 “Setting up Save as file Setting (Fax/InternetFAX Received Forward)”
- 📖 P.386 “Setting up Email Setting (Fax/InternetFAX Received Forward)”
- 📖 P.389 “Setting up Box Setting (Fax/InternetFAX Received Forward)”

### Tip

The [Fax Received Forward]/[InternetFAX Received Forward] submenu can be accessed from the [Registration] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Registration] menu:


- 📖 P.15 “Access Policy Mode”
- 📖 P.369 “[Registration] ([Administration] tab) Item List”

### Note

- [Fax Received Forward] is available only when the Fax Unit is installed on this equipment.
- Two lines become available in [Fax Received Forward] by installing the 2nd Line for FAX Unit in the FAX Unit. It is possible to set the reception setting in each line.

## ❑ Setting up Document Print (Fax/InternetFax Received Forward)

You can configure printing of forwarded documents.

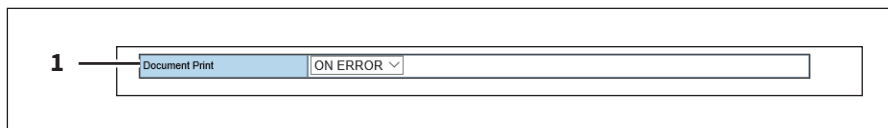


	Item name	Description
1	Document Print	<ul style="list-style-type: none"> <li>• <b>Always</b> — Select this to always print forwarded document.</li> <li>• <b>ON ERROR</b> — Select this to print the received document when an error occurred on all forwarding destinations. (For example, the document is not printed when the E-mail transmission only failed in a combined setting of Save as File and E-mail.)</li> </ul>

## ❑ Setting up Destination Setting (Fax/Internet Fax Received Forward)

You can specify the destinations to which the received faxes or Internet Faxes are forwarded. You can only specify E-mail addresses as the destination.

You can specify the destination when you have selected [InternetFax] as the forwarding agent.

### Recipient List

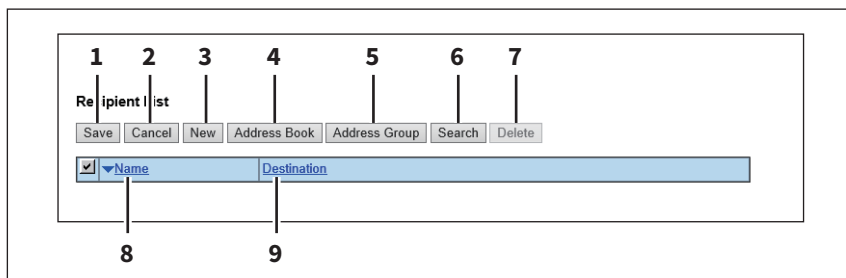

	Item name	Description
1	[Save] button	Saves recipient settings.

	Item name	Description
2	[Cancel] button	Cancels the settings.
3	[New] button	Displays a screen where you can register an E-mail address as the recipient. 📖 P.88 “[Create Destination information]/[Edit Destination information] screen”
4	[Address Book] button	Allows you to select a recipient from the address book.
5	[Address Group] button	Allows you to select an address book group as a destination.
6	[Search] button	Allows you to search a recipient from the address book. 📖 P.90 “[Search Contact] screen”
7	[Delete] button	Deletes the selected recipient.
8	Name	Displays the names registered to the address book.
9	Destination	Displays the E-mail addresses.

### [Contact Property] screen

You can specify an E-mail address as the recipient.

	Item name	Description
1	[OK] button	Saves the recipient.
2	[Cancel] button	Cancels the settings.
3	[Reset] button	Deletes the entered E-mail address.
4	Destination	Enter the E-mail address.

### ❑ Setting up InternetFax Setting (Fax/Internet Fax Received Forward)

In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent.

You can specify the destination when you have selected [InternetFax] as the forwarding agent.



	Item name	Description
1	Subject	This sets the subject of the Internet Faxes. Select [Scanned from (Device Name) [(Template Name)] (Date) (Time)] to automatically apply the subject, or enter the desired subject in the box. If you manually enter the subject, the subject will be “(Subject) (Date)” by automatically adding the date.
2	From Address	Enter the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address.
3	From Name	Enter the sender name of the Internet Fax.
4	Body	Enter the body message of the Internet Fax. You can enter up to 1000 characters (including spaces).
5	File Format	Select the file format of the scanned image. Only [TIFF-S] (TIFF-FX (Profile S)) format can be selected.
6	Fragment Page Size	Select the size of the message fragmentation.

### ❑ Setting up Save as file Setting (Fax/InternetFAX Received Forward)

In the Save as file Setting page, you can specify how and where a received document will be stored. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

The screenshot shows the 'Save as file Setting' configuration page. It includes a 'Save' and 'Cancel' button at the top left. The page is divided into several sections:

- 1 File Format:** A dropdown menu set to 'PDF(Multi)'. There is an 'Enable OCR' checkbox.
- 2 Encryption:** A section with an 'Encryption' checkbox, 'User Password' and 'Master Password' fields with corresponding 'Retype Password' fields, and an 'Encryption Level' dropdown set to '128-bit AES'. Below this are 'Authority' checkboxes for 'Printing', 'Change of Documents', 'Content Copying or Extraction', and 'Content Extraction for accessibility'.
- 3 Select following 2 items:** A section with a checked 'Use local folder' option and a 'Storage Path' field containing '\\MF11532948\FILE\_SHARE\'. Below this is a 'Remote 1' section with radio buttons for 'Use Administrator Setting' (selected) and 'Use User Setting'. It includes fields for 'Protocol', 'Network Path', 'Server Name', 'Port Number(Command)', 'Network Path', 'Login User Name', 'Password', and 'Retype Password', along with a 'Connection Test' button.
- 4 Destination:** A section for 'Remote 2' with similar radio buttons and fields as 'Remote 1'.
- 5 Format:** A dropdown menu set to '[FileName]-[Date]-[Page]'.
- 6 File Name:** A section with a 'Comment' field, a 'Date' dropdown set to 'None', a 'Page' dropdown set to '4digits', a 'Sub ID' dropdown set to 'Auto', and a checked 'Add line information to File Name' checkbox.

	Item name	Description
1	File Format	<p>Select the file format to which the received document will be saved.</p> <ul style="list-style-type: none"> <li>• <b>TIFF (Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF (Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF (Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF (Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>XPS (Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS (Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> </ul> <p>You can select whether to enable OCR by [Enable OCR].</p>
	<p>Tip</p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, only PDF (Multi) and PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.</li> <li>• OCR processing is available only when the OCR Enabler is installed.</li> </ul>	

	Item name	Description
2	Encryption	<p>Set this to encrypt PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.</p> <p><b>Encryption</b> Select this if you want to encrypt PDF files.</p> <p><b>User Password</b> Enter a password for opening encrypted PDF files.</p> <p><b>Master Password</b> Enter a password for changing the Encrypt PDF setting.</p> <p><b>Encryption Level</b> Select the desired encryption level.</p> <ul style="list-style-type: none"> <li>• <b>40-bit RC4</b> — Select this to set an encryption level to one compatible with Acrobat 3.0, PDF V1.1.</li> <li>• <b>128-bit RC4</b> — Select this to set an encryption level to one compatible with Acrobat 5.0, PDF V1.4.</li> <li>• <b>128-bit AES</b> — Select this to set an encryption level to one compatible with Acrobat 7.0, PDF V1.6.</li> </ul> <p><b>Authority</b> Select the desired types of authority for Encrypt PDF.</p> <ul style="list-style-type: none"> <li>• <b>Printing</b> — Select this to authorize users to print documents.</li> <li>• <b>Change of Documents</b> — Select this to authorize users to change documents.</li> <li>• <b>Content Copying or Extraction</b> — Select this to authorize users to copy and extract the contents of documents.</li> <li>• <b>Content Extraction for accessibility</b> — Select this to enable the accessibility feature.</li> </ul>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the <i>MFP Management Guide</i>.</li> <li>• The user password and the master password are not set at the factory shipment.</li> <li>• Passwords must be from 1 to 32 one-byte alphanumeric characters.</li> <li>• The user password must differ from the master password.</li> </ul> <p><b>Note</b></p> <p>These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the <i>MFP Management Guide</i>. Ask the administrator for resetting these passwords.</p>	
3	Destination — Use local folder	Select this to save a received document to the “FILE_SHARE” folder.

	Item name	Description
4	Destination — Remote 1	<p>Select this check box to save a received document to Remote 1. How you can set this item depends on how you have set Remote 1 up in the [Save as file] submenu under the [Setup] menu.</p> <p>If you have selected [Allow the following network folder to be used as a destination], you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item.</p> <p>If you have selected [Allow user to select network folder to be used as a destination], select [Use User Setting] and enter the following items to configure the destination to save files.</p> <p><b>Protocol</b></p> <p>Select the protocol to be used for uploading a received document to the network folder.</p> <ul style="list-style-type: none"> <li>• <b>SMB</b> — Select this to send a received document to the network folder using the SMB protocol.</li> <li>• <b>FTP</b> — Select this to send a received document to the FTP server.</li> <li>• <b>FTPS</b> — Select this to send a scanned file to the FTP server using FTP over SSL/TLS.</li> <li>• <b>NetWare IPX/SPX</b> — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.</li> <li>• <b>NetWare TCP/IP</b> — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.</li> </ul> <p><b>Server Name</b></p> <p>When you select [FTP] as the protocol, enter the FTP server name or IP address to which a received document will be sent. For example, to send a received document to the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “192.168.1.1” in this box.</p> <p>When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available).</p> <p>When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server.</p> <p><b>Port Number(Command)</b></p> <p>Enter the port number to be used for controls if you select [FTP] as the protocol. Generally “-” is entered for the control port. When “-” is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number.</p> <p><b>Network Path</b></p> <p>When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the “users/scanned” folder in the computer named “Client01”, enter “\\Client01\users\scanned”.</p> <p>When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the “ftp://192.168.1.1/user/scanned” FTP folder in the FTP server, enter “user/scanned”.</p> <p>When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the “sys\scan” folder in the NetWare file server, enter “\sys\scan”.</p> <p><b>Login User Name</b></p> <p>Enter the login user name to access an SMB server, an FTP server, or a NetWare server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumeric characters and symbols other than &lt;, &gt;, “ (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.</p>

	Item name	Description
4	Destination — Remote 1	<p><b>Password</b> Enter the password to access an SMB server, an FTP server, or a NetWare server, if required.</p> <p><b>Retype Password</b> Enter the same password again for a confirmation.</p> <p><b>[Execute] button</b> Tests the connection using the specified network settings to check if the communications can be established.</p>
5	Destination — Remote 2	<p>Select this check box to save a received document to Remote 2. How you can set this item depends on how the 2nd Folder has been set up in the [Save as file] submenu in the [Setup] menu. If Remote 2 does not allow you to specify a network folder, you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. If the Remote 2 allows you to specify a network folder, you can specify the network folder settings. See the description of the Remote 1 option for each item.</p>
6	File Name	<p><b>Format</b> Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format.</p> <ul style="list-style-type: none"> <li>• <b>[FileName]-[Date]-[Page]</b></li> <li>• <b>[FileName]-[Page]-[Date]</b></li> <li>• <b>[Date]-[FileName]-[Page]</b></li> <li>• <b>[Date]-[Page]-[Filename]</b></li> <li>• <b>[Page]-[FileName]-[Date]</b></li> <li>• <b>[Page]-[Date]-[FileName]</b></li> <li>• <b>[FileName]_[Date]-[Page]</b></li> </ul> <p><b>Comment</b> Enter the comment on the file.</p> <p><b>Date</b> Select how you add “date and time” of the file name selected in [Format].</p> <ul style="list-style-type: none"> <li>• <b>[YYYY][MM][DD][HH][mm][SS]</b> — Year (4 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YY][MM][DD][HH][mm][SS]</b> — Year (2 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD]</b> — Year (4 digits), month, and day are added.</li> <li>• <b>[YY][MM][DD]</b> — Year (2 digits), month, and day are added.</li> <li>• <b>[HH][mm][SS]</b> — Hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD][HH][mm][SS][mm0]</b> — Year (4 digits), month, day, hour, minute, second and random number (2 digits and “0”) are added.</li> <li>• <b>[None]</b> — Date is not added.</li> </ul> <p><b>Page</b> Select the number of digits of a page number applied to “Page” of the file name selected in [Format] from 3 to 6. [4digits] is set as the default.</p> <p><b>Sub ID</b> This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [Auto]. [Auto] is selected by default. If [Auto] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.</p> <p><b>Add line information to File Name</b> Select this check box to add the incoming line information (Line 1, Line 2, and Internet Fax) to the file name. The “Add line information to File Name” check box is [ON] as the default.</p>

**Note**

Up to 999 files that are sent from the same sender can be stored in the same destination. If 999 files that are sent from the same sender have already been stored in the specified destination, this equipment will print the received document from the same sender instead of storing them as files.

**❑ Setting up Email Setting (Fax/InternetFAX Received Forward)**

In the Email Setting page, you can specify the content of the E-mail document to be sent. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

The screenshot shows the 'Email Setting' configuration page. It includes a 'Save' and 'Cancel' button at the top left. Below the title, there are two radio buttons: one selected for 'Scanned from (Device Name)((Template Name))(Date)(Time)' and one for '(Date)'. The page is divided into several sections:

- 1 Subject:** A text input field with a dropdown menu showing 'Scanned from (Device Name)((Template Name))(Date)(Time)' and '(Date)'.
- 2 From Address:** A text input field.
- 3 From Name:** A text input field.
- 4 Body:** A large text area for entering the email body.
- 5 File Format:** A dropdown menu set to 'PDF(Multi)' and an 'Enable OCR' checkbox.
- 6 Encryption:** An 'Encryption' checkbox, followed by 'User Password' and 'Master Password' fields with 'Retype Password' fields. It also includes an 'Encryption Level' dropdown set to '128-bit AES' and a list of checkboxes for 'Printing', 'Change of Documents', 'Content Copying or Extraction', and 'Content Extraction for accessibility'.
- 7 File Name:** A 'Format' dropdown set to '[FileName]-[Date]-[Page]', a 'Comment' text field, a 'Date' dropdown set to 'None', a 'Page' dropdown set to '4digits', and a 'Sub ID' dropdown set to 'Auto'. There is also a checked checkbox for 'Add line information to File Name'.
- 8 Fragment Message Size:** A dropdown menu set to 'No Fragmentation'.

	Item name	Description
1	Subject	This sets the subject of the E-mail documents. Select [Scanned from (Device Name) [(Template Name)](Date)(Time)] to automatically apply the subject, or enter the desired subject in the box. If you manually enter the subject, the subject will be “(Subject) (Date)” by automatically adding the date.
2	From Address	Enter the E-mail address of the sender. When the recipient replies, the message will be sent to this E-mail address.
3	From Name	Enter the sender name of the E-mail document.
4	Body	Enter the body message of the E-mail document. You can enter up to 1000 characters (including spaces).

	Item name	Description
5	File Format	<p>Select the file format to which the received document will be converted.</p> <ul style="list-style-type: none"> <li>• <b>TIFF (Multi)</b> — Select this to save scanned images as a Multi-page TIFF file.</li> <li>• <b>TIFF (Single)</b> — Select this to save scanned images separately as Single-page TIFF files.</li> <li>• <b>PDF (Multi)</b> — Select this to save scanned images as a Multi-page PDF file.</li> <li>• <b>PDF (Single)</b> — Select this to save scanned images separately as Single-page PDF files.</li> <li>• <b>XPS (Multi)</b> — Select this to save scanned images as a Multi-page XPS file.</li> <li>• <b>XPS (Single)</b> — Select this to save scanned images separately as Single-page XPS files.</li> </ul> <p><b>Comment</b> Enter the comment on the file.</p> <p><b>Date</b> Select how you add “date and time” of the file name selected in [Format].</p> <ul style="list-style-type: none"> <li>• <b>[YYYY][MM][DD][HH][mm][SS]</b> — Year (4 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YY][MM][DD][HH][mm][SS]</b> — Year (2 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD]</b> — Year (4 digits), month, and day are added.</li> <li>• <b>[YY][MM][DD]</b> — Year (2 digits), month, and day are added.</li> <li>• <b>[HH][mm][SS]</b> — Hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD][HH][mm][SS][mm0]</b> — Year (4 digits), month, day, hour, minute, second and random number (2 digits and “0”) are added.</li> <li>• <b>[None]</b> — Date is not added.</li> </ul> <p><b>Page</b> Select the number of digits of a page number applied to “Page” of the file name selected in [Format] from 3 to 6. [4digits] is set as the default.</p> <p><b>Sub ID</b> This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [Auto]. [Auto] is selected by default. If [Auto] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.</p> <p>You can select whether to enable OCR by [Enable OCR].</p>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the <b>MFP Management Guide</b>.</li> <li>• Files saved in an XPS format can be used in Windows 7 Service Pack 1 or later versions with Net Framework 3.0 installed.</li> <li>• OCR processing is available only when the OCR Enabler is installed.</li> </ul>	

	Item name	Description
6	Encryption	<p>Set this to encrypt PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.</p> <p><b>Encryption</b> Select this if you want to encrypt PDF files.</p> <p><b>User Password</b> Enter a password for opening encrypted PDF files.</p> <p><b>Master Password</b> Enter a password for changing the Encrypt PDF setting.</p> <p><b>Encryption Level</b> Select the desired encryption level.</p> <ul style="list-style-type: none"> <li>• <b>40-bit RC4</b> — Select this to set an encryption level to one compatible with Acrobat 3.0, PDF V1.1.</li> <li>• <b>128-bit RC4</b> — Select this to set an encryption level to one compatible with Acrobat 5.0, PDF V1.4.</li> <li>• <b>128-bit AES</b> — Select this to set an encryption level to one compatible with Acrobat 7.0, PDF V1.6.</li> </ul> <p><b>Authority</b> Select the desired types of authority for Encrypt PDF.</p> <ul style="list-style-type: none"> <li>• <b>Printing</b> — Select this to authorize users to print documents.</li> <li>• <b>Change of Documents</b> — Select this to authorize users to change documents.</li> <li>• <b>Content Copying or Extraction</b> — Select this to authorize users to copy and extract the contents of documents.</li> <li>• <b>Content Extraction for accessibility</b> — Select this to enable the accessibility feature.</li> </ul>
<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the <i>MFP Management Guide</i>.</li> <li>• The user password and the master password are not set at the factory shipment.</li> <li>• Passwords must be from 1 to 32 one-byte alphanumerical characters.</li> <li>• The user password must differ from the master password.</li> </ul> <p><b>Note</b></p> <p>These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the <i>MFP Management Guide</i>. Ask the administrator for resetting these passwords.</p>		



	Item name	Description
7	File Name	<p><b>Format</b> Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format.</p> <ul style="list-style-type: none"> <li>• <b>[FileName]-[Date]-[Page]</b></li> <li>• <b>[FileName]-[Page]-[Date]</b></li> <li>• <b>[Date]-[FileName]-[Page]</b></li> <li>• <b>[Date]-[Page]-[Filename]</b></li> <li>• <b>[Page]-[FileName]-[Date]</b></li> <li>• <b>[Page]-[Date]-[FileName]</b></li> <li>• <b>[FileName]_[Date]-[Page]</b></li> </ul> <p><b>Comment</b> Enter the comment on the file.</p> <p><b>Date</b> Select how you add “date and time” of the file name selected in [Format].</p> <ul style="list-style-type: none"> <li>• <b>[YYYY][MM][DD][HH][mm][SS]</b> — Year (4 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YY][MM][DD][HH][mm][SS]</b> — Year (2 digits), month, day, hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD]</b> — Year (4 digits), month, and day are added.</li> <li>• <b>[YY][MM][DD]</b> — Year (2 digits), month, and day are added.</li> <li>• <b>[HH][mm][SS]</b> — Hour, minute and second are added.</li> <li>• <b>[YYYY][MM][DD][HH][mm][SS][mm0]</b> — Year (4 digits), month, day, hour, minute, second and random number (2 digits and “0”) are added.</li> <li>• <b>[None]</b> — Date is not added.</li> </ul> <p><b>Page</b> Select the number of digits of a page number applied to “Page” of the file name selected in [Format] from 3 to 6. [4digits] is set as the default.</p> <p><b>Sub ID</b> This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [Auto]. [Auto] is selected by default. If [Auto] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.</p>
8	Fragment Message Size	Select the size of the message fragmentation.

## ❑ Setting up Box Setting (Fax/InternetFAX Received Forward)

In the Box Setting page, you can specify how a received document will be stored in the Box. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

The screenshot shows the 'Box Setting' dialog box with the following fields and labels:

- 1** Destination (blue background)
- 2** Folder Name
- 3** Document Name (with hint: (Sender)-NNN (NNN is a sequential number))

Other fields include: Box Number (dropdown menu), Password, and Retype Password.

	Item name	Description
1	Destination	Specify the destination box number for e-Filing. <b>Box Number</b> Enter the Box number where a received document will be stored. <b>Password</b> Enter the password if the specified Box number requires a password. <b>Retype Password</b> Enter the same password again for a confirmation.
2	Folder Name	Enter the name of the folder where a received document will be stored.
3	Document Name	Display how the received document will be named. You cannot change the document name.

## ■ Meta Scan

You can set meta data which is attached to images scanned with the Meta Scan function.

You can register up to 100 extended field definitions.

- 📖 P.391 “[Extended Fields] screen”
- 📖 P.391 “Setting up Definition Information”
- 📖 P.391 “Setting up Extended Field settings”
- 📖 P.392 “[Extended Fields Properties] screen”
- 📖 P.394 “Definition Properties”

### Tip

The [Extended Field Definition] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

- 📖 P.15 “Access Policy Mode”
- 📖 P.369 “[Registration] ([Administration] tab) Item List”

### Note

The Meta Scan Enabler is required to use the Meta Scan function. For the details, contact your distributor or service technician.

No.	Name
001	test 01
002	test02
003	Undefined
004	Undefined
005	Undefined
006	Undefined
007	Undefined
008	Undefined
009	Undefined
010	Undefined
011	Undefined
012	Undefined
013	Undefined
014	Undefined
015	Undefined
016	Undefined
017	Undefined
018	Undefined
019	Undefined
020	Undefined

	Item name	Description
1	No.	Displays the extended field definition number.


	Item name	Description
2	Name	Displays the extended field definition name. Click a registered name to check and edit the existing extended field definition. P.391 “[Extended Fields] screen” Click [Undefined] to register a new extended field definition. P.394 “Definition Properties”

## [Extended Fields] screen

You can set the information entered from the touch panel when using meta scan.


P.423 “Registering Extended Field Definition”

## Setting up Definition Information

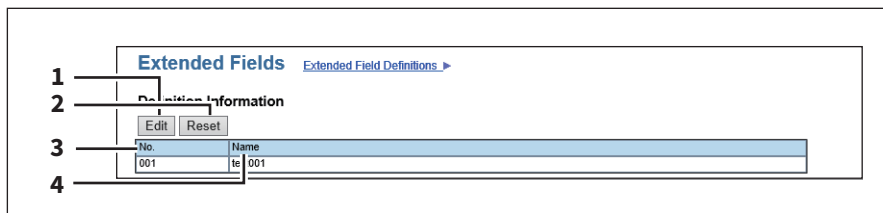

	Item name	Description
1	[Edit] button	Allows you to edit the extended field definition. P.394 “Definition Properties”
2	[Reset] button	Allows you to delete the extended field definition.
3	No.	Displays the extended field definition number.
4	Name	Displays the extended field definition name.

## Setting up Extended Field settings

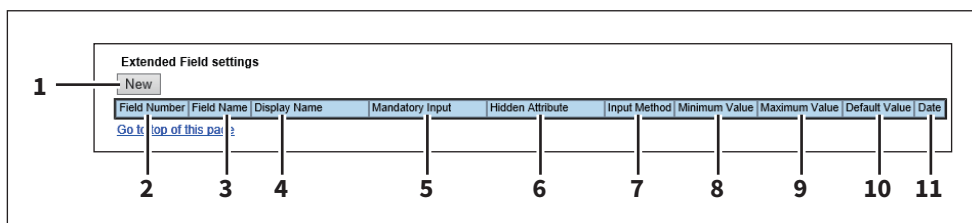

	Item name	Description
1	[New] button	Allows you to add a extended field property. P.392 “[Extended Fields Properties] screen”
2	Field Number	Displays the extended field property number.
3	Field Name	Displays the extended field property name.
4	Display Name	Displays the caption of the extended field property for the display on the touch panel.
5	Mandatory Input	Displays whether the extended field property is a mandatory entry or not.
6	Hidden Attribute	Displays whether the extended field property is a hidden item on the touch panel.

	Item name	Description
7	Input Method	Displays the type of the extended field property.
8	Minimum Value	Displays the minimum value for the extended field property.
9	Maximum Value	Displays the maximum value for the extended field property.
10	Default Value	Displays the default value for the extended field property.
11	Date	Displays the default date for the extended field property.

## ❑ [Extended Fields Properties] screen

You can register up to 25 extended field properties.

📖 P.427 “Registering templates for Meta Scan”

The screenshot shows the 'Extended Field Properties' screen with the following elements and callouts:

- 1**: Save and Cancel buttons.
- 2**: Field Name input field.
- 3**: Display section containing Name input, Mandatory Input checkbox, and Hidden Attribute checkbox.
- 4**: Input Method section with radio buttons for Numerical, Decimal, Text, List, Address, Password, and Date.
- 5**: List Items section containing Move Up, Move Down, and Delete buttons.
- 6**: Add button for the List Items section.
- 7**: Minimum Length input field.
- 8**: Maximum Length input field.
- 9**: \*Minimum Value input field.
- 10**: \*Maximum Value input field.
- 11**: Default Value input field with a Delete button.
- 12**: Password input field.
- 13**: Date input field with Year, Month, and Date sub-inputs.

\*Required

	Item name	Description
1	[Save] button	Creates an extended field property with the entered data.
2	[Cancel] button	Cancels the settings.
3	Field Name	Specify the extended field name.
4	Display	Specify how to display the extended field on the touch panel. <b>Name</b> Enter the caption of the extended field name for the display on the touch panel. You can enter up to 256 characters. Enter the Box number where a received document will be stored. <b>Mandatory Input</b> Select this check box if the extended field is a mandatory entry item. <b>Hidden Attribute</b> Select this check box if the extended field is a hidden item on the touch panel.

	Item name	Description
5	Input Method *	Select the type of an extended field. <ul style="list-style-type: none"> <li>• <b>Numerical</b> — Select this to create an extended field as an integer value.</li> <li>• <b>Decimal</b> — Select this to create an extended field as a decimal value.</li> <li>• <b>Text</b> — Select this to create an extended field as a character string.</li> <li>• <b>List</b> — Select this to create an extended field as a list selection.</li> <li>• <b>Address</b> — Select this to create an extended field as an address.</li> <li>• <b>Password</b> — Select this to create an extended field as a password.</li> <li>• <b>Date</b> — Select this to create an extended field as a date.</li> </ul>
6	List Items	Specify list items to be selected for the extended field. The registered list items are listed in the List items. When you register a list item, enter [Name] and [Value], and then click [Add]. If you select an item and click [Move Up], the selected item moves up in the list. Click [Move Down] to move it down. Select an item and click [Delete] to delete an unnecessary item from the list. <p><b>Name</b> Enter the name of the item.</p> <p><b>Value</b> Enter a value or text to be applied for the selected item.</p>
	Note	<ul style="list-style-type: none"> <li>• You cannot exceed the total number of characters displayable in the List Items (127).</li> <li>• You cannot use a semicolon in [Name] or [Value].</li> </ul>
7	Minimum Length	Specify the minimum number of characters that can be entered in the extended field if the field is a character string.
8	Maximum Length	Specify the maximum number of characters that can be entered in the extended field if the field is a character string.
9	Minimum Value	Specify the minimum numerical value that can be entered in the extended field if the field is a numerical value.
10	Maximum Value	Specify the maximum numerical value that can be entered in the extended field if the field is a numerical value.
11	Default Value	Specify the default value for the extended field.
12	Password	Specify the default password for the extended field if the field is a password.
13	Date	Specify the default date for the extended field if the field is a date.

\* The following shows the types and settable items of an extended field for each [Input Method]. (\*) is displayed for mandatory setting items.


Input method (Extended field type)	Mandatory setting items	Optional setting items
Numerical value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999 to 999,999,999,999	[Default Value]
Decimal value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999.999999 to 999,999,999,999.999999 Contact your service technician if you want to input a value with more than two decimal places.	[Default Value]
Text	[Maximum Length], [Minimum Length] Settable value: 0 to 256	[Default Value]

Input method (Extended field type)	Mandatory setting items	Optional setting items
List	[List Items] You can register up to 30 [List Items].  You can set from 1 to 126 characters in [Name]. You can set from 1 to 126 characters in [Value]. However, the total number of characters set in [Name] and [Value] must be from 2 to 127.	[Default Value] Select from the registered selection items.
Address	None	[Default Value]
Password	None Settable value: 0 to 256	[Default Value]
Date	None	[Default Value]

## □ Definition Properties




	Item name	Description
1	[Save] button	Creates an extended field definition with the entered data.
2	[Cancel] button	Cancels adding new.
3	Number	Displays the extended field definition number.
4	Name	Specify the extended field definition name.
5	XML Format File	Select the XML format file for meta data.

You can register relay transmissions of received faxes/Internet Faxes in the [Registration] menu in the TopAccess access policy mode.

- Fax Received Forward, Internet Fax Received Forward  
An administrator can register an agent which forwards all received faxes/Internet Faxes to a specified destination. This enables the administrator to check all faxes received by this equipment.  
 P.395 “Registering Fax and Internet Fax received forward”



### Note

The Fax Received Forward can be registered only when the Fax Unit is installed.


- Extended Field Definition  
 P.390 “Meta Scan”
- XML format file  
 P.419 “Editing XML format file”  
 P.423 “Registering XML format file”

## ■ Registering Fax and Internet Fax received forward

You can forward received faxes and Internet Faxes to a specified address using fax received forward and Internet Fax received forward functions. You can check all faxes and Internet Faxes received by this equipment using these functions.

-  P.395 “Registering the Fax or Internet Fax received forward”
-  P.398 “Setting up Destination Setting (Fax/Internet Fax Received Forward)”

### Note

- You can also forward using the F-code communications function on this equipment when communicating with a fax which supports the F-code communications function. You need to create a mailbox in advance. Also, you can use the TSI (sender information) forwarding function by making the counterpart fax number as a box number and forwarding documents in the box (mailbox) to a specified saving location.  
 P.115 “Managing mailboxes”
- The Fax Received Forward can be registered only when the Fax Unit is installed.
- When the 2nd line board is installed, the received faxes are forwarded to the specified destinations according to the Fax Received Forward setting regardless of whether the faxes are received through line 1 or line 2.

The received fax and Internet Faxes can be transmitted to the following destinations:


- Other Internet Fax devices
- Local folder in this equipment or network folders
- E-mail addresses
- Box in this equipment

## □ Registering the Fax or Internet Fax received forward

### Tip


The procedures to register the Fax Received Forward and Internet Fax Received Forward are almost the same. This section describes how to register in both cases.

### 1 Start TopAccess access policy mode.

 P.15 “Access Policy Mode”


### 2 Click the [Administration] tab.

**3 Click the [Registration] menu. Click the [Fax Received Forward] submenu to register the Fax Received forward, or click the [InternetFAX Received Forward] submenu to register the Internet Fax Received forward.**

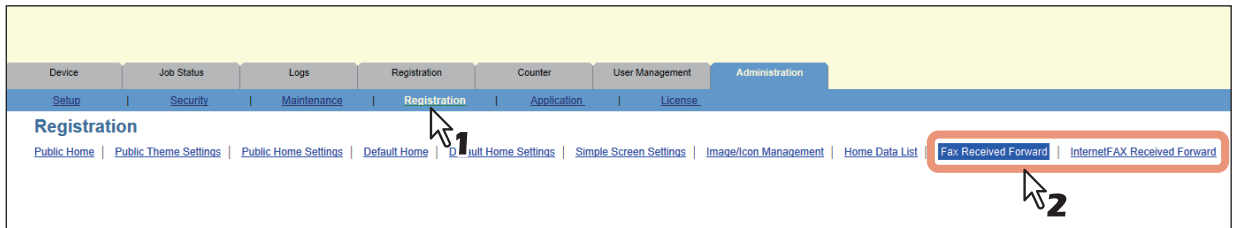

- When you click the [Fax Received Forward] submenu, the Fax Received Forward submenu page is displayed.
- When you click the [InternetFax Received Forward] submenu, the Internet Fax Received Forward submenu page is displayed.

**4 Select the desired agents.**

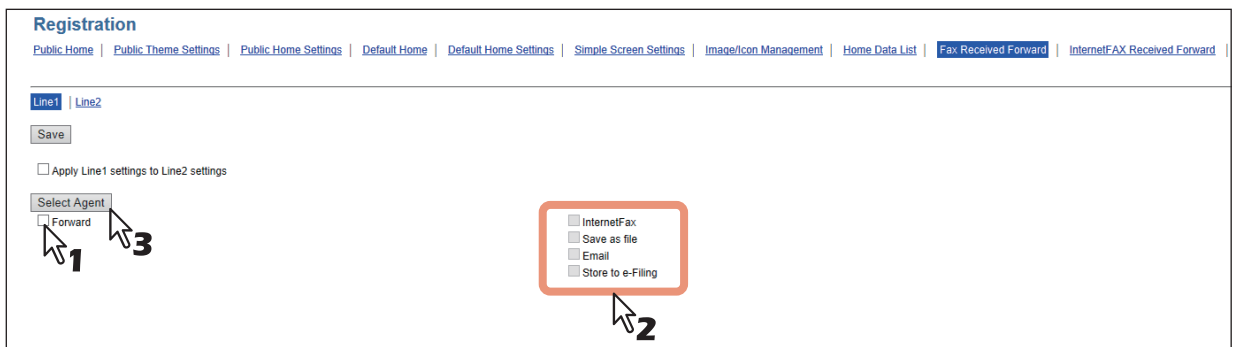

<b>InternetFax</b>	Forwards received faxes or received Internet Faxes to another Internet Fax device. This agent can be combined with the Save as file agent or Store to e-Filing agent.
<b>Save as file</b>	Forwards received faxes or received Internet Faxes to a shared folder on the equipment or a network folder. This agent can be combined with another agent.
<b>Email</b>	Forwards received faxes to an E-mail address. This agent can be combined with the Save as file agent or Store to e-Filing one.
<b>Store to e-Filing</b>	Forwards received faxes to e-Filing on the equipment. This agent can be combined with another one.

**Note**

The image quality of the file that is stored by Save as file, E-mail, and Store to e-Filing is different from the output of the received fax when it is printed.



## 5 Select whether or not to print the forwarded documents in the [Document Print] box.

The screenshot shows the 'Registration' configuration page. At the top, there are navigation links: Public Home, Public Theme Settings, Public Home Settings, Default Home, Default Home Settings, Simple Screen Settings, Image/icon Management, Home Data List, Fax Received Forward, and InternetFAX Received Forward. Below these, there are tabs for 'Line1' and 'Line2'. A 'Save' button is present. There is a checkbox for 'Apply Line1 settings to Line2 settings'. Under 'Select Agent', the 'Forward' checkbox is checked. To the right, there are checkboxes for 'InternetFax', 'Save as file', 'Email', and 'Store to e-Filing'. The 'Document Print' dropdown menu is open, showing 'Always' and 'ON ERROR' (which is highlighted with a mouse cursor). Below the dropdown is a 'Save as file Setting' section with a table:

File Format	TIFF(Mult)
Encryption	Disable
Destination	\\WF12099955\FILE_SHARE\
File Name	{Sender-L1-YYYY}MM{DD}{H}{mm}{SS}{Page}-{Sub ID}

<b>Always</b>	Select this always to print forwarded documents.
<b>ON ERROR</b>	Select this to print the received document when an error has occurred on all forwarding destinations. (For example, the document is not printed when E-mail transmission only failed in a combined setting of save as file and E-mail.)

## 6 Click each button displayed in the page to specify or edit the associated properties.

<b>[Destination Setting]</b> <b>[TO: Destination Setting]</b> <b>[CC: Destination Setting]</b> <b>[BCC: Destination Setting]</b>	Specify the destination. This can be set only when registering the Internet Fax, or Email agent. 📖 P.398 “Setting up Destination Setting (Fax/Internet Fax Received Forward)”
<b>[InternetFax Setting]</b>	Specify how the Internet Fax is transmitted. This can be set only when registering the Internet Fax agent. 📖 P.380 “Setting up InternetFax Setting (Fax/Internet Fax Received Forward)”
<b>[Email Setting]</b>	Specify how the documents are transmitted as E-mail messages. This can be set only when registering the Email agent. 📖 P.386 “Setting up Email Setting (Fax/InternetFAX Received Forward)”
<b>[Save as file Setting]</b>	Specify how the documents are saved in a shared folder on this equipment or a network folder. This can be set only when registering the Received to File agent. 📖 P.381 “Setting up Save as file Setting (Fax/InternetFAX Received Forward)”
<b>[Box Setting]</b>	Specify how the documents are saved in e-Filing. This can be set only when registering the Store to e-Filing agent. 📖 P.389 “Setting up Box Setting (Fax/InternetFAX Received Forward)”

## 7 After configuring the desired properties, click [Save].

The Fax or Internet Fax Received Forward properties are registered.

## ❑ Setting up Destination Setting (Fax/Internet Fax Received Forward)

In the Recipient List page, you can specify the destinations to which the received faxes or Internet Faxes will be transmitted. You can only specify an E-mail address as the destination.

You can specify the destinations by entering E-mail addresses manually, selecting destinations from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP server.

📖 P.398 “Entering the destinations manually”

📖 P.398 “Selecting the destinations from the address book”

📖 P.399 “Selecting the groups from the address book”


📖 P.400 “Searching for destinations in the LDAP server”

📖 P.401 “Removing the destinations from the Recipient List”

### Entering the destinations manually

Using this method, you can add a destination manually to the Recipient List.


- 1 Click [Destination Setting] to open the Recipient List page.
- 2 Click [New].

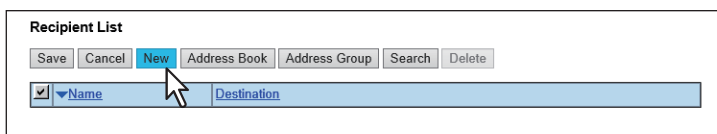

<input checked="" type="checkbox"/>	Name	Destination
-------------------------------------	------	-------------

The Contact Property page is displayed.

- 3 Enter the E-mail address of the destination, in the [Destination] box.

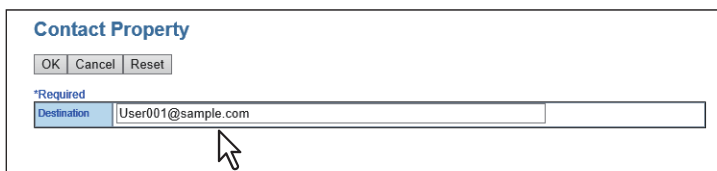

OK Cancel Reset

\*Required

Destination User001@sample.com


- 4 Click [OK].  
Entered destination is added to the Recipient List page.
- 5 Repeat step 2 to 4 to add all destinations you require.

#### Tip

You can remove destinations that you have added to the Recipient List before saving the destination settings.

📖 P.401 “Removing the destinations from the Recipient List”

- 6 Click [Save].

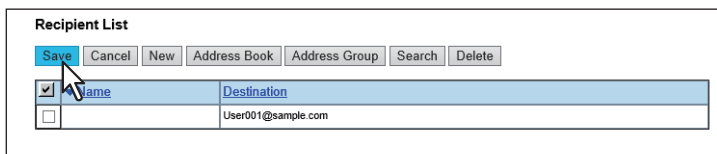

<input checked="" type="checkbox"/>	Name	Destination
<input type="checkbox"/>		User001@sample.com

The contacts are added as destinations.

### Selecting the destinations from the address book

By this method, you can select destinations from the address book.

- 1 Click [Destination Setting] to open the Recipient List page.

## 2 Click [Address Book].

The screenshot shows the 'Recipient List' interface. At the top, there are buttons for 'Save', 'Cancel', 'New', 'Address Book', 'Address Group', 'Search', and 'Delete'. The 'Address Book' button is highlighted with a mouse cursor. Below the buttons is a table with a header row containing a checkmark, 'Name', and 'Destination'.

The Address Book page is displayed.

## 3 Select the [Email] check boxes of users you want to add as the destinations.

The screenshot shows the 'Address Book' page. At the top, there are buttons for 'Address Book' and 'Favorite Address Book'. Below them is a 'Group' dropdown menu set to 'All Groups' and 'Add' and 'Cancel' buttons. A table with columns 'Email', 'Name', 'Email Address', and 'Favorite' is displayed. The 'Email' column contains check boxes for each row. The first five rows have their check boxes checked, and a red box highlights this column. A mouse cursor is pointing at the check box for the second row. Navigation links '<< Previous Page < 1 > Next Page >>' are visible above the table.

### Tip

If you want to sort the Recipient List by a specific group, select the desired group name in the [Group] box.

## 4 Click [Add].

The selected destinations are added to the Recipient List page.

### Tip

You can remove destinations that you have added to the Recipient List before saving the destination settings.

P.401 “Removing the destinations from the Recipient List”

## 5 Click [Save].

The screenshot shows the 'Recipient List' page. At the top, there are buttons for 'Save', 'Cancel', 'New', 'Address Book', 'Address Group', 'Search', and 'Delete'. The 'Save' button is highlighted with a mouse cursor. Below the buttons is a table with a header row containing a checkmark, 'Name', and 'Destination'. The table contains five rows of user information.

The contacts are added as destinations.

### Selecting the groups from the address book

By this method, you can select groups from the address book.

## 1 Click [Destination Setting] to open the Recipient List page.

## 2 Click [Address Group].

The screenshot shows the 'Recipient List' page. At the top, there are buttons for 'Save', 'Cancel', 'New', 'Address Book', 'Address Group', 'Search', and 'Delete'. The 'Address Group' button is highlighted with a mouse cursor. Below the buttons is a table with a header row containing a checkmark, 'Name', and 'Destination'.

The Address Group page is displayed.

### 3 Select the [Group] check boxes that contain the desired destinations.

Group	Group Name	Favorite
<input checked="" type="checkbox"/>	GroupName001	
<input type="checkbox"/>	GroupName002	
<input type="checkbox"/>	GroupName003	

### 4 Click [Add].

All destinations in the selected groups are added to the Recipient List page.

#### Tip

You can remove destinations that you have added to the Recipient List before saving the destination settings.

P.401 “Removing the destinations from the Recipient List”

### 5 Click [Save].

Name	Destination
<input checked="" type="checkbox"/> GroupName001	Group

The contacts are added as destinations.

## Searching for destinations in the LDAP server

You can search for destinations in the registered LDAP server. You can also search for destinations in the address book on this equipment.

### 1 Click [Destination Setting] to open the Recipient List page.

### 2 Click [Search].

Name	Destination
<input checked="" type="checkbox"/> Name	Destination

The Search Contact page is displayed.

### 3 Select the directory service name that you want to search for in the [Directory Service Name] box, and enter the search terms in the boxes that you want to search.

Enter a partial name or Email address to search for a contact.

Directory Service Name	MFP_LOCAL
First Name	FirstName01
Last Name	
Email Address	
Fax Number	
Company	
Department	

**Note**

Enter a search string in [Email Address] or [Fax Number] to search a destination using an LDAP server. A search will not be carried out correctly if you enter a search string in other columns.

**Tip**


- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations which match the entries.
- Leaving the box blank allows wild-card searching. (However, you must specify at least one.)

**4 Click [Search].**

A search for the destination using the LDAP server starts. When the search is complete, the Search Address List page will display the results.

**5 Select the [Email] check boxes of users you want to add.**

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.

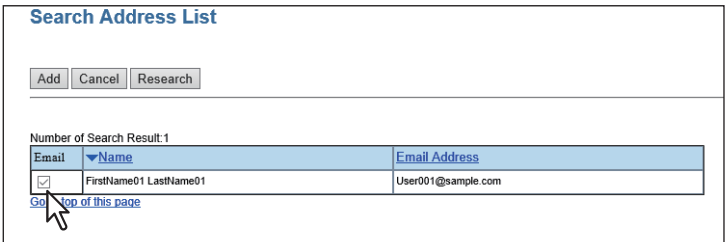

**Note**

The value of [company] and [department] will depend on the settings determined by the administrator.

**6 Click [Add].**

The selected destinations are added to the Recipient List page.

**Tip**

You can remove destinations that you have added to the Recipient List before saving the destination settings.  
 P.401 “Removing the destinations from the Recipient List”


**7 Click [Save].**



The contacts are added as destinations.

**Removing the destinations from the Recipient List**

**1 Select the check boxes of the destinations that you want to remove from the Recipient List, and click [Delete].**

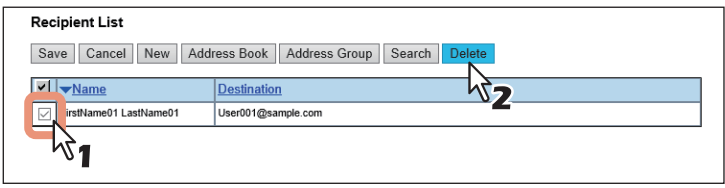

The selected destinations are removed from the Recipient List.

**2 Click [Save].**

## [Application] Item List

P.402 “Application List”

P.404 “Settings”

Users who have been granted administrator authority in access policy mode can access the [Application] menu from the [Administration] tab.


See the following for details on accessing.

P.15 “Access Policy Mode”


### ■ Application List

Displays the application list that is already installed.

You can manage operations for each application such as opening/closing, setting the startup method, and uninstalling/installing.

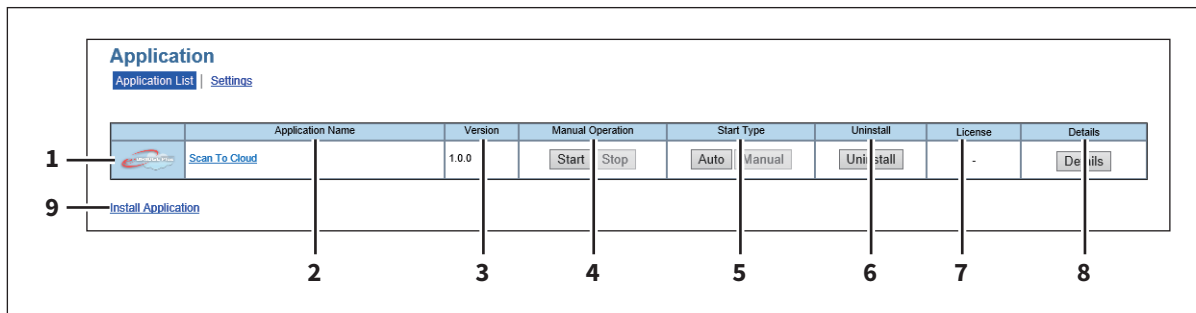

	Item name	Description
1	Application Icon	Displays the application icon.
2	Application Name	Displays the application name. Click the application name to display the application settings page.
3	Version	Displays the application version.
4	Manual Operation	Allows you to start and stop the application manually. This is displayed only when the application package includes the background application. <ul style="list-style-type: none"> <li>• <b>Start</b> — Select this to start the application.</li> <li>• <b>Stop</b> — Select this to close the application.</li> </ul>
5	Start Type	Changes the applications startup method. This is displayed only when the application package includes the background application. <ul style="list-style-type: none"> <li>• <b>Auto</b> — Select this to start the application automatically after it has been installed or the MFP starts.</li> <li>• <b>Manual</b> — Select this to start the application manually.</li> </ul>
6	Uninstall	Uninstalls the application. Click this button to display the uninstallation page for the application.
7	License	Displays the installation status of license files to utilize applications. <ul style="list-style-type: none"> <li>• - — Installation of a license file is not necessary.</li> <li>• <b>Invalid</b> — An application cannot be used since its license file is not installed. Contact your service technician if you want to use an application with an invalid license.</li> <li>• <b>Valid</b> — An application can be used since its license file is installed.</li> </ul>

	Item name	Description
8	Details	<p>Displays the Application Details screen.</p> <p>By clicking this button, Name, Version, Framework Version, Application ID, Product ID, Authentication, License, Status, Summary, Vendor Name, URL, License Agreement, ReadMe, and Language of an application are displayed. You can set the department or user authentication at the startup of each application. Click [Details] to open [Details] screen, select [Enable] at [Authentication], and click [Save], so that the authentication screen appears at the startup of the application. Select [Disable] and click [Save] not to show the authentication screen. Click [Cancel] to cancel the setting. This [Authentication] setting works at the next startup of the application. It does not appear for the background application.</p>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• To authenticate users at the application startup, enable “User Authentication According To Function”.   P.307 “Setting up User Authentication Setting”</li> <li>• You cannot change [Authentication] for applications that require the authentication and applications that do not have the authentication setting.</li> <li>• The contents of the license agreement are displayed by clicking “Display” in License Agreement.</li> <li>• “Language” is displayed when the application contains the language pack.</li> </ul>	
9	Install Application	<p>Installs the application.</p> <p>Click this link to display the installation page for the application. You can specify the file name for the distribution package on this page, and then install.</p>
	<p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• Installing or using application(s) constitutes your acceptance of the terms and conditions. If you do not accept those terms and conditions, uninstall the application(s). Terms and conditions for each application is available through application details link.</li> <li>• You need to acquire the application’s distribution package in advance.</li> <li>• When installing multiple application packages, install them one at a time.</li> </ul>	


## ■ Settings

You can perform operations such as application settings, proxy settings, and debugging levels for all of the applications that are installed.

📖 P.404 “Application Setting”

📖 P.405 “Proxy Setting”


📖 P.405 “Install Language Pack”

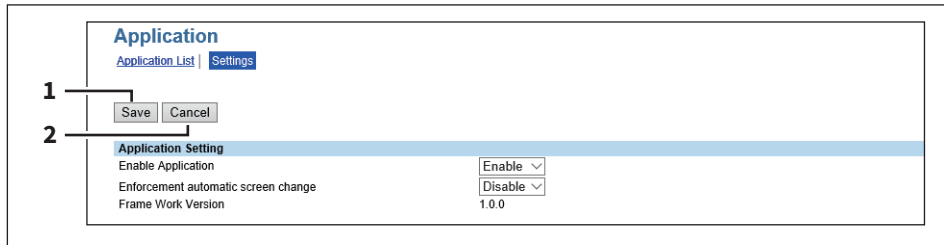

	Item name	Description
1	[Save] button	Saves changes made to the settings.
2	[Cancel] button	Cancels changes made to the settings.

## □ Application Setting

You can enable or disable application functions.

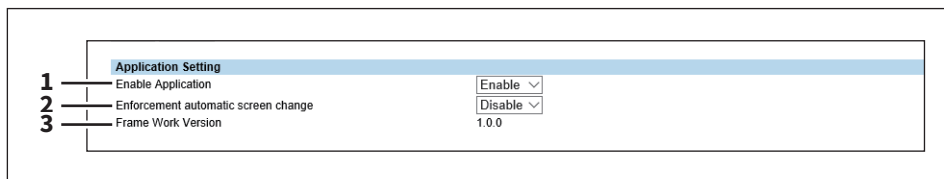

	Item name	Description
1	Enable Application	Sets the application to enable/disable. <ul style="list-style-type: none"> <li>• <b>Enable</b> — Select this to enable application.</li> <li>• <b>Disable</b> — You cannot install, uninstall, start, or make settings for the application on the [Application List] screen. Also, you cannot start the application from the MFP’s touch panel.</li> </ul>
2	Enforcement automatic screen change	When a warning occurs during the Home application, set whether or not to automatically switch to the [JOB STATUS] screen.
3	Frame Work Version	Displays the frame work version.



## Proxy Setting

You can set a proxy for the application.

1 Proxy Setting  
1 Host Name  
2 Port Number  
3 Exception URL

	Item name	Description
1	Host Name	Enter a host name for the proxy server.
2	Port Number	Enter a port number for the proxy server.
3	Exception URL	Enter URLs that proxy server is not used by dividing them using semicolons (;).

### Note

The proxy settings for Proxy Setting and the “EWB (Embedded Web Browser) function” for application functions have a mutual effect on each other, so that when one is changed the other is also changed.


## Install Language Pack


You can install the language packs for the applications.

1 Install Language Pack  
1 File Name

	Item name	Description
1	File Name	Select the language pack file that you install. <ul style="list-style-type: none"><li>• <b>[Browse] button</b> — Allows you to select the language pack file.</li><li>• <b>[Import] button</b> — Imports the selected language pack file.</li></ul>

## [License] Item List

 P.406 “License List”


 P.407 “Activate”

### Note

For details on the license and the procedures to activate and deactivate it, consult your service representative.


### Tip

Users who are granted administrator privileges in access policy mode can access the [License] menu from the [Administration] tab. See the following pages for how to access it:

 P.15 “Access Policy Mode”

## License List

You can check the list of the installed licenses.

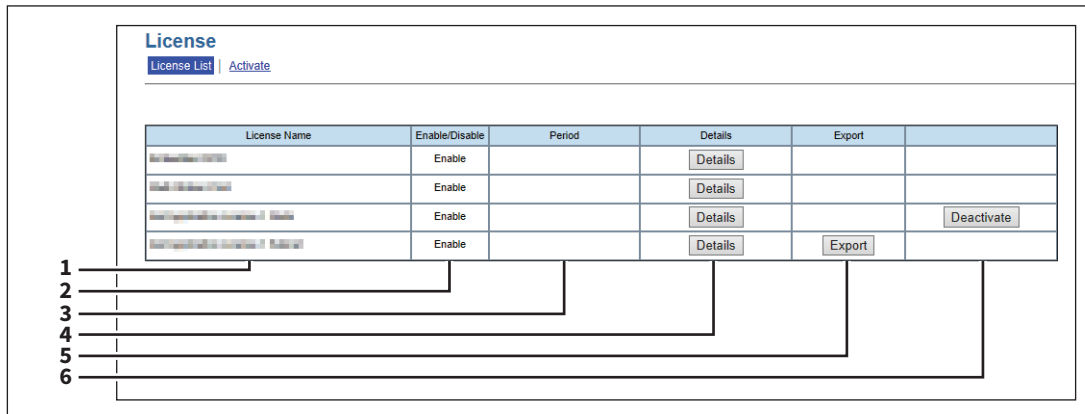

	Item name	Description
1	License Name	Displays the license name.
2	Enable/Disable	Displays the status (Enable or Disable) of the license.
3	Period	Displays the validation period of the license.
4	Details	Displays the details on the license.
5	Export	Exports the license file.
6	Deactivate	Deactivates the license.

## ■ Activate

You can activate the license with the activation key or the license file.

The screenshot shows a web interface for license activation. At the top, there's a 'License' header with two tabs: 'License List' and 'Activate'. Below this, there's a section titled 'Activation' with three numbered steps: 1. 'Activation Key' with a text input field; 2. 'License File' with a 'Browse...' button; 3. 'Import' button.

	Item name	Description
1	Activation Key	Enter the acquired activation key to activate the license.
2	License File	Click [Browse] and select the license file to activate the license.
3	Import	Imports the selected license file.



## [My Account] Tab Page

Using TopAccess, end users can display their own account information

<b>[My Account] Tab Page Overview .....</b>	<b>410</b>
[My Account] Item list .....	410

## [My Account] Tab Page Overview

The [My Account] tab is displayed if [User Authentication] is enabled in the [Administration] tab under [Security] - [Authentication] - [User Authentication Setting].

It displays the account information of the user who is accessing TopAccess. Also, you can change the display language and keyboard layout on the touch panel.

📖 P.410 “[My Account] Item list”

### ■ [My Account] Item list

📖 P.412 “[Change Password] screen”

📖 P.412 “[Home Screen setting] screen”

📖 P.413 “[View Home] screen”

📖 P.414 “[Theme Settings] screen”

📖 P.415 “[Settings] screen”

📖 P.416 “[Confirm Permission] screen”


	Full Color	Twin/ Mono Color	Black	Total
Copy	0	0	0	0
Fax	0	0	0	0
Printer	0	0	0	0
List	0	0	0	0
Total	0	0	0	0

	Item name	Description
1	[Save] button	Saves the content of the account.
2	[Sync] button	When this printer is set as the primary MFP in [Shared Setting] from [Setting up User Authentication Setting], you can synchronize the user information on the printer with other secondary MFPs. 📖 P.161 “[Shared Settings] Item list <access policy mode>” 📖 P.307 “Setting up User Authentication Setting”
3	[Cancel] button	Cancels the operation.

	Item name	Description
4	[Change Password] button	Changes the password of the user who is accessing TopAccess. 📖 P.412 “[Change Password] screen”
5	[Home Screen] button	Click the [Home] button on the control panel and perform the settings on the Home screen. In the [My Account] tab, set the Home screen of the user who is accessing TopAccess. 📖 P.412 “[Home Screen setting] screen”
6	User Name	Displays the name of the user who is accessing TopAccess.
7	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user who is accessing TopAccess.
8	Role Assignment	Displays the role assigned to the user who is accessing TopAccess. Click the [Confirm Permission] button to display the [Confirm Permission] screen and check the detailed role information. 📖 P.416 “[Confirm Permission] screen”
9	Group Assignment	Displays the group assigned to the user who is accessing TopAccess.
10	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
11	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 half-width alphanumerical characters and symbols. For example, enter “\192.168.1.1\users\name” to specify the folder called “users\name” on the computer whose server address is “192.168.1.1”.
12	Department Number	Displays the department number registered by the user who is accessing TopAccess.
13	PanelUI Language	Select the display language for the touch panel.
14	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
15	PanelUI Keyboard Layout	Select the keyboard layout on the touch panel.
16	Quota Setting	You can specify this item if you have selected “Job Quota” for “Quota Setting”. <ul style="list-style-type: none"> <li>• <b>OFF</b> — Not setting quota.</li> <li>• <b>ON</b> — Setting quota.</li> </ul> 📖 P.130 “[Quota Setting] screen <access policy mode>”
	Quota	Displays the quota amount. This value decreases according to the weight in [Quota Setting], and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to users. You can enter a value up to 99,999,999.99.
17	Total Counter	Displays the total counter of the user who is accessing TopAccess.

## ❑ [Change Password] screen

Changes the password of the user who is accessing TopAccess.

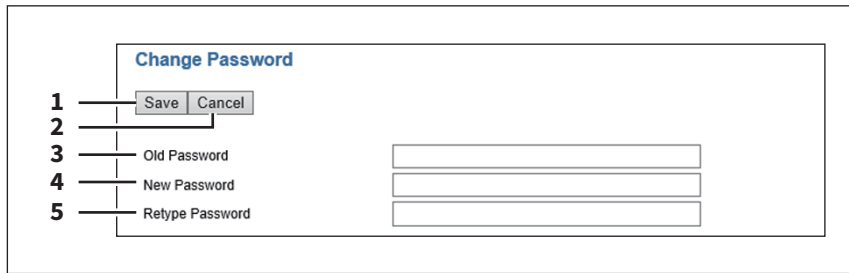


	Item name	Description
1	[Save] button	Saves the password changes.
2	[Cancel] button	Cancels the operation.
3	Old Password	Enter the current password.
4	New Password	Enter the new password.
5	Retype Password	Enter the same password again for a confirmation.

## ❑ [Home Screen setting] screen

You can set the Home screen of the user who is accessing TopAccess.

The Home screen is displayed by pressing the [Home] button on the control panel. You can register frequently used templates and template groups, and External Interface Enabler shortcuts.

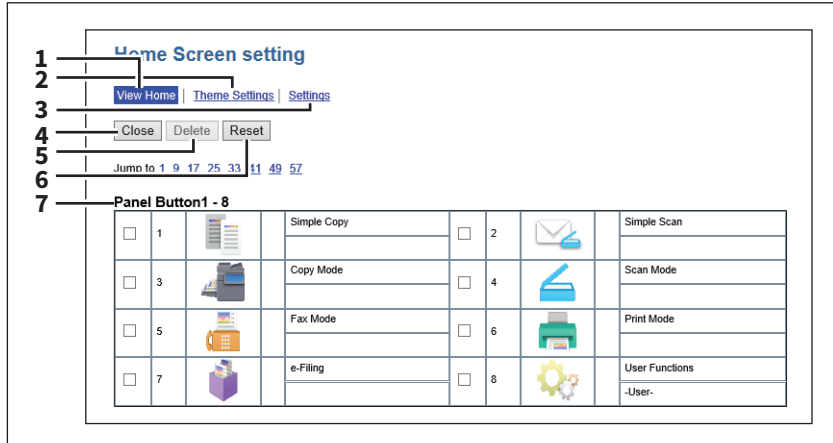


	Item name	Description
1	View Home	Displays the settings for the home screen. 📖 P.413 “[View Home] screen”
2	Theme Settings	Specify the theme of the home screen. 📖 P.414 “[Theme Settings] screen”
3	Settings	Specify the background, button size, and transparency of the home screen. 📖 P.415 “[Settings] screen”
4	[Close] button	Closes the [Menu Setting] screen.
5	[Delete] button	Deletes the selected menu settings.
6	[Reset] button	Deletes the current settings.



	Item name	Description
7	Panel button list	Displays a list of panel buttons you can select for the home. Select the panel buttons you want to use.
	<div style="background-color: #cccccc; padding: 2px;">Tip</div> In the Home settings, you can register 64 types.	


## ❑ [View Home] screen

You can edit the settings for the home screen.

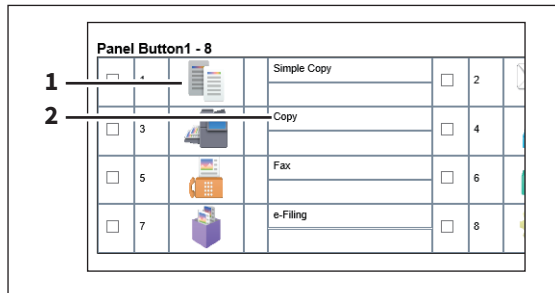


	Item name	Description
1	Button Icon	Displays button icons. You can register new buttons when you click the Undefined icon.
2	Name	Displays the function names.

## [Edit Settings] screen

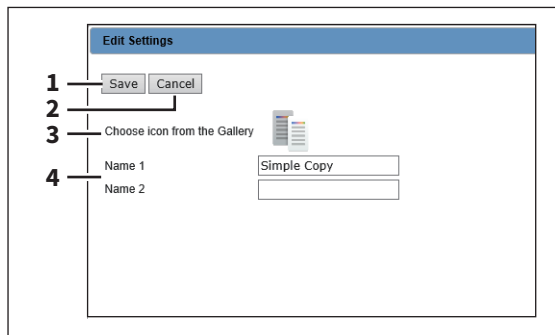

	Item name	Description
1	[Save] button	Stores the icon settings.
2	[Cancel] button	Cancels operations.
3	Choose icon from the Gallery	Select the icon for the image. 📖 P.414 “[Select Image] screen”
4	Name1/Name2	Enter the button name.


## [Select Image] screen

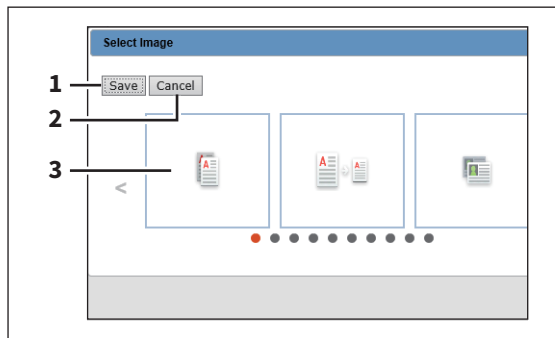

	Item name	Description
1	[Save] button	Stores the icon settings.
2	[Cancel] button	Cancels operations.
3	Select Image	Select the icon for the image.

## ☐ [Theme Settings] screen


You can specify the theme of the home screen.

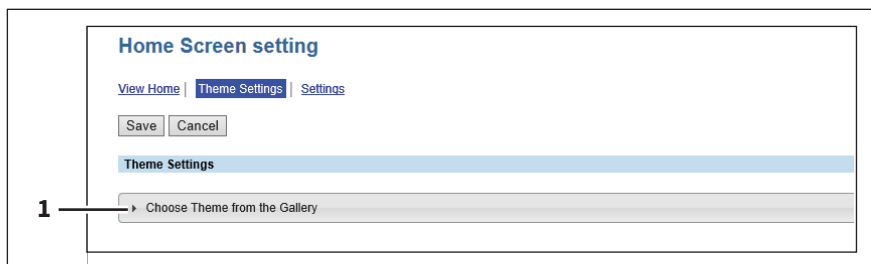

	Item name	Description
1	Choose Theme from the Gallery	Specify the theme.

## ❑ [Settings] screen


You can specify the background, button size, and transparency of the home screen.

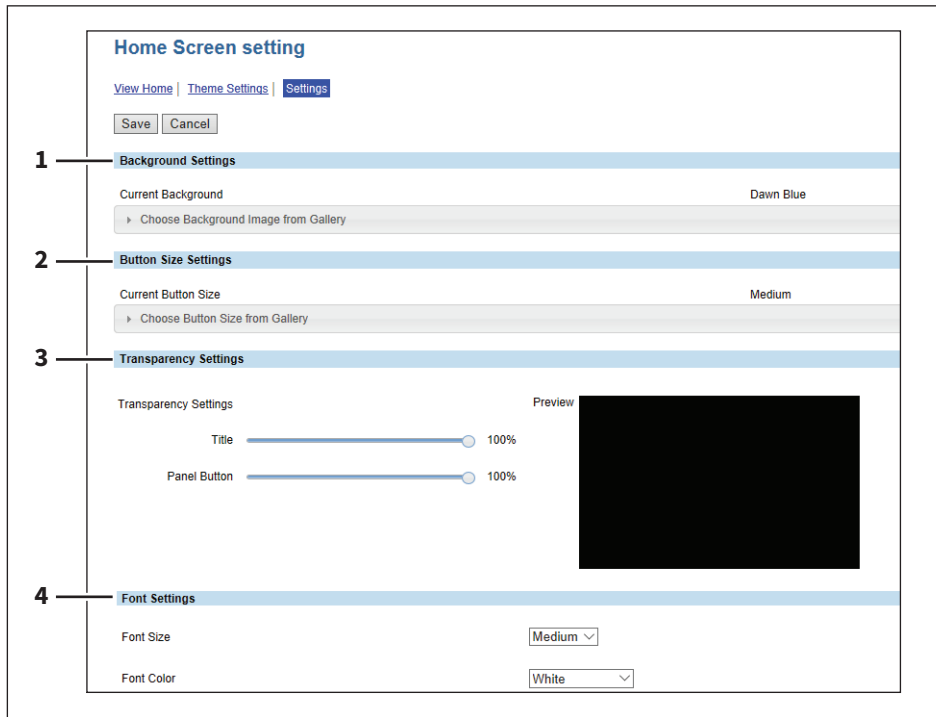

	Item name	Description
1	Background Settings	Specify the background of the home screen. You can select the background design from a list if you select [Edit Background Image from Gallery] at [Current Background].
2	Button Size Settings	Specify the button size. You can select the button size from a list if you select [Edit Button Size from Gallery] at [Current Button Size].
3	Transparency Settings	Specify the transparency of the home screen. <ul style="list-style-type: none"> <li>• <b>Title</b> — You can specify the transparency of the title bar.</li> <li>• <b>Panel Button</b> — You can specify the transparency of the buttons.</li> </ul>
4	Font Settings	Specify the font used on the home screen. <ul style="list-style-type: none"> <li>• <b>Font Size</b> — You can specify the font size.</li> <li>• <b>Font Color</b> — You can specify the font color.</li> </ul>

## ❑ [Confirm Permission] screen

You can display granted permissions of the user who is accessing TopAccess.

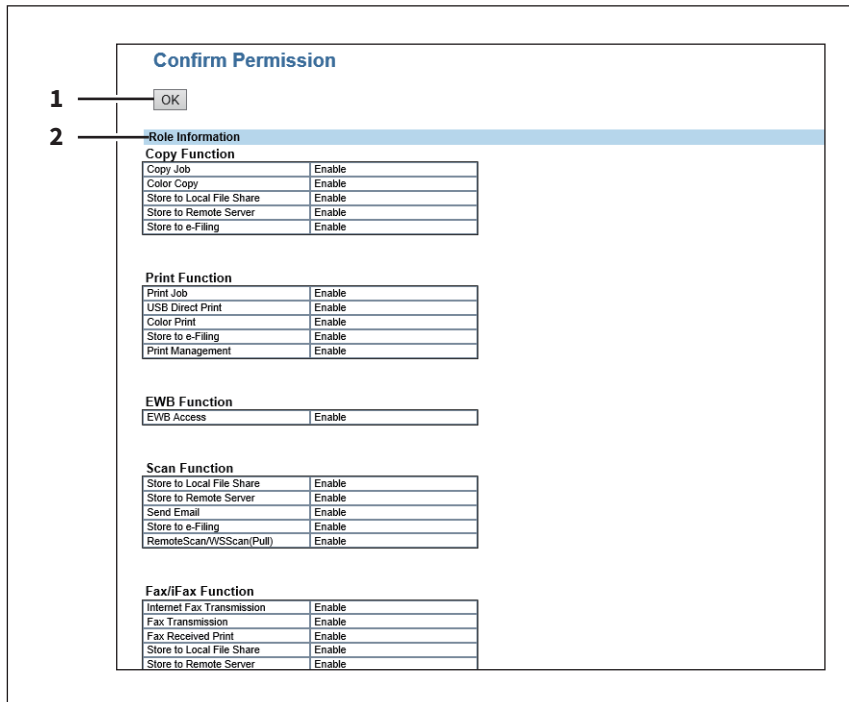

	Item name	Description
1	[OK] button	Closes the [Confirm Permission] screen.
2	Role Information	The role information assigned to the user who is accessing TopAccess is displayed.

## Functional Setups

This section contains the following contents.

<b>Setting up Meta Scan Function .....</b>	<b>418</b>
Procedure for using Meta Scan .....	418
Checking Meta Scan Enabler .....	419
Editing XML format file .....	419
Registering XML format file .....	423
Registering Extended Field Definition .....	423
Registering templates for Meta Scan .....	427
Meta Scan .....	430
Checking logs of Meta Scan .....	430
<b>Setting Multi Station Print .....</b>	<b>431</b>
Procedure for Multi Station Print .....	431
Procedure for Multi Station Print (Only in One Equipment Unit) .....	432
Checking the Multi Station Print Enabler .....	432
<b>Setting Home Data Synchronization .....</b>	<b>433</b>
Procedure for Home Data Synchronization .....	433
<b>Using the Attribute of the External Authentication as a Role of the MFP .....</b>	<b>434</b>
Exporting the role information setting file .....	434
Defining the role information setting file .....	434
Importing the role information setting file.....	435
Enabling the role base access setting.....	435
<b>Setting up Email.....</b>	<b>436</b>
Procedure for Email Setting .....	436

## Setting up Meta Scan Function

The Meta Scan is a function to attach information (meta data) generated within the device to scanned images. The attached meta data can be processed by workflow servers or other means to supplement the scanned image. To use Meta Scan, select [E-MAIL], [Save as file] and [Save to USB Media] agents of Meta Scan for templates and register them.

Meta data is managed by an XML file which defines the scheme to store the information.


This section describes the data structure using the XML file <defaultForm3.xml> registered as the default as an example.

The default XML file consists of two data areas; the “basic data area” and “extended data area”.


The “basic data area” records device information, scan parameters, and user information, while the “extended data area” records information entered by the user on the touch panel (maximum 25 items) when running Meta Scan.


The user can create fields in “extended data area” to store information entered from the touch panel under [Extended Field Definition] - [Extended Field Properties].

When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.


 P.418 “Procedure for using Meta Scan”


 P.419 “Checking Meta Scan Enabler”


 P.419 “Editing XML format file”

 P.423 “Registering XML format file”

 P.423 “Registering Extended Field Definition”






 P.427 “Registering templates for Meta Scan”

 P.430 “Meta Scan”




 P.430 “Checking logs of Meta Scan”

### ■ Procedure for using Meta Scan

#### Setup

	Operation	Description	Reference
1	Checking the Meta Scan option	Check whether the Meta Scan option can be used with your equipment.	 P.419 “Checking Meta Scan Enabler”
2	Editing the XML format file	If necessary, edit the XML format file for meta data.	 P.419 “Editing XML format file”
3	Registering an XML format file	Register an XML format file for meta data.	 P.423 “Registering XML format file”
4	Registering an extended field definition	If necessary, register an extended field definition.	 P.423 “Registering Extended Field Definition”
5	Registering a template for Meta Scan	Register a template for Meta Scan.	 P.427 “Registering templates for Meta Scan”

#### Operation

	Operation	Description	Reference
1	Meta Scan	Perform a meta scan using a template for Meta Scan.	 <b>Template Guide</b> “RECALLING TEMPLATES”
2	Checking Meta Scan logs	Check the scan log to confirm if meta data has been correctly created.	 P.430 “Checking logs of Meta Scan”  <b>Software Troubleshooting Guide</b> “CONFIRMING THE EQUIPMENT STATUS WITH THE TOUCH PANEL”

## ■ Checking Meta Scan Enabler

The Meta Scan Enabler is required to use the Meta Scan function. For the details, contact your distributor or service technician.

You can check whether the Meta Scan option is set on your equipment as follows.  
Meta Scan function is available if [Meta scan enabler] is registered under [Admin] - [General] - [License Management].

### Note

This function is available only for some models.

## ■ Editing XML format file

Edit XML format files in accordance with the applications that interact with Meta Scan. You can define variables in the XML format file and the variables are replaced with the corresponding information (meta scan) during the Meta Scan operation.

### Tip

Enter variables in XML format files using the \${variable name} format.

## □ Variables of XML format files

Variables that can be defined in XML format files are shown below.

### Tip

You can use variables for the subject of E-mail, the file name of Meta Scan image files, and the file name of meta data.

Variable (\${variable name})	Data to be stored	Value
\${MANUFACT}	Manufacturer name	TOSHIBA
\${MODEL}	Model name	string
\${FWVER}	Firmware version	string
\${SERIAL}	Serial number for machine	string
\${LOCATION}	Location set from TopAccess	string
\${CONTACT}	Contact information set from TopAccess	string
\${CONTACTTEL}	Contact telephone number set from TopAccess	string
\${IP}	IP address	string
\${IPV6}	IPv6 address	string
\${NETBIOSNAME}	NetBIOS name	string
\${FQDN}	Fully Qualified Domain Name	string
\${RESOLUTION}	Scan resolution	HHHxVVdpi
\${FILEFORMAT}	File format	MultipleTIFF singleTIFF MultiplePDF singlePDF MultipleSLIMPDF singleSLIMPDF MultipleXPS singleXPS JPEG MultiplePDF/A singlePDF/A

Variable (\${variable name})	Data to be stored	Value
\${COLORMODE}	Color mode	BLACK GRAY SCALE FULLCOLOR AUTOCOLOR
\${NUMFILE}	Number of image files	string
\${PAGES}	Number of pages	string
\${PATH} *1 *2	Save path of the image file	string
\${FILE} *2	Image file name	string
\${MYEMAIL}	Sender email address	string
\${DATE}	Scanned date	YYYY-MM-DD
\${YEAR}	Scanned year	YYYY
\${MONTH}	Scanned month	MM
\${DAY}	Scanned day	DD
\${TIME}	Scanned time	HH:MM:DD.mmmTZ D *3
\${USER}	Login user name	string
\${DOMAIN}	Login user's domain name	string
\${DEPTCODE}	Login department code	string
\${DEPTNAME}	Login department name	string
\${TEMPGROUPNO}	Template group number	string
\${TEMPGROUPNAME}	Template group name	string
\${TEMPGROUPUSER}	Template group user	string
\${TEMPNO}	Template number	string
\${TEMPNAME}	Template name	string
\${TEMPUSER}	Template user	string
\${FIELDNAME} *4	Extended field name	string
\${FIELDNAME} *4	Extended field name	string

\*1 It cannot be used for the subject of E-mail.

\*2 It cannot be used for the file name of image files or the file name of meta data.

\*3 TZD is Time zone.

\*4 A field number (from 1 to 25) comes at "n". For details, refer to the next chapter.

## ❑ Default XML file format

Contents of the default XML format file <defaultForm3.xml> registered in this equipment are shown below. XML format files must be in the UTF-8 XML format. During the Meta Scan operation, the equipment stores information corresponding to the variable in each field of the XML format file and attaches it as meta data in the XML format.

```
<?xml version="1.0" encoding="UTF-8"?>
<!-- metadata version 3.1 -->
<mfp_metadata>
<metadata_version>
  <major>3</major>
  <minor>1</minor>
</metadata_version>
<device_info>
  <ip_address>${IP}</ip_address>
```



```

<ipv6_address>${IPV6}</ipv6_address>
<fqdn>${FQDN}</fqdn>
<netbios_name>${NETBIOSNAME}</netbios_name>
<location>${LOCATION}</location>
<contact>${CONTACT}</contact>
<contact_tel>${CONTACTTEL}</contact_tel>
<FW_version>${FWVER}</FW_version>
<manufacture>${MANUFACT}</manufacture>
<model>${MODEL}</model>
<serial>${SERIAL}</serial>
<!-- deprecated tag start -->
<host_name>${NETBIOSNAME}</host_name>
<tempt_file_ver>1.0</tempt_file_ver>
<!-- deprecated tag end -->
</device_info>
<scan_info>
  <template >
    <template_group_no>${TEMPGROUPNO}</template_group_no>
    <template_group_name>${TEMPGROUPNAME}</template_group_name>
    <template_group_user>${TEMPGROUPUSER}</template_group_user>
    <template_no>${TEMPNO}</template_no>
    <template_name>${TEMPNAME}</template_name>
    <template_user>${TEMPUSER}</template_user>
  </template >
  <scanned_date>${YEAR}-${MONTH}-${DAY}</scanned_date>
  <scanned_time>${DATE}T${TIME}</scanned_time>
  <color_mode>${COLORMODE}</color_mode>
  <resolution>${RESOLUTION}</resolution>
  <file_format>${FILEFORMAT}</file_format>
  <no_of_files>${NUMFILE}</no_of_files>
  <no_of_pages>${PAGES}</no_of_pages>
  <file_path>${PATH}</file_path>
  <file_name>${FILE}</file_name>
  <sender_email>${MYEMAIL}</sender_email>
  <!-- deprecated tag start -->
  <workflow>${TEMPGROUPNAME} ${TEMPNAME}</workflow>
  <!-- deprecated tag end -->
</scan_info>
<user_info>
  <user_id>${USER}</user_id>
  <user_domain>${DOMAIN}</user_domain>
  <dept_code>${DEPTCODE}</dept_code>
  <dept_name>${DEPTNAME}</dept_name>
  <!-- deprecated tag start -->
  <user_email>${MYEMAIL}</user_email>
  <!-- deprecated tag end -->
</user_info>
<user_input>
  <field1 name="${FIELDNAME1}">${VALUE1}</field1>
  <field2 name="${FIELDNAME2}">${VALUE2}</field2>
  <field3 name="${FIELDNAME3}">${VALUE3}</field3>
  <field4 name="${FIELDNAME4}">${VALUE4}</field4>
  <field5 name="${FIELDNAME5}">${VALUE5}</field5>
  <field6 name="${FIELDNAME6}">${VALUE6}</field6>
  <field7 name="${FIELDNAME7}">${VALUE7}</field7>
  <field8 name="${FIELDNAME8}">${VALUE8}</field8>
  <field9 name="${FIELDNAME9}">${VALUE9}</field9>
  <field10 name="${FIELDNAME10}">${VALUE10}</field10>
  <field11 name="${FIELDNAME11}">${VALUE11}</field11>
  <field12 name="${FIELDNAME12}">${VALUE12}</field12>

```

```

<field13 name="{FIELDNAME13}">{VALUE13}</field13>
<field14 name="{FIELDNAME14}">{VALUE14}</field14>
<field15 name="{FIELDNAME15}">{VALUE15}</field15>
<field16 name="{FIELDNAME16}">{VALUE16}</field16>
<field17 name="{FIELDNAME17}">{VALUE17}</field17>
<field18 name="{FIELDNAME18}">{VALUE18}</field18>
<field19 name="{FIELDNAME19}">{VALUE19}</field19>
<field20 name="{FIELDNAME20}">{VALUE20}</field20>
<field21 name="{FIELDNAME21}">{VALUE21}</field21>
<field22 name="{FIELDNAME22}">{VALUE22}</field22>
<field23 name="{FIELDNAME23}">{VALUE23}</field23>
<field24 name="{FIELDNAME24}">{VALUE24}</field24>
<field25 name="{FIELDNAME25}">{VALUE25}</field25>
</user_input>
</mfp_metadata>

```

## ❑ Setting for saving meta data

You can specify the location to save meta data and the file name by adding the following elements to the XML file.

### Specifying the location to save meta data

Protocol	Format
SMB	<metadata_file_path>file://server name/path/</metadata_file_path>
FTP	<metadata_file_path>ftp://server name/path/</metadata_file_path>
FTPS	<metadata_file_path>ftps://server name/path/</metadata_file_path>
NetWare (Binary mode)	<metadata_file_path>server name/path/</metadata_file_path>
NetWare (NDS mode)	<metadata_file_path>Tree/Context/file_share/</metadata_file_path>

Example:

```

Protocol:      SMB
External server: 192.168.1.1
Save folder:   metadata
Format:        <metadata_file_path>file://192.168.1.1/metadata/</metadata_file_path>

```

#### Note

Ensure that the protocol is the same as the protocol for saving the Meta Scan image file. You can check the protocol for saving the Meta Scan image file in [Destination] of Save as file Setting, which is set for the template.

### Specifying a meta data file name

```
<metadata_file_name>file name.xml</metadata_file_name>
```

Example:

```

File name:      Sample_MetaData.xml
Format:        <metadata_file_name>Sample_MetaData.xml </metadata_file_name>

```

#### Tip

You can use an XML format file variable for the file name of the meta data.

Example using the date variables ({DATE}):

```
<metadata_file_name>Sample_MetaData_{DATE}.xml </metadata_file_name>
```

📖 P.423 “Registering Extended Field Definition”

For more information on variables, see the following:

📖 P.419 “Variables of XML format files”

## ■ Registering XML format file

You can select the XML format file when registering the definitions of extended fields.

 P.423 “Registering Extended Field Definition”

When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.

Tip


You can register up to 99 XML format files.

## ■ Registering Extended Field Definition

You can register up to 100 “extended field definitions”, select an “XML format file” for each of them, and set “extended field properties” as necessary.


When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.

### 1 Start TopAccess access policy mode.


 P.15 “Access Policy Mode”

### 2 Click the [Administration] tab.

### 3 Click the [Registration] menu and [Extended Field Definition] submenu.

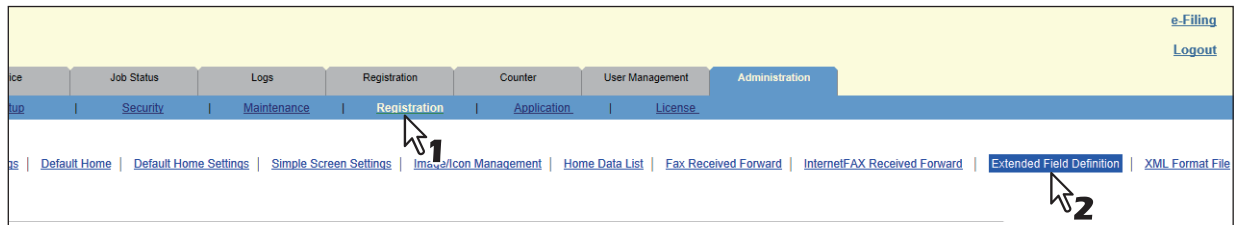

### 4 Click [Undefined] to register an extended field definition.

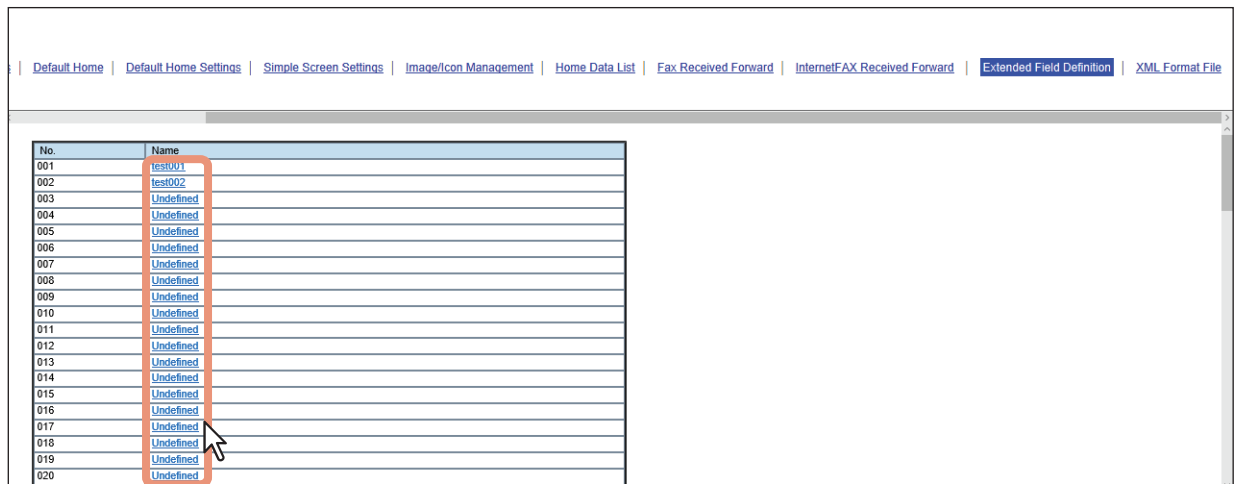

Click a registered extended field name to display the edit screen for the extended field. Skip to step 6.

**5 Enter the field name, select an XML format file, and click the [Save] button.**

Click [Edit] on the right of the XML format file to select it when you want to use a customized XML format file. Select “defaultForm3.xml” if you do not have any customized XML format file.

**6 Click the [New] button under Extended Field settings when setting extended field properties.**

Click [Extended Field Definitions] in the upper part of the screen if you are not setting extended field properties.

**7 Set the extended field properties.**

<b>Field Name</b>	Specify the extended field name.
<b>Display</b>	Specify how to display the extended field on the touch panel. <b>Name</b> Enter the caption of the extended field name for the display on the touch panel. You can enter up to 20 characters. Enter the Box number where a received document will be stored. <b>Mandatory Input</b> Select this check box if the extended field is a mandatory entry item. <b>Hidden Attribute</b> Select this check box if the extended field is a hidden item on the touch panel.

<b>Input Method *</b>	Select the type of an extended field. <ul style="list-style-type: none"> <li>• <b>Numerical</b> — Select this to create an extended field as an integer value.</li> <li>• <b>Decimal</b> — Select this to create an extended field as a decimal value.</li> <li>• <b>Text</b> — Select this to create an extended field as a character string.</li> <li>• <b>List</b> — Select this to create an extended field as a list selection.</li> <li>• <b>Address</b> — Select this to create an extended field as an address.</li> <li>• <b>Password</b> — Select this to create an extended field as a password.</li> <li>• <b>Date</b> — Select this to create an extended field as a date.</li> </ul>
<b>List Items</b>	Specify list items to be selected for the extended field. The registered list items are listed in the List Items. When you register a list item, enter [Name] and [Value], and then click [Add]. If you select an item and click [Move Up], the selected item moves up in the list. Click [Move Down] to move it down. Select an item and click [Delete] to delete an unnecessary item from the list. <b>Name</b> Enter the name of the item. <b>Value</b> Enter a value or text to be applied for the selected item.
<b>Note</b>	<ul style="list-style-type: none"> <li>• You cannot exceed the total number of characters displayable in the List Items (127).</li> <li>• You cannot use a semicolon in [Name] or [Value].</li> </ul>
<b>Minimum Length</b>	Specify the minimum number of characters that can be entered in the extended field if the field is a character string.
<b>Maximum Length</b>	Specify the maximum number of characters that can be entered in the extended field if the field is a character string.
<b>Minimum Value</b>	Specify the minimum numerical value that can be entered in the extended field if the field is a numerical value.
<b>Maximum Value</b>	Specify the maximum numerical value that can be entered in the extended field if the field is a numerical value.
<b>Default Value</b>	Specify the default value for the extended field.
<b>Password</b>	Specify the default password for the extended field if the field is a password.
<b>Date</b>	Specify the default date for the extended field if the field is a date.

\* The following shows the types and settable items of an extended field for each [Input Method]. (\*) is displayed for mandatory setting items.

<b>Input method (Extended field type)</b>	<b>Mandatory setting items</b>	<b>Optional setting items</b>
Numerical value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999 to 999,999,999,999	[Default Value]
Decimal value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999.999999 to 999,999,999,999.999999 Contact your service technician if you want to input a value with more than two decimal places.	[Default Value]
Text	[Maximum Length], [Minimum Length] Settable value: 0 to 256	[Default Value]
List	[List Items] You can register up to 30 [List Items].  You can set from 1 to 126 characters in [Name]. You can set from 1 to 126 characters in [Value]. However, the total number of characters set in [Name] and [Value] must be from 2 to 127.	[Default Value] Select from the registered selection items

---

<b>Input method (Extended field type)</b>	<b>Mandatory setting items</b>	<b>Optional setting items</b>
Address	None	[Default Value]
Password	None Settable value: 0 to 256	[Default Value]
Date	None	[Default Value]

- 8** Click the **[Save]** button to register the extended field properties.  
You can register up to 25 extended field properties.

The extended field properties are registered.

## ■ Registering templates for Meta Scan


You must register a template for Meta Scan before using the Meta Scan function.

A template can be a “public template” which is registered by an administrator, or a “private template” which is registered by a user or an administrator.


Both templates can be used to register a Meta Scan template.

The following procedure shows how to register a “private template”.


### 1 Click the [Registration] tab and the [Template] menu.

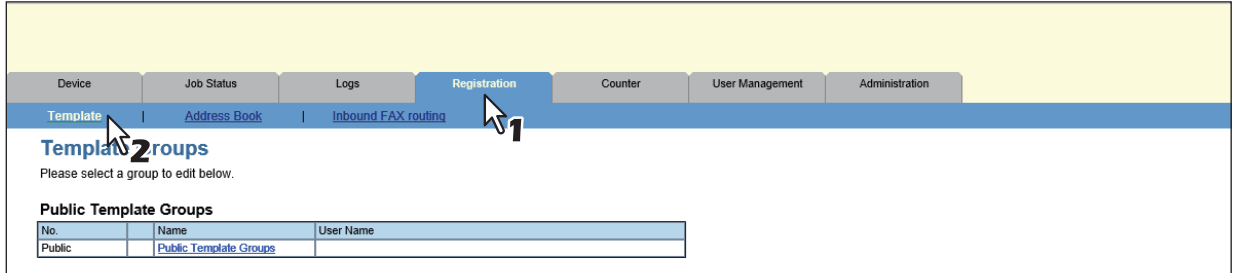


### 2 Click an [Undefined] group link.

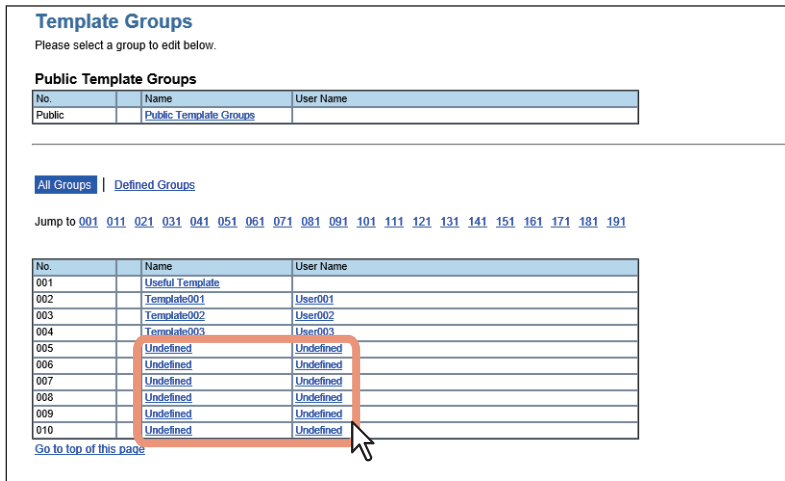


### 3 Enter the group name and click the [Save] button.

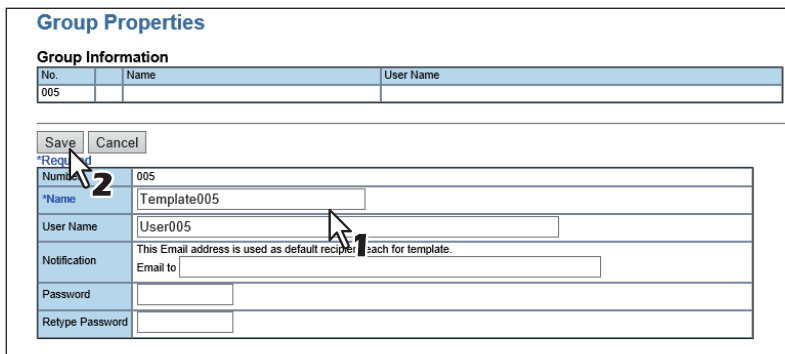

#### 4 Click an [Undefined] icon from the template list.

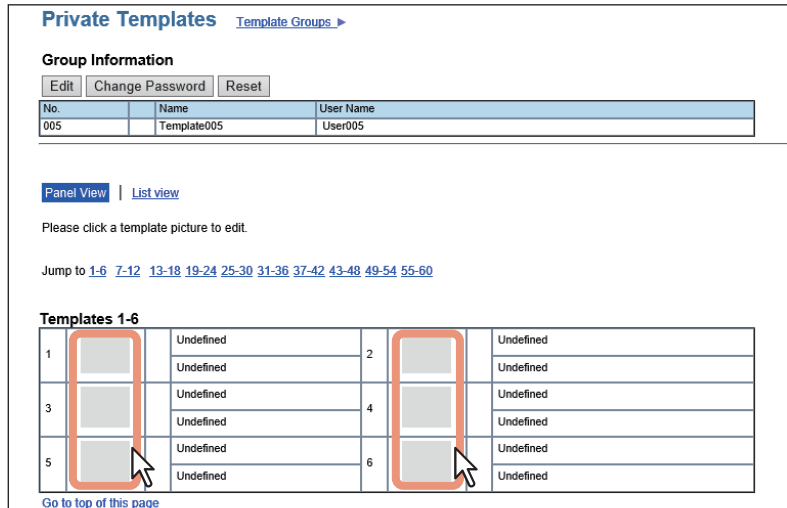

#### 5 Select the check box for the [Meta Scan] under Template Properties, and then select the agent and click [Select Agent].

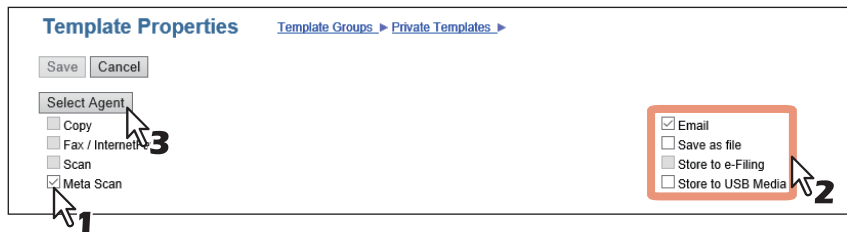

#### Note

To select [Meta Scan], the Meta Scan Enabler must be set up for use. If it is not set up, you cannot select [Meta Scan].

For [Meta Scan], [Email], [Save as file], and [Save to USB Media] are to be selected individually, except for [Email] and [Save as file], which can be selected simultaneously.

<p><b>Email</b></p>	<p>You can transmit the document as an Email attachment.</p> <p><b>Tip</b></p> <ul style="list-style-type: none"> <li>• When [Meta Scan] is selected, you can use a variable as the subject</li> <li>• Addresses specified in [From Address] are included in the meta data.</li> <li>• When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.</li> </ul> <p> P.66 "Email Setting"</p>
---------------------	--



<b>Save as file</b>	<p>You can save the document in a shared folder.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When [Meta Scan] is selected, you can only specify one destination.</li> <li>Protocols and network paths specified in the destination are included in the meta data.</li> </ul> <p>Example: Protocol: SMB Network Path: \\192.168.1.1\ImageFolder</p> <p>&lt;file_path&gt;file: //192.168.1.1/ImageFolder/&lt;/file_path&gt;</p> <ul style="list-style-type: none"> <li>When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.</li> </ul> <p> P.70 “Save as file Setting”</p>
<b>Store to e-Filing</b>	You can store the document in the e-Filing.
<b>Save to USB Media</b>	You can save the document in USB media.

## 6 Set the agent.

Setting operations are the same as for normal templates.

P.98 “Registering and editing private template groups”

The following describes how to set “Extended Field settings”.

## 7 Click the [Extended Field settings] button to set extended fields.

Outside Erase	OFF
ADF Scan Noise Reduction	None
<b>Extended Field settings</b>	
Extended Field Definition No.	001
DisplayName001	
DisplayName002	
DisplayName003	*****
DisplayName004	
DisplayName005	2016-05-10
<b>Password Setting</b>	
Password	Password is not set

## 8 Select a registered extended field definition using [Extended Field Definition No.].

<b>Extended Field settings</b>		
Save Cancel		
Extended Field Definition No.	001 : test001	
	002 : test002	
	003 : test003	
DisplayName001		
DisplayName002		
DisplayName003	*****	
DisplayName004		
DisplayName005	Year	Month
	2016	-05
		Date
		-10

## 9 Enter the default value for the [Extended Field Properties].

This is displayed if [Extended Field Properties] are set for the selected extended field definition. Values set in this screen are used as the default values for [Extended Field Properties] displayed on the touch panel when using Meta Scan. Items with an asterisk (\*) at the beginning of the [Extended Field Properties] name are mandatory entry fields.

Extended Field settings	
Save Cancel	
Extended Field Definition No.	001 : test001
DisplayName001	123456
DisplayName002	123456
DisplayName003	*****
DisplayName004	sample
DisplayName005	Year: 2016 Month: 05 Date: 10

## 10 Click the [Save] button to register the template.

The template for Meta Scan is registered.

### ■ Meta Scan

You can run Meta Scan using a Meta Scan template. For the operational procedure, refer to the **Template Guide**.

#### Tip

If [Extended Field Definition] set in [Extended Field Settings] in the Meta Scan template is deleted, the default XML format file <defaultForm3.xml> is used.

### ■ Checking logs of Meta Scan

You can check the scan log to confirm if meta data has been correctly created.

Check the following items in the scan log.

Check Item	Description
Mode	Displays “MSxxxx” (xxxx is in the code format) to indicate Meta Scan.
Status	Meta data is correctly created if no errors are displayed.

See the following for details of the scan log:

📖 P.37 “Scan Log”

## Setting Multi Station Print

Multi Station Print is the function to enable printing from any of the registered MFPs when a job is sent from a client computer, by adding multiple MFPs as a cooperative device in advance. Up to 10 MFPs can be registered. Operating with only one equipment unit is possible if the purpose is to use the output setting change function when printing. You can connect up to 10 MFPs in a group and connect up to 5 groups including a group to which this MFP belongs: you can add 4 groups for the connection.

📖 P.431 “Procedure for Multi Station Print”

📖 P.432 “Procedure for Multi Station Print (Only in One Equipment Unit)”

📖 P.432 “Checking the Multi Station Print Enabler”

### ■ Procedure for Multi Station Print

When the Multi Station Print function is used, it is necessary to set all MFPs to be connected. There are two methods to set the 2nd or later MFPs to be connected: by manual means and by copying the settings of the 1st MFP using a clone file.

#### Setup

	Operation	Description	Reference
1	Checking the Multi Station Print Enabler	Check whether the Multi Station Print Enabler can be used with your MFP.	📖 P.432 “Checking the Multi Station Print Enabler”
2	Enabling user authentication	Enable user authentication.	📖 P.305 “Authentication settings”
3	Enabling the Multi Station Print function	Enable the Multi Station Print function.	📖 P.269 “Setting up Multi Station Print”
4	Setting the connection MFP (1st device/no group connection)	Register the MFP (this equipment) which is being connected with TopAccess as the 1st device.	📖 P.269 “Setting up Multi Station Print”
5	Setting the connection MFP (2nd or later devices/groups)	Register the 2nd or later MFPs by manual means.	📖 P.269 “Setting up Multi Station Print”
		When registering the 2nd or later MFPs by copying the settings for the 1st MFP, create a clone file and install it in them.	📖 P.336 “Create Clone File settings” 📖 P.338 “Install Clone File settings”




#### Operation

	Operation	Description	Reference
1	Performing Multi Station Print	Print a job from the MFP connected by the network.	<b>Printing Guide</b> “Printing from Another MFP (Multi Station Print)”

## ■ Procedure for Multi Station Print (Only in One Equipment Unit)

When an attempt is made to use the Multi Station Print function only in one equipment unit, register only the MFP to be used since no MFP connection is carried out.

### Setup

	Operation	Description	Reference
1	Checking the Multi Station Print Enabler	Check whether the Multi Station Print Enabler can be used with your MFP.	 P.432 “Checking the Multi Station Print Enabler”
2	Enabling the Multi Station Print function	Enable the Multi Station Print function.	 P.269 “Setting up Multi Station Print”
3	Setting the MFP	Register the MFP (this equipment) which is being connected with TopAccess.	 P.269 “Setting up Multi Station Print”

### Operation

	Operation	Description	Reference
1	Performing Multi Station Print	Print a job from the registered MFP.	<b>Printing Guide</b> “Printing from Another MFP (Multi Station Print)”

## ■ Checking the Multi Station Print Enabler

The Multi Station Printer Enabler is required for the use of the Multi Station Print function. For details, contact your service technician or representative.

The setting of the Multi Station Print Enabler in your MFP can be confirmed as below.

[User Functions -User-] > the [Admin] tab > [General] > [License Management]

If [Multi Station Print] is registered in [License Management], the Multi Station Print function can be used.

## Setting Home Data Synchronization

Once you have registered multiple MFPs for connection, you can use the common HOME screen when you log in to any one of the registered MFPs that are connected to the network. If MFP is used to synchronize the HOME screens, up to 10 MFPs can be connected.



 
 







 P.433 “Procedure for Home Data Synchronization”

### Note

If you change the default settings on any of the connected MFPs after you start the home data synchronization, you need to set the same changes for all of the connected MFPs or you need to create a clone file except User Management and Address Book on the MFP where you have changed the settings and install it into all the other connected MFPs.


## ■ Procedure for Home Data Synchronization


The following table explains the procedure to synchronize the HOME screens by means of MFP.


	Operation	Description	Reference
1	Setting the first MFP for connection	Register this MFP where you currently log in with TopAccess as the first device. Make several settings such as user information, address book, default settings for jobs, installation of applications, EWB function settings, and others.	 P.136 “[User Management] Tab Page Overview”  P.83 “[Address Book] Item list”  P.402 “[Application] Item List”  P.275 “Embedded Web Browser settings”
		<b>Note</b> Make sure that [Enable FTP Server] is enabled.  P.208 “Setting up FTP Server”	
2	Creating a clone file	Create a clone file to copy the settings of the first MFP and install it into the second or later MFPs. Include the following categories in the clone file: <ul style="list-style-type: none"> <li>• Default Settings</li> <li>• User Management</li> <li>• Network/Print Service</li> <li>• Address Book</li> <li>• Application</li> </ul>	 P.336 “Create Clone File settings”
3	Setting the second or later MFPs for connection	Install the created clone file into the second or later MFPs.	 P.338 “Install Clone File settings”
		<b>Note</b> Execute [Delete All Shared Data] before you install the clone file.  P.175 “Home Setting”	
4	Setting the primary server	Select one MFP as the primary server for connection and configure the shared user management and the shared address book.	 P.307 “Setting up User Authentication Setting”  P.86 “Shared Setting”
5	Setting the home data synchronization	Set the home data synchronization on all MFPs for connection.	 P.175 “Home Setting”
		<b>Note</b> <ul style="list-style-type: none"> <li>• To disconnect MFP, select [Disable] from [Public Home] on the MFP concerned.</li> <li>• Select [Assume this MFP is the Primary Server] on the MFP that you use as the primary server.</li> </ul>	


## Using the Attribute of the External Authentication as a Role of the MFP

When the external authentication (Windows domain authentication and LDAP authentication) is enabled, associating the role defined in this equipment with the attribute of the external authentication server is required in order to log in the equipment from an external authentication server as an administrator. The role can be associated with the equipment by importing the role information setting file in this equipment. The role information setting file is a file in which the attributes of the external authentication server and corresponding MFP are defined in XML. You can edit the role information setting file exported from the equipment and import it back to the equipment.

 P.434 “Exporting the role information setting file”


 P.434 “Defining the role information setting file”

 P.435 “Importing the role information setting file”

 P.435 “Enabling the role base access setting”

### ■ Exporting the role information setting file

See the following page for how to export the role information setting file.

 P.159 “Export”

### ■ Defining the role information setting file

The role information setting file is written in XML format. The role of this equipment can be assigned to the attribute set in the external server by defining the role information setting file in accordance with the external authentication server setting. The three examples of the major definition method for this file are explained here. Alphanumeric characters can be used for the content of each element. An asterisk (\*) can be used as a wildcard for the <attributeValue> element.

#### Tip

The role of the user that does not correspond to the <RoleSet> element is defined in the <AnyOtherUser> element. This element can only be used once.

#### □ When setting one role to one attribute

Attribute name set in the external authentication server	Department
Attribute value set in the external authentication server	ITDept
Role name to be set	Administrator

```
<RoleSetting>
  <RoleSet>
    <Condition>
      <AttributeName>department</AttributeName>
      <AttributeValue>ITDept</AttributeValue>
    </Condition>
    <Role>Administrator</Role>
  </RoleSet>
  <AnyOtherUser>User</AnyOtherUser>
</RoleSetting>
```

#### □ When setting multiple roles to one attribute

Attribute name set in the external authentication server	Department
Attribute value set in the external authentication server	ITDept
Role name to be set [1]	Administrator
Role name to be set [2]	PrintOperator

```

<RoleSetting>
  <RoleSet>
    <Condition>
      <AttributeName>department</AttributeName>
      <AttributeValue>ITDept</AttributeValue>
    </Condition>
    <Role>Administrator</Role>
  </RoleSet>
  <RoleSet>
    <Condition>
      <AttributeName>department</AttributeName>
      <AttributeValue>ITDept</AttributeValue>
    </Condition>
    <Role>PrintOperator</Role>
  </RoleSet>
  <AnyOtherUser>User</AnyOtherUser>
</RoleSetting>

```

### ❑ When setting one role to multiple attributes

Attribute name set in the external authentication server [1]	Department
Attribute value set in the external authentication server [1]	Sales
Attribute name set in the external authentication server [2]	Title
Attribute value set in the external authentication server [2]	SeniorManager
Role name to be set	Print


```

<RoleSetting>
  <RoleSet>
    <Condition>
      <AttributeName>department</AttributeName>
      <AttributeValue>Sales</AttributeValue>
    </Condition>
    <Condition>
      <AttributeName>title</AttributeName>
      <AttributeValue>SeniorManager</AttributeValue>
    </Condition>
    <Role>Print</Role>
  </RoleSet>
  <AnyOtherUser>User</AnyOtherUser>
</RoleSetting>

```

### ■ Importing the role information setting file

See the following page for how to import the role information setting file.


 P.160 “Import”

#### Tip

To change the setting, import the role information setting file again.

### ■ Enabling the role base access setting

In order to use the imported role information setting file, enabling the role base access setting is required. See the following page for the procedure.


 P.307 “Setting up User Authentication Setting”


## Setting up Email


Set the necessary settings for the email transmission, reception and operation from the [Administration] tab displayed by logging in by means of the access policy mode.

### Tip












When Email is used, setting up of the basic settings of the network is necessary. The [Network] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

 P.15 “Access Policy Mode”

 P.165 “[Setup] Item List”

 P.282 “Setting up Network settings”

## ■ Procedure for Email Setting

	Operation	Description	Reference
1	Email transmission function confirmation	Check whether [Enable] is set for the Email transmission function from [Setup] - [General] - [Setting up Functions].	 P.165 “General settings”  P.167 “Setting up Functions”
2	Setting up SMTP Client	Set [Enable] for SMTP transmission of Email.	 P.282 “Setting up Network settings”  P.213 “Setting up SMTP Client”
3	Email Settings	Set the necessary settings for the Email transmission operation.	 P.290 “Setting up E-mail settings”  P.247 “Email settings”
4	Setting up URL Transmission Settings	Set to apply to an Email the URL where scanned images are stored, instead of attaching themselves.	 P.290 “Setting up E-mail settings”  P.251 “Setting up URL Transmission Settings”
5	Setting up Email Authentication	Set to require the entry of a user name and a password when Email transmission is attempted from the scanning screen.	 P.305 “Authentication settings”  P.313 “Setting up Email Authentication”
6	Setting up Email Address Setting	Set to enable Email transmission to a sender’s e-mail address when [Enable] is set for Email authentication or user authentication.	 P.305 “Authentication settings”  P.307 “Setting up User Authentication Setting”  P.313 “Setting up Email Authentication”  P.314 “Setting up Email Address Setting”
7	Setting up Single Sign On Setting	Set to apply the user name and the password, which are entered from the control panel, for logging into the equipment to the SMTP communication, when an authentication method for connecting an SMTP server is selected in [SMTP Client] and [Enable] is set for [User Authentication] or [Email Authentication].	 P.282 “Setting up Network settings”  P.213 “Setting up SMTP Client”  P.305 “Authentication settings”  P.307 “Setting up User Authentication Setting”  P.313 “Setting up Email Authentication”  P.315 “Setting up Single Sign On Setting”



## APPENDIX

This section contains the following contents.

<b>Installing Certificates for a Client PC .....</b>	<b>438</b>
Configuring the Microsoft Management Console.....	438
Importing certificates to a client PC .....	440

# Installing Certificates for a Client PC

- P.438 “Configuring the Microsoft Management Console”
- P.440 “Importing certificates to a client PC”


## ■ Configuring the Microsoft Management Console

The following describes a configuration on Windows 7. The procedure is the same when other versions of Windows are used.

**1** Open the command prompt, type “mmc” and press the Enter key.




**2** From the [File] or [Console] menu of the window that appears, select [Add/Remove Snap-in].

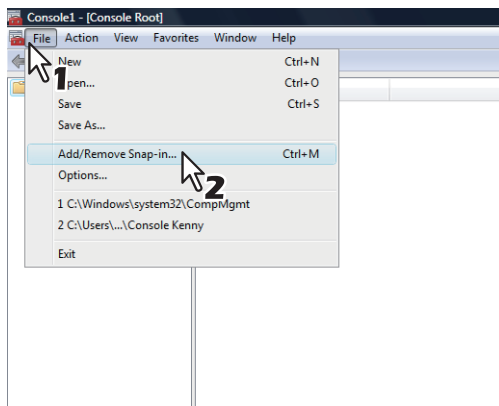


The [Add or Remove Snap-ins] dialog box appears.

**3** From the list of [Available snap-ins:], select [Certificates] and click [Add].

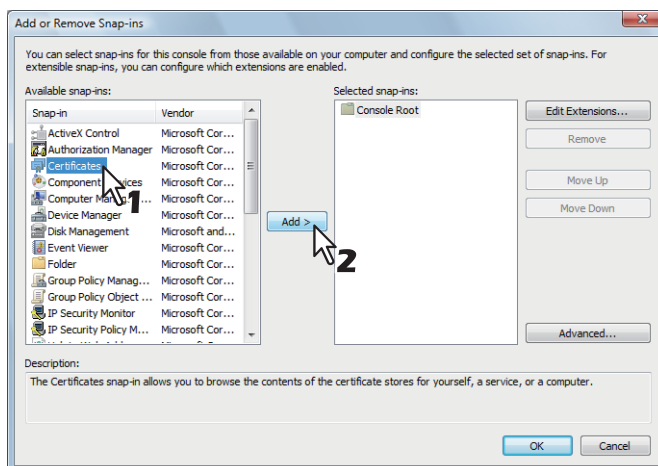


The [Certificates snap-in] dialog box appears.

#### 4 Select [Computer account] and click [Next].

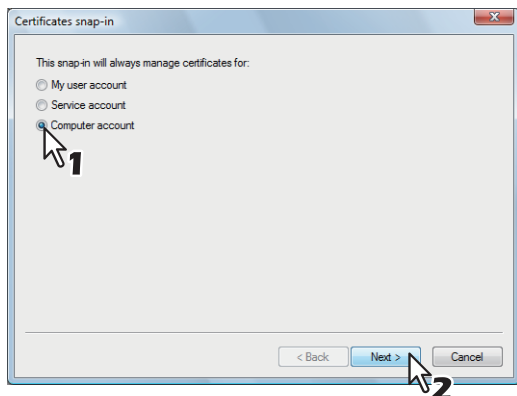


The [Select Computer] dialog box appears.

#### 5 Select [Local computer: (the computer this console is running on)] and click [Finish].

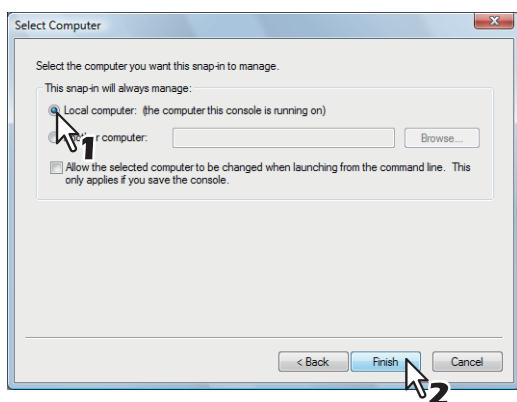


The [Select Computer] dialog box is closed.

#### 6 Make sure that “Certificates (Local Computer)” is added under the [Console Root] folder; click [OK].

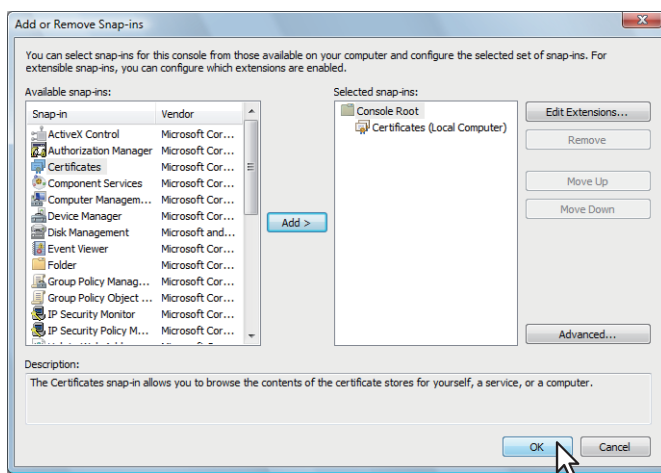

## 7 Save the setting.

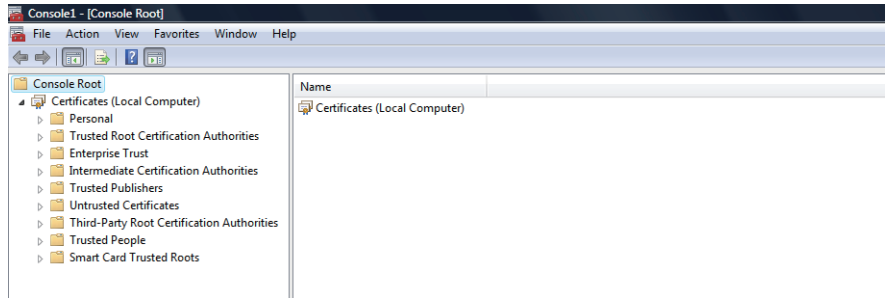


## ■ Importing certificates to a client PC


The following describes an import on Windows 7. The procedure is the same when other versions of Windows are used.

### Note

- For Windows 7, you must log in to Windows as a user who has the “Administrators” privilege.
- Before importing certificates, make sure that User Account Control (UAC) is turned off. Select [Control Panel] > [User Accounts] > [Change User Account Control Settings], and then select [Never Notify].

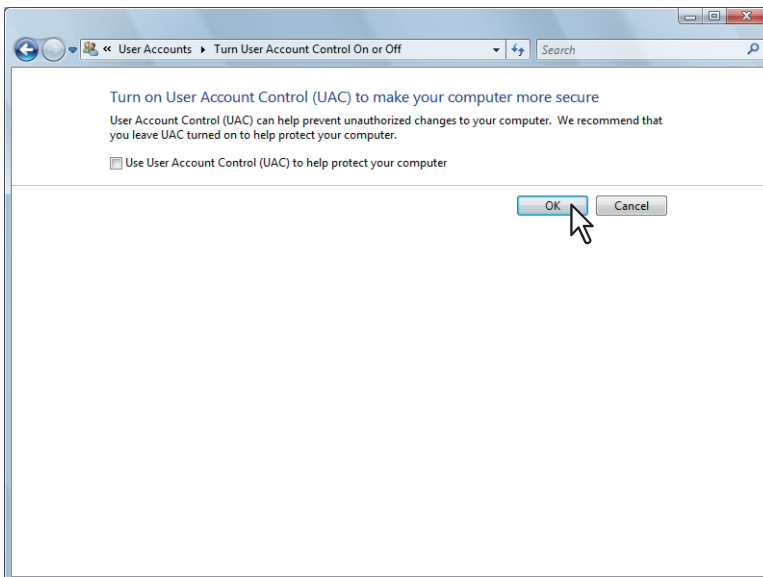

## 1 On the MMC, select and right-click on the appropriate folder to store the certificate and select [All Tasks] > [Import]

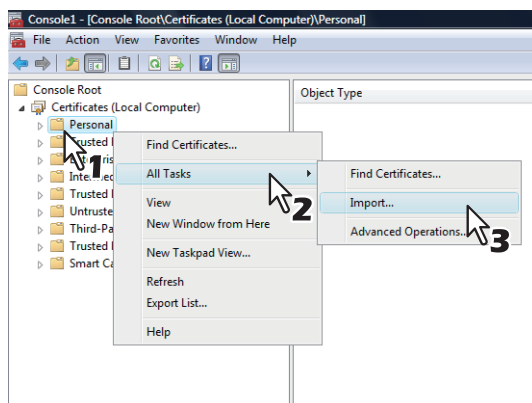

Select the appropriate folder according to the type of your certificate:


- **Self-signed certificate (.crt):** Console Root > Certificates (Local Computer) > Trusted Root Certification Authorities
  - **Client certificate (.pfx):** Console Root > Certificates (Local Computer) > Personal
  - **CA certificate (.cert):** Console Root > Certificates (Local Computer) > Trusted Root Certification Authorities
- The [Certificate Import Wizard] appears.

## 2 On the Certificate Import Wizard, click [Next].




For importing a client certificate, proceed to the next step. Otherwise, skip to step 5.


## 3 From [Browse], select the certificate to install, and click [Next].

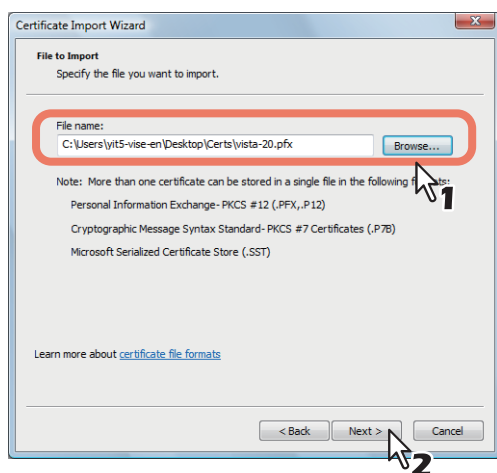

## 4 Enter the password for the private key and click [Next].

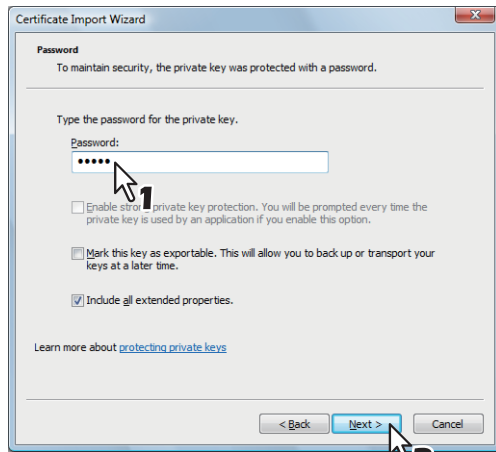


## 5 Click [Next].

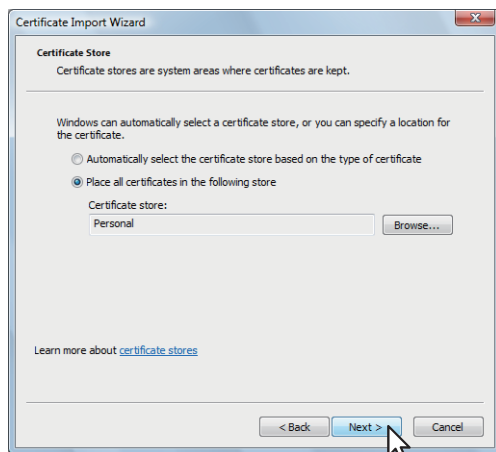

### Note


Do not change the certificate store using [Browse].

## 6 Click [Finish].

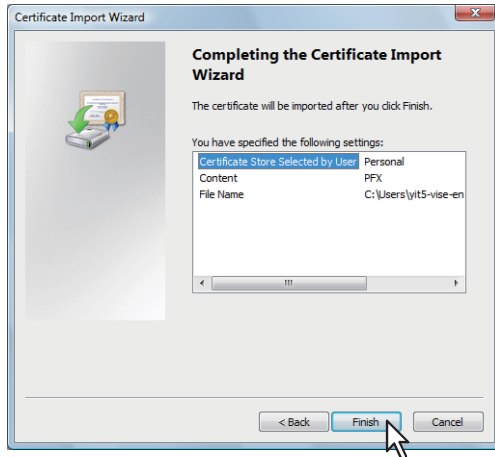


### Tip

If the security warning message appears, click [Yes].

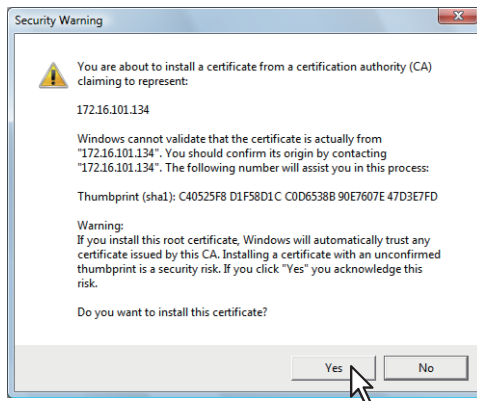


## 7 Click [OK] to complete the import.

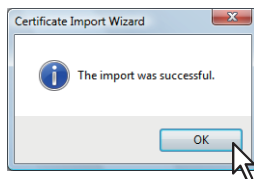

If you are importing a client certificate (.pfx) to a Windows 7 PC, proceed to the next step. Otherwise, the installation is complete.


If you need to install another certificate, repeat the steps from the beginning.

## 8 Double-click the imported client certificate.

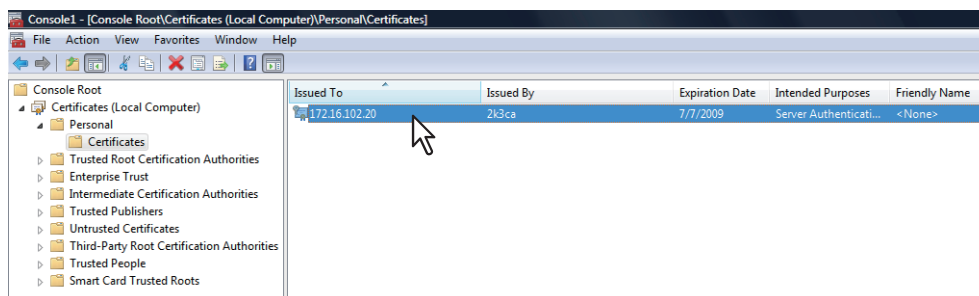

The [Certificate] window appears.

## 9 Click the [Details] tab and select [Thumbprint] to check the 40-digit thumbprint.

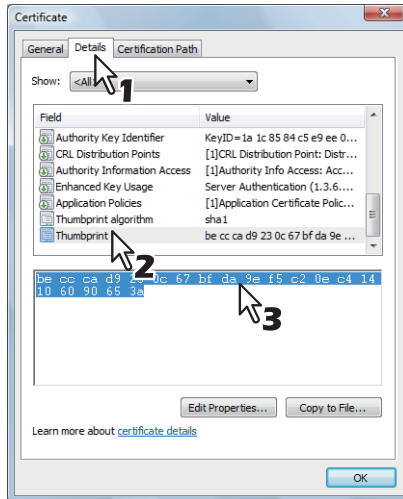

## 10 Open the command prompt and execute the “netsh” command as shown below.

### Tip

If you log in to Windows 7 as a user without the administrator privilege, open the command prompt by right-clicking the icon and selecting [Run as administrator.] This way, you can temporarily have the administrator privilege to execute the command.

```
Microsoft Windows [Version 6.0.6002]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\user-001>netsh http add sslcert ipport=0.0.0.0:5358 certhash=becccad923
0c67bfda9ef5c20ec414106090653aappid={00112233-4455-6677-8899-AABBCCDDEEFF}
SSL Certificate successfully added


C:\Users\user-001>
```

- Using the thumbprint obtained in Step 9, type the following command:  
netsh http add sslcert ipport=0.0.0.0:5358 certhash=(your 40-digit thumbprint)appid={00112233-4455-6677-8899-AABBCCDDEEFF}
- When inputting the thumbprint, exclude the spaces.



**Note**

When your client certificate is created with Certificate Revocation List (CRL), you need to check if the CA server is accessible by FQDN (see the following figure).

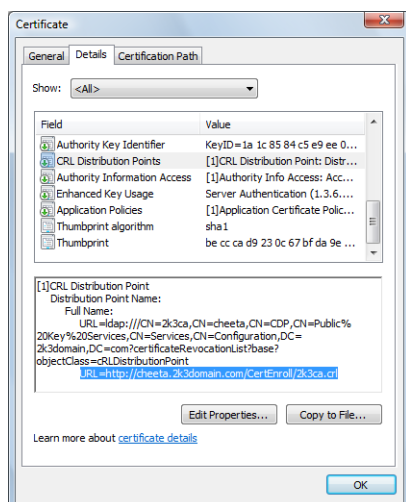

If no FQDN connection is established, ask your administrator to perform either of the following options:

- In the “hosts” file accessible from the following folder path, add the IP address and the host name:  
C:\WINNT\system32\drivers\etc
- Configure the DNS server to handle the name-to-address resolution.



# INDEX

---

<b>A</b>	
About the maintenance functions .....	356
Access policy mode.....	10, 15
Accessing TopAccess .....	12
Accessing TopAccess by entering URL.....	12
Activate.....	407
Add Filter .....	190
Add IKE .....	193
Add Manual Key.....	192
Add New LPR Queue .....	262
Add New URL.....	277
Add Policy.....	199
Add Profile.....	197
Adding new contacts from the LDAP server .....	108
Adding or editing an LPR queue.....	294
Adding, editing, and deleting contacts manually .....	106
Address Book.....	83
Address Book Item list.....	83
Administration Tab.....	163
Application Item List.....	402
Application List .....	402
Application Log.....	40
Application Setting .....	404
Assignment for Programmable button.....	176
Authentication settings .....	305
<b>B</b>	
Basic Setting.....	179
Box Setting .....	75
Box Setting (Mailbox).....	97
<b>C</b>	
Certificate management settings.....	316
Change Group Password .....	55
Change Password.....	412
Checking logs of Meta Scan .....	430
Checking Meta Scan Enabler .....	419
Checking recovery information.....	32
Configuring the EWB function .....	301
Configuring the source profile.....	297
Confirm Permission .....	416
Contact Property.....	380
Contacts .....	83
Copier settings .....	226
Counter How to Set and How to Operate .....	132
Counter Item list .....	120
Counter Tab.....	119
Counter Tab Page Overview .....	120
Create Client Certificate.....	318
Create Clone File settings .....	336
Create Destination information .....	88
Create Group Information .....	146
Create Group information .....	91
Create LDAP Information.....	210
Create New Role.....	150
Create self-signed certificate.....	317
Create SNMP V3 User Information .....	220
Create User Information .....	138
Creating/Exporting a client certificate.....	330
Creating/exporting a self-signed certificate.....	324
<b>D</b>	
Data Backup .....	350
DDNS .....	184
Default Home.....	375
Default Home Settings .....	375
Default roles and privileges .....	148
Default XML file format.....	420
Defining the role information setting file.....	434
Definition Properties .....	394
Delete Shared Files settings.....	344
Deleting a device certificate installed automatically .....	329
Deleting a server.....	302
Deleting all jobs .....	31
Deleting an imported device certificate.....	327
Deleting an LPR queue .....	294
Deleting CA certificate.....	332
Deleting data .....	360
Deleting jobs.....	30
Deleting profiles .....	299
Deleting SNMP V3 user information .....	285
Deleting the data from local folder .....	360
Department Counter .....	123
Department Information.....	124, 154
Department Management.....	122
Department Management Item list .....	153
Destination Setting .....	58
Destination Setting (Mailbox) .....	95
Device Item list .....	18
Device Tab .....	17
Displayed icons.....	20
Displaying job logs .....	45
Displaying print jobs .....	30
Displaying public templates .....	105
Displaying templates in the public group .....	105
Displaying the department counter .....	133
Displaying the total counter .....	132
Displaying version information .....	303
DNS.....	184
<b>E</b>	
Edit Department Information .....	155
Edit Destination information .....	88
Edit Group Information .....	146
Edit Group information .....	91
Edit LDAP Information.....	210
Edit Role.....	152
Edit Settings.....	413
Edit User Information.....	141
Editing XML format file.....	419
Email Setting .....	66
Email Setting (Mailbox) .....	97
Email settings .....	247
Embedded Web Browser settings .....	275
Enabling the role base access setting .....	435
End-user mode .....	10
Enter Password.....	140
Entering the destinations manually .....	58, 398
Export.....	87, 159
Export Logs Item list.....	42
Export settings.....	342

Export/Import Item list .....	159
Exporting address book data in the CSV/XML format.....	366
Exporting logs .....	46
Exporting profiles.....	298
Exporting SNMP V3 user information.....	284
Exporting the address book data .....	113, 366
Exporting the role information setting file .....	434
Extended Field Properties .....	82
Extended Field settings .....	82
Extended Fields.....	391
Extended Fields Properties.....	392
<b>F</b>	
Favorite Contact.....	84
Favorite Groups.....	85
Fax Received Forward and InternetFAX Received Forward settings .....	379
Fax Setting.....	64, 89
Fax settings.....	230
Fax/InternetFax Job Item list .....	27
<b>G</b>	
General Setting .....	179
General settings .....	165
Group .....	85
Group Assignment.....	145
Group Information .....	52, 54
Group Management Item list.....	145
Group Properties.....	51
<b>H</b>	
Home Data List.....	378
Home Screen setting.....	412
Home Setting .....	175
<b>I</b>	
ICC Profile settings.....	272
Image/Icon Management .....	377
Import.....	87, 160
Import settings.....	340
Importing address book data in the CSV/XML format.....	363
Importing and exporting .....	363
Importing profiles .....	297
Importing the address book data .....	111, 363
Importing the role information setting file.....	435
Inbound FAX routing.....	92
Inbound FAX routing Item list.....	92
Install Clone File settings.....	338
Install Language Pack .....	405
Installing a device certificate.....	324
Installing a device certificate automatically.....	328
Installing an imported device certificate .....	326
Installing CA certificate .....	331
InternetFax Setting .....	63
InternetFax Setting (Mailbox).....	95
InternetFax settings .....	252
IPv4 .....	180
IPv6 .....	182

<b>J</b>	
Job Status How to Set and How to Operate .....	30
Job Status Tab.....	23
Job Status Tab Page Overview .....	24
<b>L</b>	
Languages settings.....	348
LDAP Authentication .....	312
LDAP Client settings .....	209
License Item List.....	406
License List .....	406
List View .....	53, 54
LLMNR .....	186
Log Settings Item list.....	44
Log size .....	44
Logs How to Set and How to Operate .....	45
Logs Tab.....	33
Logs Tab Page Overview .....	34
Long File Name Setting .....	168
<b>M</b>	
MailBox Setting (Mailbox) .....	94
MailBoxes Properties.....	93
Maintenance How to Set and How to Operate .....	356
Maintenance Item list.....	333
Managing address book .....	106
Managing contacts in the Address Book .....	106
Managing groups in the Address Book.....	109
Managing mailboxes .....	115
Managing templates.....	98
Message Log .....	41
Meta Scan .....	390, 430
Modify Filter .....	190
Modify IKE .....	193
Modify Manual Key .....	192
Modify Policy .....	199
Modify Profile.....	197
Multi Station Print Job Item list.....	29
My Account Item list.....	410
My Account Tab .....	409
My Account Tab Page Overview.....	410
<b>N</b>	
Network settings .....	178
Notification Events.....	278
Notification settings.....	344
<b>O</b>	
OCR Setting.....	177
Off Device Customization Architecture settings .....	278
<b>P</b>	
Panel Background Image.....	377
Panel Icon Image .....	377
Panel Setting .....	56
Panel View.....	52, 54, 354
Password Policy settings .....	320
Password Setting.....	82
PDF/A Fileformat Setting .....	177
Preparing a driver file for uploading .....	358
Print Counter .....	121
Print Data Converter settings .....	274

Print Job Item list.....	24	Save as file Setting (Private template) .....	70
Print Service settings .....	264	Save as File settings .....	236
Printer settings.....	257	Scan Counter .....	122
Printer/e-Filing settings.....	256	Scan Job Item list .....	28
Private Template Groups.....	50	Scan Log.....	37
Private Templates.....	52	Scan Setting (Private template) .....	78
Procedure for Email Setting .....	436	Search Address List .....	90
Procedure for Home Data Synchronization.....	433	Search Contact .....	90
Procedure for using Meta Scan .....	418	Search User Account .....	137
Project Management Item list .....	158	Searching for destinations in the LDAP server.....	61, 400
Proxy Setting.....	405	Security How to Set and How to Operate .....	324
Public Home .....	369	Security Item list.....	305
Public Home Settings .....	374	Security Stamp Setting .....	323
Public Template Groups.....	49	Select Home Type .....	370
Public Templates .....	53	Select Image .....	414
Public Theme Settings.....	373	Selecting the destinations from the address book .....	59, 398
<b>Q</b>		Selecting the groups from the address book.....	60, 399
Quota Setting .....	130	Server Assignment screen.....	212
<b>R</b>		Setting for saving meta data.....	422
Reboot settings .....	354	Setting Home Data Synchronization.....	433
Rebooting the equipment .....	368	Setting up Address Book.....	340, 342
Reception Journal.....	36	Setting up AppleTalk.....	224
Recovery Information .....	26	Setting up Application .....	347
Register from Application.....	372	Setting up Bonjour .....	217
Register from Function List .....	371	Setting up Box Setting (Fax/InternetFAX Received Forward) .....	389
Register from Home .....	372	Setting up CA Certificate .....	319
Register from Job History.....	370	Setting up Category Setting.....	337
Register from Recommendation .....	371	Setting up Certificate Files.....	320
Register from URL List .....	371	Setting up Certificate Setting .....	319
Registering a server.....	301	Setting up Client Certificate.....	318
Registering and editing private template groups .....	98	Setting up Clone File .....	336
Registering Extended Field Definition .....	423	Setting up Clone File Information .....	339
Registering Fax and Internet Fax received forward.....	395	Setting up CMYK Source Profile .....	272
Registering or editing SNMP V3 user information .....	283	Setting up Combined .....	341, 343
Registering or editing templates.....	100	Setting up Confidentiality Setting.....	169
Registering templates for Meta Scan .....	427	Setting up Configuration.....	278
Registering the Fax or Internet Fax received forward.....	395	Setting up Copier settings.....	286
Registering XML format file.....	423	Setting up Copy Job Enforcement Continue .....	228
Registration How to Set and How to Operate .....	98, 395	Setting up Current Language Pack List.....	349
Registration Item list.....	369	Setting up Current Software List .....	354
Registration Tab.....	47	Setting up Customized RGB Profile .....	273
Registration Tab Page Overview .....	48	Setting up Date & Time .....	173
Relay End Terminal Report (Mailbox) .....	96	Setting up Daylight Savings Time Setting.....	174
Releasing print jobs .....	31	Setting up Default Direct Print Setting.....	258
Remote Setting List.....	243	Setting up Default Raw Job Setting .....	260
Remote Setting screen.....	243	Setting up Default setting.....	226
Remove Software settings.....	335	Setting up Default Setting for PanelUI .....	349
Removing the client software.....	359	Setting up Definition Information .....	391
Removing the contacts from the Recipient List .....	62	Setting up Department Setting .....	305
Removing the destinations from the Recipient List....	401	Setting up Destination .....	237
Removing the software from TopAccess .....	359	Setting up Destination Profile .....	273
Report Settings .....	234, 254	Setting up Destination Setting (Fax/Internet Fax Received Forward).....	379, 398
Restriction of Destination Selection Method.....	169	Setting up Device Certificate .....	316
Role Assignment .....	144	Setting up Device Information.....	166
Role Management Item list.....	147	Setting up Document Print (Fax/InternetFax Received Forward) .....	379
<b>S</b>		Setting up Driver Customization Packages Setting.....	259
Save as file Setting (Mailbox).....	96		

Setting up e-Filing Notification Events .....	168	Setting up POP3 Client.....	215
Setting up Email.....	436	Setting up Print Data Converter settings .....	300
Setting up Email Address Setting.....	314	Setting up Print Service settings .....	295
Setting up Email Authentication .....	313	Setting up Printer settings.....	293
Setting up Email Print.....	268	Setting up Printer/e-Filing Job	
Setting up Email Setting.....	247, 345	Enforcement Continue .....	256
Setting up Email Setting		Setting up Printer/e-Filing settings .....	292
(Fax/InternetFAX Received Forward).....	386	Setting up Proxy Setting .....	275
Setting up E-mail settings.....	290	Setting up Raw Job Setting .....	261, 294
Setting up Energy Save .....	170	Setting up Raw TCP Print.....	264
Setting up EWB History Setting .....	276	Setting up Remote 1 and Remote 2.....	241
Setting up Extended Field settings .....	391	Setting up Restriction on	
Setting up Fax Setting.....	230	Address Book Operation by Administrator.....	169
Setting up Fax settings .....	287	Setting up RGB Source Profile .....	272
Setting up File Composition.....	240	Setting up Save as file Setting	
Setting up File Upload .....	338	(Fax/InternetFAX Received Forward) .....	381
Setting up Filtering .....	187	Setting up Save as file settings .....	288
Setting up Folder Name.....	238	Setting up Searching Interval .....	241
Setting up Format .....	238	Setting up Server Registration Setting.....	276
Setting up FTP Client .....	217	Setting up Setting data included in Clone File .....	339
Setting up FTP Print.....	267	Setting up Single Page Data Saving Directory .....	239
Setting up FTP Server .....	208	Setting up Single Sign On Setting.....	315
Setting up Functions.....	167	Setting up SLP .....	221
Setting up General Setting .....	257	Setting up SMB .....	200
Setting up General settings .....	280	Setting up SMTP Client.....	213
Setting up Home Directory Setting.....	315	Setting up SMTP Server.....	207
Setting up Home Page Setting .....	275	Setting up SNMP .....	218
Setting up HTTP .....	204	Setting up SNTP Service .....	173
Setting up ICC Profile settings.....	296	Setting up System Message Notification Events .....	345
Setting up Install Language Pack.....	348	Setting up Template.....	341, 343
Setting up Install Software Package .....	353	Setting up the notifications	
Setting up InternetFAX Setting .....	253	of system errors and events .....	361
Setting up InternetFAX Setting		Setting up URL List for Menu Screen .....	277
(Fax/Internet Fax Received Forward) .....	380	Setting up URL Transmission Settings.....	251
Setting up InternetFAX settings.....	291	Setting up USB Cable Print .....	268
Setting up IP Security .....	188	Setting up User Authentication Setting .....	307
Setting up IPP Print.....	265	Setting up User Name and Password	
Setting up IPX/SPX.....	223	at User Authentication for Save as File .....	240
Setting up Job Notification Events .....	347	Setting up WEB General Setting .....	174
Setting up Job Skip Control .....	168	Setting up WSD .....	205
Setting up License.....	347	Settings.....	404, 415
Setting up LLTD.....	222	Setup How to Set and How to Operate .....	280
Setting up Local Storage Path.....	236	Setup Item list .....	165
Setting up LPD Print.....	265	Shared Setting.....	86
Setting up MailBoxes .....	341, 342	Shared Settings Item list.....	161
Setting up mailboxes .....	115	Shutdown Setting.....	172
Setting up Meta Scan Function .....	418	Simple Screen Settings .....	376
Setting up Multi Station Print.....	269	SNMP V3 settings.....	283
Setting up N/W-Fax Destination .....	245	Store to USB Device Setting.....	75
Setting up N/W-Fax Folder.....	245	Supported browsers.....	11
Setting up NetWare.....	224	Syslog Setting.....	222
Setting up NetWare Print.....	267	System Updates settings .....	353
Setting up Network.....	278		
Setting up Network settings.....	282	<b>T</b>	
Setting up notification .....	361	Template Groups.....	48
Setting up Off Device Customization		Template Item list .....	48
Architecture settings .....	302	Template list.....	52, 54
Setting up Policy .....	322	Template Properties .....	55
Setting up Policy for Administrator, Auditor .....	321	Template settings.....	56
Setting up Policy for Users .....	320	Theme Settings.....	414
		TopAccess Conditions.....	11

---

TopAccess Overview .....	10
TopAccess screen descriptions .....	14
Total Count.....	120
Transmission Journal .....	35

**U**

Upload Software settings .....	333
Uploading new versions	
of client software in TopAccess .....	357
Uploading the client software.....	357
User Accounts Item list .....	136
User Counter .....	127
User Information.....	128
User Management Tab.....	135
User Management Tab Page Overview .....	136
User Paper Type.....	352
Using the attribute of the external authentication	
as a role of the MFP.....	434

**V**

Variables of XML format files .....	419
Version.....	279
View Home.....	413
View Logs Item list .....	34
Viewing counters.....	132
VNC Setting.....	225

**W**

When setting multiple roles to one attribute .....	434
When setting one role to multiple attributes .....	435
When setting one role to one attribute.....	434
Windows Domain Authentication .....	310





FC-2010AC/2510AC  
FC-2515AC/3015AC/3515AC/4515AC/5015AC  
DP-2018A/2518A/3018A/3518A/4518A/5018A  
FC-5516AC/6516AC/7516AC  
DP-5518A/6518A/7518A/8518A  
OME170076B0

**MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS /  
MULTIFUNCTIONAL DIGITAL SYSTEMS**

**TopAccess Guide**

**e-STUDIO2010AC/2510AC**

**e-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC**

**e-STUDIO2018A/2518A/3018A/3518A/4518A/5018A**

**e-STUDIO5516AC/6516AC/7516AC**

**e-STUDIO5518A/6518A/7518A/8518A**

**TOSHIBA TEC CORPORATION**

1-11-1, OSAKI, SHINAGAWA-KU, TOKYO, 141-8562, JAPAN

